INSTRUCTION MANUAL

AC Adaptor for Static Remover

ER-VAPS1

MJE-ERVAPS1 No.0097-28V

Please read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.

1 OUTLINE

• This product is an AC adapter which is designed for use with the **ER-VS02,ER-Q** spot type ionizer.

2 SPECIFICATIONS

Designation	AC Adapter for ER-VS02,ER-Q	
Item Model No.	ER-VAPS1	
Input voltage	100 to 240V AC, 50/60Hz	
Output voltage	24V DC510 %	
Output current capacity	750mA	
Ambient temperature	0 to +40°C, Storage: -10 to +70°C	
Ambient humidity	35 to 65% RH, Storage: 35 to 65% RH	
Weight	120g approx.	
Operating altitude	2,000m or less (Note 1)	
	AC adapter with wiring connector: 1 pc. AC adapter	
Contents	Manufactured by ENG ELECTRIC (Note 2) Model:6A-181-WP24 Wiring connector Manufactured by MOLEX Model:5557-08R Wiring connector terminals: 6 pc. Manufactured by MOLEX Model:5556T Cable for grounding terminal wiring: 1 pc. (cable length approx. 0.65 m)	

- Notes: 1) Do not use or store the device in an environment where the air pressure is higher than the atmospheric pressure at an altitude of 0 meters.
- Notes: 2) Manufacturer address: 5F, No. 536, Sec.1, Minsheng N. Rd, Guishan Dist., Taoyuan City 333016, Taiwan, China

3 CAUTIONS

- This product is designed for use in industrial environment.
- Do not use this product outside the scope of the specifications. Doing so may result in accidents or failures. Also, it may considerably shorten the life of this product.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.
- Do not move the product with the power plug connected. Doing so may damage the power cord, causing a fire or electric shock.
- Do not throw this into fire, otherwise it may explode or emit toxic gases.
- Do not allow the product to come into direct contact with organic solvents such as thinner or with water, oil or grease.

4 CONNECTOR WIRING DIAGRAM



	Model No.			
Terminal No.	ER-VS02	ER-Q		
1	0V	0V		
2	For ground terminal wiring	COM (-)		
3	(Discharge stop output)	N.C. (Not used)		
4	(Reset input)	For ground terminal wiring		
5	24V	24V		
6	For grounding terminal wiring (positive ground) COM (+)			
7	(Check output)	(Check output)		
8	(Error output)	(Error output)		

- Notes: 1) Names in brackets are input and output signal names for the ER-VS02 spot type ionizer. If using the input and output signals, use the accessory wiring connector terminals to connect the signal pins to the external equipment. Use a separate cable for connecting to the external equipment. In addition, if not using the input and output signals, do not
 - insert anything into using the input and output signals, do not insert anything into the connector. 2) Note that the pin layout which appears on the check plate
 - which is attached to the AC adapter represents the layout when looking from the end of the connector.

5 WIRING LAYOUT

○ ER-VS02

- If using the AC adapter (ER-VAPS1), the reference for the ER-VAPS1 must be set so that it matches the deionizing level reference for the ionizer main unit.
- There are three wiring methods available. Use wiring method A, B or C depending on the operating environment in order to connect the supplied cable for connecting the ground terminal.
- If the specified wiring layout is not used, it may not be possible to determine the reference level for deionizing, and the ion balance may become unstable and errors may occur.

Wiring method

- ① Connect the pin end of the cable for grounding terminal wiring to pin No. 2 (for a +ground, pin No. 6) of the connector for the AC adapter (ER-VAPS1).
- ② Connect the round pin end of the cable for grounding terminal wiring to the ground terminal of the spot type ionizer (ER-VS02). (Refer to wiring method A.) For a direct ground connection, refer to wiring method B. For a +ground connection, refer to wiring method C.
- ③ Ground the ground terminal of the ER-VS02 to the enclosure.

(Use a separate cable for making the ground.)

When inserting the supplied cable for grounding terminal wiring into the connector, make sure that it is inserted correctly.

A special tool is required for disconnecting the cable for grounding terminal wiring from the connector.



* Pin No. 2 is connected to pin No. 1 (0V) of the ionizer connector. <Wiring method C (+ground connection)>

<Wiring method A (connection to ground terminal)>

• If the enclosure of the equipment which the spot type ionizer (ER-VS02) is connected to is grounded at the +side of the power supply, insert the pin end of the cable for grounding terminal wiring to pin No. 6 of the connector for the AC adapter (ER-VAPS1) as shown in the diagram below.



* Pin No. 6 is connected to pin No. 5 (24V) of the ionizer connector.

OER-Q

34

43.5

Pin No.4 is connected to an ground.

6 DIMENSIONS (Unit: mm)

22

Cable 1.8m

Manufactured by MOLEX

5557-08R

Cable for grounding terminal wiring (0.65m)



Panasonic Industry Co., Ltd.

1006, Oaza Kadoma, Kadoma-shi, Osaka 571-8506, Japan https://industry.panasonic.com/

Please visit our website for inquiries and about our sales network.

Panasonic Industry Co., Ltd. 2024

April, 2024

PRINTED IN JAPAN

取扱説明書

静電気除去器用ACアダプタ ER-VAPS1

ご使用の前にこの取扱説明書をよくお読みになり、 正 し く 最 適 な 方 法 で ご 使 用 く だ さ い 。 尚、この取扱説明書は大切に保管してください。

1 概要

●本製品は、イオナイザ**ER-VS02、ER-Q**用のACア ダプタです。

2 主な仕様

		品		名	ER-VS02、ER-Q 用ACアダプタ
項目 型式名		名	ER-VAPS1		
入	カ	電		圧	100~240V AC、50/60Hz
出	出力電		圧	24V DC±10%	
出	力電流容量		量	750m A	
使	も 用 周 囲 温 度		度	0~+40℃、保存時:-10~+70℃	
使	用周] 周 囲 湿 度 35~65%RH、保存時:35~65%RH			
質	質量		量	約120g	
使	1月標 1		高	2000m以下(※)	
内	内 容		物	ACアダブタ(コネクタ付き):1本 ACアダブタ本体 ENG ELECTRIC社製型式:6A-181-WP24 配線用コネクタ モレックス(株)製型式:5557-08R コネクタ用ターミナル:6本 モレックス(株)製型式:5556T アース端子配線用ケーブル:1本 (ケーブル長約0.65m)	

※標高0mの大気圧以上に加圧した環境で使用または保存を 行なわないでください。

3 注意事項

● 本製品は工業環境で使用ください。

- ●本製品の仕様範囲外では、使用しないでください。事故や故障の原因となります。また、本製品の寿命を著しく低下させる恐れがあります。
- ●高圧線や動力線との並行配線や、同一配線管の 使用は避けてください。誘導による誤動作の 原因となります。
- ●電源プラグを接続したまま移動させないでください。電源ケーブルが傷つき、火災・感電の原因になることがあります。
- ●火中に投じないでください。破裂や有毒ガスが 発生する恐れがあります。
- ●シンナーなどの有機溶剤や水、油、油脂が直接 かからないようにご注意ください。

4 配線用コネクタ配線図



ポスNo	端子名				
如丁NO.	ER-VS02	ER-Q			
1	0V	0V			
2	アース端子配線用(F.G.)	COM(-)			
3	放電停止入力	N.C.(使用せず)			
4	リセット入力	アース端子配線用(F.G.)			
5	24V	24V			
6	アース端子配線用(+接地)	COM(+)			
7	(チェック出力)	(チェック出力)			
8	(エラー出力)	(エラー出力)			

- (注1):カッコ内は入・出力信号名です。入・出力信号を使用す る場合は、付属のターミナルを使用して、外部機器へ 接続してください。但し、外部機器へ接続するケーブ ルは、別途ご用意ください。
 - また、入・出力信号を使用しない場合は、何も差し込 まないでください。
- (注2): ACアダプタに貼付の認定銘板に表記されているピン配 列は、コネクタ側から見た図となっていますのでご注 意ください。

5 配線

- ER-VS02の場合
- ACアダプタ(ER-VAPS1)を使用しているときは、 ER-VAPS1自体の基準をイオナイザER-VS02本体の 除電レベルの基準に合わせる必要があります。
- ●配線方法には3通りの方法があります。使用環境に応じて配線方法A、B、Cのいずれかで付属のアース端子配線用ケーブルで配線を行なってください。
- ●指定された配線を行なわないと、除電する基準レベルが定まらずに、イオンバランスが安定しなかったり、エラーになる場合があります。

配線方法

- アース端子配線用ケーブルのピン側をACアダプタ (ER-VAPS1)のコネクタ部の端子No.2(+接地の 場合、端子No.6)へ差し込みます。
- ②アース端子配線用ケーブルの丸形端子側をイオナイ ザスボットタイプ(ER-VS02)のアース端子へ 接続(配線方法A参照)、直接接地(配線方法B参照) または+接地(配線方法C参照)してください。
- ③ **ER-VS02**のアース端子と筐体を接地します。 (接地するケーブルは、別途ご用意ください。)

付属のアース端子配線用ケーブルをコネクタ部へ差 し込む際、間違えないようにしてください。 アース端子配線用ケーブルをコネクタから取り外す 場合は、専用工具が必要となります。



<配線方法C【+接地】>

●イオナイザスポットタイプ(ER-VS02)を取り付ける装置筐体が電源の+V側で接地されている場合、下図のように ACアダプタ(ER-VAPS1)のコネクタ部の端子No.6にアース端子配線用ケーブルのピン側を差し込んでください。



※:端子No.6は、イオナイザ側のコネクタ部で端子No.5(24V)と接続されています。

○ER-Qの場合

●端子No.4を接地してください。

(24V) (4) (0V) - 接地

6 外形寸法図(単位:mm)



パナソニック インダストリー株式会社

 〒571-8506
 大阪府門真市大字門真1006番地

 https://industry.panasonic.com/
 <</td>

 <FAデパイス技術相談窓口>

 TEL:0120-394-205

 受付時間:平日の9時~12時、13時~17時

 (土日祝日、年末年始、当社休業日を除く)

 Panasonic Industry Co., Ltd. 2024
 2024年4月発行

 PRINTED IN JAPAN