Panasonic

Laser Marker
Firmware Updater Guide

LP-ZV series
LP-RH series

Preface

The update of LmFirmwareUpdater is consists of the following:

1.Update of Laser Marker Firmware


Prior Preparation

Prepare the following items before update laser marker.

- Laser Marker LP-ZV/RH series*1
- USB cable
- Updater「laser_marker_firmware_updater.zip」
- PC


*1 To use this software, you need to purchase the laser marker of LP-ZV/RH series

Preparation: Connect the laser marker, PC and USB cable, and turn on laser marker
(the example below is the LP-ZV series)
*Please do not turn off the power during the update.

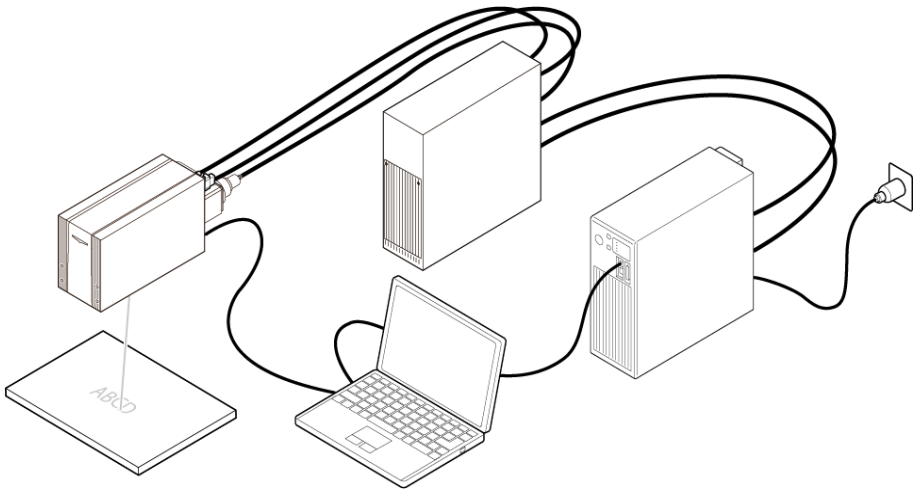


1.Firmware Update Guide


1.1 Please open the [Firmware Updater] folder.

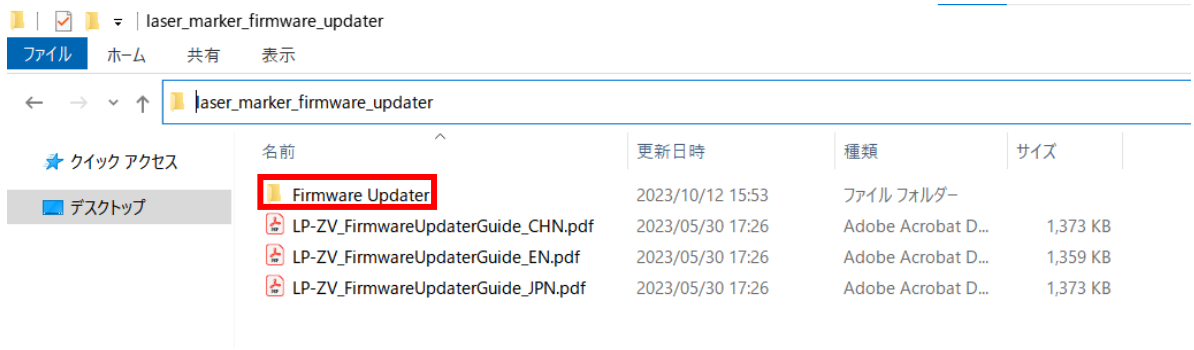

1.2 Please select [LmFirmwareUpdater.exe] and run it.

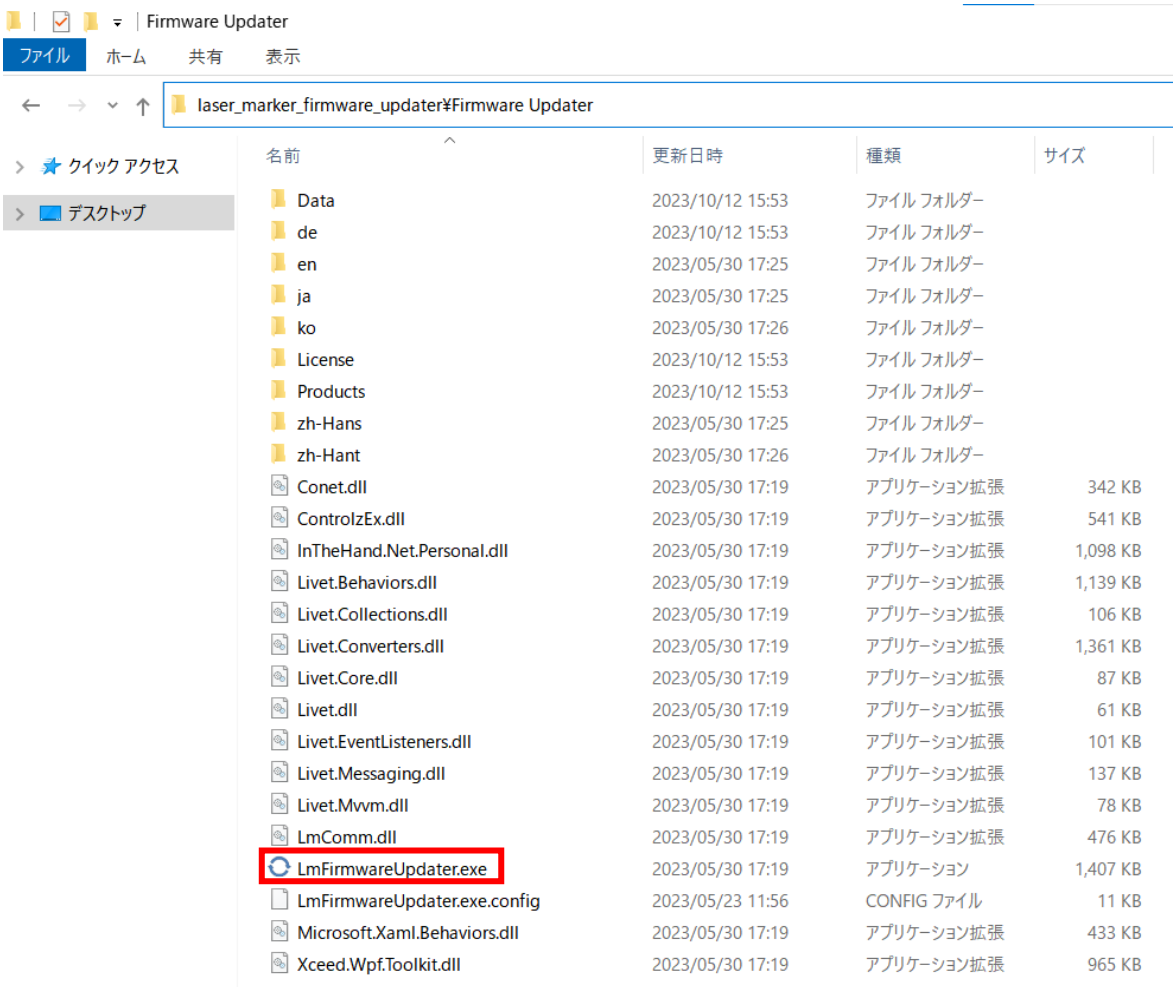


1.3 Please select [Next >] button.

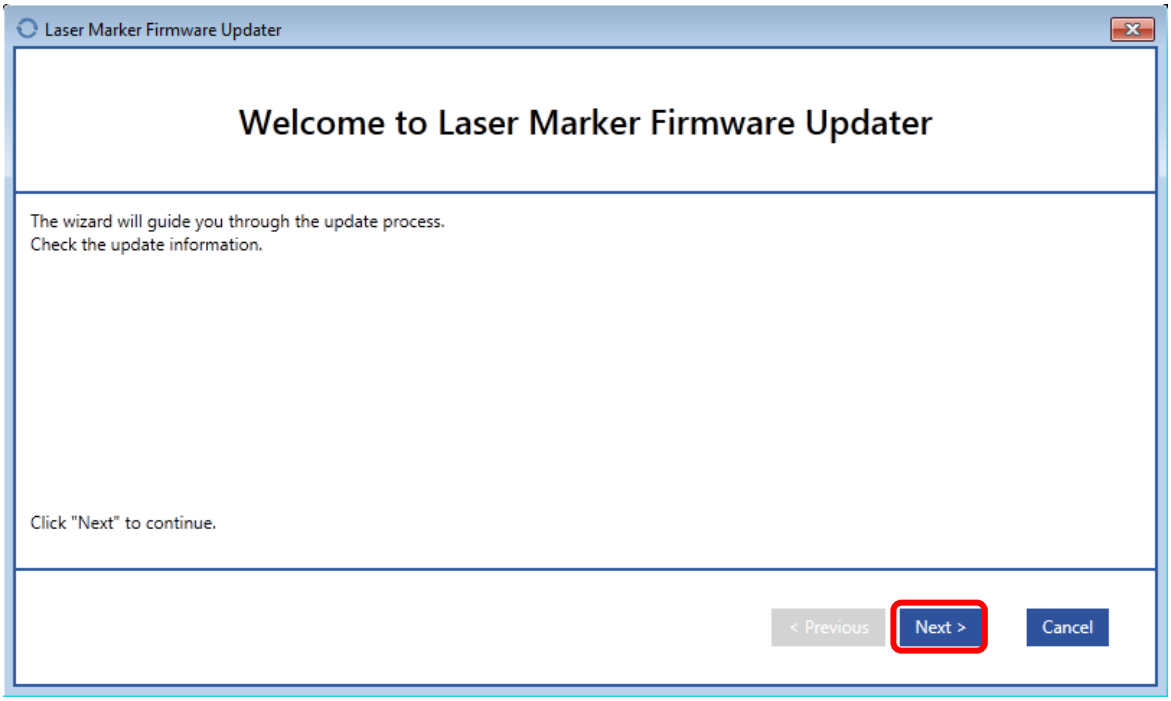


1.4 Please select [Search laser marker] button and select the model.

※If the model is not displayed even after select [Search laser marker]. Please select [Details] and check the problem.

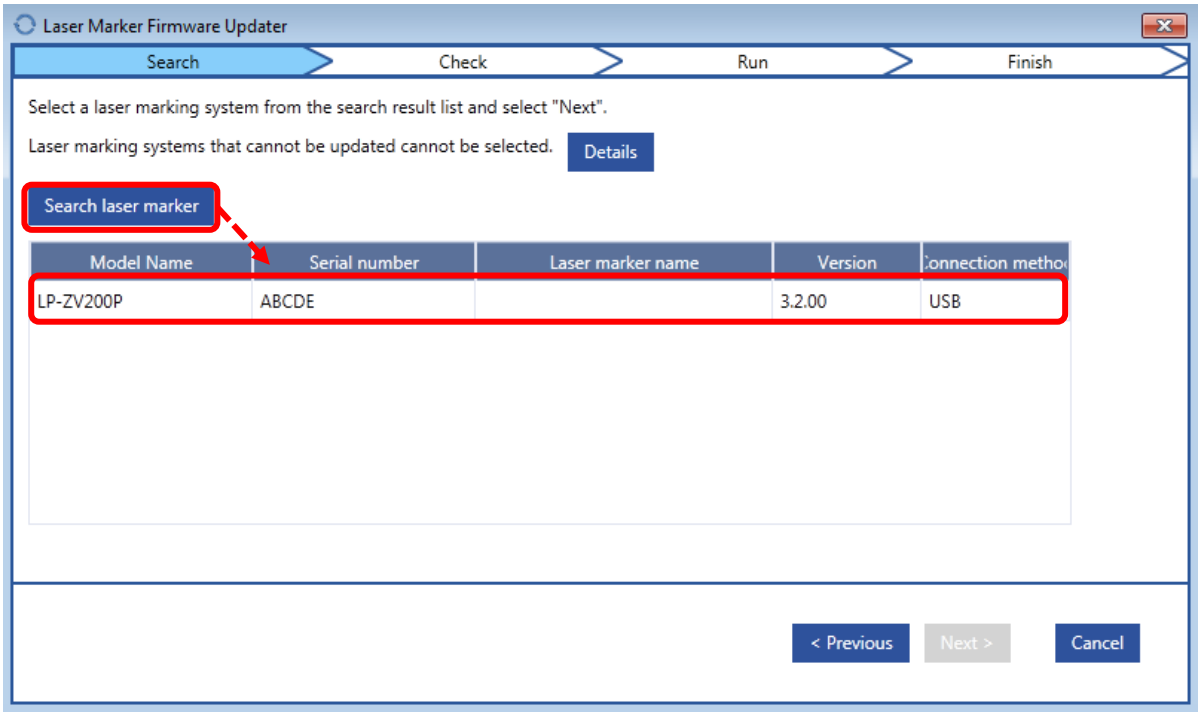


1.5 After select model, please select [Next >].

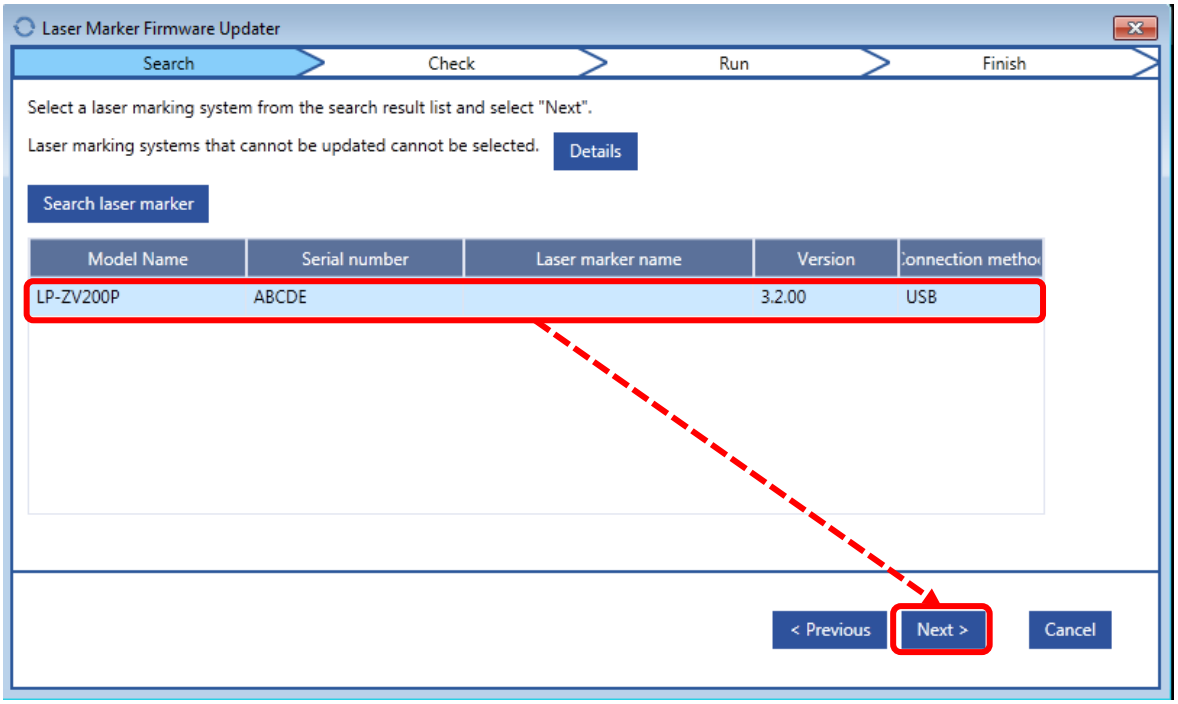


1.6 After confirm the model, please select [アップデート].


※If function expansion board is not mounted on the laser marker, the item will be grayed out.

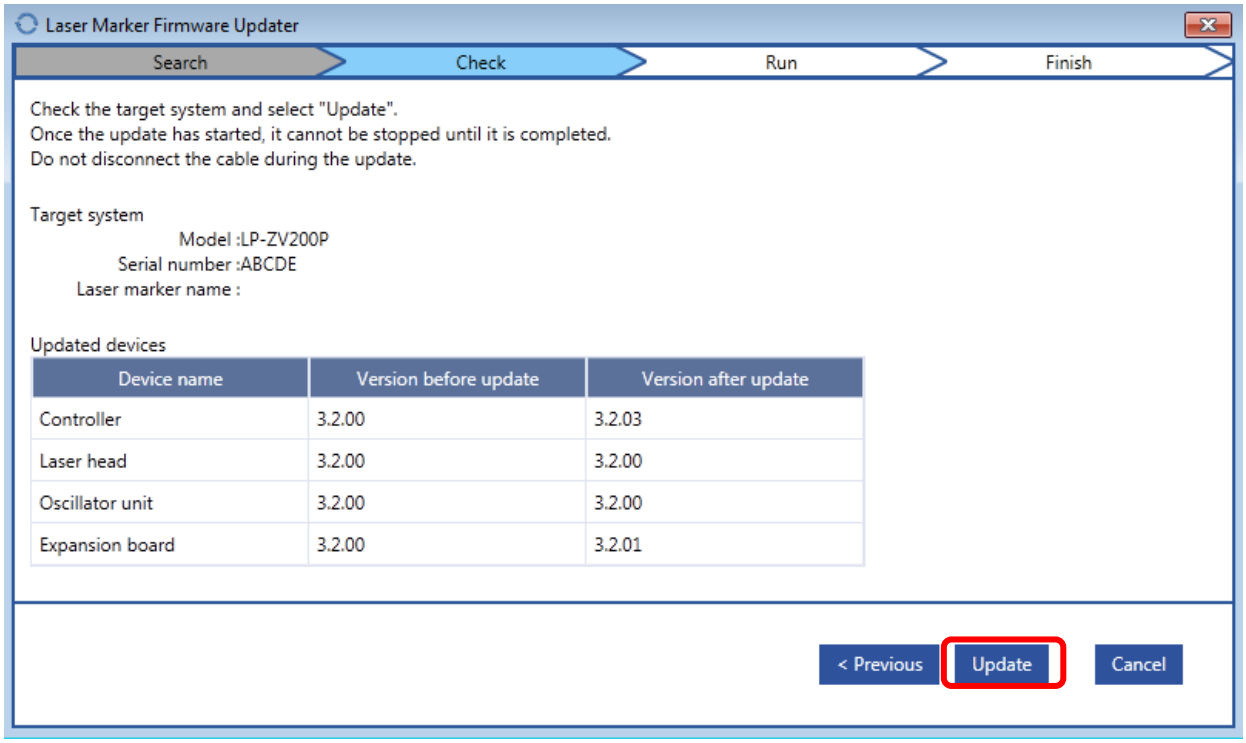


1.7 If administrator password has been set for Laser Marker, please enter the password and select [OK].
※If administrator password is not set, this process is not need to be execute.

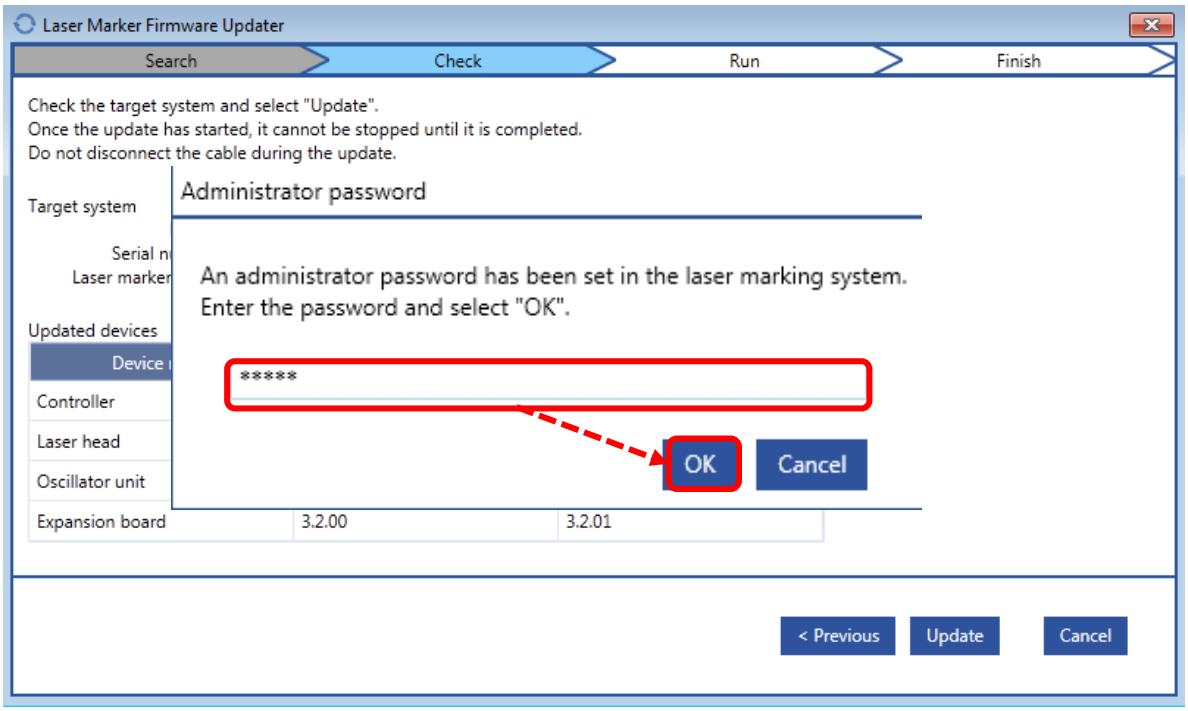

1.8 Please wait a moment until the update is complete.

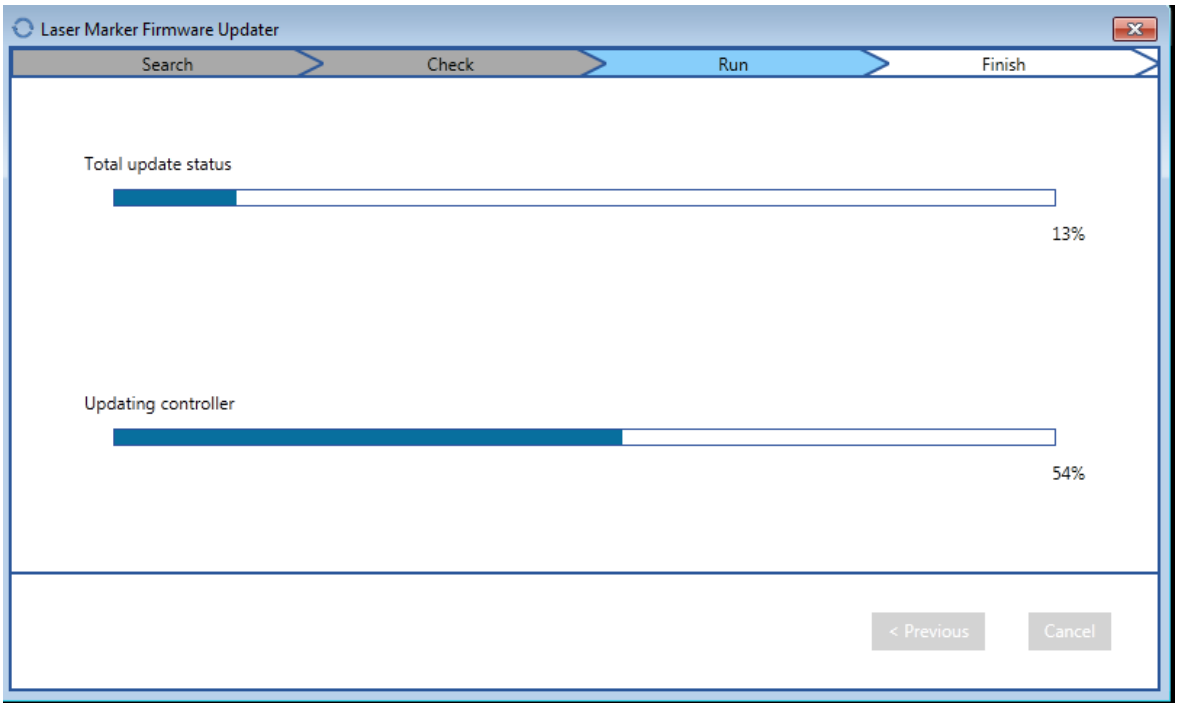

1.9 After the update is complete, restart the laser marker.

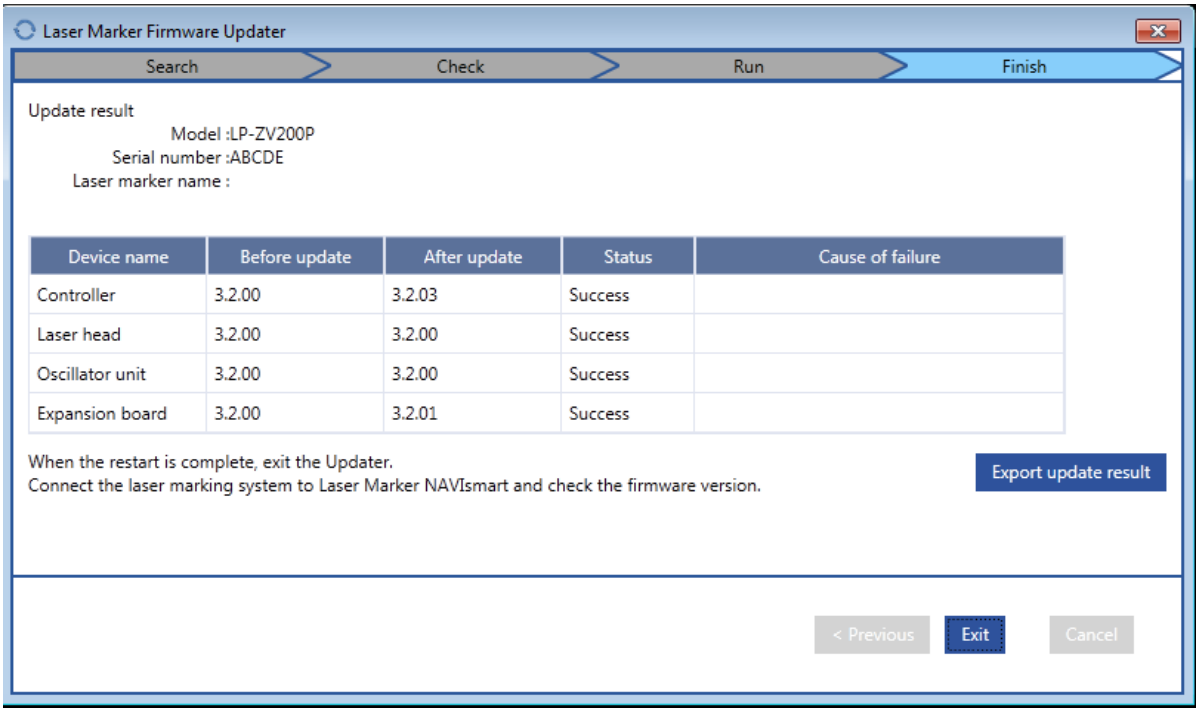

1.10 After restarting the laser marker, select [Exit].
*If you want to save the update results, select [Export update results] and save the file.

