Panasonic **INSTRUCTION MANUAL**

Ultra High-Speed, High-Accuracy Laser Displacement Sensor Sensor Head HL-C208

MJE-HI C208 No 0097-62V

Thank you very much for purchasing Panasonic products. Read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.

- This product is intended to detect the objects and does not have the control function to ensure safety such as accident prevention. Do not use the product as a sensing device to protect human body.
- Be careful not to directly watch or touch the direct laser beam or reflected laser
- The product was developed and manufactured for industrial use

BEFORE USE

· Before using the product, check the sensor head model and contents of packing. Sensor head model



 Packing Check that all of the following components are included in the package.

Check the model name of product at the top of sensor head.

- 1 sensor head unit
- 1 Instruction manual
- · Laser warning labels [JIS/IEC/KS: 1 set, GB: 1 set (E type only)]
- This product complies with CE Marking when used together with a controller and programmable display unit that are in compliance with CE Marking. Likewise, the product complies with UKCA Marking when used together with a controller and programmable display unit that are in compliance with UKCA Marking.

1 DESCRIPTION

- HL-C208B , HL-C208C displacement sensor head achieves ultra high-speed and high-accurate measurement using linear image sensor as light receiving element to be used on equipment that require high-speed operation with high-accuracy.
- The product is used at diffuse or specular reflection sensor head by installing and setting

2 CAUTIONS ON HANDLING LASER LIGHT

- For the purpose of preventing any injury which may occur to the user by the use of the laser product in advance, the following standards have been established by the IEC Standards, JIS Standards, GB Standards, KS Standards and FDA Regulations
- IEC : IEC 60825-1:2014
- JIS JIS C 6802:2014
- GB GB 7247.1-2012 KS C IEC 60825-1:2013 KS
- FDA: PART 1040.10, 1040.11(Laser Notice No.56)

These standards classifies laser products according to the level of hazard and provide the safety measures for respective classes.

Laser hazardous class

Classification according to IEC 60825-1:2014 (JIS C 6802:2014)

Class	Model	Description of hazardous evaluation				
Class 2	HL-C208B(E) HL-C208B(E)-MK	Visible beam, low power. Blink response of eye affords protection.				
Class 3R	HL-C208C(E) HL-C208C(E)-MK	Direct intrabeam viewing is hazardous, but risk is lower than for 3B.				

注意一ここを開くとクラス2のレーザ放射が出る ピームをのぞき込ま

激光辐射

勿直视光束

本:半导体激光 波长

WARNING label

<HL-C208B ->

In Japanese / English / Korear



In Chinese (E type only)



<HI -C208C ->

In Japanese / English / Korean





′₩\



• FDA certification label


In Chinese (E type only

激光辐射

避免眼睛受到直接照象

输出:5mW 脉宽:最; :半导体激光 波长:65





- . Install the product so the laser beam comes higher or lower than eye level in order not to watch the beam directly during operation. Laser safety distance (Nominal Ocular Hazard Distance: NOHD) is approx. 0.5m. The laser beam must be terminated at the end of its path by a diffuse reflector or an absorber.
- Please contact our company if the system breaks down. It is not equipped with a function that stops laser radiation automatically during disassembling the sensor head. The users therefore may be exposed to laser beam in disassembling the sensor head.
- When this product is used in China, affix the Chinese warning label (accessory) on the label in the product.
- Do not use the system in the manner other than specified in this Instruction Manual.

3 SPECIFICATIONS

		HL-C208B(E)		HL-C208B(E)-MK		HL-C208C(E)		HL-C208C(E)-MK	
Mode	l No.	Diffuse	Specular	Diffuse	Specular	Diffuse	Specular	Diffuse	Specular
		reflection	reflection	reflection			reflection	reflection	reflection
Meas	. method (Note 2)	Diffuse reflection / Specular reflection							
Meas	urement center distance	85mm	81.4mm	85mm	81.4mm	85mm	81.4mm	85mm	81.4mm
Meas	urement range (Note 3)	±20mm	±6mm	±20mm	±6mm	±20mm	±6mm	±20mm	±6mm
Beam	1 SOUICE	Class II (FDA) (Note 4)				Red semiconductor laser Class 3R (JIS/IEC/GB/KS) Class IIIa (FDA) (Note 4) Max output: 5mW Emission Peak wavelength: 658nm			
Beam	n diameter (Note 5)	Approx.	ø100µm	Approx. 10) × 1,200µm	Approx.	ø100µm	Approx. 100) × 1,200µr
Beam	receiving element				Linear ima	age sensor			
Reso	lution		be 0.6µm /	average tir	nes: 256, 0	0.15µm /av .25µm (No	e 6) / aver	age times 4	
Linea	rity	±0.03%F.S.	±0.1%F.S.	±0.03%F.S.	±0.1%F.S.	±0.03%F.S.	±0.1%F.S.	±0.03%F.S.	±0.1%F.5
Temp	erature characteristics	0.01%F.S./°C							
ndicator	Laser emission	Green LED: Lights up during laser emission.							
Indic	Meas. range	Yellow LED: Near measurement center:ON, within measurement range:Blink, beyond the range:OFF							
Protective structure		IP67 (except connector)							
Pollution degree		2							
	ation resistance	20M ohms or more by 500V DC megger (between all the terminals and enclosure.)							
Dielectric withstand	Commercial Frequency	AC 500V for 1min. (between all the terminals and enclosure.)							
Diele withs	Impulse	$\pm 1,000V$ 1.2/50µs (between all the terminals and enclosure.)							
Vibration resistance		Endurance: 10 to 55Hz (cycle: 1minute), Resistant amplitude of vibration: 1.5mm, in X, Y, and Z directions for 2 hours							
Shoc	k resistance	196m/ s ² in X, Y, and Z directions for 3 times							
Ambi	ent illuminance (Note 7)	3,000lx or less (illuminance at beam receiving surface using incandescent lamp)							
Ambient temperature		0 to +45°C (No dew condensation or icing allowed), At storage: -20 to +70°C							
Ambient humidity		35 to 85%RH At storage: 35 to 85%RH							
Ambi	ent Height	2,000m or less							
Material		Main unit case / cover: Die-cast aluminum, Front cover: Glass							
Cable	e length	0.5m							
Cable	e extension	Extendible to 30m long maximum using the optional extension cable.							
Weigl	ht	Approx. 300g including cable weight							
Appli	cable regulations	Compliant with EU Law: EMC Directive / British Legislation: EMC Regulations							

- If measuring conditions are as follows unless otherwise specified; connection with controller, power voltage: 24V DC, ambient temperature: 20°C, sampling cycle: 40µs, average times:256, at measurement center dis-tance, object substance: white ceramic, and digital measurement value.
 Use the external ND filter (optional) in case the amount of reflected beam is too large on Specular Reflection installation.
 The measurement renea is limiter between 0 are 1 and 1. Notes: 1) Measuring conditions are as follows unless otherwise specified; connection with controller, power voltage
- Installation.
 3) The measurement range is limites between 0 and +20mm (in case the sampling cycle is 20µs at diffuse reflection), between 0 and +6mm (in case the sampling cycle is 20µs at specular reflection), between +18 and +20mm (in case the sampling cycle is 10µs at diffuse reflection), or unmeasurable (in case the sampling cycle is 10µs at diffuse reflection), or unmeasurable (in case the sampling cycle is 10µs at diffuse reflection). is 10us at specular reflection). 1) This is based on the EDA Standard, according to Laser Notice No. 56 of the EDA Standard
- The figure shows the value at measurement center distance. It is determined by 1/e² (approximately 13.5%) of center beam intensity. Due to leak light outside the specified area, the reflectance around the detecting point may be higher than at the point and this may affect the measurement value.
 The minimum resolution of 0.25µm can be achieved if the sensor head is connected to the controller that is
- not subject to "Foreign Exchange and Foreign Trade Law" 7) The variation in ambient illuminance is ±0.03%F.S. or less

4 EXPORT REGULATIONS BY JAPANESE GOVERNMENT

- HL-C208B(-MK) and HL-C208C(-MK) are subject to export control regulation by the Foreign Exchange and Foreign Trade Law. Export admission by Japanese government is required before the product is to be exported or brought out of the country.
- These products are also subject to Article 1.B.3.b.1 of Nuclear Suppliers Group in international export control regime and 2.B.6.b.1 of Wassenaar Arrangement • Please follow the export control regulations required.
- HL-C208BE(-MK) and HL-C208CE(-MK) (E type) are not subject to export control regulations under the condition that they are used combined with the nonpertinent controller to export control specified by Foreign Exchange and Foreign Trade Law.

When they are combined with the pertinent controller to export control, they are subject to the Law. In this case export admission by Japanese government is required before the product is to be exported or brought out of the country.

5 CAUTIONS

Connection


- Turn off the power of controller before connecting or disconnecting the connectors When connecting or disconnecting the connectors, be sure to hold the connector area not to apply extra force to the cable.
- · Be careful not to touch terminals or to let foreign matter get in the connector after disconnecting connectors.
- · Be careful not to apply force to around the connector of standard cable and extension cable. Do not bend the cables near connectors. Failure to do so causes causes disconnection of the cable.

Wiring

- Do not run the sensor cable along (bundled in parallel) with other wirings. Keep it at least 100mm away from other wires. Run the cable so it is separate from high voltage and power circuit lines. If it is necessary to run the cable in parallel with them, shield it by running through a grounded electrical conduit.
- . Install the product as far away as possible from noise source such as high-voltage lines, high-voltage device, power lines, power device, machines which generate a large starting and stopping surge, welding machines and inverter motor
- Do not pull the cable using a force more than 29.4N when routing the cable with the sensor head and controller fixed. At least 20 mm is required from the cable connection to the bend. The bending radius must be 30 mm or more.
- When the sensor head is moved around while in use, the cable in the moving part may be damaged. Therefore, use an extension cable for the moving part and when the extension cable is damaged, immediately replace it. Otherwise, it may result in failure.

Cable Extension

- Use only one extension cable for connection between one sensor head and a controller.
- When the sensor head part is moved around while in use, fix the extension cable at a position 100 mm away from the mobile end.



Bendina en

Warming up time

• Allow at least 30 minutes of warming up after turning on the power to ensure the performance of the product

Environment

- The life of the semiconductor laser depends on the ambient temperature during use. When using the product near a heat source, take measures to lower the ambient temperature of the sensor head as possible. Mount the sensor on a device having good heat radiation because the sensor itself emits heat.
- · Water, oil, or fingerprints on the emitter surface and receiver surface of sensor head reflects light. Dust and dirt on them block light. Keep them clean at all times. When cleaning these parts, wipe them off using a soft lint-free cloth or lens cleaning paper.
- Install the sensor head so ambient light such as sunlight or light with the same wavelength as laser beam should not enter the light receiver. If high accuracy is required, install a light shielding plate or the like on the sensor head.
- The controller and connectors are not structurally dustproof, waterproof, or corrosion-resistant. Do not use the product underwater or in the rain.
- . Do not use the product in dusty places or that exposed to flammable or corrosive gases, droplet, direct sunlight, severe vibration or impact

6 MEASUREMENT RANGE / INDICATOR


Installation Mode: Diffuse

- Meas. range indicator OFF Blink ON Blink OFF Measurement range Measurement center
- The measurement range indicator at sampling cycle of 20µs or 10µs lights up at the center of limited measurement range.


7 MUTUAL INTERFERENCE AREA (Unit: mm)

• When installing 2 or more sensor heads side by side, mutual interference occurs if the laser spots from other sensor heads fall within the shaded areas in the right figure

Install sensor heads so the laser spots from other sensor heads fall outside the shaded areas.

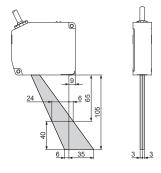


8 BEAM DIAMETER (Unit: mm)

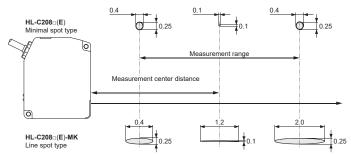


9 DIMENSIONS (Unit: mm)

Installation Mode: Diffuse

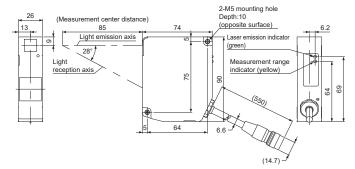

Installation Mode: Specula

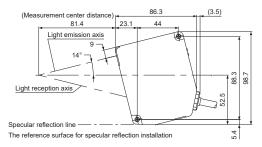

10 OPTION

 ND filter (product code: HL-C2E01) is optionally available to adjust the excessive received light intensity to an optimum level. This is useful when mounting the sensor head for specular reflection.

Panasonic Industry Co., Ltd. 1006, Oaza Kadoma, Kadoma-shi, Osaka 571-8506, Japar

https://industry.panasonic.com/ Please visit our website for inquiries and about our sales network

Panasonic Industry Co., Ltd. 2024 April, 2024



このたびは、パナソニック製品をお買い上げいただき、ありがとうございます ご使用の前にこの取扱説明書をよくお読みになり、正しく最適な方法でご使用くだ

尚、この取扱説明書は大切に保管してください。


▲ 警告

- ●本製品は、対象物の検査(判定・測定)を行なうもので、人命や財産に影響をあた える事故防止など安全確保のために使用しないでください。
- 危険ですので、レーザ光の直接光やその他の反射光を見たり触れたりしないで
- ください
- 本製品は工業環境に使用する目的で開発、製造された製品です。

はじめに

CE

本製品を使用する前に確認をしてください。



- 本製品はCEマーキング適合品のコントローラ、プログラマブル表示器と組み合 わせて使用することによりCEマーキング適合品となります。また、UKCAマー キング適合品のコントローラ、プログラブル表示器と組み合わせて使用すること によりUKCAマーキング適合品となります。

1 概要

- •本製品は受光素子にリニアイメージセンサを使用して、超高速サンプリング・
- 高精度測定により高精度の必要な高速設備にも対応した変位センサヘッドです。 設定と設置により拡散反射と正反射ヘッドとして使用することができます。

2 レーザ製品を安全にご使用いただくために

- レーザ製品によって使用者に障害が発生するのを未然に防止することを目的とし て、IEC規格、JIS規格、GB規格、KS規格、FDA規則ではそれぞれ次の基準が 制定されています。
- IEC : IEC 60825-1:2014
- JIS : JIS C 6802:2014
- GB : GB 7247.1-2012
- KS : KS C IEC 60825-1:2013
- FDA : PART 1040.10, 1040.11(Laser Notice No.56)

この基準ではレーザの危険度に応じてレーザ製品をクラス分けし、各クラスごと に実行すべき安全予防対策を定めています。

クラス分けの説明

IEC 60825-1:2014 (J	ISC 6802:2014) によるクラス分け

クラス分け	機種	危険評価の概要					
クラス2	HL-C208B (E) HL-C208B (E) -MK	まばたきなどの嫌悪反応(回避行動)によって目が保護される400nm~700nmの 波長範囲の可視光を放出するレーザ。					
クラス3R	HL-C208C (E) HL-C208C (E) -MK	直接のビーム内観察は潜在的に危険である302.5nm~10 ⁶ nmの波長範囲で放出 するレーザ。					

警告ラベル

<HL-C208B ->

日本語/英語/韓国語表記





激光辐射

勿直视光束

最大输出:1mW 脉宽:最大 媒体:半导体激光 波长:658

勿直视光束

/₩\

中国語表記(Eタイプのみ)





日本語/英語/韓国語表記

中国語表記(Eタイプのみ



激光辐射

+输出:5mW 脉宽:最大) k:半导体激光 波长:658


避免眼睛受到直接照射







注意



- レーザビームが直接目に入らないように、ビームが目の高さよりも上方または 下方になるような位置に取り付けてください。
- 安全距離(公称眼障害距離:NOHD)は約0.5mですが、レーザビームは拡散反射 ◆本には吸収体で終端してください。
 ◆故障の場合は必ず弊社までご連絡ください。本製品は分解したときに自動的に
- レーザ放射を停止する機能を備えておりませんので、分解するとレーザ放射にさ らされる危険性があります
- •本製品を中国国内で使用する場合は、中国語表記の警告ラベル(付属)を貼ってご 値田ください
- 本取扱説明書に記載されている以外の方法で操作しないでください。

3 仕様

製		品	型	1	式	HL-C208B (E)		HL-C208B (E) -MK		HL-C208C (E)		HL-C208C (E) -MK		
泼		88	至		IL.	拡散反射時	正反射時	拡散反射時	正反射時	拡散反射時	正反射時	拡散反射時	正反射時	
測	定		方	式	(注2)	拡散反射/正反射								
測	定	中	心	距	離	85mm	81.4mm	85mm	81.4mm	85mm	81.4mm	85mm	81.4mm	
測	定	2	範	囲	(注3)	±20mm	±6mm	±20mm	±6mm	±20mm	±6mm	±20mm	±6mm	
光					源	赤色半導体レーザ クラス2(JIS/IEC/GB/KS)、 クラスⅡ(FDA)(注4) 最大出力:1mW、発光ピーク波長658nm								
Ľ	-	-	Ъ	径	(注5)	約φ10	00 µ m	約100×	1,200 <i>µ</i> m	約¢1	00 µ m	約100×1	1,200 <i>µ</i> m	
受		光	素		子				リニアイメ	ージセンサ	÷			
分 解					能	[E:	0.6µm/平均回数:256回、0.15µm/平均回数:4,096回 [Eタイプ0.6µm/平均回数:256回、0.25µm(注6)/平均回数:4,096回]							
直			線		性	±0.03%F.S.	±0.1%F.S.	±0.03%F.S.	±0.1%F.S.	±0.03%F.S.	±0.1%F.S.	±0.03%F.S.	±0.1%F.S	
温		度	特	ŧ	性				0.01%	F.S./°C				
表	V	-	ザ	放	射	緑色LED(レーザ放射時点灯)								
表示灯	測	5	È	範	囲	黄色LED(測定中心付近で点灯/測定範囲内で点滅/測定範囲外で消灯)								
保	護構造		造	IP67(コネクタ部は除く)										
汚	損 度					2								
絶		縁	担	ŧ	抗	DC 500Vメガにて 20MΩ以上(全端子一括-ケース間)								
耐電	商	月	Ħ	周	波	AC 500V 1分間(全端子一括-ケース間)								
庄	イ	ン	パ	ル	ス	±1,000V 1.2/50µs(全端子一括-ケース間)								
耐			振		動							·方向2時間		
耐			衝		撃	196m/s ² X、Y、Z各方向3回								
使	用	周	囲照		(注7)	3,000ℓx以下(白熱ランプでの受光面照度)								
使	用	周	囲	温	度	0~+45°C(但し、結露および氷結しないこと)、保存時:-20~+70°C								
使	用	周	囲	湿	度	35~85%RH、保存時:35~85%RH								
使		用	楞	Į	高	2,000m以下								
材					質	,	本体ケース	/本体カバ-	-:アルミ	ダイカスト	、前面カバ	ニー : ガラス		
ケ	-		ブ	ル	長				-	5m				
ケ	-	ブ	ル	延	長									
質					量									
適	合 規 制				制	EU規制:EMC指令/英国規則:EMC規則適合								

40μs、平均回数:256回、測定中心距離、対象物体:白セラミック、デジタル測定値とします。 (注3)

:40 JuS、半均回数:200回、加速中心起離、対象物体:日ゼマラッグ、ナンダル潮走僅とします。 : 正反射取付時に反射光量が大きい場合は、別売の外付けNDフィルタを使用します。 : 測定範囲は、サンブリング周期20 JuSでは拡散反射時(0 + + 200m、正反射時)0 ~ + 6mm、また10 JuSでは拡散 反射時+18 ~ + 200m、正反射時測定不可に制度されます。 : FDA規則のLaser Notice No.56の規定に従い、FDA規則に準拠します。 : 測定中心距離における大きさです。中心光強度の1/2⁶(約1.5%)で定義されています。定義域外にも漏れ光が あり、検出ポイントの周囲が検出ポイントに比べて反射車が高い場合は、その影響を受ける場合があります。 : *外国為替及び外国貿易法*で定められた輸出規制に該当しないタイプのコントローラと接続することで、最小 分解数約0.95 JuD+1 ます。

- (注6) 分解能が0.25µmとなります。
- (注7): 使用周囲照度による変動は±0.03%F.S.以下になります。

4 日本政府による輸出規制

- HL-C208B(-MK)およびHL-C208C(-MK)は"外国為替および外国貿易法"で定められた輸出 規制に該当します。本製品を輸出するとき、または国外に持ち出すときは、日本国政府の 輸出許可が必要です。また、国際輸出管理レジームのNuclear Suppliers Group (NSG:原 子力供給団会合)項目1.B.3.b.1やワッセナーアレンジメント(協約)の2.B.6.b.1に該当し、 規制対象品となりますので、各国の輸出管理規制に従ってください。
- HL-C208BE(-MK)およびHL-C208CE(-MK)(Eタイプヘッド)は"外国為替および 外国貿易法"で定められた輸出規制に該当しないコントローラとの組合わせで使用 することを条件に、輸出規制に該当しない製品となります。輸出規制に該当する コントローラを使用する場合、輸出規制の対象となり、本製品を輸出するとき、 または国外に持ち出すときは、日本国政府の輸出許可が必要となります。


5 注意事項

接続

- コネクタの装着・取り外しおよび各種接続は、必ずコントローラの電源を切った 状態で行なって ださい
- コネクタの抜き差しは、必ずコネクタの部分を持って行ない、ケーブルに余分な 力を加えないないよ
- コネクタを外した場合、コネクタ内の端子に触れたり、異物が中に入らないよう に注音してください 標準ケーブルおよび延長ケーブルのコネクタ付近に力が加わらないようにしてく
- ださい。また、断線の原因となりますので、コネクタ付近でケーブルを曲げない でください。

配線

- センサケーブルは、他の配線と同一(平行に結束)にせず100mm以上離してくだ さい。また、高圧回路、動力回路の配線とは別にしてください。やむを得ない場 合は、アース工事した電線管などの導電体によりシールドし
- 高圧線、高圧機器、動力線、動力機器、大きな開閉サージを発生させる機器、 溶接機、インバータモータなどノイズの発生源となる機器からはできるだけ離し て設置してください。センサヘッド、コントローラを固定してケー
- ブルを配線する場合は、ケーブルを29.4N以 上の力で引っ張らないでください。また 使用時は、20mm以上あけて最小曲げ半径は 30mm以上とし てください
- センサヘッドを移動させて使用する場合、移動部でケーブルが損傷する可能性がありま す。移動部は延長ケーブルを使用し、延長 ケーブルが損傷した場合は直ちに交換してく ださい。故障につながる恐れがあります。



固定位置

100m

延長ケーブル

- 1つのセンサヘッドとコントローラ間には、 各ケーブルに対して延長ケーブル1本のみを
- センサヘッド部を移動させて使用する場合 は、可動端部から100mm以上離れた位置で延 長ケーブルを固定してください。

ウォーミングアップ


• 性能を確保するため、電源投入後30分以上のウォーミングアップ時間をおいてご 使用ください。

環境

- 半導体レーザの寿命は、使用周囲温度に依存します。発熱部の近くで使用する 場合は、冷却するなど、できるだけセンサヘッドの周囲温度を下げてご使用くだ さい。またセンサヘッド部自身も発熱しますので、センサヘッドの取り付けは、 できるだけ放熱性のよいものにしてください
- センサヘッドの投・受光面は、水、油や指紋など光を屈折させるもの、またはホコリや ゴミなどの光を遮断するものは付着させないように清浄に保ってください。清掃の際は、 ホコリのでない柔らかい布、またはレンズ用クリーナペーパで拭いてください。
 太陽光、レーザと同波長の光などの外乱光が受光部に直接入らないようにしてく
- ださい。特に精度を要求される場合は、センサヘッドに遮光板などを設置してご 使用ください。
- センサヘッド部は防侵形となっていますが、コントローラ部及びコネクタ部は、 構造上、防塵、防水、耐食性にはなっていませんので、水中あるいは降雨中での 測定はできません。使用環境に注意してください
- 引火性ガス、または腐食ガスの発生する場所、ホコリの多い場所、水滴のあたる 場所、直射日光のもと、または振動や衝撃の激しい場所で使用しないでください。

6 測定範囲と表示灯


● 設置モード/拡散反射





● サンプリング周期20µs、10µs時は、制限された測定範囲の中央で点灯します。

7 相互干涉(単位:mm)


• 拡散反射のセンサヘッドを2台以上隣接取 れば、相互干渉しません。 他のセンサヘッドのレーザスポットが、 の範囲内に入らないように取り付け てください。

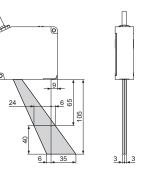




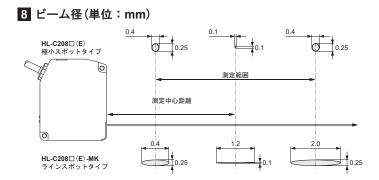

9 外形寸法図(単位:mm)

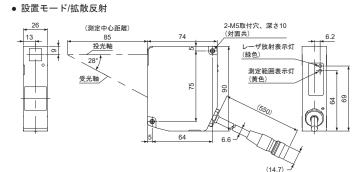

設置モード/正反射

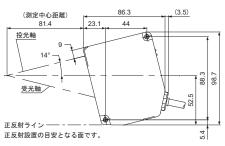

10 オプション

• 正反射取り付け時に反射光量が大きい場合、適切なレーザ光量に減衰し、より 高精度な測定を可能にするために、外付けNDフィルタ(品番:HL-C2F01)をご 用意しています。

