Panasonic®

Laser Marking System

Safety Instructions Manual

LP-RH

EN-EU-LPRH-SAFETY-3

2024.07 | https://industry.panasonic.eu/

Preface

Thank you for purchasing this product.

Read this manual carefully to make full use of the product and to ensure its safe and proper operation.

The English version of this instruction manual is the original version. All other languages are translations that are based on the original documentation.

This product has been strictly checked and tested prior to packaging. However, make sure that the product has not been damaged during transportation and operates properly before using it. If the product was damaged or does not operate as specified in this manual, contact our service center or sales office.

Liability and copyright for the hardware

This manual and everything described in it are copyrighted. You may not copy this manual, in whole or part, without written consent of Panasonic Industry Europe GmbH.

Panasonic Industry Europe pursues a policy of continuous improvement of the design and performance of its products. Therefore we reserve the right to change the manual/ product without notice. In no event will Panasonic Industry Europe be liable for direct, special, incidental, or consequential damage resulting from any defect in the product or its documentation, even if advised of the possibility of such damages.

Please direct support matters and technical questions to your local Panasonic representative.

Panasonic Industry Europe GmbH

Caroline-Herschel-Straße 100

85521 Ottobrunn, Germany

Tel: +49 89 45 354-1000

Disclaimer

The applications described in the manual are intended as examples only. The purchase of our products described in the manual shall not be regarded as granting of a license to use our products in the described applications. We do not warrant that we have obtained some intellectual properties, such as patent rights, with respect to such applications, or that the described application may not infringe any intellectual property rights, such as patent rights, of a third party.

Trademarks

- Windows is a registered trademark or trademark of Microsoft Corporation in the United States and other countries.

- QR Code and iQR Code are registered trademarks of DENSO WAVE INCORPORATED in Japan and in other countries.
- Adobe, Adobe Logo, Adobe Acrobat Reader, and Adobe Illustrator are registered trademarks of Adobe Inc. in the U.S.A. and/or other countries.
- The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc.
- EtherNet/IP is a trademark of ODVA, Inc.
- PROFINET is a registered trademark of PROFIBUS Nutzerorganisation e.V.
- All other product names and companies provided in this manual are trademarks or registered trademarks of their respective companies.

Important symbols

One or more of the following symbols may be used in this documentation.

The following symbols are used to indicate the type of hazard.

⚠ DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

Notice

Indicates a property damage message.

The following symbols are used to indicate the type of instructions to be observed.



Indicates an operating procedure which must not be performed.



Indicates an operating procedure which must be followed to operate the unit safely.





Indicates an operating procedure which must be performed carefully.

General safety precautions


Always follow these important safety precautions!

This product falls into laser class 4 according to IEC 60825-1 "Safety of laser products". By definition, class 4 laser devices are "laser products for which intrabeam viewing and skin exposure is hazardous and for which the viewing of diffuse reflections may be hazardous. These lasers also often represent a fire hazard". Laser class 4 devices require a safety system compliant with ISO 13849-1 and ISO 11553-1. To protect the operator from being exposed to a laser beam, be sure to follow the instructions in this manual and observe the safety regulations of your country.

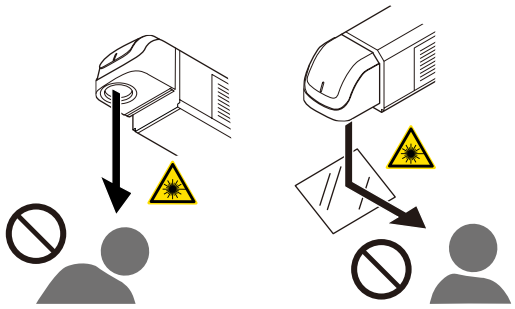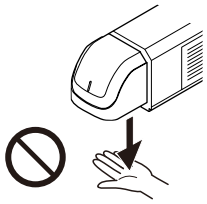⚠ DANGER	
	Never look at the direct laser beam, neither directly nor through a lens or any other optical components. Laser radiation into the eye causes blindness or serious damage to the eye. A specularly reflected laser beam is also dangerous. 
	Never expose your skin, clothing or any other flammable object to the laser radiation. Your skin will be severely burned and there is a risk of fire. 

⚠ WARNING	
	Do not use this product near flammable gas or objects (organic solvents such as thinner or gasoline), in a dusty place or anywhere where fire is strictly prohibited. There is a risk of fire.
	Do not install this product in wet places except for water-resistant parts. Never conduct wiring or maintenance work with wet hands or when the product surface is wet. Otherwise, there is a risk of an electrical shock or malfunction.
	Do not open or disassemble this product. Otherwise, there is a risk of exposure to laser radiation or of electrical shock.

⚠ WARNING	
	Do not insert hands or objects in the gaps of the cooling air inlet or outlet. This may result in injuries, electrical shock, or failure of this product.
	Wear laser protective goggles against laser radiation within the laser controlled area. Never look into the direct or specularly reflected laser beam even when you are wearing the protective goggles. The protective goggles are designed to protect your eyes from diffuse reflection only. 
	Build a protective enclosure with proper reflectance, durability and thermal resistance to enclose the laser radiation range without leakage. All objects exposed to laser radiation, e. g. a workpiece stand or an object to stop laser radiation, must be contained within the protective enclosure. Make sure the objects are made of flame-resistant and low-reflectance material. Do not use objects made of resin or wood, or objects with a specular surface.
	Construct an interlock system, e.g. to stop laser radiation when the access panel of the protective enclosure is opened.
	After you turn off the power supply of this product, the laser safety officer must remove the key and keep it.
	Be sure to connect a laser head and a controller that have identical serial numbers. Otherwise there is a risk of exposure to laser radiation or failure.
	Read all safety instructions and manuals thoroughly, and do not operate, install and connect this product with any other methods except the instructions provided in the manuals. Otherwise the safety protection and functions provided by the device may be affected and may cause injury, electrical shock or exposure to the laser beam.
	Turn off the power of this product before you conduct wiring, connection, or maintenance work. Wiring and maintenance should be done by an expert engineer or a qualified electrician. Otherwise, there is a risk of an electrical shock or fire.
	When connecting the power supply, be sure to ground this product properly. Otherwise, there is a risk of malfunction and electrical shock in case of a failure or leakage current.
	Perform regular maintenance (cleaning, parts replacement) on this product. Do not use this product if it is visibly soiled with dust or dirt. Otherwise, there is a risk of an electrical shock or fire.

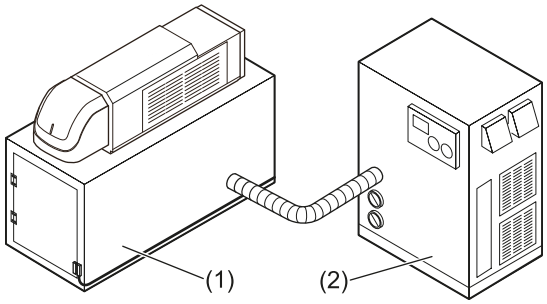⚠ WARNING	
❗	Remove the dust and gas with a dust collector or fume exhauster. Depending on the material of the workpiece, dust or gas, which can be harmful for the human body and this product, may be generated. Make sure the suction nozzle of the dust collector or fume exhauster is made of flame-resistant and low-reflectance material. Do not place the suction nozzle in the laser beam path.  (1) Protective enclosure (2) Dust collector or fume exhauster
❗	When using an assist gas for laser processing, take safety measures to protect operators from exposure, ignition, toxic effects, excess or lack of oxygen.
❗	To carry this product, wear non-slip gloves. Hold the product with both hands. Do not carry this product by holding the cables and connectors. In case the unit falls down, it may cause injury. Do not hold this product by the sharp edges of metal parts or by protrusions and corners.
❗	Install this product in a stable place without vibration and shock. In case the unit falls down, it may cause injury.

When using the touch panel console, take the following safety precautions.

⚠ WARNING	
🚫	Never conduct wiring or maintenance work with wet hands or when the product surface is wet. Otherwise, there is a risk of an electrical shock or malfunction.

⚠ CAUTION	
🚫	Do not disassemble or modify the product. This could result in excessive heat or smoke.
🚫	Since the touchscreen is made of glass, be careful not to hit it with a hard object or apply excessive force. Do not drop the product from a high place as the glass may break and cause injury.
🚫	Do not press more than one point on the touchscreen at a time. Pressing two or more points may activate an unintended point located in the middle of the input points. This may damage the facility or cause an accident.

Applicable standards

All models of this product comply with the following standards. This product does not comply with standards of countries which are not listed.

When you export the product by itself or integrated into a machine or device, check the regulations and standards of the importing country or region.



Laser class 4 devices require a safety system compliant with ISO 13849-1 and ISO 11553-1.

- **EN Standards (CE Marking)**

  2014/30/EU: "EMC Directive" (EN 55011, EN 61000-6-2)

  2006/42/EC "Machinery Directive" for partly completed machinery (EN ISO 11553-1, EN 60204-1)

  2011/65/EU as amended by (EU)2015/863 "RoHS Directive" (EN IEC 63000)

  Technical specifications: EN 55032, EN 60825-1

  Authorized representative in the EU: Panasonic Marketing Europe GmbH, Panasonic Testing Centre, Winsbergring 15, 22525 Hamburg, Germany

  The printed copy of the EU “Declaration of incorporation of partly completed machinery” is included in the package of this product.

- **EN Standards (UKCA Marking)**

  2016 No. 1091 "Electromagnetic Compatibility Regulations 2016" (EN 55011, EN 61000-6-2)

  2008 No. 1597 "Supply of Machinery (Safety) Regulations 2008" for partly completed machinery (EN ISO 11553-1, EN 60204-1)

  2012 No. 3032 "Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012" (EN IEC 63000)

  Technical specifications: EN 55032, EN 60825-1

  UK address: Panasonic UK, a branch of Panasonic Marketing Europe GmbH, Maxis 2, Western Road, Bracknell, Berkshire, RG12 1RT

  The printed copy of the UK “Declaration of incorporation of partly completed machinery” is included in the package of this product.

- **FDA (Food and Drug Administration, US regulations)**

  21 CFR1040.10 and 1040.11 (except for conformance with IEC 60825-1 Ed. 3, as described in Laser Notice No. 56 dated May 8, 2019)

- **UL/CSA Standard (UL/CSA Marking)**

  UL 2178, UL 60950-1, CSA C22.2 No. 60950-1

- **JIS (Japanese Industrial Standards)**

  JIS C 6802

- **GB (Chinese National Standard)**

  GB 7247.1-2012 (IDT IEC 60825-1: 2007)

For more details regarding the applicable standards, refer to the “Setup and Maintenance Guide”.

Product models

This manual covers the product models listed in the table.

Multiple models may be described collectively. Therefore, illustrations and screenshots may slightly vary, depending on the model. Different settings or technical data, however, are specified in the text.

Model	Collective name
LP-RH300S	LP-RH series
LP-RH300T	
LP-RH301S	
LP-RH301T	
LP-RH305S	
LP-RH305T	
LP-RH200S	
LP-RH200T	
LP-RH100S	
LP-RH100T	
LP-RH101S	
LP-RH101T	

Table of contents

Preface **2**
Important symbols **4**
General safety precautions **5**
Applicable standards **8**
Product models **10**
1 Radiation information **12**
1.1 Precautions 12
1.2 Marking laser (laser class 4) 12
1.3 Guide laser and pointer (laser class 2) 14
2 Safety functions **16**
2.1 Overview 16
2.2 Key switch 16
2.3 Shutter 17
2.4 Manual alarm reset 17
2.5 Laser status display 17
2.6 Behavior of the safety functions under fault condition 18
2.7 Warning labels 19
3 Protective measures **21**
3.1 Overview 21
3.2 Laser safety officer 21
3.3 Key control 22
3.4 Laser protective googles 22
3.5 Construction of an interlock system 22
3.6 Protective enclosure 24
3.7 Other protective measures 24
4 Disposal of the laser marking system **26**
5 Record of changes **27**
Index **28**

1 Radiation information

1.1 Precautions

Make sure that all protective measures are in place before using the system.

You have acquired a product with components of laser class 4 (marking laser) and laser class 2 (guide laser). The laser classifications are defined in the standard IEC 60825-1 "Safety of laser products".

Related topics

Protective measures (page 21)

1.2 Marking laser (laser class 4)

Laser class 4 refers to “laser products for which intrabeam viewing and skin exposure is hazardous and for which the viewing of diffuse reflections may be hazardous. These lasers also often represent a fire hazard”.


Specifications	
Wavelength	LP-RH100S, LP-RH100T, LP-RH101S, LP-RH101T, LP-RH300S, LP-RH300T, LP-RH301S, LP-RH301T, LP-RH305S, LP-RH305T: 10.6µm LP-RH200S, LP-RH200T: 9.3µm (invisible beam)
Laser medium	CO_2 laser
Maximum output	LP-RH100S, LP-RH100T, LP-RH101S, LP-RH101T: 30W LP-RH200S, LP-RH200T, LP-RH300S, LP-RH300T, LP-RH301S, LP-RH301T, LP-RH305S, LP-RH305T: 75W This is the maximum value that can be output from the laser oscillator.
Oscillation method	Continuous wave
Laser class	4 (IEC 60825-1)
NOHD (nominal ocular hazard distance)	LP-RH100S, LP-RH100T: 3.8m LP-RH101S, LP-RH101T: 2.4m LP-RH200S, LP-RH200T, LP-RH300S, LP-RH300T: 7.2m LP-RH301S, LP-RH301T: 4.5m LP-RH305S, LP-RH305T: 11m NOHD is the distance from the source at which the amount of beam irradiance or radiant exposure equals the maximum permissible exposure to eyes (MPE).

Specifications	
MPE (maximum permissible exposure)	1000W/m^2 for an exposure time of 10s.
NHZ (nominal hazard zone)	Varies depending on the reflectance or surface conditions and should be calculated based on the actual working environment. NHZ represents the area where the amount of beam irradiance or radiant exposure exceeds the maximum permissible exposure to eyes. The maximum value is equal to the NOHD value.

Radiation range

Standard model


LP-RH100S, LP-RH101S, LP-RH200S, LP-RH300S, LP-RH301S, LP-RH305S

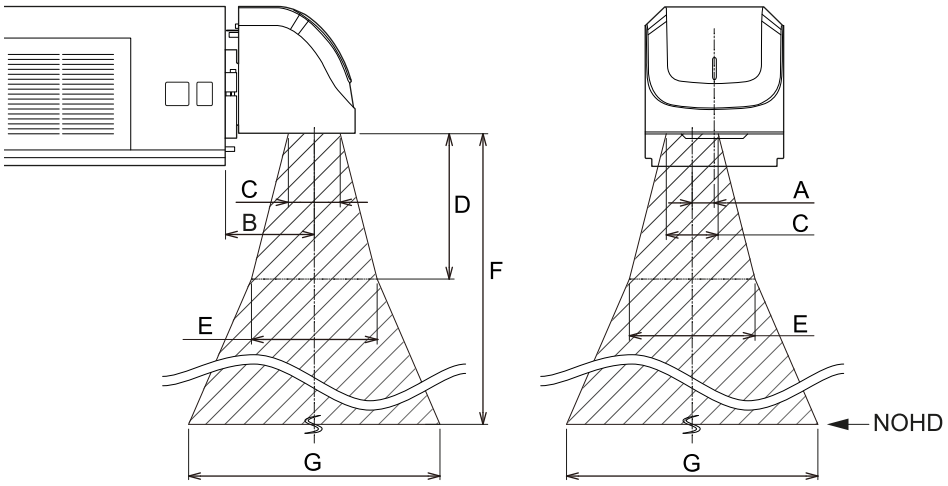

A Center position of laser emission port: 28mm
B Center position of laser emission port: 113mm
C Diameter of laser emission port: Ø66mm
D Work distance:
LP-RH100S, LP-RH200S, LP-RH300S: 185mm
LP-RH101S, LP-RH301S: 111mm
LP-RH305S: 262mm
E Laser radiation range at work distance:
LP-RH100S, LP-RH200S, LP-RH300S: Ø160mm
LP-RH101S, LP-RH301S: Ø80mm
LP-RH305S: Ø230mm
F NOHD:
LP-RH100S: 3800mm, LP-RH101S: 2400mm
LP-RH200S, LP-RH300S: 7200mm
LP-RH301S: 4500mm, LP-RH305S: 11000mm
G Laser radiation range at NOHD:
LP-RH100S: Ø2800mm, LP-RH101S: Ø1400mm
LP-RH200S, LP-RH300S : Ø5200mm
LP-RH301S: Ø2500mm, LP-RH305S: Ø8300mm

Tower model

LP-RH100T, LP-RH101T, LP-RH200T, LP-RH300T, LP-RH301T, LP-RH305T

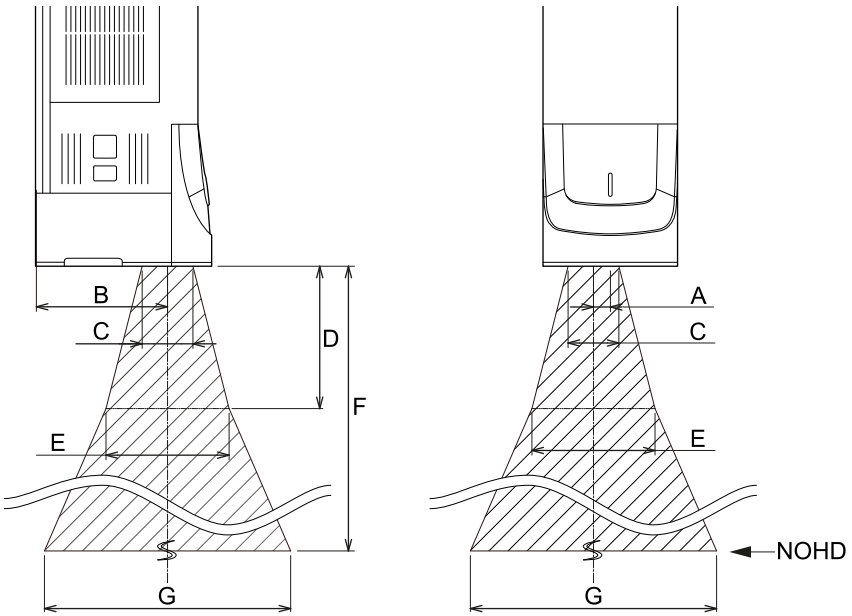

A Center position of laser emission port: 22mm
B Center position of laser emission port: 170.5mm
C Diameter of laser emission port: Ø66mm
D Work distance:
LP-RH100T, LP-RH200T, LP-RH300T: 185mm
LP-RH101T, LP-RH301T: 111mm
LP-RH305T: 262mm
E Laser radiation range at work distance:
LP-RH100T, LP-RH200T, LP-RH300T: Ø160mm
LP-RH101T, LP-RH301T: Ø80mm
LP-RH305T: Ø230mm
F NOHD:
LP-RH100T: 3800mm, LP-RH101T: 2400mm
LP-RH200T, LP-RH300T: 7200mm
LP-RH301T: 4500mm, LP-RH305T: 11000mm
G Laser radiation range at NOHD:
LP-RH100T: Ø2800mm, LP-RH101T: Ø1400mm
LP-RH200T, LP-RH300T : Ø5200mm
LP-RH301T: Ø2500mm, LP-RH305T: Ø8300mm

1.3 Guide laser and pointer (laser class 2)

By definition, class 2 lasers devices are "laser products that emit visible radiation in the wavelength range from 400 to 700nm that are safe for momentary exposures but can be hazardous for deliberate staring into the beam."

Specifications	
Wavelength	655nm (visible beam)
Laser medium	Semiconductor laser

Specifications	
Maximum output	1mW Sum of the values for guide laser and pointer.
Oscillation method	Continuous wave
Laser class	2 (IEC 60825-1)

2 Safety functions

2.1 Overview

This product offers the following safety functions. Use these functions properly to ensure safe operation of this product.


- Key switch (page 16)
- Shutter (page 17)
- Manual alarm reset (page 17)
- Laser status display (page 17)
- Behavior of the safety functions under fault condition (page 18)
- Warning labels (page 19)

2.2 Key switch

The key switch is used to turn the main power of this product on or off.

To prevent unauthorized operation of this product, the laser safety officer must remove the key and keep it in a safe place. The key can only be removed when in OFF (O) position.

Key switch on the controller:

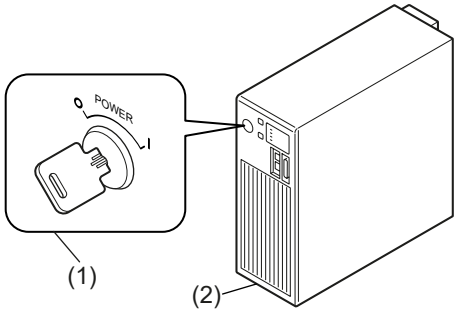

(1) Key switch
(2) Controller

2.3 Shutter

The shutter is located inside the laser head. By closing the shutter, the emission of the laser beam is blocked.

2.4 Manual alarm reset

If the interlock input or another input for safety devices is opened, or if a failure of this product occurs, an alarm signal is output.

Alarm status

- Shutter closes.
- Laser pumping turns off.
- ALARM OUT (Y15) turns OFF.
- The controller emits a beeping sound.
- The ALARM LED on the controller turns on.
- An error dialog opens in the PC configuration software Laser Marker NAVI smart.

Alarm reset

When an alarm occurs, remove the cause of the alarm and reset the system by one of the following methods:

- Turn off the key switch once and turn it on again after 5 seconds.
- Click the confirmation button in the error dialog of Laser Marker NAVI smart.
- Tun on the alarm reset input (X15) on the I/O TERMINAL connector.
- Transmit the Alarm reset (**ARS**) command.


2.5 Laser status display

To indicate the status of the laser emission and of the laser marking system, LED indicators located on the displays of both laser head and controller light up.


⚠ WARNING
If the laser head LED display is placed out of sight of operators, install an external signal lamp that is clearly visible.

Laser head

Standard model

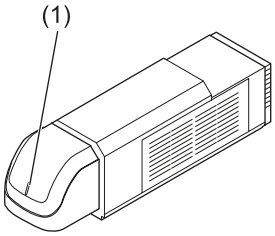

Tower model

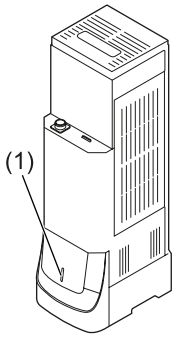


(1) Laser status display on the laser head
Orange: Laser emission in progress
Green: Shutter open/Laser pumping completed (Flashes: Laser pumping in progress)
White: Shutter closed/Laser pumping completed (Flashes: Laser pumping in progress)
Off: Laser in non-pumped status

Controller

For details about the LED indicators on the controller, refer to the “Setup and Maintenance Guide”.

2.6 Behavior of the safety functions under fault condition

The I/O TERMINAL connector on the rear of the controller is equipped with several inputs to construct a safety system. They can be connected to an external safeguard such as an emergency stop button or the safety switch of an access panel.

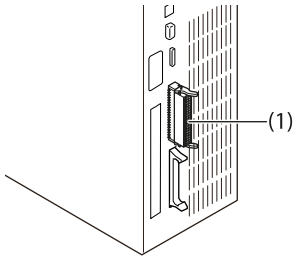

(1) I/O TERMINAL connector on the rear of the controller

If one of the interlock inputs (X16–X17 and X18–X19) or the remote interlock input (X20) is opened, the laser is powered off and the shutter is closed, regardless of whether the laser is radiating or not. For the laser stop inputs (X10 and X11), the behavior of the laser marking system depends on whether the laser is radiating or not.

By using interlock input 1 and 2 or the two laser stop inputs together with a safety relay unit, you can design a dual-channel safety system.

REMOTE INTERLOCK IN (X20): This terminal can be used as the remote interlock connector that is required by IEC 60825-1.

Safety function	Operation	Release method
INTERLOCK 1 (X16–X17): OPEN or INTERLOCK 2 (X18–X19): OPEN	• Laser pumping turns off • Shutter closes • Alarm is activated (E400, E401)[1)]	Close the interlock input and reset the alarm.
LASER STOP IN (X10, X11): OPEN	Laser is radiating: • Laser pumping turns off • Shutter closes • Alarm is activated (E402)	Close the laser stop input and reset the alarm.
	Laser is not radiating, shutter is open: • Laser pumping remains active • Shutter closes • Warning is activated (E600)	Close the laser stop input.
REMOTE INTERLOCK IN (X20): OPEN	• Laser pumping turns off • Shutter closes • Alarm is activated (E405, E503)[1)]	Close the remote interlock input and reset the alarm.

1) There is no alarm when the laser marking system is operated by PC configuration software and the shutter is closed (no laser radiation).

Note

We recommend that you connect external safeguards such as an emergency stop button or access panel to the interlock connectors to physically shut off laser radiation. Use the laser stop inputs to interrupt laser radiation.

Related topics


Construction of an interlock system (page 22)

2.7 Warning labels


The following labels are attached to the product. Do not peel them off!


If the laser head is placed out of sight of the operators, attach the supplied labels on the system so that they are immediately visible.

Standard model

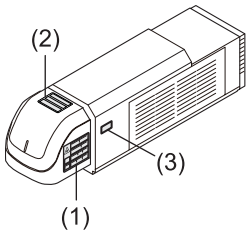


Tower model

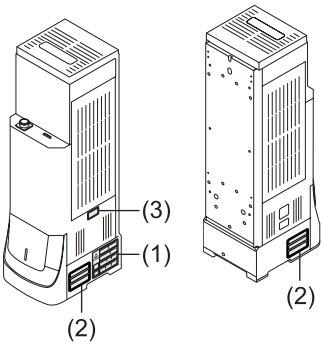

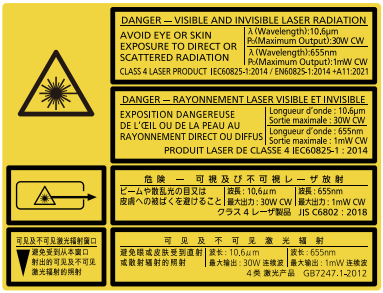


(1)

LP-RH100S, LP-RH100T, LP-RH101S, LP-RH101T

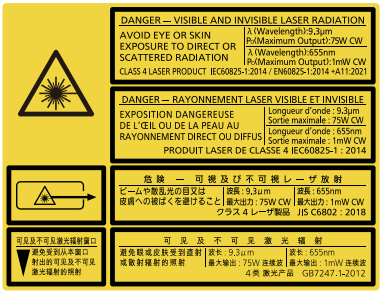


LP-RH200S, LP-RH200T

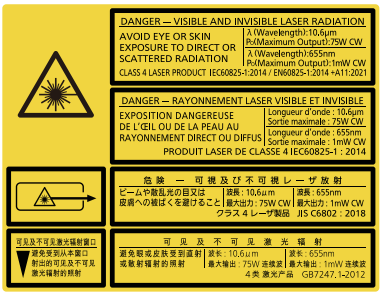

(1)

LP-RH300S, LP-RH300T, LP-RH301S, LP-RH301T, LP-RH305S, LP-RH305T

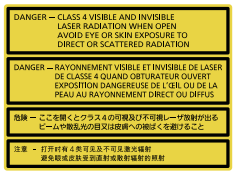

(2)



(3)

(1) Warning label/Explanatory label/Aperture label
The symbols on the explanatory label represent the following radiation output information:

Po = Maximum output
λ = Wavelength

(2) Protective housing label

(3) Certification and identification label

Note

It is the responsibility of the customer to ensure proper labeling in a language understood by the users of the laser marking system.

3 Protective measures

3.1 Overview

This product is a system component and designed for marking materials during the manufacturing or assembly process, in which a protection according to laser class 4 is prescribed (IEC 60825-1). Therefore the system designer must take appropriate protective measures in order to use the device.

Please follow the national laws and regulations of the country or region in which this laser product is used.

Perform the following protective measures before using this product.

- Appoint a laser safety officer (page 21)
- Control access by key (page 22)
- Provide laser protective goggles (page 22)
- Construct an interlock system (page 22)
- Build a protective enclosure (page 24)
- Apply other safety measures (page 24):
  - Construct a manual recovery system for power failures
  - Control the laser beam path
  - Terminate the laser beam path
  - Install lighting
  - Provide protective clothing

3.2 Laser safety officer

In some countries, you may be required to appoint a laser safety officer to ensure safe operation of laser devices. This person must be competent to evaluate laser hazards and to put effective protective measures in place.

Tasks and responsibilities of the laser safety officer include:

- Implement protective measures against injuries by laser radiation
- Set up and maintain the laser use area
- Manage the laser device, the system and the key
- Inspect and maintain the laser device and storage of records
- Inspect, maintain, and check the use of protective equipment
- Execute the safety training for users of this product

3.3 Key control

To prevent unauthorized operation of this product, the laser safety officer must remove the key and keep it in a safe place.

⚠ WARNING

According to IEC/FDA/JIS standards, laser products shall incorporate a key-actuated master control. This product is basically started by the key switch located on the front of the controller. However, when this product is operated as part of a larger system, the key switch is permanently in ON position and the power is supplied. In this case, you have to make sure that the external system which controls this product is equipped with a key-actuated master control.

3.4 Laser protective googles

Wear laser protective goggles against laser radiation within the laser controlled area. Never look into the direct or specularly reflected laser beam even when you are wearing the protective goggles. The protective goggles are designed to protect your eyes from diffuse reflection only.

Use ANSI Z136 and CE certified protective goggles with an optical density (OD) of 6 or higher at a wavelength of 9.3µm (9300nm) to 10.6µm (10600nm).

Ensure that the laser status display is clearly visible through the goggles.


3.5 Construction of an interlock system

To operate this product, construct a protective enclosure with an interlock system to avoid that human beings and surrounding objects are exposed to laser radiation.

By using interlock input 1 and 2 or the two laser stop inputs together with a safety relay unit, you can design a dual-channel safety system.

Notice

The interlock inputs are connected to the operating coils of contactors inside the controller. Therefore, connect only non-voltage contacts, such as relays or switches, to the interlock inputs. Do not connect any voltage contacts, such as transistors (semiconductors).

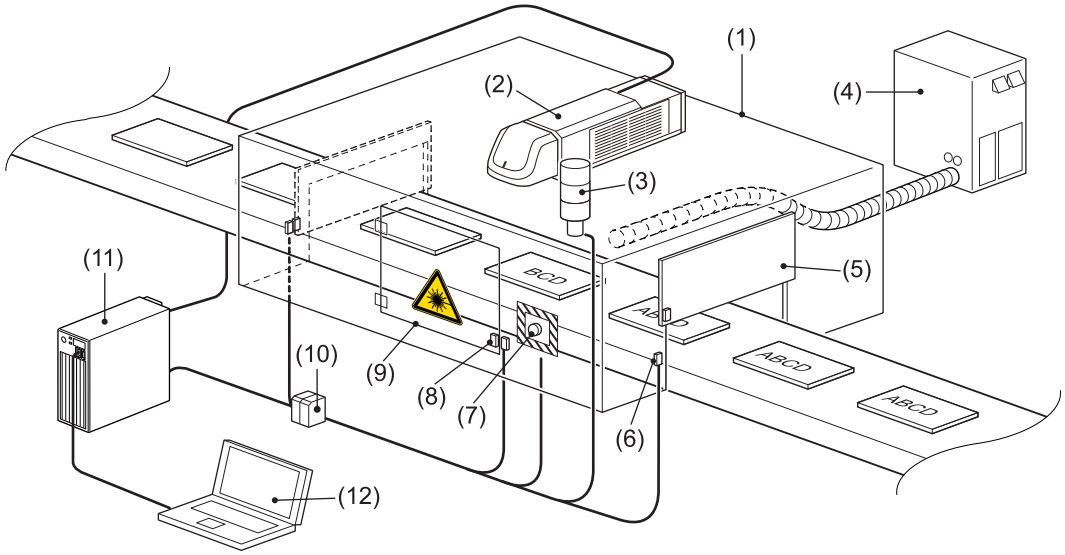

(1) Protective enclosure
(2) Laser head
(3) Laser emission signal lamp
(4) Dust collector or fume exhauster
(5) Laser shield plate
(6) Safety switch for laser shield plate
(7) Emergency stop button
(8) Safety switch for access panel
(9) Access panel
(10) Safety relay unit or safety PLC
(11) Controller
(12) PC for configuration or monitoring

Installation notes

Connect the safety devices (5) to (9) via a safety relay unit or the relay outputs of a safety PLC (10) to the safety inputs of this product.

To interrupt laser radiation or turn off laser pumping when the laser shield plate (5) is open for loading or unloading the workpieces, use the interlock or laser stop inputs.

To turn off laser pumping when the emergency stop button (7) is pressed or the safety switch for monitoring the access panel (8) or the access panel (9) itself is opened, connect the safety devices to the interlock inputs.

Connect the laser emission signal lamp (3) to output terminals such as the alarm output (Y15), the laser pumping output (Y20), or the laser radiation output (No. 40).


Place the suction nozzle of the dust collector or fume exhauster (4) as close as possible to the marking position.

3.6 Protective enclosure

In order to prevent exposure to laser beams accidentally reflected from the workpiece or from surrounding areas, construct a protective enclosure. It should enclose this product in the laser radiation range.

Use materials with proper reflectance, durability and thermal resistance which do not transmit a wavelength of 9300nm to 10600nm (9.3µm to 10.6µm). Recommended materials are metals (e.g. iron, aluminum, stainless steel) and acrylic resins. Acrylic plates should have a thickness of more than 3mm and the proper color to reduce secondary radiation (e.g. sparks) during laser processing. Do not use acrylic resins for parts that may be exposed to the direct laser beam.

Design the protective enclosure so that the laser beam does not pass through joint parts:

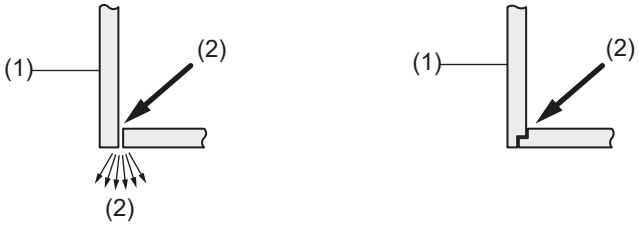

(1) Protective enclosure
(2) Laser radiation

3.7 Other protective measures

Before using this product, also perform the following important protective measures.

- Power failure recovery

  In case of a power failure, re-pumping of this product will be necessary. For safety reasons, construct a laser re-pumping system which must be operated by hand.

- Control of radiation direction

  In addition to building a protective enclosure, take measures to make the direction of laser radiation visible to operators and others. Warning labels are attached to the system before shipment. Do not peel them off.

  Control the laser beam path, so that the eyes of the workers sitting and standing are not met.

- Termination of laser beam

  In the event that no workpiece is present, terminate the laser beam within the laser radiation range with a flame-resistant object. Do not use objects made of resin or wood, or objects with a specular surface.

- Illumination

  Brightly illuminate the area surrounding this product. Since the pupils are contracted in well-lit places, your eyes will be better protected.

- Protective clothing

  Exposure of the skin and clothing to laser radiation will cause burning. Wear flame-resistant clothing to protect your skin.


4 Disposal of the laser marking system

To properly dispose of the laser marking system in accordance with local regulations, contact an industrial waste disposal company. Never dispose of the product with regular trash.

When disposing of waste electrical equipment or batteries, follow the regulations of your local authorities.

Symbol explanation

Only for the European Union and countries with recycling systems



This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products and batteries must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and batteries, please take them to designated collection points in accordance with your national laws or regional regulations. Correct disposal will help conserve valuable resources and prevent potential negative effects on human health and the environment. For more information about collection and recycling, please contact your local municipality. Incorrect disposal of this waste may result in penalties, in accordance with national legislation.



This symbol on the battery may be used in conjunction with a chemical symbol.

5 Record of changes

EN-EU-LPRH-SAFETY-3, 2024.07

European edition based on MJEC-LPRH-SAFETY-3 No.9000-0098-46V

- Corrected sections "General safety precautions", "Behavior of the safety functions under fault condition" and "Construction of an interlock system"
- Updated the certification and identification label in section "Warning labels"

EN-EU-LPRH-SAFETY-2, 2024.03

European edition based on MJEC-LPRH-SAFETY-2 No.9000-0093-04V

Index

D

Disposal 26

G

Guide laser 14

I

Interlock system 22
Interlock terminals 18

K

Key control 22
Key switch 16

L

Laser class 2 14
Laser class 4 12
Laser protective goggles 22
Laser safety officer 21
Laser status display 17
Laser stop terminals 18

M

Manual alarm reset 17
Marking laser 12
Max. output 12

N

NHZ 12
NOHD 12

P

Protective enclosure 24
Protective measures 21

R

Radiation information 12
Radiation range 12

S

Safety functions 16
Shutter 17

W

Warning labels 19
Wavelength 12