

# Safety Door Switch with Key

## SG-B2 SERIES

Related Information

■ General terms and conditions..... F-7 ■ General precautions ..... P.1501


- FIBER SENSORS
- LASER SENSORS
- PHOTOELECTRIC SENSORS
- MICRO PHOTOELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS / SAFETY COMPONENTS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE- SAVING UNITS
- WIRE- SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC ELECTRICITY PREVENTION DEVICES
- LASER MARKERS
- PLC
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS



### Solve issues related to machine safety and other safety measures with a safety door switch with key!

**No forgotten keys, No locked-in workers, No inadvertent machinery operation!**

The safety door switch with key **SG-B2** series locks and unlocks doors with keys. When an operator takes a key into a hazardous area, the safety door switch will not lock, and the equipment will stop, ensuring operator safety by preventing personnel from being closed inside the hazardous area and preventing equipment from starting to operate.

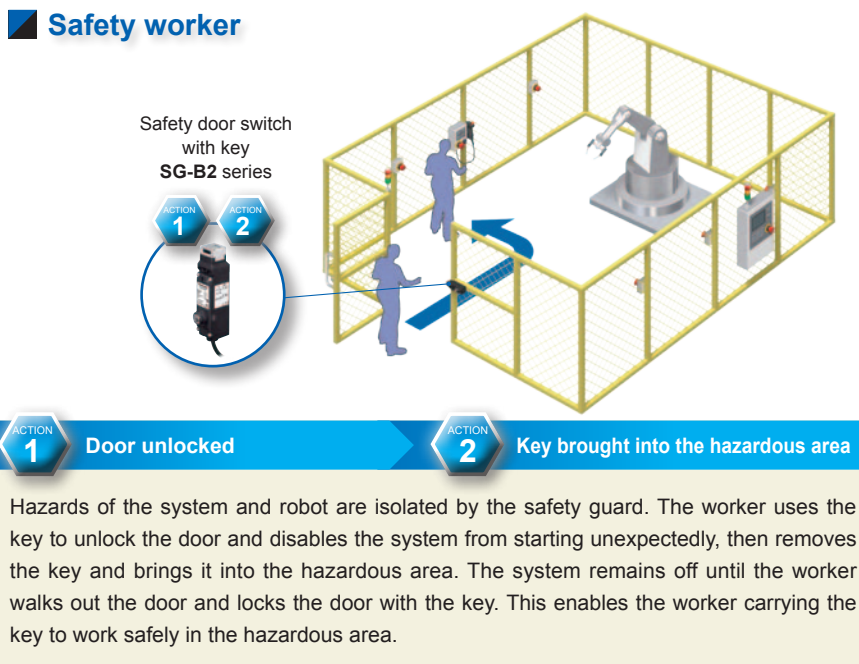

- Selection Guide
- Light Curtains
- Safety Components
- Optical Touch Switch
- Control Units
- Definition of Sensing Heights

SG-B1/SG-A1

SG-B2

SG-C1


SG-D1

SG-E1

SD3-A1

ST4

Additionally, the key selector switch **SG-D1 series** can be used to switch equipment modes and unlock door locks with a single key.

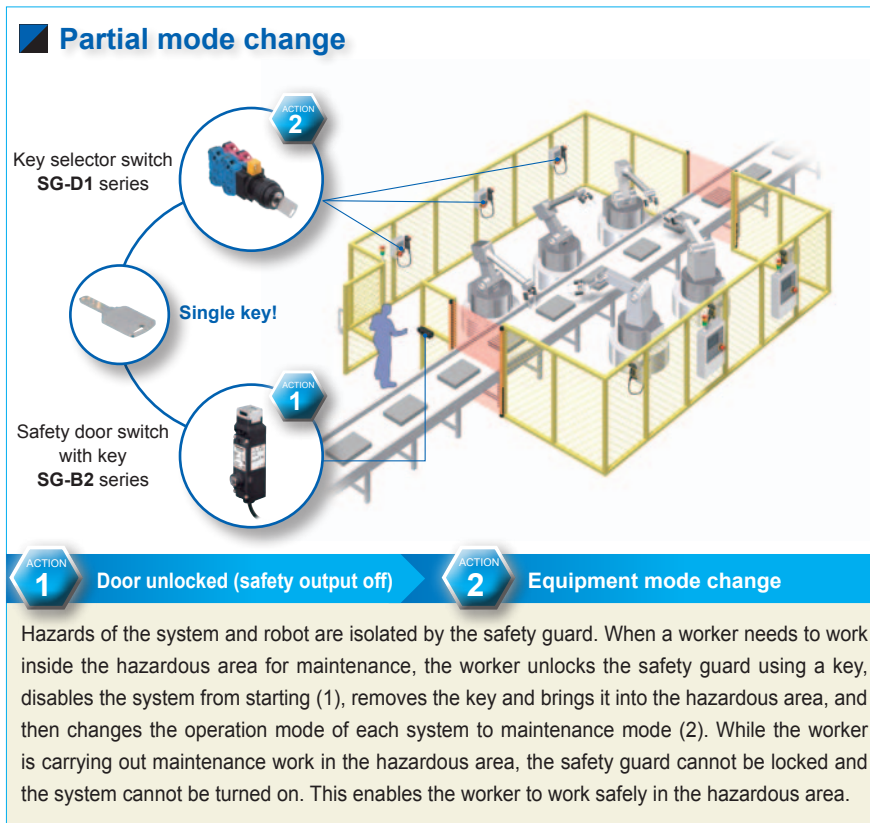

### Energy-saving design, no power supply required

Since doors are locked and unlocked with a key, there is no need to supply power to the safety door switch.

### Head removal detection function

Head removal detection function is employed in the **SG-B2**. With this innovative function, the monitor circuit (41-42) turns off when the head is removed from the switch, such as when removing the head to change the head direction. With the head installed on the switch, monitor circuits 41-42 and 51-52 operate in synchronization while the key locks / unlocks the actuator. When the head is removed, 41-42 turns off and 51-52 turns on. This disagreement is detected by the head removal detection function.



Monitor circuit	Actuator unlocked	Actuator locked	When the head removed
LOCK UNLOCK Monitor circuit (NC) Pink ⊕ 41 — 42 Pink / White	OFF	ON	OFF
Monitor circuit (NC) Brown ⊕ 51 — 52 Brown / White	OFF	ON	ON

Note: Head removal detection function is not direct opening.


Disagreement

- FIBER SENSORS
- LASER SENSORS
- PHOTOELECTRIC SENSORS
- MICRO PHOTOELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS / SAFETY COMPONENTS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC ELECTRICITY PREVENTION DEVICES
- LASER MARKERS
- PLC
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS

- Selection Guide
- Light Curtains
- Safety Components
- Optical Touch Switch
- Control Units
- Definition of Sensing Heights

- SG-B1/SG-A1
- SG-B2**
- SG-C1
- SG-D1
- SG-E1
- SD3-A1
- ST4

**High-security pin tumbler key types are used**

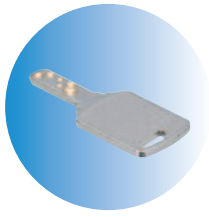

**Available with rear unlocking button**




Models with a rear unlocking button allow the door to be unlocked from the inside in the event a worker is left in the hazardous area.


**All models come with cables pre-installed.**

**Double-insulated design eliminates the need for grounding wires.**

**Choose an actuator based on the door shape and application.**

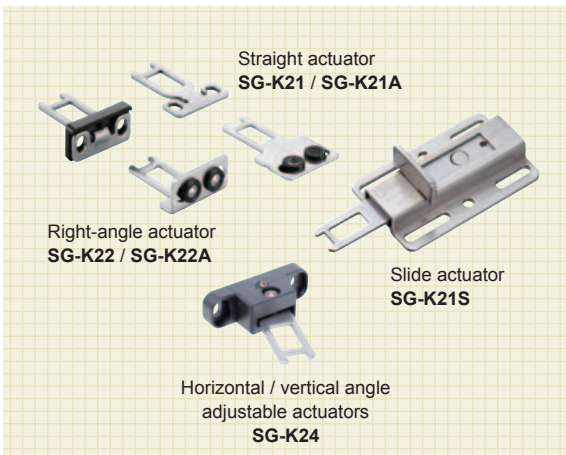

**Equipment combination examples related to machine safety**

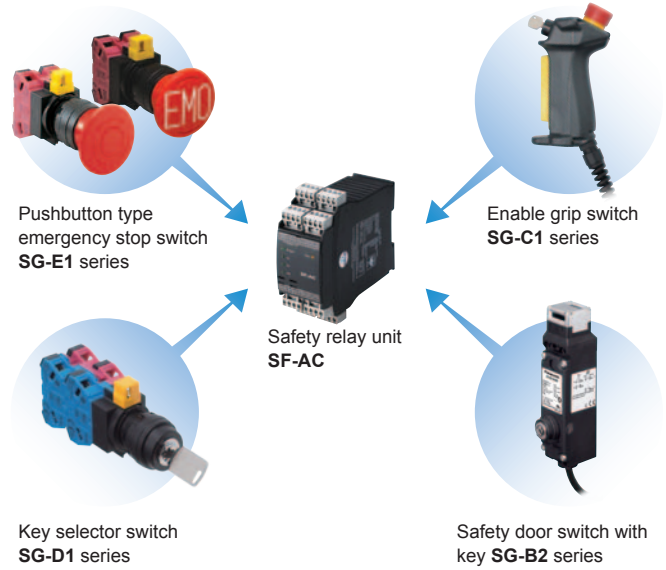

**ORDER GUIDE**

**Safety door switch with key**

Actuators are not included with door switches and must be purchased separately.

Rear unlocking button	Contact arrangement (Note)	Cable length	Key removal position	Model No.
Without		5 m 16.404 ft	A (removable in all positions)	<b>SG-B2-K2AC-5</b>
			B (removable in UNLOCK position)	<b>SG-B2-K2BC-5</b>
			C (removable in LOCK position)	<b>SG-B2-K2CC-5</b>
		5 m 16.404 ft	A (removable in all positions)	<b>SG-B2-K2AD-5</b>
			B (removable in UNLOCK position)	<b>SG-B2-K2BD-5</b>
			C (removable in LOCK position)	<b>SG-B2-K2CD-5</b>
With		5 m 16.404 ft	A (removable in all positions)	<b>SG-B2-K2AD-L5</b>
			B (removable in UNLOCK position)	<b>SG-B2-K2BD-L5</b>
			C (removable in LOCK position)	<b>SG-B2-K2CD-L5</b>

Note: The contact configuration shows the status when the actuator is inserted and the switch is locked. Key LOCK and UNLOCK positions are as shown on the right.

Switches incorporate two detents so that they stop in each position.



- Selection Guide
- Light Curtains
- Safety Components
- Optical Touch Switch
- Control Units
- Definition of Sensing Heights
- SG-B1/SG-A1
- SG-B2**
- SG-C1
- SG-D1
- SG-E1
- SD3-A1
- ST4

## ORDER GUIDE

### Actuators

Actuators are not included with door switches and must be purchased separately.

Type	Description	Model No.
Straight actuator	The actuator tensile strength when using this product is 1,400 N.	<b>SG-K21</b>
Straight actuator with rubber bushings		<b>SG-K21A</b>
Slide actuator		<b>SG-K21S</b>
Right-angle actuator		<b>SG-K22</b>
Right-angle actuator with rubber bushings		<b>SG-K22A</b>
Horizontal / vertical angle adjustable actuators	The actuator tensile strength when using this product is 500 N.	<b>SG-K24</b>


Note: When using a safety door switch with key on a hinged door, see page 27 for more information about the minimum door radius with which the switch can be used.



### OPTIONS

Type	Model No.
Padlock hasp (Note 1)	<b>SG-PH2</b>
Mounting plate (for mounting on an aluminum frame)	<b>MS-SG-21</b>
Rear unlocking button kit for a frame (Note 2)	<b>MS-SG-22</b>
	<b>MS-SG-23</b>

Notes: 1) The shackle diameter for compliant padlocks ranges from  $\varnothing 5.5$  to  $\varnothing 7.5$  mm  $\varnothing 0.217$  to  $\varnothing 0.295$  in.



Shackle diameter:  $\varnothing 5.5$  to  $\varnothing 7.5$  mm  $\varnothing 0.217$  to  $\varnothing 0.295$  in

2) For more information about selecting a back manual unlock button kit for a frame, see the following table:

Model No.	Mounting part* thickness (X) (mm in)
	Rear unlocking button type When installing an <b>SG-B2-K2□D-L5</b> with a rear unlocking button directly
<b>MS-SG-22</b>	33 < X ≤ 43 1.299 < X ≤ 1.693
<b>MS-SG-23</b>	23 < X ≤ 33 0.906 < X ≤ 1.299

\* The mounting part is a frame or a panel that the product is mounted on.

#### Padlock hasp

- **SG-PH2**



#### Mounting plate (for mounting on an aluminum frame)

- **MS-SG-21**



#### Rear unlocking button kit for a frame

- **MS-SG-22**
- **MS-SG-23**



FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Light Curtains

Safety Components

Optical Touch Switch

Control Units

Definition of Sensing Heights

SG-B1/SG-A1

**SG-B2**

**SG-C1**

**SG-D1**

**SG-E1**

**SD3-A1**

**ST4**



**CONTACT CONFIGURATION / OPERATING PATTERNS**

■ : Closed □ : Open

	Status 1	Status 2	Status 3	Rear manual unlock	
<b>Safety switch status</b>	• Door closed • Machine ready to operate	• Door closed • Machine cannot be operated	• Door open • Machine cannot be operated	• Door closed • Machine cannot be operated	
<b>Door status</b>				 • Press rear unlocking button. (Note 1)	
<b>Circuit diagram (Example: SG-B2-K2□D-L5)</b>					
<b>Door</b>	• Closed (locked)	• Closed (unlocked)	• Open	• Closed (unlocked)	
<b>Model No. and contact configuration</b>	<b>SG-B2-K2□C-5</b> 	Monitor circuit (door closed) 11-12			
		Monitor circuit (door open) 23-24			
		Monitor circuit (locked) 41-42			
		Monitor circuit (unlocked) 53-54			
	<b>SG-B2-K2□D-5</b> 	Monitor circuit (door closed) 11-12			
		Monitor circuit (door closed) 21-22			
		Monitor circuit (locked) 41-42			
		Monitor circuit (locked) 51-52			
	<b>SG-B2-K2□D-L5</b> 	Monitor circuit (door closed) 11-12			
		Monitor circuit (door closed) 21-22			
		Monitor circuit (locked) 41-42			
		Monitor circuit (locked) 51-52			

- Notes: 1) When the operator is confined in a hazardous area, the actuator can be unlocked manually by pressing the rear unlocking button, which should be accessed easily by the operator.  
 2) The above contact configuration shows the status when the actuator is inserted and the switch is locked.  
 3) Monitor circuit: Sends monitoring signals of protective door open / closed status or protective door lock / unlock status.

**• Operation characteristics** ■ : Contact ON (closed) □ : Contact OFF (opened) (reference)

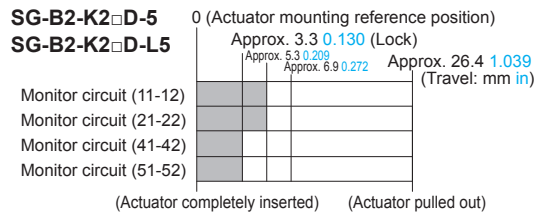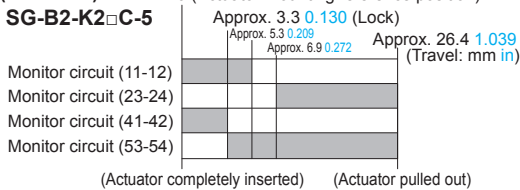


- The characteristics show the contact status when the actuator enters an entry slot of a safety switch.
- The characteristics shown in the chart above are of the **SG-K21** actuator. For the others actuator, add 1.3 mm 0.051 in.



When connecting the **SG-B2** series to a safety circuit, connect the door monitor circuits (11-12) ⊕ and the lock monitor circuits (41-42, 51-52) in series. (GS-ET-19)

## SPECIFICATIONS

Designation	Safety door switch with key				
Item	Series	<b>SG-B2 series</b>			
Applicable standards	EN 1088, IEC 60947-5-1, EN 60947-5-1, GS-ET-19, UL 508, CSA C22.2 No.14				
Standards for use	IEC 60204-1, EN 60204-1				
Applicable directives	Machinery directive (2006/42/EC) Low voltage directive (2006/95/EC)				
Operating condition	Ambient temperature	-25 to +70 °C <b>-13 to +158 °F</b> (No dew condensation or icing allowed) Storage: -40 to +80 °C <b>-40 to +176 °F</b>			
	Ambient humidity	45 to 85 % RH			
	Pollution degree	3 (Inside 2)			
	Altitude	2,000 m <b>6,561.68 ft</b> max.			
Impulse withstand voltage (Uimp)	2.5 kV				
Rated insulation voltage (Ui)	250 V (Note 1)				
Thermal current (Ith)	2.5 A				
	Ambient temperature:				
	-25 to +60 °C <b>-13 to +140 °F</b> : 2.5 A max.				
	+60 to +65 °C <b>+140 to +149 °F</b> : 1.5 A max. +65 to +70 °C <b>+149 to +158 °F</b> : 1.0 A max.				
Rated operational voltage (Ue) / Rated operational current (Ie)	AC	Ue	30 V	125 V	250 V
		Resistive load (AC-12)	-	2.5 A	1.5 A
	DC	Ue	30 V	125 V	250 V
		Resistive load (DC-12)	2.5 A	1.1 A	0.55 A
		Inductive load (AC-15)	-	1.5 A	0.75 A
		Inductive load (DC-13)	2.3 A	0.55 A	0.27 A
Operating frequency	900 operations/hour				
Actuator operating speed	0.05 to 1.0 m/sec.				
B <sub>10d</sub>	2,000,000 (ISO 13849-1 Annex C Table C.1)				
Mechanical durability	1,000,000 operations min. (GS-ET-19) Rear unlocking button: 3,000 operations min. (Type <b>SG-B2-□-L5</b> )				
Electrical durability	100,000 operations min. (AC-12, 250 V 1 A) 1,000,000 operations min. (AC/DC 24 V 100 mA) (900 operations/hour)				
Electric shock protection class	Class II (IEC 61140) (Note 2),  (double-insulated)				
Interlock force	1,400 N min. (GS-ET-19) (Note 3) (500 N min. : <b>SG-K24</b> actuator)				
Direct opening travel	11 mm <b>0.433 in</b> min. (actuator: <b>SG-K21</b> ) 12 mm <b>0.472 in</b> min. (for other actuators)				
Direct opening force	80 N min.				
Contact resistance	700 mΩ max. (initial value, 5 m <b>16.404 ft</b> cable)				
Protection	IP65 (IEC 60529)				
Shock resistance	Malfunction: 100 m/s <sup>2</sup> , Destruction: 1,000 m/s <sup>2</sup>				
Vibration resistance	Malfunction: 10 to 55 Hz, half amplitude 0.35 mm <b>0.014 in</b> Destruction: 30 Hz, half amplitude 1.5 mm <b>0.059 in</b>				
Conditional short-circuit current	50 A (250 V)				
Short-circuit protective device	Use 250 V / 10 A fast acting type fuse				
Material	Enclosure: PA66				
Cable	UL style 2464, No.22 AWG 12-core				
Key	Operating specifications	2 positions			
	Mechanical durability	100,000 operations min.			
	Key operating durability	10,000 operations min.			
	Key tensile strength	1.0 N·m min.			
	Direct opening force	0.6 N·m min.			
Direct opening degree	60° min.				
Weight	<b>SG-B2-□-5</b> : Approx. 680 g, <b>SG-B2-□-L5</b> : Approx. 700 g				

- Notes: 1) Ratings approved by UL, c-UL: 125 V  
 2) Basic insulation of 2.5 kV impulse withstand voltage is ensured between different contact circuits.  
 When both SELV (safety extra low voltage) or PELV (protective extra low voltage) circuits and other circuits (such as 230 V AC circuits) are used for the solenoid power and contact circuits at the same time, the SELV or PELV requirements are not met any more.  
 3) The actuator locking strength is rated at 1,400 N of static load. Do not apply a load higher than the rated value. When a higher load is expected to work on the actuator, provide an additional system consisting of another safety switch without lock (such as the **SG-A1** safety switch) or a sensor to detect door opening and stop the machine.

## PRECAUTIONS FOR PROPER USE

• This catalog is a guide to select a suitable product.  
 Be sure to read the instruction manual attached to the product prior to its use.



- In order to avoid electric shock or fire, turn the power off before installation, removal, wire connection, maintenance, or inspection of the safety switch.
- If relays are used in the circuit between the safety switch and the load, consider the danger and use safety relays, since welding or sticking contacts of standard relays may invalidate the functions of the safety switch.
- Do not place a PLC in the circuit between the safety switch and the load. Safety and security can be endangered in the event of a malfunction of the PLC.
- Do not disassemble or modify the safety switch, otherwise a breakdown or an accident may occur.
- Do not install the actuator in a location where the human body may come in contact. Otherwise injury may occur.

- Regardless of door types, do not use the safety switch as a door stop. Install a mechanical door stop at the end of the door to protect the safety switch against excessive force.
- Do not apply excessive shock to the safety switch when opening or closing the door. A shock to the safety switch exceeding 1,000 m/s<sup>2</sup> may cause damage to the safety switch.
- If the operating atmosphere is contaminated, use a protective cover to prevent the entry of foreign objects into the safety switch through the actuator entry slots. Entry of a considerable amount of foreign objects into the safety switch may affect the mechanism of the safety switch and cause a malfunction.
- Cover the unused actuator entry slot using the slot plug supplied with the safety switch.
- Do not store the safety switches in a dusty, humid, or organic-gas atmosphere, or in an area subjected to direct sunlight.
- Use proprietary actuators only. When other actuators are used, the safety switch may be damaged.  
Do not cut, machine, or otherwise modify actuators. Doing so may cause equipment failure.
- Do not open the lid of the safety switch. Loosening the screws may damage the safety switch.
- The locking strength is rated at 1,400 N. Do not apply a load higher than the rated value. When a higher load is expected, provide an additional system consisting of another safety switch without lock or a sensor to detect door opening and stop the machine.
- Regardless of door types, do not use the safety switch as a door lock. Install a separate lock using a latch or other measures.
- Although the **SG-K21A** / **SG-K22A** actuators alleviate the shock when the actuator enters the slot on the safety switch, make sure that excessive shock is not applied. If the rubber bushings become deformed or cracked, replace with new ones.

FIBER

SENSORS

LASER

SENSORS

PHOTO-

ELECTRIC

SENSORS

MICRO

PHOTO-

ELECTRIC

SENSORS

AREA

SENSORS

LIGHT

CURTAINS /

SAFETY

COMPONENTS

PRESSURE /

FLOW

SENSORS

INDUCTIVE

PROXIMITY

SENSORS

PARTICULAR

USE

SENSORS

SENSOR

OPTIONS

SIMPLE

WIRE-SAVING

UNITS

WIRE-SAVING

SYSTEMS

MEASURE-

MENT

SENSORS

STATIC

ELECTRICITY

PREVENTION

DEVICES

LASER

MARKERS

PLC

HUMAN

MACHINE

INTERFACES

ENERGY

CONSUMPTION

VISUALIZATION

COMPONENTS

FA

COMPONENTS

MACHINE

VISION

SYSTEMS

UV

CURING

SYSTEMS

Selection

Guide

Light

Curtains

Safety

Components

Optical Touch

Switch

Control

Units

Definition of

Sensing

Heights


**SG-B1/SG-A1****SG-B2****SG-C1****SG-D1****SG-E1****SD3-A1****ST4**

**PRECAUTIONS FOR PROPER USE**

Refer to p.1501 for general precautions.


- FIBER SENSORS
- LASER SENSORS
- PHOTO-ELECTRIC SENSORS
- MICRO PHOTO-ELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS SAFETY COMPONENTS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC ELECTRICITY PREVENTION DEVICES
- LASER MARKERS
- PLC
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS

- Do not mount the safety switch facing down as shown in the figure below. Otherwise, the key may fall off due to shock.

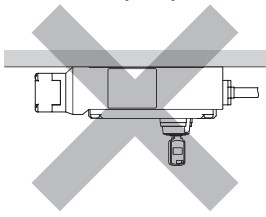

**Cables**

- Do not fasten or loosen the gland at the bottom of the safety switch.
- When bending the cable during wiring, make sure that the cable radius is kept at 30 mm 1.181 in minimum.
- When wiring, make sure that water or oil does not enter the cable.
- Do not open the lid of the safety switch. Otherwise the safety switch will be damaged.

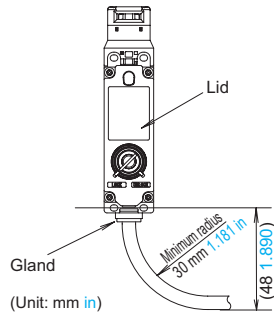


**Minimum radius of hinged door**


When using the safety switch on hinged doors, refer to the minimum radius of doors shown below. When using on doors with small minimum radius, use the angle adjustable actuator (SG-K24). Note: Because deviation or dislocation of hinged doors may occur in actual applications, make sure of the correct operation before installation.

**When using the right-angle actuator (SG-K22)**

<When the door hinge is on the extension line of the actuator mounting surface>

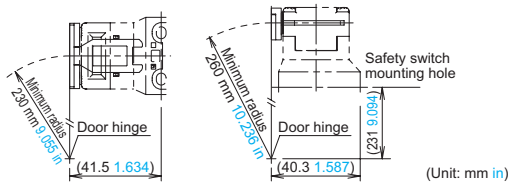


<When the door hinge is on the extension line of the safety switch surface>

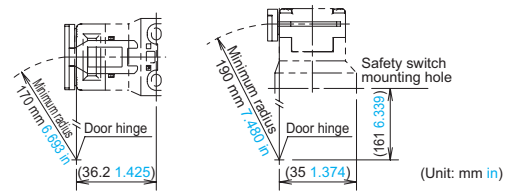


**When using the right-angle actuator (with rubber bushings) (SG-K22A)**

<When the door hinge is on the extension line of the actuator mounting surface>

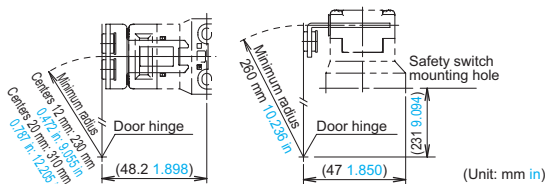

<When the door hinge is on the extension line of the safety switch surface>

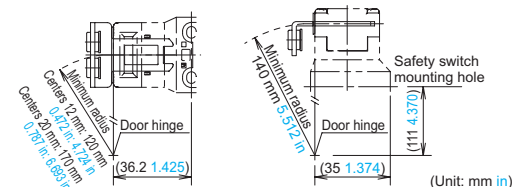


**Actuator angle adjustment (vertical / horizontal)**

- Using the angle adjustment screw (M3 hexagon-socket-head screw), the actuator angle can be adjusted. Adjustable angle: 0 to 20°
- The larger the adjusted angle of the actuator, the smaller the applicable radius of the door opening. After installing the actuator, open the door. Then adjust the actuator so that its edge can be inserted properly into the actuator entry slot of the safety switch.
- After adjusting the actuator angle, apply Loctite to the adjustment screw so that the screw will not move.


**When using the angle adjustable actuator (SG-K24)**

- When the door hinge is on the extension line of the actuator mounting surface: 70 mm 2.756 in
- When the door hinge is on the extension line of the safety switch surface: 50 mm 1.969 in

<When the door hinge is on the extension line of the actuator mounting surface>

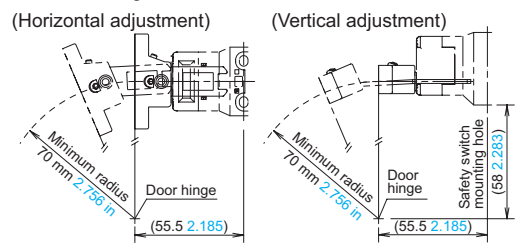


<When the door hinge is on the extension line of the safety switch surface>

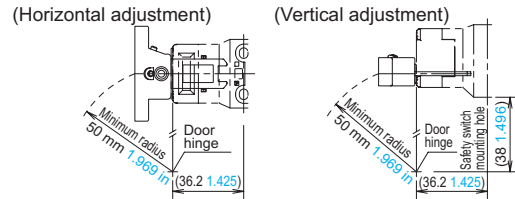

**Mounting**

- Mount the safety switch on a fixed piece of machinery or guard and the actuator on a hinged door.
- Avoid mounting both the safety switch and actuator on a hinged door. Doing so may cause equipment failure. For more information about how to mount the devices, see the following diagram:

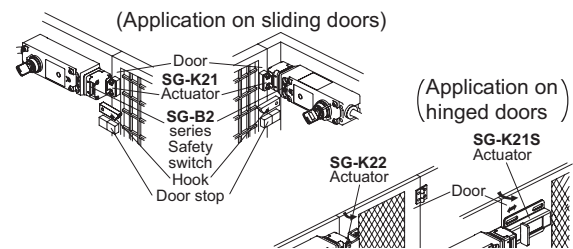


**Recommended tightening torque for mounting screws**

- Recommended screw tightening torque

	Screw tightening torque
For mounting the safety switch (M4 screw) (Note 1)	1.8 to 2.2 N·m
For mounting the actuator	
(SG-K21 : Two M4 screws) (Note 1)	1.8 to 2.2 N·m
(SG-K21A / SG-K22A : Two M4 screws) (Note 1, 2)	1.0 to 1.5 N·m
(SG-K21S : M5 screw) (Note 1)	4.5 to 5.5 N·m
(SG-K22 : Two M4 phillips screws)	0.8 to 1.2 N·m
(SG-K24 : Two M4 screws) (Note 1)	1.0 to 1.5 N·m
For mounting the SG-B2 head (M3)	0.9 to 1.1 N·m
For mounting the manual rear unlocking button (M3 screw with washers)	0.5 to 0.7 N·m

- Notes: 1) The above recommended tightening torques of the mounting screws are the values confirmed with hexagon-socket-head bolts. When other screws are used and tightened to a smaller torque, make sure that the screws do not come loose after mounting.  
2) In the case of SG-K21A or SG-K22A, using two M4 screws and two attached washers, fasten the actuator securely on the door.



- Selection Guide
- Light Curtains
- Safety Components
- Optical Touch Switch
- Control Units
- Definition of Sensing Heights
- SG-B1/SG-A1
- SG-B2**
- SG-C1
- SG-D1
- SG-E1
- SD3-A1
- ST4


**DIMENSIONS (Unit: mm in)**

The CAD data in the dimensions can be downloaded from our website.


**SG-B2-K2□-5**

Door switch

**When using vertical mounting / straight actuator (SG-K21)**

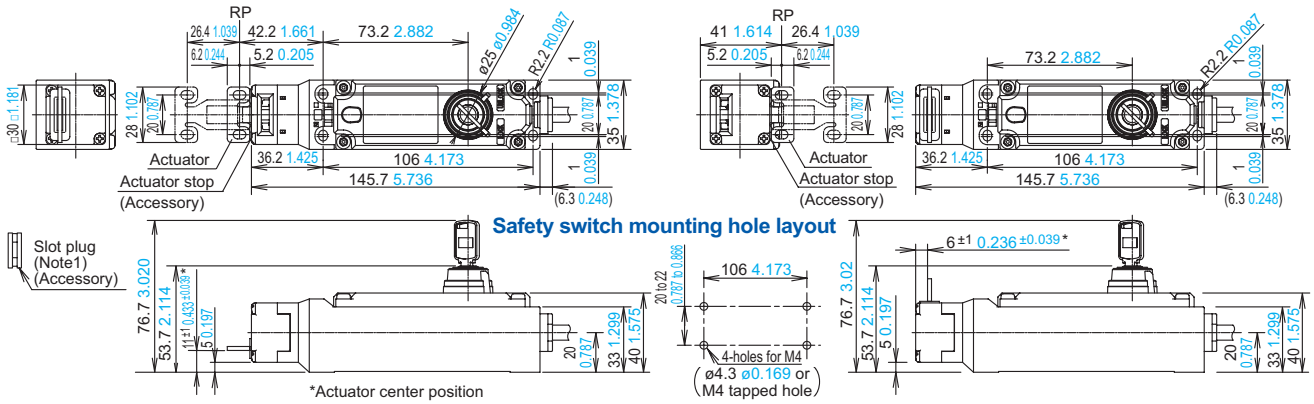

**When using vertical mounting / straight actuator (SG-K22)**

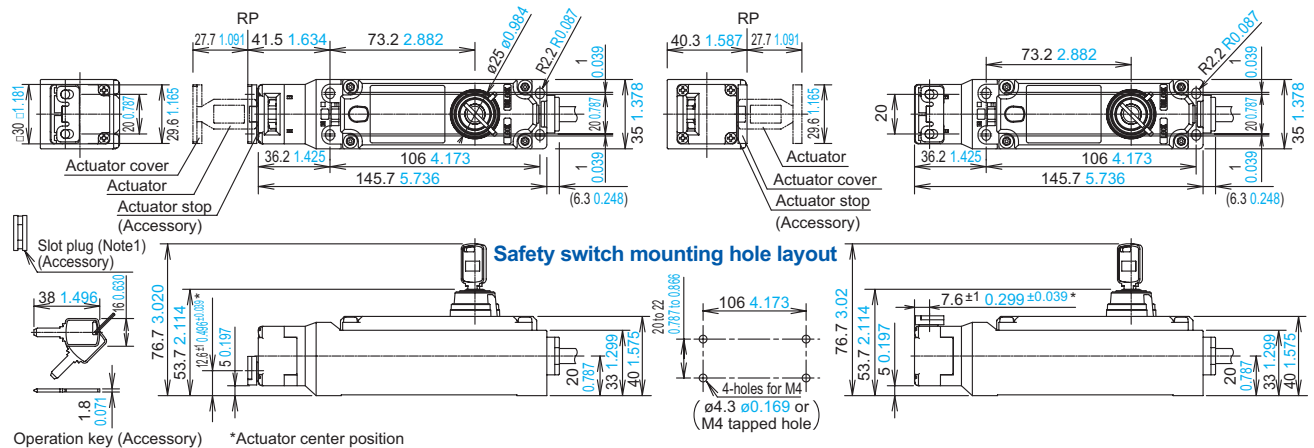

Operation key (Accessory) \*Actuator center position


Notes: 1) Plug the unused actuator entry slot using the plug supplied with the switch.

2) When mounting the safety switch, be sure to conform to the mounting hole dimensions and secure in place with four screws.

**SG-B2-K□-L5**

Door switch (rear unlocking button type)

**When using horizontal mounting / straight actuator (SG-K21)**

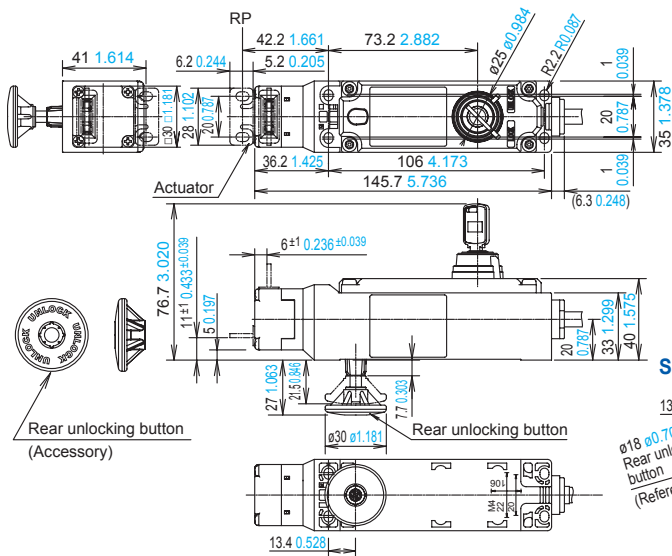


- Mounting part thickness (X): 1 to 6 mm 0.039 to 0.236 in
- 6 < X < 23 mm 0.236 < X < 0.906 in : Not mountable
- 23 ≤ X ≤ 53 mm 0.906 ≤ X ≤ 2.087 in : Use a rear unlocking button kit. (refer to page 11, 30)
- \* The mounting part is a frame or a panel that the product is mounted on.

- With the mounting hole dimension, the rear unlocking button rod does not touch the hole even when the safety switch moves sideways.

Note: Plug the unused actuator entry slot using the plug supplied with the switch.

**Safety switch mounting hole layout**

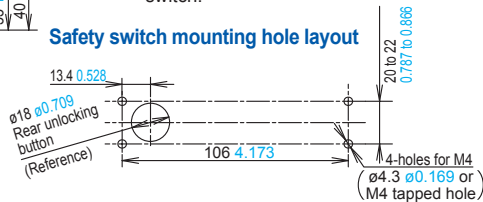


**Actuator mounting reference position**

As shown in the figure on the right, the mounting reference position of the actuator when inserted in the safety switch is:

The actuator stop on the actuator lightly touches the safety switch.

\* The actuator stop is used to adjust the actuator position. Remove the actuator stop after the actuator position is mounted.

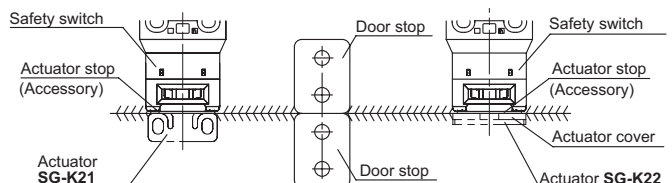

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

SELECTION GUIDE

Light Curtains

Safety Components

Optical Touch Switch

Control Units

Definition of Sensing Heights

SG-B1/SG-A1

**SG-B2**

SG-C1

SG-D1

SG-E1

SD3-A1

ST4




**DIMENSIONS (Unit: mm in)**

The CAD data in the dimensions can be downloaded from our website.


**SG-K2**

Actuator



**Straight actuator (SG-K21)**

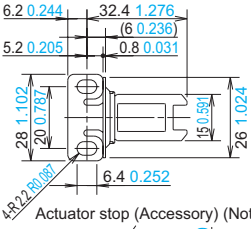


**Actuator mounting hole layout (Straight / Right-angle actuator)**



**Right-angle actuator (SG-K22)**

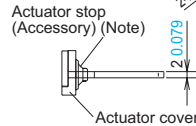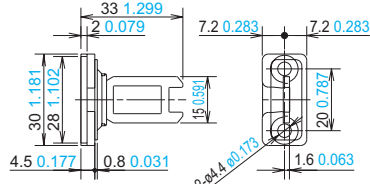


**Straight actuator with rubber bushings (SG-K21A)**

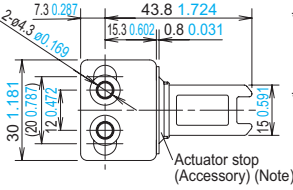


\* Mounting pitch is set to 12 mm 0.472 in factory. When setting the mounting pitch to 20 mm 0.787 in, widen the pitch of rubber cushions to 20 mm 0.787 in.  
\* The actuator has movement flexibility to the directions shown in ①.

**Actuator mounting hole layout (Straight actuator with rubber bushings, Right-angle actuator with rubber bushings)**

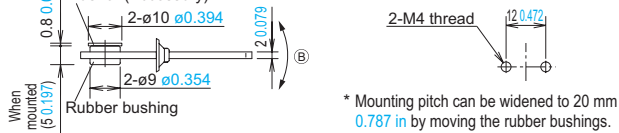


**Right-angle actuator with rubber bushings (SG-K22A)**

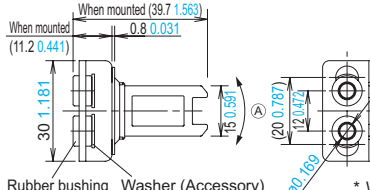


\* When the mounting pitch is 12 mm 0.472 in (factory setting), the actuator has movement flexibility to the directions shown in ① and ②.  
\* When the mounting pitch is 20 mm 0.787 in, the actuator has movement flexibility to the directions shown in ③. Side the rubber cushions together with the screws.


**Slide actuator (SG-K21S)**

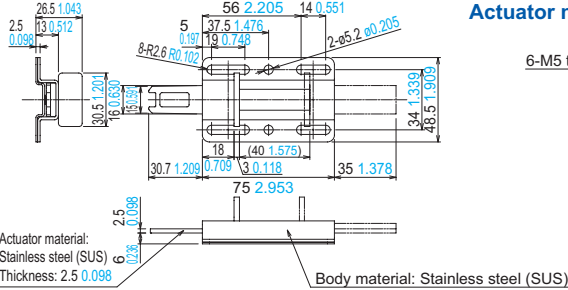

**Actuator mounting hole layout**




**Horizontal / Vertical angle adjustable actuators (SG-K24)**

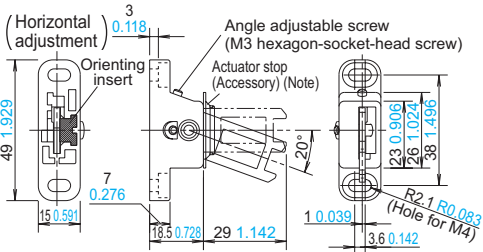

**Changes in the orientation of adjustment for angle adjustable (vertical / horizontal) actuators**  
The orientation of adjustment of angle adjustable (vertical / horizontal) actuators is determined by the position in which the orienting insert (white plastic) is installed on the back of the actuator. Install the insert according to the desired orientation of adjustment. Exercise care not to lose the orienting insert. The actuator will not operate properly without the orienting insert.


**(Vertical adjustment)**

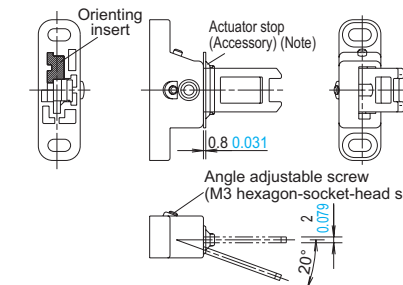

**Actuator mounting hole layout horizontal / vertical angle adjustable actuators**

**SG-PH2**

Padlock hasp (Optional)

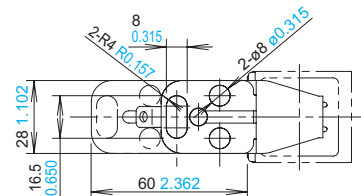

Note: The actuator stop is used to adjust the actuator position. Remove the actuator stop after the actuator position is mounted.

Selection Guide

Light Curtains

Safety Components

Optical Touch Switch

Control Units

Definition of Sensing Heights

SG-B1/SG-A1

**SG-B2**

SG-C1

SG-D1

SG-E1

SD3-A1


ST4

**DIMENSIONS (Unit: mm in)**

The CAD data in the dimensions can be downloaded from our website.

**MS-SG21**


Mounting plate (Optional)

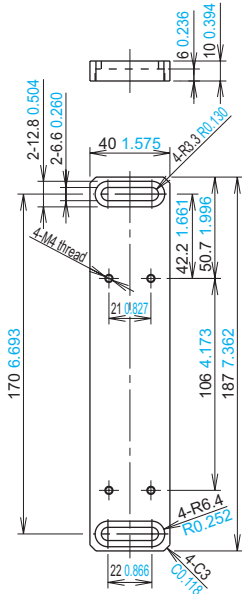


Material: Anodized aluminum A6063  
Weight: Approx. 180 g

**Mounting plate hole layout**

When installing the **SG-B2-K2-□-L5** (rear unlocking button type), provide a rear unlocking button hole on the **MS-SG21**.

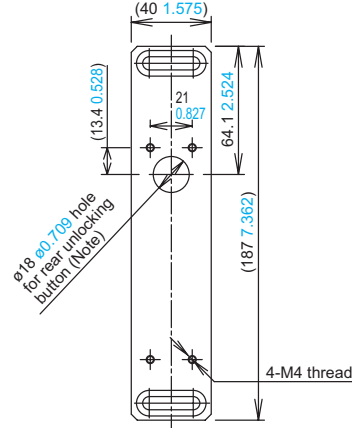



**Safety switch mounting hole layout**

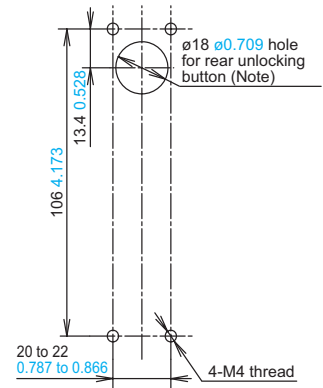


Note : With the mounting hole dimension, the rear unlocking button rod does not touch the hole even when the safety switch moves sideways.

**MS-SG-22 / MS-SG-23**

Rear unlocking button kit for a frame (Optional)

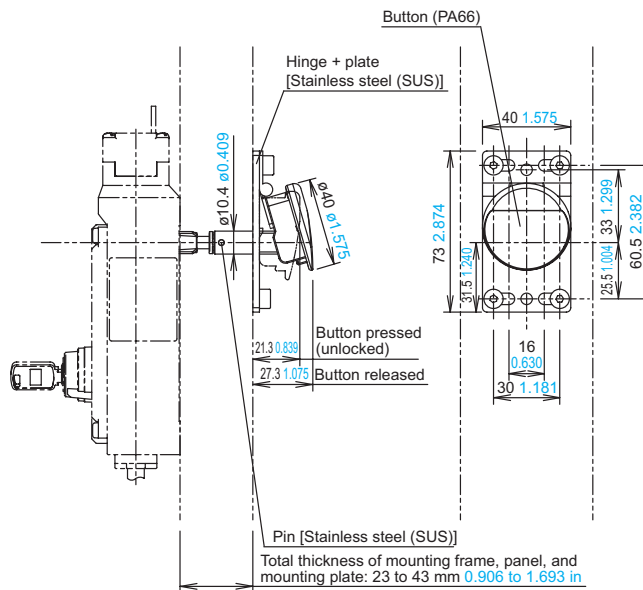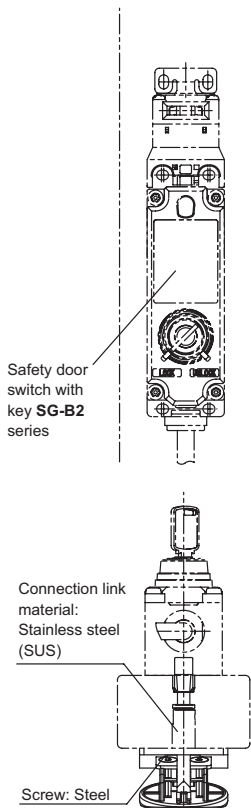

**Rear unlocking button mounting dimensions**

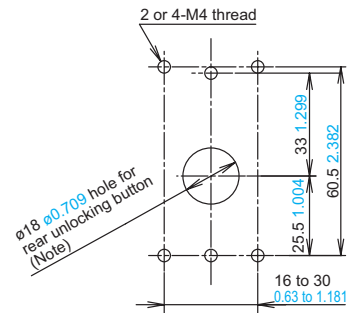

Example : When mounted on a □30 mm □1.181 in frame using the mounting plate above **MS-SG-21**, select **MS-SG-22** since the mounting part thickness (X) is 40 (X = 10 + 30 = 40) 1.575 (X = 0.394 + 1.181 = 1.575). For more information about selecting a back manual unlocking button kit for a frame, see the following table:

Model No.	Mounting part* thickness (X) (mm in)
	Rear unlocking button type When installing an <b>SG-B2-K2-□-L5</b> with a rear unlocking button directly
<b>MS-SG-22</b>	33 < X ≤ 43 1.299 < X ≤ 1.693
<b>MS-SG-23</b>	23 < X ≤ 33 0.906 < X ≤ 1.299

\* The mounting part is a frame or a panel that the product is mounted on.

Note : With the mounting hole dimension, the rear unlocking button rod does not touch the hole even when the safety switch moves sideways.

- FIBER SENSORS
- LASER SENSORS
- PHOTO-ELECTRIC SENSORS
- MICRO PHOTO-ELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS/ SAFETY COMPONENTS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SMPL WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC ELECTRICITY PREVENTION DEVICES
- LASER MARKERS
- PLC
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS
- Selection Guide
- Light Curtains
- Safety Components
- Optical Touch Switch
- Control Units
- Definition of Sensing Heights
- SG-B1/SG-A1
- SG-B2**
- SG-C1
- SG-D1
- SG-E1
- SD3-A1
- ST4