

Thank you for purchasing products from Panasonic Electric Works SUNX Co., Ltd. Please read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.

WARNING

- This product is intended to detect objects. Do not use it to carry out safety control functions to prevent accidents.
- Never use this product as a sensing device for personnel protection.
- In case of using sensing devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.
- Install a fail-safe device in case the product is being used for purposes that can lead to physical injury or serious damage.
- This product cannot be used in an environment containing inflammable or explosive gases.

Before Use

Check the sensor head model and package contents before use.



- **Sensor head model**
Check the model number on the top of sensor head.
- **Package contents**
Check that all of the following items are included in the package.
 - 1 sensor head
 - 1 Instruction Manual
 - 1 set of laser warning labels

1 Overview

This product is a compact laser displacement sensor, incorporating a digital display and controller functions.

- The standard type has three digital outputs and 1 analog output for current or voltage.
- The multifunction type additionally incorporates serial communication functions and can be easily controlled by host devices.
- One out of four measurement distances can be selected for each type that support both NPN and PNP outputs.

2 Cautions for Handling Laser Light

In order to prevent accidents caused by laser products and to protect the users, IEC, JIS and FDA established the following standards: These standards classify laser products according to their level of hazard and provide safety measures for the respective classes.


- IEC: IEC 60825-1-2007 (EN 60825-1-2007)
- JIS: JIS C 6802-2005
- FDA: PART 1040 (PERFORMANCE STANDARDS FOR LIGHT-EMITTING PRODUCTS)

Laser hazard class

Classification according to IEC 60825-1-2007 (JIS C 6802-2005)

Class	Model	Description of hazardous evaluation
Class 2	HL-G1□□-A-C5 HL-G1□□-S-J	Visible beam, low power. Blink response of eye affords protection.

Warning label and label position

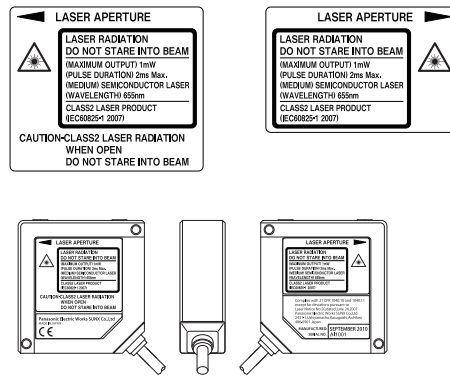

Installation and operation

- Install the product so that the laser beam is above or below eye level.
- Do not look into the beam directly during operation. A safe distance from the laser (Nominal Ocular Hazard Distance: NOHD) is approx. 0.4m.
- The laser beam must be terminated at the end of its path by a diffuse reflector or an absorber.
- Please contact Panasonic Electric Works SUNX Co., Ltd. if the system breaks down. It is not equipped with a function that stops laser radiation automatically when the sensor head is being disassembled.
- Do not use the system in any other manner than specified in this instruction manual.

3 Wiring instructions

WARNING


Turn OFF the power supply before connecting or disconnecting the connectors or performing wiring.

Connections


- When connecting or disconnecting the connectors, hold the connector area so that no extra force is applied to the cable.
- Do not touch the terminals or to let foreign objects get into the connectors after disconnecting them.
- Do not apply force around the connector of the sensor head cable or the extension cable. Do not bend the cables near the connectors because the cables will be disconnected.
- When moving the sensor head during operation, install the cables in such a way that they do not bend while the sensor head is moving. Use the multifunction type if bending the cables is inevitable as there are replaceable extension cables available for this type.

Wiring

- Do not roll up the sensor cable (bundle in parallel) with other wiring. Keep it at least 100mm away from other wires. Cables should be separated from high voltage and power circuit lines. If this is not possible, shield the cable by running it through conductive material such as grounded electrical conduit.
- Install the product as far away as possible from noise sources such as high-voltage lines, high-voltage devices, power lines, power device, machines which generate a large high-voltage ON/OFF surge, welding machines and inverter motors.
- Do not pull the cable with a force more than 29.4N when wiring the cable when the sensor head is fixed. The cable may be bent with a radius of 30mm or more. However, do not bend the cable within 20mm of the sensor head.

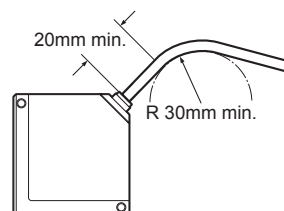

- Make sure that the length of signal and power lines connected to the product is less than 30m in order to meet the CE marking requirements.
- Attach a ferrite core to the head cable as shown.

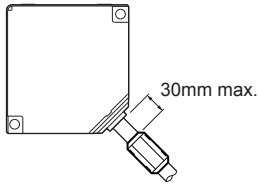


Warming Up

- Allow the product to warm up for at least 30 minutes after turning on the power to ensure good performance.

Environment

- Mount the sensor head on an aluminum or steel plate with a minimum surface area of 200cm² if the ambient temperature is 40°C or higher. When installing two or more sensor heads in parallel, mount each sensor head on an aluminum or steel plate with a minimum surface area of 200cm² and make sure that the ambient temperature does not exceed 40°C.
- The life of the semiconductor laser depends on the ambient temperature during use. When using the product near a heat source, take measures to keep the ambient temperature of the sensor head as low as possible. Mount the sensor on a device that allows heat to dissipate because the sensor itself also generates heat.
- Keep the emitter surface and the receiver surface clean. Prevent light refractors such as water, oil and fingerprints, and light blockers such as dust and dirt from contaminating the surface. When cleaning these parts, wipe them off using a soft lint-free cloth or lens cleaning paper.
- Install the sensor head at a location where external light (such as sunlight or light which has the same wavelength as the laser beam) do not enter the receiver. If high accuracy is required, install a light shield plate or something similar around the sensor head.
- Do not use the product underwater or in the rain. Although the sensor head has an IP67 degree of protection, the connectors are not dust-proof, waterproof, or corrosion-resistant.
- Do not use the product in dusty places or in places that are exposed to flammable or corrosive gases, droplets, direct sunlight, severe vibration or impacts.

4 Part Description

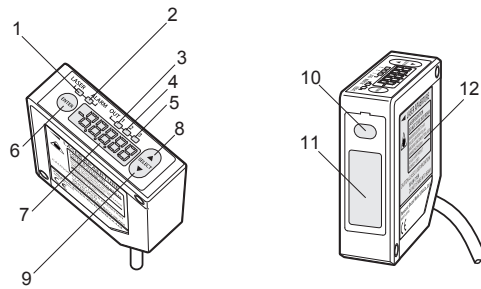

- | | |
|----------------------------|--------------------|
| 1. Laser Indicator (LASER) | 7. Digital Display |
| 2. Alarm Indicator (ALARM) | 8. [UP] Key |
| 3. OUT1 Indicator (OUT1) | 9. [DOWN] Key |
| 4. OUT2 Indicator (OUT2) | 10. Emitter |
| 5. OUT3 Indicator (OUT3) | 11. Receiver |
| 6. [ENTER] Key | 12. Warning Label |

5 Wires

Analog output wires

Name	Function	Wire color	
A (V)	Analog voltage output	Shielded single conductor	Black
AGND	Analog ground	Shielded single conductor	Gray
A (I)	Analog current output	Black	
AGND	Analog ground	White	


I/O terminal wires

Name	Function	Wire color	
OUT1	Judgment output 1	Gray	
OUT2	Judgment output 2	Pink	
OUT3	Judgment output 3 or alarm output	Gray	
TM	Timing input	Pink	
MI	Multifunction input: Zero set, zero set OFF, reset, change memory, teach, save, and laser control	Violet	
NP	NPN/PNP type switching input	Pink/ Violet	
+SD	Transmission data	Twisted-pair wire	Green*
+SD	Transmission data		Sky blue*
+RD	Reception data	Twisted-pair wire	Orange
-RD	Reception data		Yellow*
SGND	RS422/RS485 shield		
+V	24V DC input for power supply	Brown	
0V	Power supply ground	Blue	

*Wire color as of V1.12


6 I/O Circuit Diagrams

NPN Type

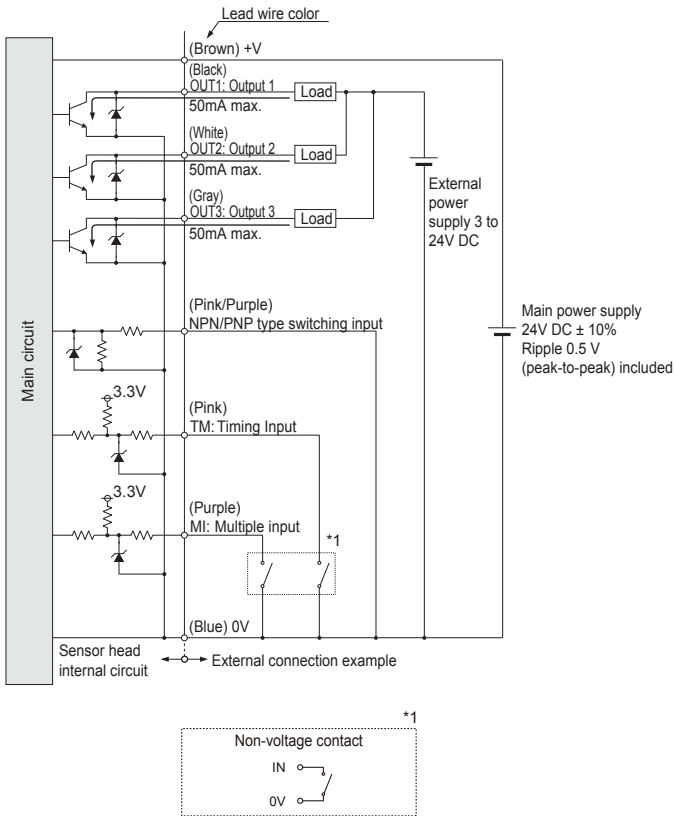

Refer to the HL-G1 Series User's Manual for RS422/RS485 wiring.

PNP Type

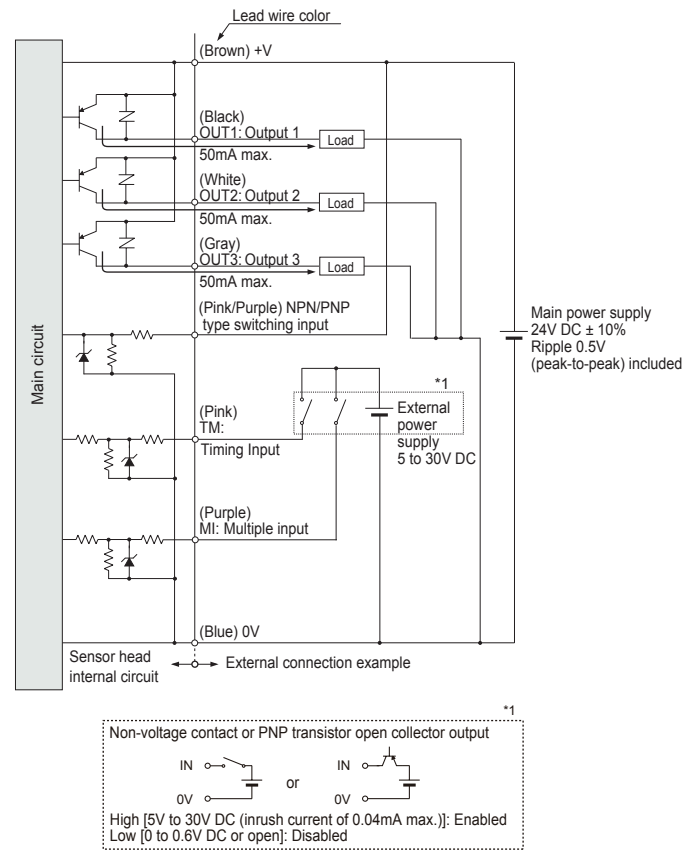

Refer to the HL-G1 Series User's Manual for RS422/RS485 wiring.

7 Specifications

The following measurement conditions apply unless otherwise specified:

- Power voltage: 24V DC
- Ambient temperature: 20°C
- Sampling cycle: 500μs
- Average number of sampling times: 1024 times
- Measurement object: white ceramic

Model No.	Standard type	HL-G103-A-C5	HL-G105-A-C5	HL-G108-A-C5	HL-G112-A-C5
	Multifunction type	HL-G103-S-J	HL-G105-S-J	HL-G108-S-J	HL-G112-S-J
Measurement method	Diffuse reflection				
Measurement center distance	30mm	50mm	85mm	120mm	
Measuring range	±4mm	±10mm	±20mm	±60mm	
Beam source	Red semiconductor laser class 2 (JIS/IEC/FDA laser notice No. 50) Max output: 1mW, Emission peak wavelength: 655nm				
Beam dimensions ¹	0.1×0.1mm	0.5×1mm	0.75×1.25mm	1.0×1.5mm	
Beam receiving element	CMOS image sensor				
Resolution	0.5μm	1.5μm	2.5μm	8μm	
Linearity	±0.1% F.S.				
Temperature characteristics	±0.08% F.S./°C				
Supply voltage	24V DC ±10% including ripple 0.5V (P-P)				
Current consumption	100mA max.				
Sampling cycle	200μs, 500μs, 1ms, 2ms				
Analog output voltage	Output range: 0 to 10.5V (normal), 11V (at alarm) Output impedance: 100Ω				
Analog output current	Output range: 3.2 to 20.8mA (normal), 21.6mA (at alarm) Load impedance: 300Ω max.				
OUT1 OUT2 OUT3	Judgment output or alarm output (switchable) NPN open-collector transistor/PNP open-collector transistor (switchable)				
	Settings for NPN		Settings for PNP		
	<ul style="list-style-type: none"> • Maximum sink current: 50mA • Applied voltage: 3 to 24V DC (between output and 0V) • Residual voltage: 2V max. (at sink current of 50mA) 		<ul style="list-style-type: none"> • Maximum source current: 50mA • Residual voltage: 2.8V max. (at source current of 50mA) 		
Output operation	Open when the output is ON.				
Short-circuit protection	Incorporated (Auto-reset)				
NPN/PNP type switching input	At 0V: NPN open-collector output At supply voltage of 24V DC: PNP open-collector output				
Timing input	NPN type operation: ON when connecting or connected to 0V (depending on settings) PNP type operation: ON when connecting or connected to positive terminal of external power supply (depending on settings)				
Multifunction input	Zero set, Reset, Memory change, Teaching, Save, or Laser control depending on input time. NPN type operation: Depending on time to connect 0V PNP type operation: Depending on time to connect positive terminal of external power supply				
Communications interface (multifunction type)	RS422 or RS485 Baud rate: 9,600/19,200/38,400/115,200/230,400/460,800/921,600bps Data length: 8 bits; stop bit length: 1 bit; parity check: none; BCC: yes; end code: CR				
Laser radiation indicator	Green LED: ON when laser radiation is being emitted				
Alarm indicator	Orange LED: ON when measurement is disabled due to insufficient amount of light				
Output indicator	Yellow LED (No. of indicators: 3): ON during output				
Digital display	Red LED for sign and 5-digit display				
Degree of protection	IP67 (except connector)				
Pollution degree	2				
Insulation resistance	20MΩ min. at 250V DC megger (between charged parts and casing)				
Dielectric withstand	Endurance: 10 to 55Hz (at 1-minute cycle), 1.5mm double-amplitude				
Vibration resistance	1000V AC for 1 min. (between charged parts and casing)				
Shock resistance	500m/s ² three times each in X, Y, and Z directions				
Ambient illumination ²	3,000lx max. (illumination level of light receiving surface under incandescent light)				
Ambient temperature	-10°C to 45°C (No dew condensation or icing allowed); At storage: -20°C to 60°C				
Ambient humidity	35% to 85%RH, At storage: 35% to 85%RH				
Altitude	2000m or less above sea level				
Material	Casing: PBT, front cover: acrylic, cable: PVC				
Cable length	Standard type: 5m; multifunction type: 0.5m				
Cable extension	Multifunction type: extendable to 20m with an optional extension cable (sold separately)				
Weight (standard type)	Approx. 70g (without cable), approx. 320g (including cable), and approx. 380g (with packing)				
Weight (multifunction type)	Approx. 70g (without cable), approx. 110g (including cable), and approx. 160g (with packing)				
Accessory	Laser warning label: 1 set				
Applicable standards	Conforming to EMC Directive				

1. Inhomogeneous surfaces may reflect the laser beam such that the receiver perceives an erroneous shift in light intensity. For more details on beam dimensions, please refer to the HL-G1 User's Manual.

2. Variance is ±0.1% F.S. or less depending on the ambient illuminance.

Panasonic Electric Works SUNX Co., Ltd.

URL : <http://panasonic-electric-works.net/sunx>

Overseas Sales Division (Head Office)

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan

Phone: +81-568-33-7861 FAX: +81-568-33-8591

Europe Headquarter: Panasonic Electric Works Europe AG

Rudolf-Diesel-Ring 2, D-83607 Holzkirchen, Germany

Phone: +49-8024-648-0