

Programmable Controller  
FP0H Positioning Unit RTEX  
**User's Manual**

---

FPWIN GR7

(MEMO)

## Introduction

Thank you for purchasing a Panasonic product. Before you use the product, please carefully read through the user's manual, and understand it in detail to use the product properly.

## Types of Manuals

- There are different types of user's manual for the FP0H series. Please refer to a relevant manual for the unit and purpose of your use.
- The manuals can be downloaded on our website: <https://industry.panasonic.com/global/en/downloads/?tab=manual>.

Unit name or purpose of use	Manual name	Manual code
FP0H Control Unit	FP0H User's Manual (Basic)	WUME-FP0HBAS
	FP0H Series Programming Manual	WUME-FP0HPGR
	FP0H Programming Manual (SD card access instruction)	WUME-FP0HSD
Positioning Function / PWM Output / High-speed Counter Function	FP0H User's Manual (Positioning Function/PWM Output/High-speed Counter Function)	WUME-FP0HPOS
Serial Communication Function	FP0H User's Manual (COM Communication)	WUME-FP0HCOM
Ethernet Communication Function	FP0H User's Manual (Ethernet Communication)	WUME-FP0HET
Ethernet/IP Communication Function	FP0H User's Manual (Ethernet/IP Communication)	WUME-FP0HEIP
Logging Trace Function	FP0H CPU Unit User's Manual (Logging Trace Function)	WUME-FP0HLOG
FP0H Extension (Communication) Cassette	FP0H User's Manual (COM Communication)	WUME-FP0HCOM
FP0H Positioning Unit	FP0H Positioning Unit User's Manual	WUME-FP0HPG
FP0H Positioning Unit RTEX	FP0H Positioning Unit RTEX User's Manual (FPWIN GR7)	WUME-FP0HRTEXGR7
	FP0H Positioning Unit RTEX User's Manual (FPWIN Pro7)	WUME-FP0HRTEXPRO7

## Safety Precautions

- In order to prevent injuries and accidents, always adhere to the following.
- Always read this manual thoroughly before performing installation, operation, maintenance, and inspection, and use the device correctly.
- Ensure you are familiar with all device knowledge, safety information, and other precautions before use.
- In this manual, safety precaution levels are classified into "warnings" and "cautions".

### **WARNING**

Cases where dangerous situations are expected to arise whereby the user could die or suffer serious injury if handled incorrectly

- Implement safety measures externally from this product so that the entire system can operate safely even if a failure occurs due to a fault in this product or some external factor.
- Do not use in an atmosphere containing flammable gases. Doing so could cause explosions.
- Do not place this product in fire.

This could cause splitting of batteries, electronic components, etc.

## CAUTION

Cases where dangerous situations are expected to arise whereby the user could suffer injury or physical damage could occur if handled incorrectly

- In order to prevent the product from generating abnormal heat or emitting smoke, use the product with some margin to the guaranteed characteristics and performance values.
- Do not disassemble or modify the product.  
Doing so could cause abnormal heat generation or smoke.
- Do not touch electrical terminals while the power is on.  
There is a risk of electrical shock.
- Construct external emergency stop and interlock circuits.
- Securely connect wires and connectors.  
Poor connections can cause abnormal heat generation or smoke.
- Do not perform work (connection, disconnection, etc.) while the power is on.  
There is a risk of electrical shock.
- If methods other than those specified by our company are used when operating this product, the protection functions of the unit may be lost.
- This product was developed and manufactured for use in industrial environments.

## Description on Copyright and Trademarks

- The copyright of this manual is owned by **Panasonic Industry Co., Ltd.**
- Unauthorized reproduction of this manual is strictly prohibited.
- Windows is a registered trademark of Microsoft Corporation in the U.S. and other countries.
- Ethernet is a registered trademark of FUJIFILM Business Innovation Corp. and Xerox Corporation.
- EtherNet/IP is a registered trademark of ODVA (Open DeviceNet Vendor Association).
- SDHC and SD logos are trademarks of LLC.
- Other company and product names are trademarks or registered trademarks of their respective companies.

## Glossary

### ■ RTEX

RTEX, which stands for Realtime Express, is the motion-specific network connecting the positioning unit RTEX and amplifier.

\* Realtime Express is the name of the network servo system manufactured by Panasonic Corporation.

### ■ AMP

“AMP” means a servo amplifier which controls a servo motor.

### ■ Configurator PM7-RTEX


Configurator PM7-RTEX is a configuration tool for Positioning Unit RTEX. This tool is started from FPWIN GR7. Using Configurator PM7-RTEX makes it possible to set positioning data and various positioning parameters, and perform various types of monitoring. As this tool is equipped with tool operation mode that starts a motor without using ladder programs, it is convenient especially to verify operations at the time of initial startup.

### ■ PANATERM

This is a setup support tool for the servo amplifiers of MINAS series manufactured by Panasonic Corporation. By using this tool, parameter setup within amplifiers, control status monitoring, setup support, machine analysis, and other operations can be executed on a PC.

## ■ E-point control


This refers to movement up to an "End Point" and, in this manual, this control is referred to as "E-point control". This method is used for single-speed acceleration/deceleration control. It is also called "trapezoidal control".

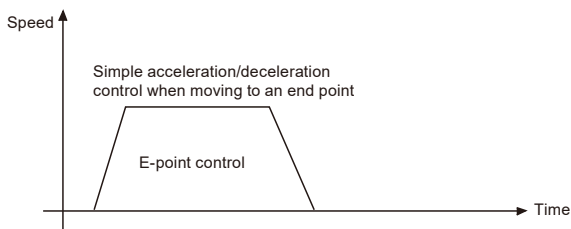

## ■ P-point control


This refers to control passing through a "Pass Point" and, in this manual, this control is referred to as "P-point control".

This method is used when target multi-stage speeds are specified in a sequence of motions.

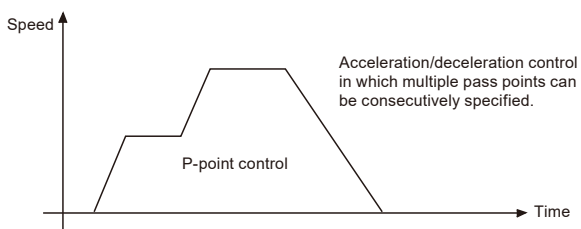


## ■ C-point control

This refers to control passing through a "Continuance Point" and, in this manual, this control is referred to as "C-point control". This method is used to execute consecutive E-point controls by one-time startup.

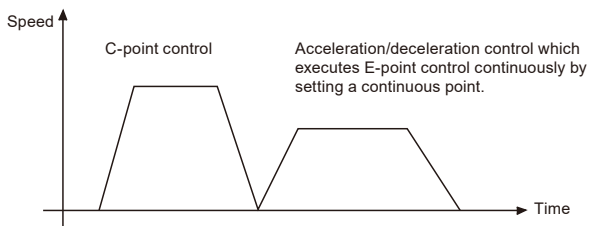


## ■ Linear acceleration / deceleration / S-shaped acceleration / deceleration

"Linear acceleration/deceleration" or "S-shaped acceleration/deceleration" can be selected as the acceleration/deceleration method. With linear acceleration / deceleration, acceleration and deceleration between the startup and the target speed are carried out in a straight line. Acceleration and deceleration take place at a constant percentage.

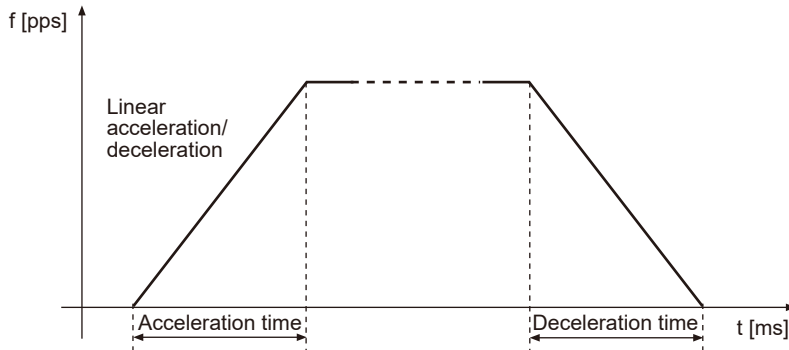

S-shaped acceleration / deceleration performs acceleration or deceleration curvedly. Acceleration/deceleration is performed relatively slowly at the beginning and then gradually becomes faster. Acceleration/deceleration is performed slowly as it approaches the end. The movement is relatively smooth. Acceleration/deceleration is completed in the acceleration/ deceleration time stored in the shared memory.

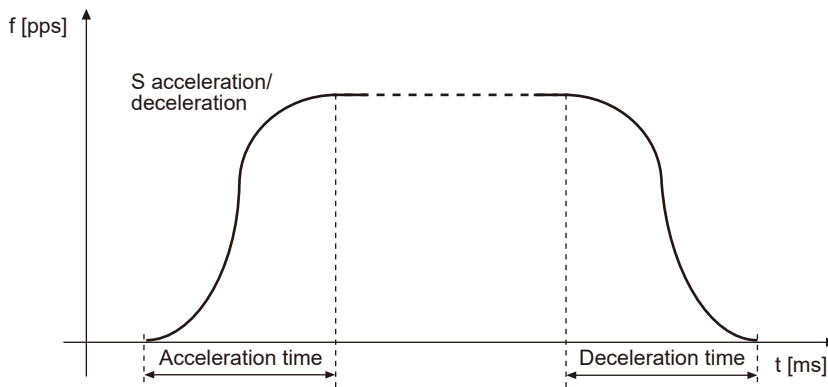

#### ■ Acceleration time/deceleration time

For E-point control or C-point control, acceleration time is the time during which the speed changes from the startup speed of the motor to the target speed. Deceleration time is the time during which the speed changes from the target speed to zero (when the motor stops). For P-point control, acceleration time is the time during which the speed increases from the current speed to the next target speed, and deceleration time is the time during which the speed decreases from the current speed to the next target speed.

#### ■ CW, CCW



Generally, these indicate the direction in which the motor is rotating, with CW referring to clockwise rotation and CCW to counterclockwise rotation. CW is an abbreviation for clockwise and CCW is an abbreviation for counterclockwise.

#### ■ Absolute method (absolute value control method)

This is a control method in which the target position is specified as an absolute position from the home position. This is specified on the positioning data editing screen of Configurator PM7-RTEX.

#### ■ Incremental method (relative value control method)

This is a control method in which the distance from the current position to the target position is specified as a relative position. This is specified on the positioning data editing screen of Configurator PM7-RTEX.

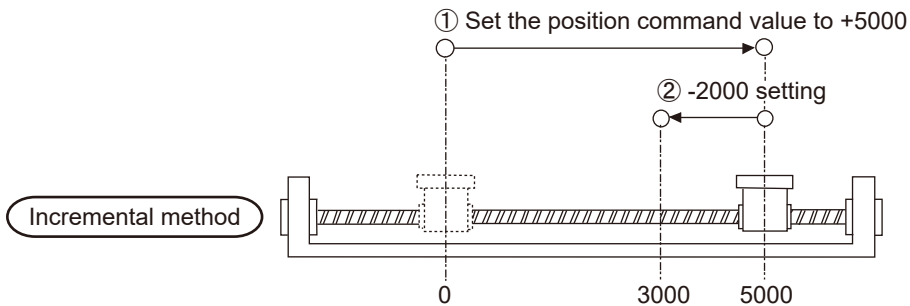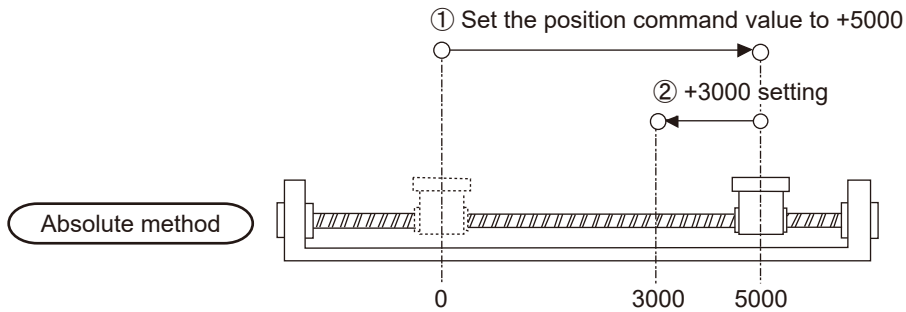

#### ■ Automatic operation

This is an operation that is automatically performed. It means position control.

#### ■ Manual operation

This is an operation that is performed at initial startup or during adjustment. Home return, JOG operation, and pulser operation are manual operations.

#### ■ Position control

This is a generic term for E-point control, P-point control, and C-point control. For each control, control for single axes and interpolation control for multiple axes can be performed. Interpolation control can be selected from 2-axis linear interpolation, 2-axis circular interpolation, 3-axis linear interpolation, and 3-axis spiral interpolation.

#### ■ JOG operation

This refers to an operation in which the motor is rotated only while operation commands are being input. This is used to forcibly rotate the motor using inputs from external switches during startup or adjustment, for example. This can also be applied to unlimited feed.

#### ■ Stop-on-contact torque value for home return

The reference position for positioning is called a home position and an operation to travel to a home position is called home return. Each axis is moved to the preset home position and the coordinates of the home position are defined as absolute position zero. The motor rotation is reversed automatically when the limit input (+) or the limit input (-) is input and the home position or near home position is searched to return to the home position automatically.

#### ■ Maximum speed for pulser operation

A manual operation can be performed using a device (pulser) that generates pulses manually. Outputs similar to encoders are obtained from pulsers, and the positioning unit RTE<sub>X</sub> is equipped with dedicated input terminals. Pulsers are also called “manual pulse generator”.

## ■ Deceleration stop

This is a function that interrupts the operation in progress, slows the rotation, and brings it to a stop. Deceleration time can be set individually.

## ■ Emergency stop

This is a function that interrupts the operation in progress, slows the rotation, and brings it to a stop. Generally, a time shorter than the time for deceleration stop is set. Deceleration time can be set individually.

## ■ Positioning table (Table)

A series of positioning data such as acceleration/deceleration time, target speed, and interpolation operation that is necessary for position control is managed as positioning tables. For example, one table is necessary for E-point control, and multiple tables are necessary for P-point control and C-point control depending on the number of pass points and continuance points.

## ■ Limit input (+), limit input (-)

This is a limit switch input that is used to limit the motor movement. Limit input (+) is the limit point on the side where the elapsed value increases and limit input (-) is the limit point on the side where the elapsed value decreases. In positioning unit RTEX systems, this input is connected to the amplifier.

## ■ Near home (DOG) input

A position at which deceleration is started in order to stop the axis at the home position is called a “near home position”. This is connected to an external input switch or sensor. In positioning unit RTEX systems, this input is connected to the amplifier.

## ■ Dwell Time

For E-point control, the time from the completion of a position command until the operation done flag turns ON can be specified as a dwell time. For C-point control, similarly, the time from deceleration stop until execution of the next positioning table can be specified as a dwell time.

## ■ Auxiliary output code / Auxiliary output contact

Both are used to check the operation of position control.

The auxiliary output code is a 16-bit code that can be specified for each positioning table and makes it possible to monitor which positioning table is being executed during position control. The execution of position control can be checked by turning ON a dedicated auxiliary output contact for a certain time period.

## ■ Soft limits:

Limits in software can be set for the absolute coordinates managed within the positioning unit RTEX. When the range of soft limits is exceeded, an error occurs, causing the system to decelerate and stop. Deceleration time can be set individually.

## ■ Torque Limit

The output torque of the amplifier can be limited arbitrarily.

## ■ Servo lock / Servo free

The state in which the motor is controllable according to a command from the positioning unit RTEX is called the servo-locked status, and the state in which the motor is uncontrollable is called the servo-free status. Servo ON operation is required to invoke a servo lock state.



## ■ **Servo ON / Servo OFF**

The operation that changes the servo free state to a servo lock state is called “servo ON”, and the operation that changes the servo lock state to a servo free state is called “servo OFF”.

## ■ **Linear interpolation**

This is interpolation control that controls straight lines as loci for the operations of 2-axis motors with grouped X-axis and Y-axis or 3-axis motors with grouped X-axis, Y-axis, and Z-axis. There are two setting methods, which are a composite speed specification and long axis speed specification.

## ■ **Circular interpolation**

This is interpolation control that controls arcs as loci for the operation of 2-axis motors with grouped X-axis and Y-axis. There are two setting methods, which are a center point specification and pass point specification.

## ■ **Spiral interpolation**

This is interpolation control that controls spirals as loci for the operation of 3-axis motors with grouped X-axis, Y-axis, and Z-axis. Arbitrary 2 axes depict an arc, and the remaining one axis performs feed motion to achieve a spiral. There are two setting methods, which are a center point specification and pass point specification.

## ■ **Edge type**

This is one of the methods for detecting the request signals allocated to this unit. It executes each requested process by detecting a trigger that is the rising edge when the request signal turns ON.

Therefore, the next request cannot be accepted until the current request signal turns OFF.

## ■ **Level type**

This is one of the methods for detecting the request signals allocated to this unit. It executes each requested process by detecting a trigger that is the request signal in ON state, and continues the requested process while the request signal is ON.

(MEMO)

# Table of Contents

<b>1 System Configuration</b> .....	<b>1-1</b>
1.1 Functions of Positioning Unit RTEX.....	1-2
1.1.1 Functions of Unit.....	1-2
1.1.2 Unit Types.....	1-4
1.2 Restrictions on Use of Positioning Unit RTEX.....	1-5
1.3 Restrictions on Positioning Unit RTEX and Amplifier.....	1-6
1.3.1 Restrictions on Combinations of Positioning Unit RTEX and Amplifier.....	1-6
1.3.2 Restrictions on Amplifier Parameters.....	1-6
1.4 Programming Tool.....	1-8
1.4.1 Software Usage Environment and Applicable Cables.....	1-8
<b>2 Names and Functions of Components</b> .....	<b>2-1</b>
2.1 Names and Functions of Positioning Unit RTEX Components.....	2-2
2.2 Specifications of Operation Indicator LEDs.....	2-3
<b>3 Installation and Wiring</b> .....	<b>3-1</b>
3.1 Installation.....	3-2
3.1.1 Attaching to DIN Rail.....	3-2
3.1.2 Removing from DIN Rail.....	3-2
3.2 Wiring.....	3-3
3.2.1 Wiring of Network.....	3-3
3.2.2 Network Connector.....	3-3
3.2.3 Wiring of Pulser Input Connector.....	3-4
<b>4 Power ON/OFF and Items to Check</b> .....	<b>4-1</b>
4.1 Safety Circuit Design.....	4-2
4.2 Before Turning On the Power.....	4-3
4.3 Procedure for Turning On the Power.....	4-4
4.4 Procedure for Turning Off the Power.....	4-5
<b>5 Preparation for Operation</b> .....	<b>5-1</b>
5.1 Procedures for System Construction.....	5-2
5.1.1 Procedure 1: Wiring.....	5-2
5.1.2 Procedure 2: Axis Numbers and Unit Numbers of Amplifier.....	5-2
5.1.3 Procedure 3: Powering on and Checking Network Connection Establishment.....	5-3
5.1.4 Procedure 4: Checking Consistency with Amplifier Parameters.....	5-4
5.1.5 Procedure 5: Checking the Input Signals.....	5-5
5.1.6 Procedure 6: Checking Rotating and Moving Directions and Moving Distance.....	5-6
5.1.7 Procedure 7: Settings of Positioning Parameters and Positioning Data.....	5-7
5.2 Preparation for Operation.....	5-9

5.2.1 Servo ON/Servo OFF .....	5-9
<b>6 I/O Allocation .....</b>	<b>6-1</b>
6.1 Allocated I/O Area .....	6-2
6.2 Allocation of Each Contact .....	6-3
<b>7 Configurator PM7-RTEX Configuration Tool .....</b>	<b>7-1</b>
7.1 Connecting to PC .....	7-3
7.2 Functions of Configurator PM7-RTEX .....	7-4
7.2.1 Overview of Configurator PM7-RTEX .....	7-4
7.3 Starting Configurator PM7-RTEX .....	7-6
7.3.1 Starting Configurator PM7-RTEX .....	7-6
7.4 Allocation of Axes to Be Used .....	7-7
7.4.1 Settings in Configurator PM7-RTEX .....	7-7
7.5 Saving and Managing Files .....	7-10
7.5.1 File Types .....	7-10
7.5.2 Saving Positioning Parameters as Files .....	7-10
7.5.3 Exporting to CSV File .....	7-11
7.6 Exiting Configurator PM7-RTEX .....	7-12
7.7 Connecting to Positioning Unit RTEX .....	7-13
7.7.1 Selecting Slot Number .....	7-13
7.7.2 Overview of Communication Settings .....	7-13
7.8 Positioning Parameter Settings .....	7-14
7.9 Changing Axis Information .....	7-19
7.10 Setting Positioning Data .....	7-22
7.11 How to Edit Positioning Data .....	7-23
7.11.1 Inputting Positioning Data .....	7-23
7.11.2 Copying Positioning Data .....	7-24
7.11.3 Selecting All Cells .....	7-25
7.11.4 Searching Character Strings .....	7-25
7.11.5 Replacing Character Strings .....	7-25
7.11.6 Selecting Rows .....	7-26
7.11.7 Selecting Columns .....	7-26
7.11.8 Editing Data Items Collectively .....	7-26
7.12 Customizing the Software .....	7-28
7.13 Checking Settings .....	7-31
7.13.1 Checking positioning parameter data .....	7-31
7.13.2 Collating Positioning Parameter Information (Collation with Files) .....	7-31
7.13.3 Collating Positioning Parameter Information (Collation with PLC) .....	7-32
7.14 Transferring Positioning Parameters .....	7-34
7.14.1 Downloading Using Configurator PM7-RTEX .....	7-34
7.14.2 Uploading from Configurator PM7-RTEX .....	7-34
7.15 Data Monitor .....	7-36
7.16 Status Display .....	7-38
7.17 Tool Operation .....	7-40
7.17.1 Tool Operation: Servo ON/OFF .....	7-41

7.17.2	Tool Operation: Home Return .....	7-42
7.17.3	Tool Operation: Positioning .....	7-44
7.17.4	Tool Operation: JOG Operation .....	7-47
7.17.5	Tool Operation: Teaching .....	7-48
<b>8</b>	<b>Automatic Operation (Position Control) .....</b>	<b>8-1</b>
8.1	Basic Operations.....	8-2
8.1.1	Patterns of Position Control .....	8-2
8.1.2	Settings and Operation of E-Point Control .....	8-4
8.1.3	Settings and Operation of P-Point Control .....	8-5
8.1.4	Settings and Operation of C-Point Control.....	8-6
8.1.5	Settings and Operation of J-Point Control .....	8-7
8.1.6	Notes on programming .....	8-8
8.1.7	Sample Programs (E-point, P-point and C-point Controls).....	8-9
8.1.8	Sample Program (for J-point Control) .....	8-10
8.2	Interpolation Control.....	8-12
8.2.1	Types of Interpolation Control .....	8-12
8.2.2	Settings and Operation of Two-Axis Linear Interpolation .....	8-15
8.2.3	Settings and Operation of 2-Axis Circular Interpolation .....	8-16
8.2.4	Settings and Operation of 3-Axis Linear Interpolation .....	8-18
8.2.5	Settings and Operation of 3-Axis Spiral Interpolation .....	8-20
8.2.6	Sample Program (for Interpolation Control) .....	8-22
8.3	Positioning Repetition Function .....	8-24
8.3.1	Overview of positioning repeat function .....	8-24
8.3.2	Settings and Action of Positioning Repetition Function .....	8-26
<b>9</b>	<b>Automatic Operation (Synchronous Control) .....</b>	<b>9-1</b>
9.1	Synchronous control .....	9-2
9.1.1	Overview of Synchronous Control .....	9-2
9.2	Setting Up the Master Axis and Slave Axes .....	9-4
9.2.1	Selecting and Setting up the Master Axis .....	9-4
9.2.2	Selecting and Setting Up the Slave Axis.....	9-5
9.3	Starting and Canceling Synchronous Control .....	9-7
9.3.1	Starting and Canceling Synchronous Control .....	9-7
9.3.2	Notes on Canceling or Starting Synchronous Control .....	9-8
9.4	Electronic gear function .....	9-13
9.4.1	Overview of Electronic Gear Function .....	9-13
9.4.2	Types and Contents of Positioning Parameters to Set .....	9-13
9.4.3	Changing the Gear Ratio during Operation .....	9-14
9.5	Electronic clutch function .....	9-16
9.5.1	What Is the Electronic Clutch Function? .....	9-16
9.5.2	Types and Contents of Positioning Parameters to Set .....	9-16
9.5.3	Trigger Types for Electronic Clutch .....	9-17
9.5.4	Electronic Clutch Engagement Method.....	9-18
9.5.5	Phase specification clutch OFF function .....	9-19
9.6	Electronic Cam Function.....	9-22
9.6.1	Overview of Electronic Cam Function .....	9-22
9.6.2	Types and Contents of Positioning Parameters to Set .....	9-23
9.6.3	Rewriting the Cam Pattern with Program.....	9-24
9.6.4	Cam Pattern Setting Method (Cam Curve Method) .....	9-32

9.6.5	Cam Pattern Setting Method (Cam Point Method) .....	9-40
9.6.6	Advance Angle Correction Function .....	9-46
<b>10</b>	<b>Manual Operation (JOG Operation).....</b>	<b>10-1</b>
10.1	Settings and Operation of JOG Operation.....	10-2
10.2	Changing the Speed during JOG Operation.....	10-5
<b>11</b>	<b>Manual Operation (Home Return).....</b>	<b>11-1</b>
11.1	Types of Home Return (Incremental).....	11-2
11.1.1	DOG Method 1 [Edge detection of near home switch + Home position (Z phase) based on front edge].....	11-3
11.1.2	DOG Method 2 (Edge Detection of Near Home Switch).....	11-4
11.1.3	DOG Method 3 [Edge detection of near home switch + Home position (Z phase) based on rear edge].....	11-5
11.1.4	Limit Method 1 [Edge detection of limit switch + Home position (Z phase) based on front edge].....	11-6
11.1.5	Limit Method 2 (Edge Detection of Limit Switch).....	11-7
11.1.6	Z-phase Method [Edge detection of home position (Z phase)] .....	11-7
11.1.7	Stop-on-contact Method 1 .....	11-8
11.1.8	Stop-on-Contact Method 2 [Stop-on-Contact Detection + Home Position (Z Phase) Based on Front End] .....	11-8
11.1.9	Data setting method .....	11-9
11.2	Combination of Parameters and Home Return .....	11-10
11.2.1	Home Return Method and AMP Parameter Setting .....	11-10
11.2.2	Patterns .....	11-11
11.3	Types of Home Return (Absolute).....	11-12
11.3.1	High-speed Home Return.....	11-12
11.3.2	Absolute Data Set Method .....	11-12
11.4	Settings and Operation of Home Return .....	11-14
<b>12</b>	<b>Pulse Input Function .....</b>	<b>12-1</b>
12.1	Pulse Input.....	12-2
12.1.1	Applications of pulse input .....	12-2
12.1.2	Selecting the Pulse Input Application.....	12-3
12.1.3	Input Methods of Pulse Input .....	12-4
12.1.4	Monitoring the Pulse Input Values.....	12-5
12.1.5	Pulse Input Value Change Function.....	12-6
12.2	Settings and Operation of Pulser Operation .....	12-8
12.2.1	Overview of Pulser Operation .....	12-8
12.2.2	Settings for Pulser Operation.....	12-9
12.2.3	Behaviors of Pulser Operation .....	12-10
12.3	High-speed Counter Function.....	12-13
12.3.1	Overview of High-speed Counter Function .....	12-13
12.3.2	Settings for Using the High-speed Counter .....	12-13
12.3.3	Count Disable/Enable Control.....	12-14
<b>13</b>	<b>Stop Functions .....</b>	<b>13-1</b>
13.1	Types and Settings of Stop Function .....	13-2
13.1.1	Stop Types .....	13-2

13.1.2	Setting the Stop Time.....	13-3
13.2	Processing during Stop.....	13-5
13.3	Pause Function.....	13-6
13.3.1	Overview of Pause Function.....	13-6
13.3.2	Settings of Pause.....	13-6
<b>14</b>	<b>Auxiliary Functions.....</b>	<b>14-1</b>
14.1	Dwell Time.....	14-3
14.2	Soft Limit.....	14-4
14.3	Auxiliary Output.....	14-6
14.3.1	Auxiliary Output Function.....	14-6
14.3.2	Setting Auxiliary Outputs.....	14-7
14.3.3	Monitoring Auxiliary Outputs.....	14-8
14.3.4	Behavior when Movement Amount is Changed during Operation ..	14-8
14.4	Home Coordinates.....	14-10
14.5	Current value update.....	14-12
14.6	Multi-turn Data Clearing Function.....	14-15
14.6.1	Overview of Multi-turn Data Clearing.....	14-15
14.6.2	Memory Area Used.....	14-15
14.6.3	Setting up the Multi-turn Data Clearing Function.....	14-15
14.7	Deviation Counter Clearing Function.....	14-17
14.7.1	Overview of Deviation Counter Clearing Function.....	14-17
14.7.2	Behavior of Deviation Counter Clearing.....	14-17
14.8	Target Speed Change Function.....	14-19
14.8.1	Overview of Target Speed Change Function.....	14-19
14.8.2	Setting Procedure and Behaviors (Direct Speed Specification Method).....	14-20
14.8.3	Setting Procedure and Operations (Ratio Specification Method) ..	14-23
14.9	Movement Amount Change Function.....	14-25
14.9.1	Overview of Movement Amount Change Function.....	14-25
14.9.2	Setting Procedure and Behaviors of Movement Amount Change Function.....	14-26
14.10	Torque Limit.....	14-30
14.11	Monitor Error (Torque / Actual Speed Judgement).....	14-34
14.12	Operation Complete Signal.....	14-36
14.12.1	Operation Done Flag and In-position Flag.....	14-36
14.13	Simplified Position Deviation Monitor.....	14-37
14.14	Amplifier Parameter R/W Function.....	14-38
14.14.1	Overview of Amplifier Parameter R/W Function.....	14-38
14.14.2	Reading Parameters from the Amplifier.....	14-38
14.14.3	Writing Parameters to the Amplifier.....	14-40
14.14.4	Saving Amplifier Parameters (Writing to EEPROM).....	14-42
14.14.5	Resetting the Amplifier (Restart).....	14-44
14.15	Amplifier Monitor Function.....	14-47
14.15.1	Overview of the Amplifier Monitoring Function.....	14-47
14.15.2	Monitoring Items.....	14-47
14.15.3	Monitoring Procedure.....	14-48

14.16	Latch Correction J-point Control Function .....	14-51
14.16.1	Overview of Latch Correction J-point Control Function .....	14-51
14.16.2	Overview and Applications of Latch Correction J-point Control Function .....	14-51
14.16.3	Settings and Operations of Latch Correction J-Point .....	14-51
14.16.4	Restrictions on Latch Correction J-Point Control Function .....	14-53
14.17	Latch Stop Function .....	14-54
14.17.1	Overview of Latch Stop Function .....	14-54
14.17.2	Overview and Applications of Latch Stop Function .....	14-54
14.17.3	Settings and Operations of the Latch Stop Function .....	14-54
14.17.4	Restrictions on the Latch Stop Function .....	14-56
14.18	Counter Positioning Function .....	14-58
14.18.1	Overview of Counter Positioning Function .....	14-58
14.18.2	Settings and Operations of Counter Positioning Function .....	14-58
14.18.3	Operating Time of Counter Positioning .....	14-62
14.18.4	Restrictions on Counter Positioning Function .....	14-64
14.19	Positioning speed hold mode .....	14-65
14.19.1	Overview and Applications of Positioning Speed Hold Mode .....	14-65
14.19.2	Unit Memory .....	14-65
14.19.3	Operation in Positioning Speed Hold Mode .....	14-66
14.19.4	Restrictions on Positioning Speed Hold Mode .....	14-67
<b>15</b>	<b>Error/Warning Notification Function .....</b>	<b>15-1</b>
15.1	Errors and Warnings .....	15-2
15.1.1	Overview of Errors and Warnings .....	15-2
15.1.2	Checking and Clearing Errors and Warnings on Configurator PM7-RTEX .....	15-2
15.1.3	Error and Warning Logs .....	15-3
15.1.4	Clearing Errors and Warnings by Using a User Program .....	15-5
15.2	Error Return Processing .....	15-6
15.2.1	Overview of Error Recovery Processing .....	15-6
15.3	Error Code List .....	15-7
15.3.1	Amplifier Errors (From 0001H) .....	15-7
15.3.2	System Errors (From 1000H) .....	15-13
15.3.3	Amplifier Communication Errors (From 2000H) .....	15-14
15.3.4	Axis Operation Errors (From 3000H) .....	15-15
15.3.5	Set Value Errors (From 4000H) .....	15-19
15.3.6	Synchronization Parameter Setting Errors (From 5000H) .....	15-27
15.4	Warning Code List .....	15-33
15.4.1	Amplifier Warnings (From A000H) .....	15-33
15.4.2	Unit Warnings (From B000H) .....	15-33
<b>16</b>	<b>Troubleshooting .....</b>	<b>16-1</b>
16.1	What to Do If an Error Occurs .....	16-2
16.1.1	The Unit Cannot Communicate with the Amplifier .....	16-2
16.1.2	The Motor Does Not Rotate or Operate .....	16-2
<b>17</b>	<b>Maintenance and Inspection .....</b>	<b>17-1</b>
17.1	Inspection .....	17-2



<b>18 Specifications</b> .....	<b>18-1</b>
18.1 List of Specifications .....	18-3
18.1.1 General Specifications .....	18-3
18.1.2 Network Specifications.....	18-3
18.1.3 Performance Specifications of the Unit.....	18-4
18.1.4 Common Specifications .....	18-4
18.2 List of I/O Memories.....	18-8
18.3 Whole Configuration of Shared Memory Areas .....	18-18
18.4 Details of I/O Control Area in Shared Memory.....	18-22
18.4.1 Configuration of I/O Control Area.....	18-22
18.4.2 Request Area for Each Function [Output Signal (Y)] .....	18-23
18.4.3 Notification Area for Each Function [Input Signal (X)].....	18-26
18.5 Details of Common Area in Shared Memory .....	18-30
18.5.1 Configuration of Common Area .....	18-30
18.5.2 Setting Parameter Control Area .....	18-31
18.5.3 Operating Speed Rate Area.....	18-32
18.5.4 Axis Group Setting Area .....	18-32
18.5.5 Current Value Update Data Area .....	18-34
18.5.6 Torque Limit Area.....	18-36
18.5.7 Positioning control starting table number setting area .....	18-37
18.5.8 Positioning Control Area .....	18-38
18.5.9 Error Notification & Clearing Area .....	18-38
18.5.10 Warning Notification & Clearing Area.....	18-44
18.5.11 Synchronous control monitor area .....	18-50
18.5.12 Latch stop function area.....	18-52
18.5.13 Counter Positioning Function Area .....	18-54
18.5.14 Latch Correction J-Point Control Function Area .....	18-59
18.5.15 Absolute Data Setting Function Area.....	18-60
18.5.16 System Operation Setting Area .....	18-61
18.5.17 Amplifier Monitor & Control Area .....	18-62
18.5.18 Pulse Input Setting Area .....	18-62
18.5.19 Pulse Count Control Area .....	18-64
18.5.20 Pulse Input Monitor Area .....	18-65
18.6 Details of Each Axis information Area in Shared Memory .....	18-66
18.6.1 Configuration of Each Axis Information Area .....	18-66
18.6.2 Each Axis Information & Monitor Area .....	18-67
18.7 Details of Each Axis Setting Area in Shared Memory.....	18-81
18.7.1 Configuration of Each Axis Setting Area.....	18-81
18.7.2 Positioning parameter setting area .....	18-81
18.7.3 Positioning Data Setting Area .....	18-93
18.8 Amplifier Parameter Control Area in Shared Memory.....	18-116
18.8.1 Configuration of Amplifier Parameter Control Area.....	18-116
18.8.2 Amplifier Parameter Control Area .....	18-117
18.9 Synchronous Control Setting Area in Shared Memory .....	18-119
18.9.1 Configuration of Synchronous Control Setting Area .....	18-119
18.9.2 Synchronous Control Setting Area.....	18-119
18.9.3 Details of Synchronous Control Setting Area.....	18-120
18.10 Positioning Operation Change Setting Area in Shared Memory.....	18-137
18.10.1 Configuration of Positioning Operation Change Setting Area.....	18-137

18.10.2	Positioning Speed Change Setting Area.....	18-138
18.10.3	Positioning Movement Amount Change Setting Area.....	18-140
18.11	Cam Pattern Editing Area in Shared Memory .....	18-142
18.11.1	Configuration of Cam Pattern Editing Area .....	18-142
18.11.2	Cam Pattern Setting Area .....	18-143
18.11.3	Cam Pattern Editing Execution Confirmation Area .....	18-146
18.12	Details of Positioning Extension Table Setting Area in Shared Memory .....	18-150
18.12.1	Configuration of Positioning Extended Table Setting Area .....	18-150
18.12.2	Positioning Data Setting Area .....	18-151
18.13	Dimensions .....	18-157
18.13.1	Dimensions .....	18-157
<b>19</b>	<b>Sample programs.....</b>	<b>19-1</b>
19.1	Basic Configuration and Contact Allocations of Sample Programs ..	19-2
19.2	When Already Set in the Standard Area with a Programming Tool ..	19-4
19.3	When Setting in Extended Area on Program.....	19-7
19.4	When Setting the Standard Area on a Program .....	19-9

# 1 System Configuration

---

1.1 Functions of Positioning Unit RTEX.....	1-2
1.1.1 Functions of Unit.....	1-2
1.1.2 Unit Types.....	1-4
1.2 Restrictions on Use of Positioning Unit RTEX.....	1-5
1.3 Restrictions on Positioning Unit RTEX and Amplifier.....	1-6
1.3.1 Restrictions on Combinations of Positioning Unit RTEX and Amplifier.....	1-6
1.3.2 Restrictions on Amplifier Parameters.....	1-6
1.4 Programming Tool.....	1-8
1.4.1 Software Usage Environment and Applicable Cables.....	1-8


## 1.1 Functions of Positioning Unit RTEX

### 1.1 Functions of Positioning Unit RTEX

#### 1.1.1 Functions of Unit

##### ■ Network control

Motion-specific network Realtime Express (RTEX) makes it possible to easily construct network servo motor systems with Category 5e shielded cables.

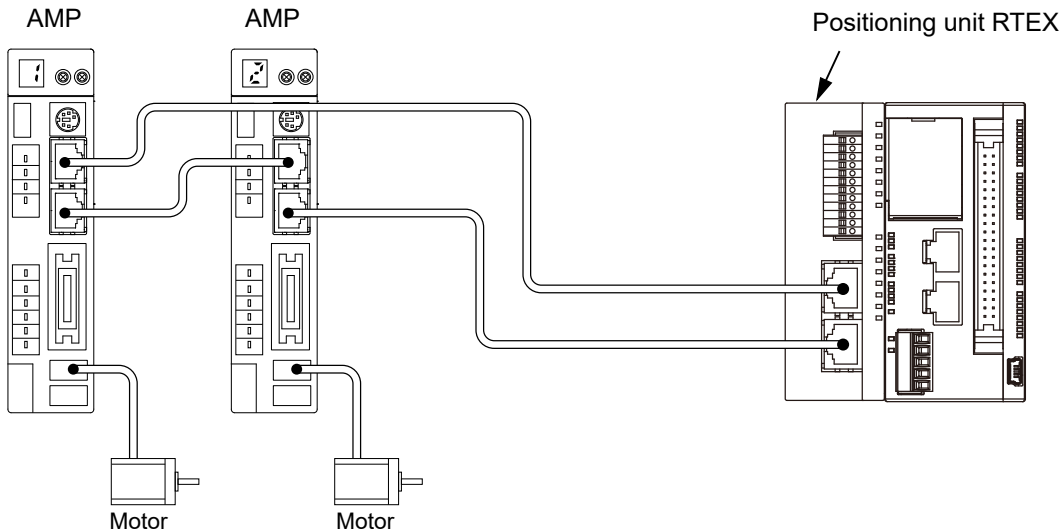


##### ■ Configuration of axes based on the system

According to the number of required axes, 4-axis and 8-axis types are available.

##### ■ Checking operations with no need to use a ladder program

Using the tool operation function of the dedicated tool Configurator PM7-RTEX makes it possible to conduct test runs without using a ladder program and check various items such as rotation directions, various input contacts, or automatic operation settings.

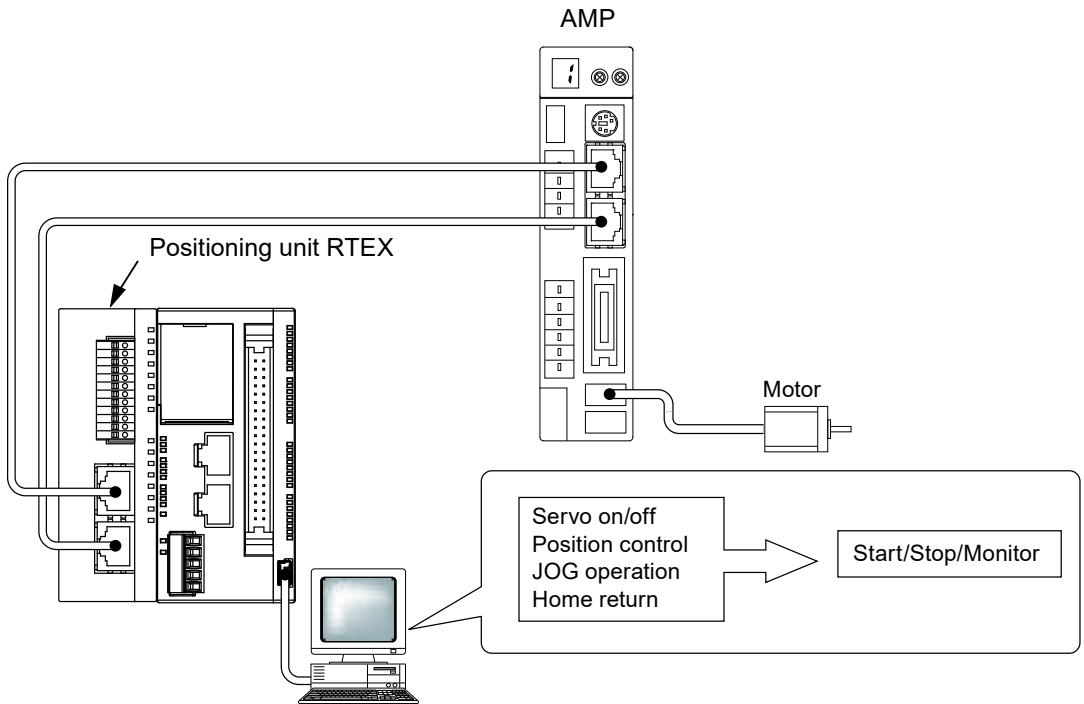


## ■ Two-axis and three-axis interpolation controls

2-axis linear interpolation, 2-axis circular interpolation, 3-axis linear interpolation and 3-axis spiral interpolation controls can be performed.

## ■ Inputs and outputs required for control are integrated in amplifiers

As the limit input and near home input are connected to the amplifier and sent to the positioning unit RTEX via the network, the wiring can be simplified.

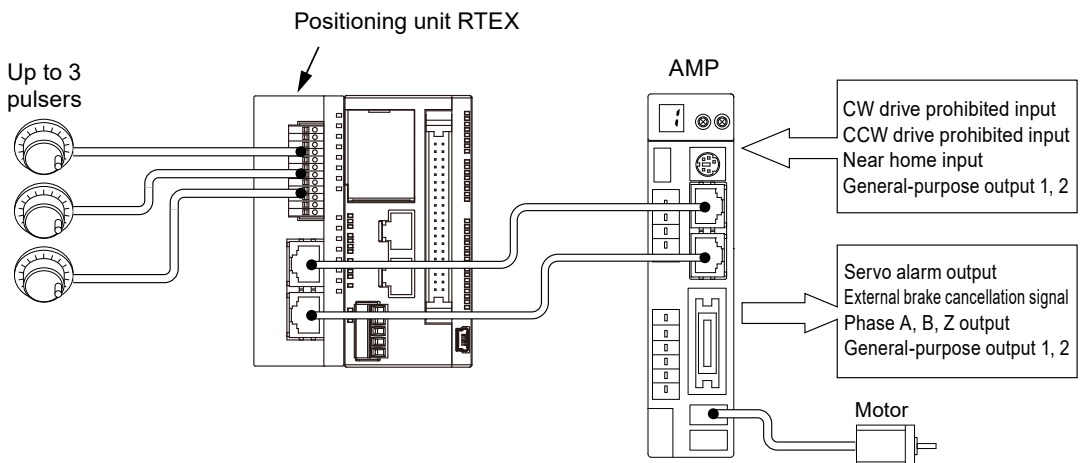

## 1.1 Functions of Positioning Unit RTEX

---

### ■ Remote I/O with two inputs and two outputs for one amplifier

Two general-purpose inputs and two outputs (transistors) can be connected to the amplifier, and they can be programmed using the X contact and Y contact of the positioning unit RTEX. Simple inputs and outputs around the amplifier can be used as remote I/O.

### ■ Compatible with manual pulsers

Up to three manual pulsers can be connected. It is possible to change the axes corresponding to each pulser by adjusting the settings of the positioning unit RTEX.

### 1.1.2 Unit Types

The following table shows the main differences between the types of positioning unit RTEX.


#### ■ FP0H Positioning Unit RTEX

Type	Function	Model number
4-axis type	4-axis control	AFP0HM4N
8-axis type	8-axis control	AFP0HM8N

## 1.2 Restrictions on Use of Positioning Unit RTEX

■ **Restrictions on mounting arrangement of positioning unit RTEX**

- Up to two positioning units RTEX can be mounted on the left side of the FP0H Control Unit (Ver. 1.30 or later).

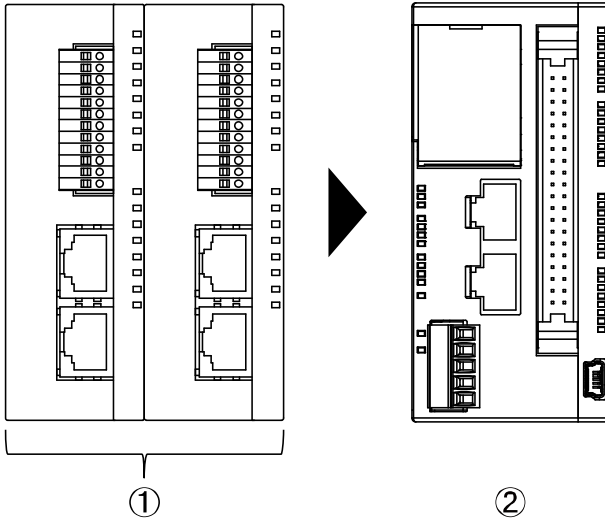

(1)	Positioning unit RTEX	(2)	FP0H Control Unit
-----	-----------------------	-----	-------------------

## 1.3 Restrictions on Positioning Unit RTEX and Amplifier

### 1.3 Restrictions on Positioning Unit RTEX and Amplifier

#### 1.3.1 Restrictions on Combinations of Positioning Unit RTEX and Amplifier

Observe the following restrictions on the combinations of positioning unit RTEX and MINAS series amplifier.

##### ■ Combinations of positioning unit RTEX and amplifier

Positioning unit RTEX version		Connectable amplifier	
		A5N	A6N
Firmware	Ver.1.0 or later	•	•
Hardware			

##### ■ Combination of amplifier series

Positioning unit RTEX version		Connectable amplifier		Description
		A5N	A6N	
Firmware	Ver.1.0 or later	•	•	A5N and A6N can be connected to the same network.
Hardware				

##### ■ Setting ranges of movement amount and speed

The input range of the movement amount and speed specified in the positioning unit RTEX may differ from the upper and lower setting limits of the amplifier.

#### Info.

- A5N and A6N can be used by connecting them to the same network.

#### 1.3.2 Restrictions on Amplifier Parameters

Some parameters on the amplifier side affect the operation of the positioning unit RTEX. Set parameters according to the following descriptions.

##### [A6N/A5N parameters]

number	Name	Factory default Setting value	Settings
Pr0.00	Rotational direction setup	1	The positioning unit RTEX automatically changes the setting. Do not change the value of this parameter.
Pr0.01	Control mode setup	0	Use "setting value 0 (semi-closed control)".
Pr0.08	Number of command pulses per motor revolution	0	Factory default setting When Pr.0.08=0, Pr.0.09=1, and Pr.0.10=1



## 1.3 Restrictions on Positioning Unit RTEX and Amplifier

number	Name	Factory default Setting value	Settings
Pr0.09	Numerator of electronic gear	1	the position command input becomes the position command. (Note 1)
Pr0.10	Denominator of electronic gear	1	
Pr4.00 to Pr4.07	SI1 to SI8 Input selection	(Note 2)	The connection method and settings vary according to the home return method used.
Pr4.31	Positioning complete range	10	The FP0H control unit automatically changes the value. Do not change the value of this parameter.
Pr5.04	Over-travel inhibit input setup	1	Use "setting value 1 (over-travel inhibit input is disabled)".
Pr5.21	Selection of torque limit	1	The positioning unit RTEX automatically changes the setting. Do not change the value of this parameter.
Pr7.20	RTEX communication cycle setup	3	Use "setting value 3 (0.5 ms)".
Pr7.21	RTEX command updating cycle ratio setting	2	Use "setting value 2 (2 times)".
Pr7.22	RTEX function extended setup 1	0	Use "setting value 0 (16-byte mode)".
Pr7.23	RTEX function extended setup 2	18	The positioning unit RTEX automatically changes the setting. Do not change the value of this parameter.
Pr7.25	RTEX speed unit setup	0	Use "setting value 0 (r/min)".

(Note 1) For details of Pr0.08 to Pr0.10, refer to "Operating Instructions of AC Servo Driver A5N Series" or "Operating Instructions of AC Servo Driver A6N Series".

(Note 2) The factory default settings of Pr4.00 to Pr4.07 vary according to the parameter number. For details on how to set the parameters, refer to "[11 Manual Operation \(Home Return\)](#)".

## 1.4 Programming Tool

---

### 1.4 Programming Tool

#### 1.4.1 Software Usage Environment and Applicable Cables

##### ■ Programming software

Item name	Applicable version	Applicable language	Product No.	Remarks
Control FPWIN GR7	Ver.2.26.0 or later	Japanese	AFPSGR7JP	-
			AFPSGR7JPS	FP7 encryption function is supported

(Note 1) The differential files for updating to the latest version can be downloaded free of charge from our website. Use the latest version.

Our website: <https://industry.panasonic.com/global/en/downloads/?tab=software>

##### ■ PC connection cable

- Use a commercial USB cable.

Cable type	Length
USB 2.0 cable (A/Mini B)	Max. 5 m


## 2 Names and Functions of Components

---


2.1 Names and Functions of Positioning Unit RTEX Components .....	2-2
2.2 Specifications of Operation Indicator LEDs .....	2-3

## 2.1 Names and Functions of Positioning Unit RTEX Components

### 2.1 Names and Functions of Positioning Unit RTEX Components

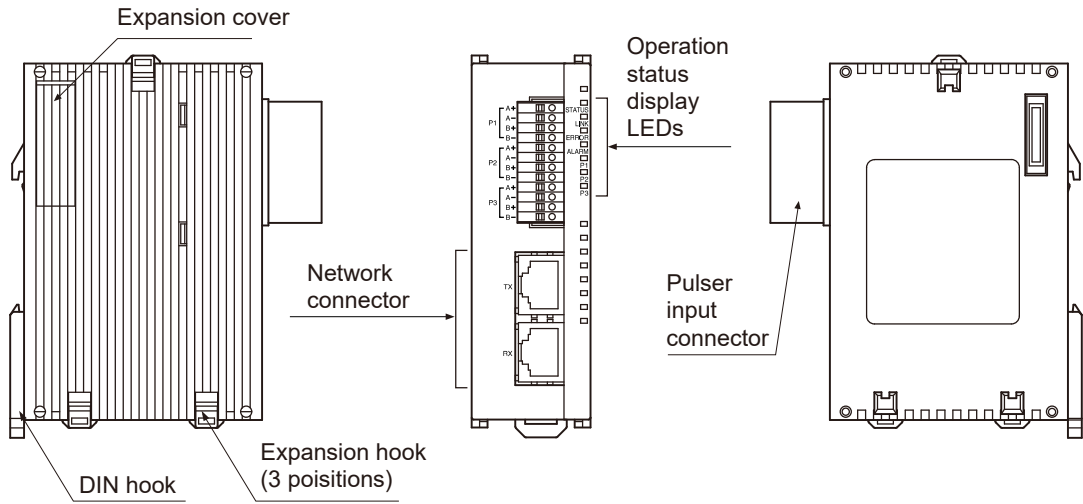

2.2 Specifications of Operation Indicator LEDs

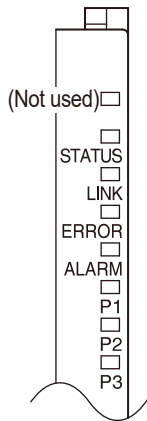

Name	Color	Status	Remarks
STATUS	Green	Blinking: Waiting until network connection is established Fast blinking: In version upgrade mode Lit: When network connection is established	
LINK	Green	Unlit: Not connected Lit: Normal connection state	State in which the TX of the sending node and the RX of the local node are electrically connected normally
ERROR	Red	Unlit: Normal Blinking: Warning occurred Lit: Error occurred	In the event of a warning, the operation continues. In the event of an error, the operation stops.
ALARM	Red	Unlit: Normal Lit: System error	If the LED lights up, the power must be turned OFF and then ON.
P1 P2 P3	Green	Unlit: Both phase A and phase B of each pulser are in the OFF state. Lit: Both phase A and phase B of each pulser are in the ON state.	Check the input signals of the pulsers.

(MEMO)

# 3 Installation and Wiring

---

- 3.1 Installation.....3-2
  - 3.1.1 Attaching to DIN Rail..... 3-2
  - 3.1.2 Removing from DIN Rail ..... 3-2
- 3.2 Wiring.....3-3
  - 3.2.1 Wiring of Network..... 3-3
  - 3.2.2 Network Connector ..... 3-3
  - 3.2.3 Wiring of Pulser Input Connector ..... 3-4

## 3.1 Installation


---

### 3.1 Installation

#### 3.1.1 Attaching to DIN Rail

##### **1 2** Procedure


1. Fully pull out the DIN rail attachment lever on the back of the unit.
2. Fit the top of the unit attachment part into the DIN rail.
3. While pressing down the unit attachment part onto the DIN rail, fit the bottom of the unit attachment part into the DIN rail.
4. Push up the DIN rail attachment lever on the back of the unit until it clicks to lock.

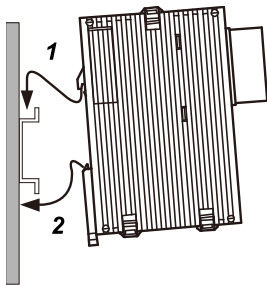

#### 3.1.2 Removing from DIN Rail

##### **1 2** Procedure

1. Fully pull out the DIN rail attachment lever on the back of the unit.
2. Pull the bottom of the unit toward you.
3. While lifting the unit, remove it from the DIN rail.

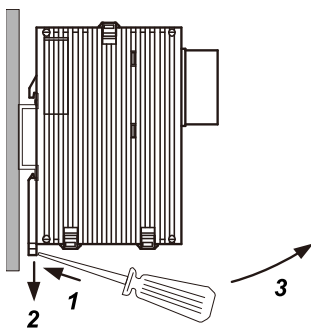




## 3.2 Wiring

### 3.2.1 Wiring of Network

For the wiring of the network, use the LAN cable of the Category 5e shielded cable type. To prevent the cable from coming off, securely connect the connector of the cable to the network connector (RJ45 connector) of the unit.


The length between each node should be within 60 m, and the total length of the communication loop should be within 200 m.

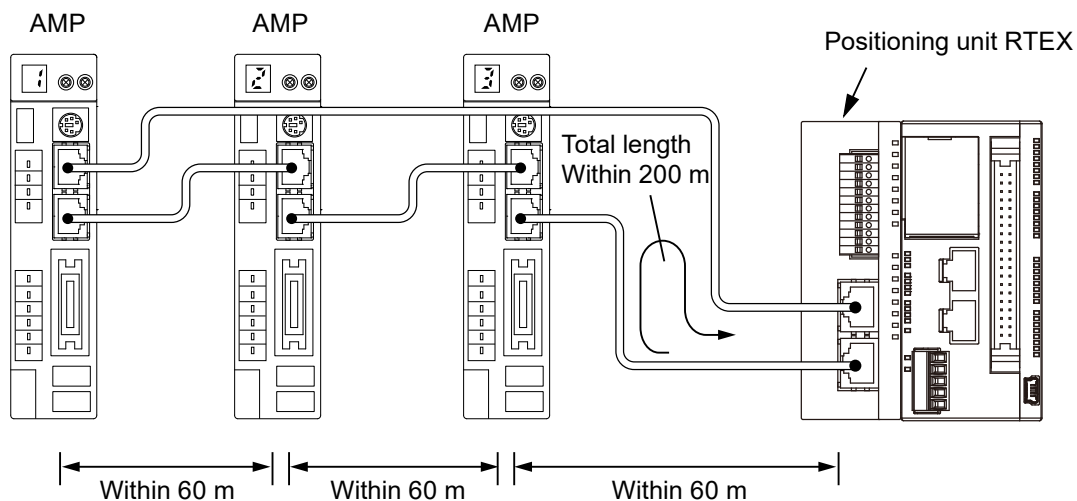

### 3.2.2 Network Connector


RJ45 plug is connected to the network connector.

#### ■ Pins of RJ45 plug

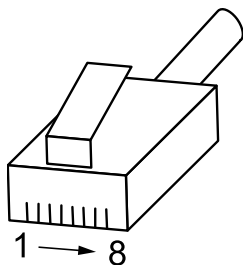

## 3.2 Wiring


### ■ Wiring diagram

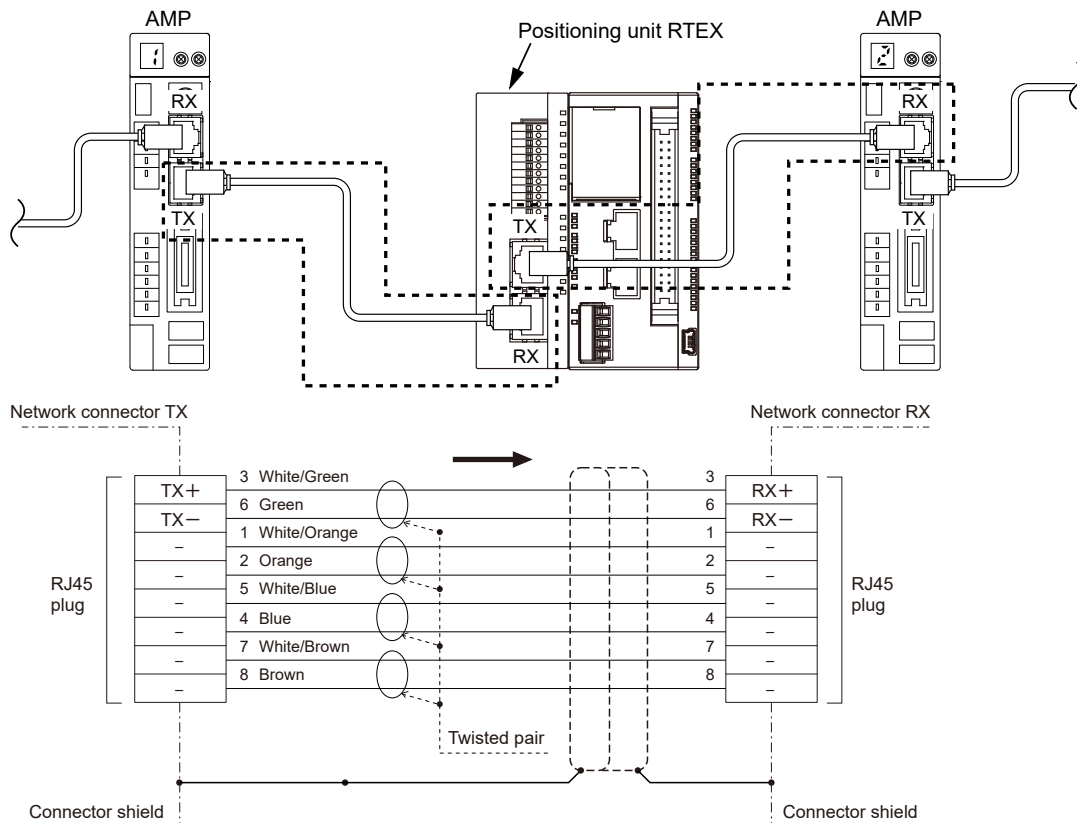

### 3.2.3 Wiring of Pulsar Input Connector

#### ■ Supplied connector/Compatible wire

A connector of the spring connection type is used. Use the following compatible wires for the wiring.

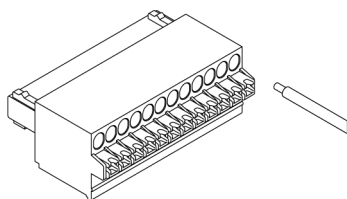

#### Supplied connector socket

Connector sockets manufactured by Dinkle International are used.

Number of pins	Model number
12 pins	ESC250V-12P-BK

**Compatible wires (stranded wire)**

Size	Nominal cross-sectional area
AWG#28 to 20	0.08 mm <sup>2</sup> to 0.5 mm <sup>2</sup>

**Rod terminal without compatible insulation sleeve**

If rod terminals are used, choose the following model.

Manufacturer	Cross-sectional area	Size	Model number
Dinkle International Co. Ltd	0.5 mm <sup>2</sup>	AWG#22	DN00508F

**Crimping tool dedicated to rod terminals**

Manufacturer	Model number
Dinkle International Co. Ltd	DNT13-0101

**■ Wire installation tool**

Use a screwdriver with a blade thickness of 0.4 mm to insert wires.


**■ Wiring method**

1. Remove a portion of the wire's insulation.




8 mm

2. Press the lock release lever (orange) with a tool such as a flat-blade screwdriver.

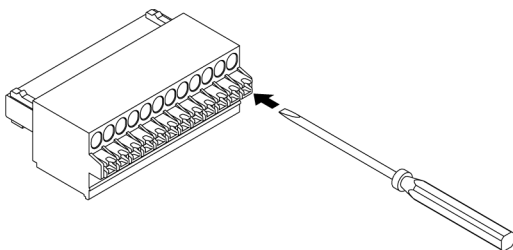


3. While pressing the orange lever, insert the wire all the way into the connector.

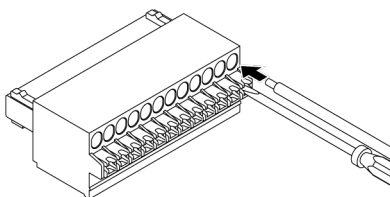

4. Take the tool off the lock release lever.

## 3.2 Wiring

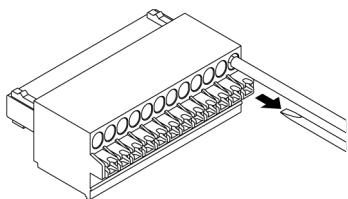


### ■ Precautions on wiring

The following precautions should be observed to avoid broken or disconnected wires.

- When removing the wire's insulation, be careful not to scratch the core wire.
- Do not twist the wires to connect them.
- Do not solder the wires to connect them. The solder may break due to vibration.
- After wiring, make sure stress is not applied to the wire.

### Input Specifications and Pin Assignment

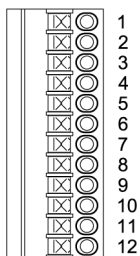

### ■ Input terminals of pulser input connector

Pin No.	Circuit	Signal name
1,5,9		Pulse input A (+)
2,6,10		Pulse input A (-)
3,7,11		Pulse input B (+)
4,8,12		Pulse input B (-)

(Note 1) When the pulser is connected to the pulse input, the elapsed value increases if phase A is proceeding more than phase B.

### ■ Input specifications

Item	Description
Operating voltage range	3.5 to 5.25 VDC (5 VDC, line driver specifications)
Min. ON voltage/current	3 VDC/4 mA
Max. OFF voltage/current	1 VDC/2 mA

Item	Description
Input impedance	Approx. 390Ω
Min. input pulse width	0.5 μs or more (Max. 1 MHz in each phase)

(MEMO)

# 4 Power ON/OFF and Items to Check

---


4.1 Safety Circuit Design .....	4-2
4.2 Before Turning On the Power .....	4-3
4.3 Procedure for Turning On the Power .....	4-4
4.4 Procedure for Turning Off the Power .....	4-5

## 4.1 Safety Circuit Design

### 4.1 Safety Circuit Design

#### ■ Example of a safety circuit

Installation of the over limit switch

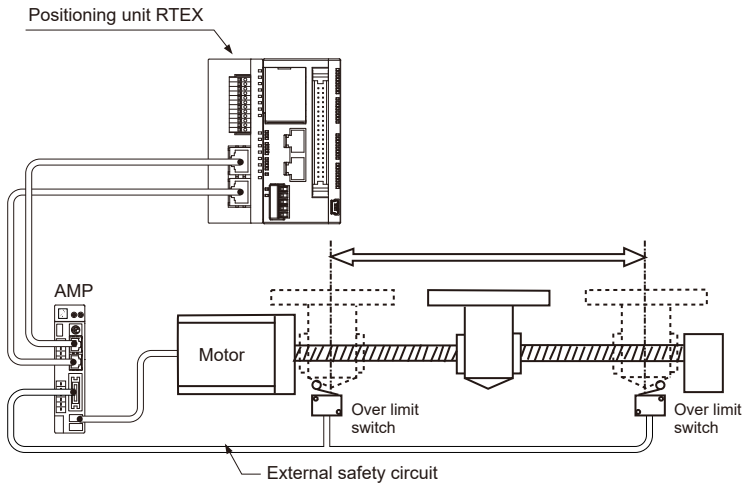

Install over limit switches as shown above.


Connect them to the CW and CCW over-travel inhibition inputs of the parallel I/O connector of the amplifier. For the positioning unit RTEX, connect them to the limit input (+) and limit input (-) via the network.

Install the safety circuit recommended by the manufacturer of the motor being used.




**4.2 Before Turning On the Power**

■ **Items to check before turning ON the power**

- 
 When the power to the PLC is turned on, the starting contacts for the various operations of the positioning unit RTEX should be OFF. If they are ON, operations may be started unexpectedly.

**System configuration example**

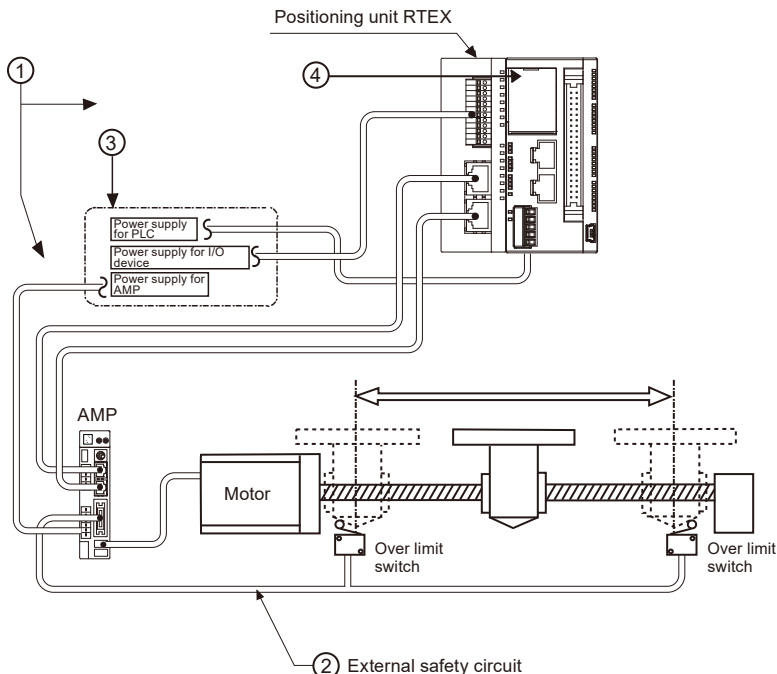

Number	Item	Description
(1)	Checking connections to the various devices	Check to make sure the various devices have been connected as indicated by the design.
(2)	Checking the installation of the external safety circuit	Check to make sure the safety circuit (wiring and installation of over limit switch) based on the external circuit has been installed properly.
(3)	Checking the settings for power ON sequence	Check whether settings have been configured so that the power is turned ON according to the sequence outlined in "Procedure for Turning On the Power".
(4)	Checking the PLC mode selection switch	Set the PLC in PROG. mode. Setting it in the RUN mode can cause inadvertent operation.


## 4.3 Procedure for Turning On the Power

### 4.3 Procedure for Turning On the Power

When turning on the power to the system incorporating the positioning unit RTEX, the performance and statuses of any external devices connected to the system should be taken into consideration, and sufficient care should be taken so that turning on the power does not trigger unexpected movements or operations.

#### 1 2 Procedure


1. Turn ON the power supplies for the input and output devices connected to the PLC.
2. Turn ON the power supply for the amplifier.
3. Turn ON the power supply for the PLC.

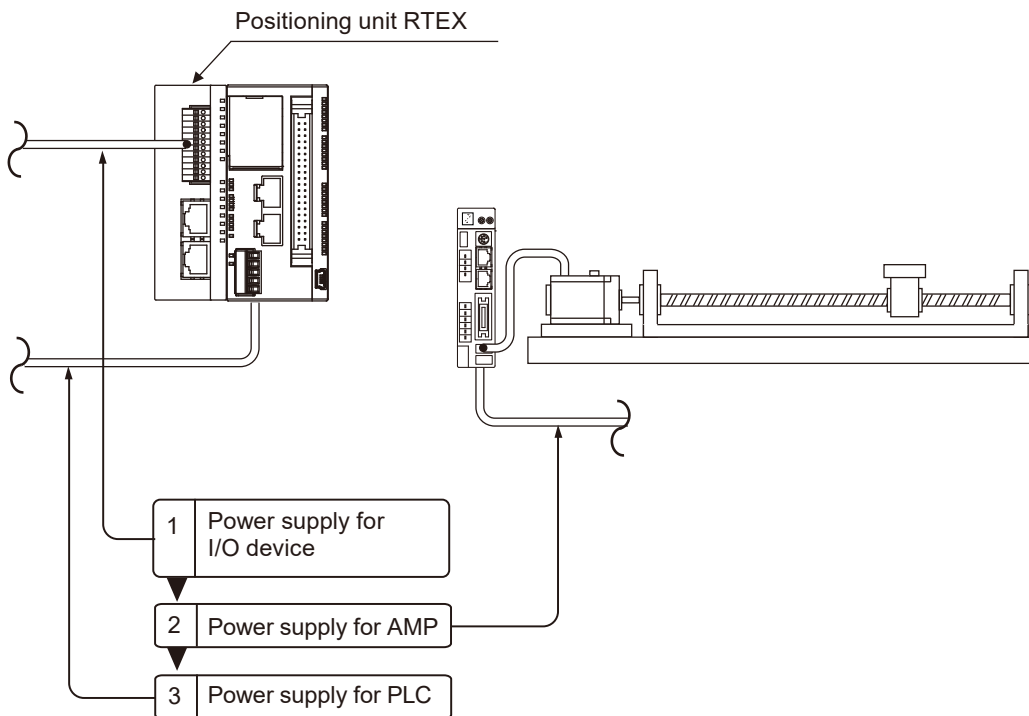

## 4.4 Procedure for Turning Off the Power

### 1 2 Procedure

1. Make sure that the rotation of the motor has stopped, and then turn OFF the power supply for the PLC.
2. Turn OFF the power supply for the amplifier.
3. Turn OFF the power supplies for the input and output devices connected to the PLC.

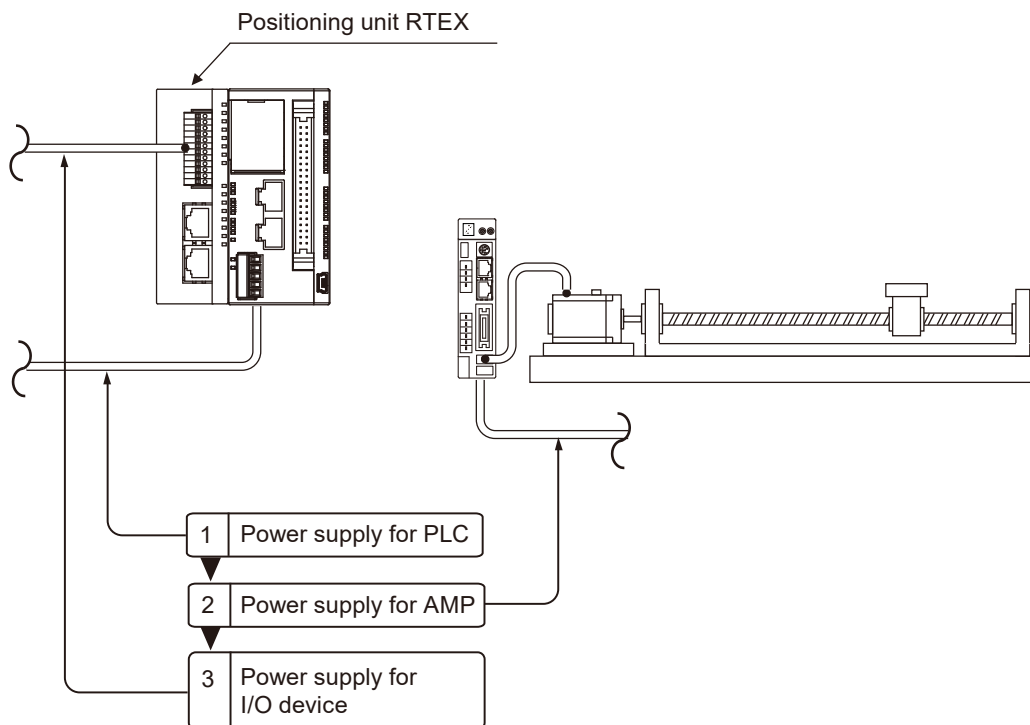

(MEMO)

# 5 Preparation for Operation

---

5.1 Procedures for System Construction .....	5-2
5.1.1 Procedure 1: Wiring .....	5-2
5.1.2 Procedure 2: Axis Numbers and Unit Numbers of Amplifier .....	5-2
5.1.3 Procedure 3: Powering on and Checking Network Connection Establishment .....	5-3
5.1.4 Procedure 4: Checking Consistency with Amplifier Parameters .....	5-4
5.1.5 Procedure 5: Checking the Input Signals.....	5-5
5.1.6 Procedure 6: Checking Rotating and Moving Directions and Moving Distance .....	5-6
5.1.7 Procedure 7: Settings of Positioning Parameters and Positioning Data .....	5-7
5.2 Preparation for Operation .....	5-9
5.2.1 Servo ON/Servo OFF.....	5-9


## 5.1 Procedures for System Construction

### 5.1 Procedures for System Construction

#### 5.1.1 Procedure 1: Wiring

For the wiring of the network, use the LAN cable of the Ethernet Category 5e shielded cable type. Connect the positioning unit RTEX with each amplifier in a loop. Connect "TX" of the positioning unit RTEX to "RX" of the first amplifier. Then, connect "TX" of the amplifier to "RX" of the next amplifier, and finally, connect "TX" of the last amplifier to "RX" of the positioning unit RTEX.


(Note 1): Turn OFF the power to the system before wiring cables.

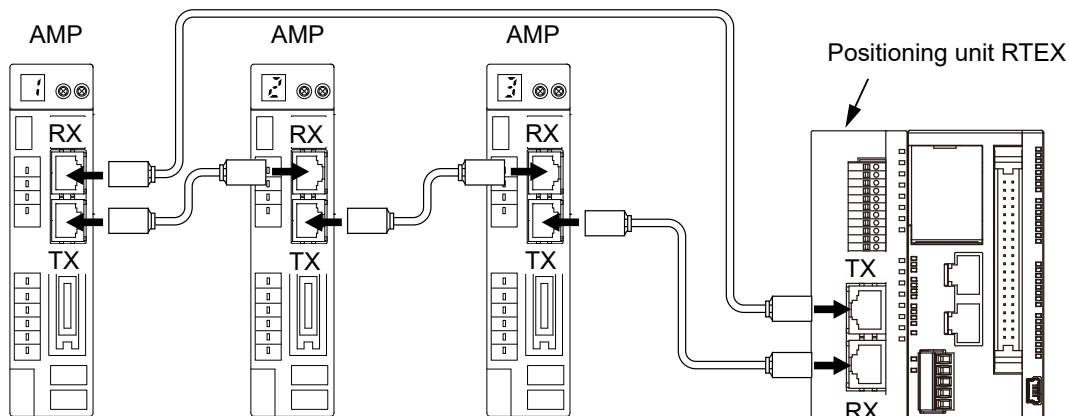

#### 5.1.2 Procedure 2: Axis Numbers and Unit Numbers of Amplifier

The axis numbers of the positioning unit RTEX match the station numbers of the rotary switch of the amplifier. As the order of connections on the network is unrelated to the axis numbers, the axis numbers can be determined after construction of the network.

Amplifier rotary switch number	Axis number
1	Axis 1
2	Axis 2
3	Axis 3
4	Axis 4
5	Axis 5
6	Axis 6
7	Axis 7
8	Axis 8

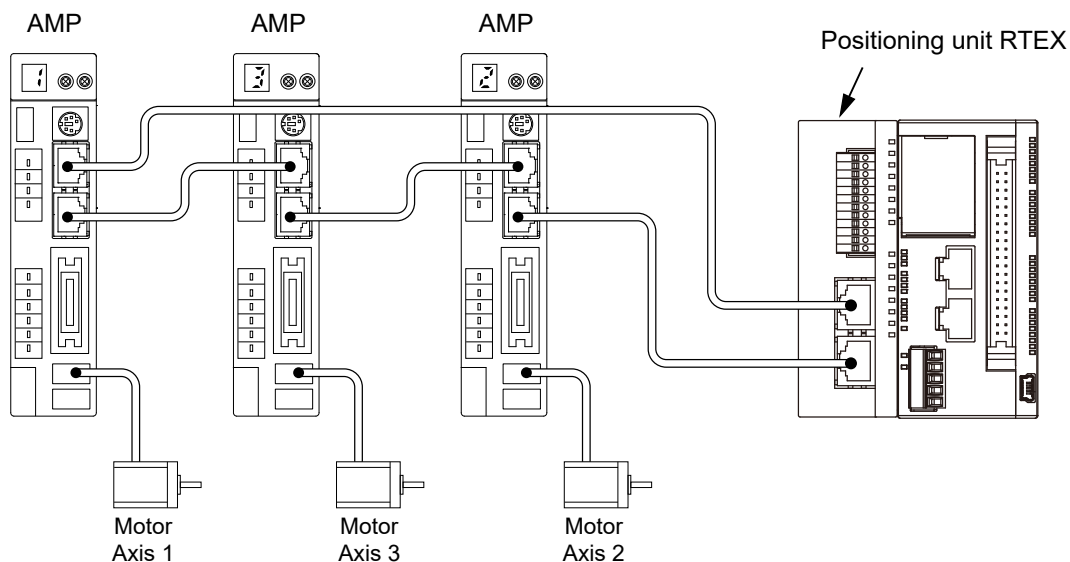

- An error will occur if settings are specified as below.
  - When the same unit number is redundantly specified on the same network.
  - When a unit number is set to 0.
  - When a station number larger than the maximum number of axes that can be specified for the positioning unit RTEX used is specified.  
(For the 4-axis type, station numbers that can be set are 1 to 4.)



### 5.1.3 Procedure 3: Powering on and Checking Network Connection Establishment

The power-on procedure is as follows:

#### 1 2 Procedure

1. Turn ON the power supplies for the input and output devices connected to the PLC.
2. Turn ON the power supply for the amplifier.
3. Turn ON the power supply for the PLC.

After the power is turned ON, check if the operation status indicator LEDs of the positioning unit RTEX are in the following states.

STATUS: Lit

LINK: Lit

## 5.1 Procedures for System Construction

---

### **i** Info.

- If the STATUS LED is blinking, the network connection is not established.
- If the LINK LED is unlit, the "RX" of the positioning unit RTEX (receiver) and the "TX" of the amplifier (sender) are not electrically connected correctly.

### 5.1.4 Procedure 4: Checking Consistency with Amplifier Parameters

With the factory settings, the operating directions of the positioning unit RTEX and the amplifier differ as shown below.

- Parameters of positioning unit RTEX: CW direction is elapsed value (+) direction
- Parameters within amplifier: CW direction is elapsed value (-) direction

Therefore, they must be matched according to the following procedures.


### **1 2** Procedure

1. Start Configurator PM7-RTEX and set the corresponding axis.
2. Select **Online>Select Slot Number** from the menu, and select the slot number where the positioning unit RTEX is installed.
3. Select **File>Download to Unit** from the menu, and download the axis information and positioning parameter setting data.  
The prompt for writing into the FROM (flash memory) is displayed.
4. Select "Yes" to write to the FROM.
5. Upon completion of writing, turn OFF the power of the amplifier and PLC, and then turn them ON again.  
The system will be operated with the positioning parameters set in the positioning unit RTEX.

### **i** Info.

- Following are the parameters that are used to match the operating directions of the positioning unit RTEX and amplifier according to the above procedure.  
"CW/CCW direction setting"  
"Limit switch connection"  
As these parameters are important to construct the system, they will be applied to the operation of the motor by turning the power OFF and then ON after writing the parameters to the FROM (flash memory) of the positioning unit RTEX.



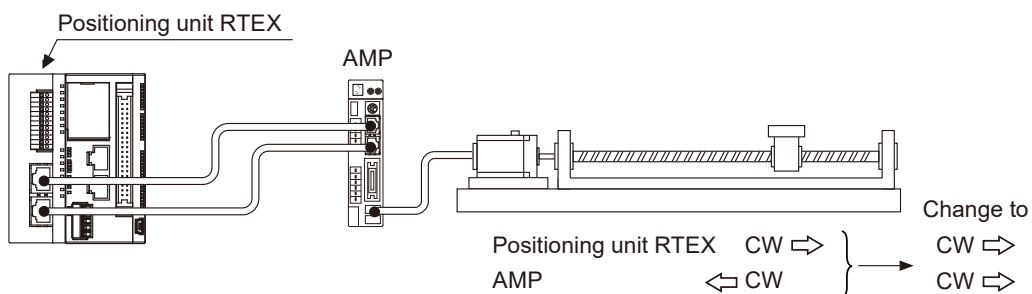


### 5.1.5 Procedure 5: Checking the Input Signals

Check the input of the over limit switch for the safety circuit connected to the amplifier and the input of the near home (DOG) switch. Check whether signal inputs are properly loaded into the positioning unit RTEX, with each switch operated forcibly. The statuses of the inputs of switches can be checked by using the input contacts of the positioning unit RTEX or on the "Status Display" screen of Configurator PM7-RTEX.

#### **i** Info.

- If the operating direction of the motor is opposite to the position of the limits (+) and (-) after the installation of the over limit switch, the connection of the limits (+) and (-) can be set to "Reverse connection" in the positioning parameter settings of Configurator PM7-RTEX.

## 5.1 Procedures for System Construction

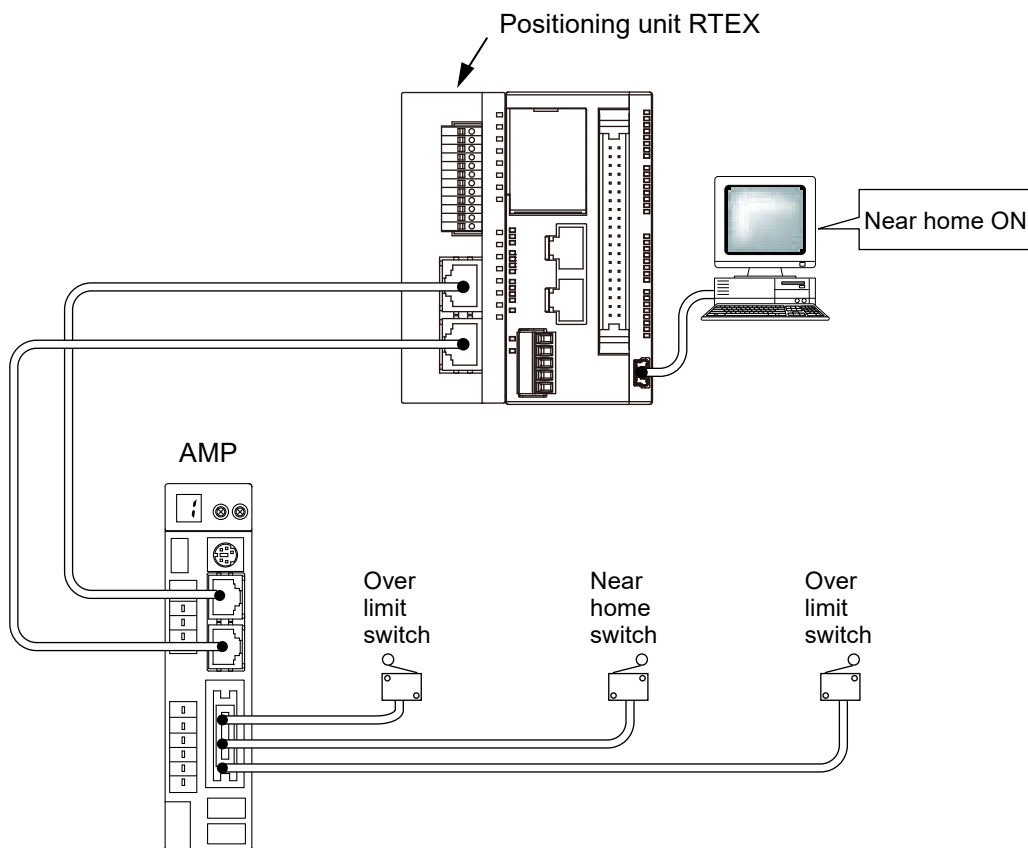

### 5.1.6 Procedure 6: Checking Rotating and Moving Directions and Moving Distance

Check whether the rotating and moving directions of the motor and the moving distance are correct. Operations can be easily checked by using the tool operation function of Configurator PM7-RTEX without using a ladder program.

#### 1.2 Procedure

1. Perform JOG operations to check whether the rotating and moving directions of the motor are correct.

Select **Online>Tool Operation** from the menu of Configurator PM7-RTEX and bring the corresponding axis into the servo-ON state to execute a JOG operation. When using a ladder program, turn ON the JOG forward or reverse rotation contact after turning ON the servo ON contact.


The rotation direction is determined according to factors such as the installation of the ball screw and the "CW/CCW direction setting" positioning parameter.

2. Check whether the movement distance is as designed after position control is performed.

Set table 1 of the positioning data using Configurator PM7-RTEX, and select **Online>Tool Operation** from the menu of Configurator PM7-RTEX after downloading the table to the positioning unit RTEX, and bring the corresponding axis into the servo-ON state to execute a JOG operation. When using a ladder program, after turning ON the servo ON contact, set up the position control starting table and then turn ON the positioning start contact.

The moving distance is determined according to the pitch of the ball screw, deceleration gear ratio, or setting movement amount of the positioning data.

(Note 1): Before performing JOG operation and position control, execute servo ON and bring the amplifier into a servo lock state.

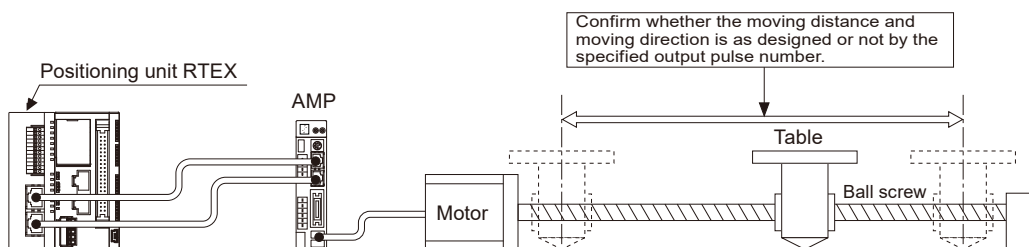

### 5.1.7 Procedure 7: Settings of Positioning Parameters and Positioning Data

The basic operations of the positioning system have been checked in Procedure 6. In Procedure 7, set positioning parameters and positioning data in accordance with the actual operation.

Positioning parameters and positioning data are stored in the shared memory of the positioning unit RTEX. Although there are two methods of storing data in the shared memory, we recommend that Configurator PM7-RTEX be used to set up positioning parameters that are not changed so much before operation.

- Using Configurator PM7-RTEX
- When using a ladder program to write to the shared memory

#### ■ When using Configurator PM7-RTEX

Start Configurator PM7-RTEX, and select **Set Axis>Parameter Settings** on the menu to set the positioning parameters. Also, create tables of positioning data on the positioning data editing screen. After setting the parameters and positioning data, download them to the positioning unit RTEX.

Note 1: After the positioning parameters and positioning data have been downloaded, the screen for selecting whether to write them to the FROM (flash memory) is displayed. When they are written to the flash memory, the positioning parameters and positioning data in the flash memory will be automatically reflected in the shared memory when the PLC is turned off and then on. If they are not written to the flash memory, the positioning parameters and positioning data finally stored in the flash memory will be reflected when the PLC is turned off and then on.

#### ■ When using a ladder program to write to the shared memory

Use the F151 WRT instruction to write various positioning parameters and positioning data to the shared memory.

## 5.1 Procedures for System Construction

---

### Info.

- For details on the storage addresses of each positioning parameter and positioning data, refer to "[18.7 Details of Each Axis Setting Area in Shared Memory](#)".
- For details on using a ladder program to write positioning data, refer to "[18.7.3 Positioning Data Setting Area](#)".

## 5.2 Preparation for Operation

### 5.2.1 Servo ON/Servo OFF

The servo motor must be brought into the servo-locked status in order to perform JOG operation or position control.

Turn ON the servo ON request contact to bring the servo motor into the servo-locked status. Turn ON the servo OFF request contact to change the servo-locked status to the servo-free status.

Servo ON or servo OFF can be achieved by using the tool operation mode of Configurator PM7-RTEX without having to create a ladder program.

■ Each contact when the positioning unit RTEX is installed in slot number 0


Allocation of each contact		Target axis	Name	Description
WX11	X110	Axis 1	Servo lock	Turns ON when the corresponding axis is in a servo lock state.
	X111	Axis 2		
	X112	Axis 3		
	X113	Axis 4		
	X114	Axis 5		
	X115	Axis 6		
	X116	Axis 7 (virtual)		
	X117	Axis 8 (virtual)		
WY10	Y108	Axis 1	Servo ON request	Requests servo lock for the corresponding amplifier. Servo lock state processing is requested by the ON edge of this contact. When RUN mode is switched to PROG mode while the axis is in a servo lock state, a servo free state does not occur automatically. To cause a servo free state, turn ON the servo OFF request contact. (The operation is the edge type.)
	Y109	Axis 2		
	Y10A	Axis 3		
	Y10B	Axis 4		
	Y10C	Axis 5		
	Y10D	Axis 6		
	Y10E	Axis 7 (virtual)		
	Y10F	Axis 8 (virtual)		
WY11	Y110	Axis 1	Servo OFF request	Requests a servo free state for the corresponding amplifier. Servo free state processing is requested by the ON edge of this contact. (The operation is the edge type.)
	Y111	Axis 2		
	Y112	Axis 3		
	Y113	Axis 4		
	Y114	Axis 5		
	Y115	Axis 6		
	Y116	Axis 7 (virtual)		

## 5.2 Preparation for Operation

Allocation of each contact		Target axis	Name	Description
	Y117	Axis 8 (virtual)		

### ■ Sample programs

The following sample program performs servo ON/OFF for Axis 1 of slot number 0.

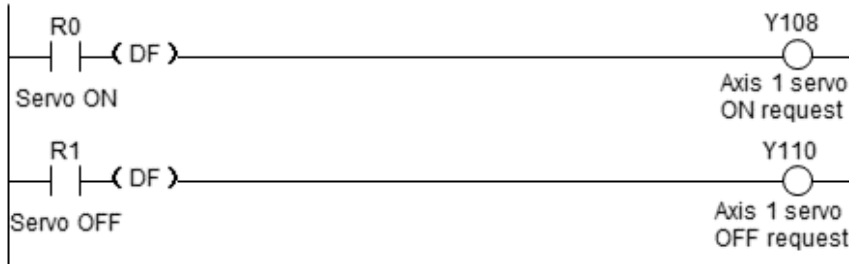

(Note 1) Even if the PLC is in program mode, the servo-locked status continues.

# 6 I/O Allocation

---

6.1 Allocated I/O Area.....	6-2
6.2 Allocation of Each Contact.....	6-3

## 6.1 Allocated I/O Area

---

### 6.1 Allocated I/O Area

As is the case with other I/O units, the positioning unit RTEX is used by allocating inputs (X) and outputs (Y). 256 points (128 input points and 128 output points) are allocated for any axis type (regardless of the number of axes).

Type	Number of allocated points
4-axis type	Input 128 points
8-axis type	Output 128 points

#### Info.

- For details, refer to the "FP0H User's Manual (Basic)".



## 6.2 Allocation of Each Contact

The contacts are indicated as allocated I/O when the positioning unit RTEX is installed in slot number 0.

### WX10 (slot number 0: WX10, 1: WX18, 2: WX26, 3: WX34)

Contact allocation	Target axis	Name	Description
X100	All axes	Link establishment notification	Indicates that a network link was established and notifies that the system has started running.
X101	All axes	System restart notification	When this contact is ON, the changed settings will not be reflected unless the power supply is restarted.
X102	-	-	-
X103	All axes	Writing to FROM in progress	Writing to FROM in progress
X104	All axes	Tool operation in progress	Contact that indicates that the tool operation from Configurator PM7-RTEX is in progress.
X105	All axes	Error notification	Turns ON when an error occurs on any axis. Error details can be checked in the error notification & clearing area (addresses H110 to H1A7 in bank 00H).
X106	All axes	Warning notification	Turns ON when a warning occurs in any axis. Warning details can be checked in the warning notification & clearing area (addresses H1A8 to H23F in bank 00H).
X107	All axes	Recalculation completion	If the recalculation request contact (Y107) turns ON, re-creation of the positioning data in the shared memory (standard area) will be started. This contact will turn ON after the re-creation is complete. If the recalculation request contact (Y107) turns ON again, this contact will be turned OFF once. Note 1: This contact is used only when positioning data has been rewritten using a ladder program.
X108	Axis 1	Each axis connection confirmation	Turns ON when the corresponding axis exists.
X109	Axis 2		
X10A	Axis 3		
X10B	Axis 4		
X10C	Axis 5		
X10D	Axis 6		
X10E	Axis 7 (virtual)		
X10F	Axis 8 (virtual)		

## 6.2 Allocation of Each Contact

### WX11 (Slot No. 0: WX11, 1: WX19, 2: WX27, 3: WX35)

Allocation of each contact	Target axis	Name	Description
X110	Axis 1	Servo locked	Turns ON when the corresponding axis is in the servo-locked status.
X111	Axis 2		
X112	Axis 3		
X113	Axis 4		
X114	Axis 5		
X115	Axis 6		
X116	Axis 7 (virtual)		
X117	Axis 8 (virtual)		
X118	Axis 1	BUSY	Turns ON when the corresponding axis is operating.
X119	Axis 2		
X11A	Axis 3		
X11B	Axis 4		
X11C	Axis 5		
X11D	Axis 6		
X11E	Axis 7 (virtual)		
X11F	Axis 8 (virtual)		

### WX12 (Slot No. 0: WX12, 1: WX20, 2: WX28, 3: WX36)

Allocation of each contact	Target axis	Name	Description
X120	Axis 1	Operation complete	Turns ON when the operation command for the corresponding axis is completed and the position deviation falls within the specified completion width. Turns ON when execution of all tables is completed for P-point control and C-point control of automatic operation. After this contact turns ON, the ON state continues until the next control is started.
X121	Axis 2		
X122	Axis 3		
X123	Axis 4		
X124	Axis 5		
X125	Axis 6		
X126	Axis 7 (virtual)		
X127	Axis 8 (virtual)		
X128	Axis 1	Home return complete	Turns ON when the home return operation for the corresponding axis is completed. After this contact turns ON, the ON state continues until the next control is started.
X129	Axis 2		
X12A	Axis 3		

Allocation of each contact	Target axis	Name	Description
X12B	Axis 4		
X12C	Axis 5		
X12D	Axis 6		
X12E	Axis 7 (virtual)		
X12F	Axis 8 (virtual)		

**WX13 (Slot No. 0: WX13, 1: WX21, 2: WX29, 3: WX37)**

Allocation of each contact	Target axis	Name	Description
X130	Axis 1	Near home	Contact for monitoring the near home input connected to the corresponding amplifier.
X131	Axis 2		
X132	Axis 3		
X133	Axis 4		
X134	Axis 5		
X135	Axis 6		
X136	Axis 7 (virtual)		
X137	Axis 8 (virtual)	Auxiliary contact	Turns ON when the corresponding positioning table of the corresponding axis is executed. To configure the setting to enable and disable the auxiliary contact, use Configurator PM7-RTEX or directly write to the shared memory.
X138	Axis 1		
X139	Axis 2		
X13A	Axis 3		
X13B	Axis 4		
X13C	Axis 5		
X13D	Axis 6		
X13E	Axis 7 (virtual)		
X13F	Axis 8 (virtual)		

**WX14 (Slot No. 0: WX14, 1: WX22, 2: WX30, 3: WX38)**

Allocation of each contact	Target axis	Name	Description
X140	Axis 1	Limit +	Contact for monitoring the limit + and limit - inputs connected to the corresponding amplifier.
X141		Limit -	

## 6.2 Allocation of Each Contact

Allocation of each contact	Target axis	Name	Description
X142	Axis 2	Limit +	<p>During a positioning operation, JOG operation, or pulser operation, deceleration stop is performed when a limit input that is located further in the operating direction turns ON.</p> <p>The deceleration stop time during limit input can be changed in the shared memory or Configurator PM7-RTEX.</p> <p>This is used as a contact that reverses the motor automatically when home return is performed.</p>
X143		Limit -	
X144	Axis 3	Limit +	
X145		Limit -	
X146	Axis 4	Limit +	
X147		Limit -	
X148	Axis 5	Limit +	
X149		Limit -	
X14A	Axis 6	Limit +	
X14B		Limit -	
X14C	Axis 7 (virtual)	Limit +	
X14D		Limit -	
X14E	Axis 8 (virtual)	Limit +	
X14F		Limit -	

### WX15 (Slot No. 0: WX15, 1: WX23, 2: WX31, 3: WX39)

Allocation of each contact	Target axis	Name	Description
X150	Axis 1	Synchronous setting complete	<p>After the settings of synchronous control are changed by the program, synchronous settings in the unit are changed when the synchronous setting request contact (Y150 to Y157) is turned ON. The contact turns ON upon completion of the setting changes. This contact turns OFF when the synchronous setting request contact (Y150 to Y157) is turned OFF.</p>
X151	Axis 2		
X152	Axis 3		
X153	Axis 4		
X154	Axis 5		
X155	Axis 6		
X156	Axis 7 (virtual)		
X157	Axis 8 (virtual)		
X158	Axis 1	Synchronization cancellation in-progress notification	<p>Turns ON when synchronous operation is canceled by turning ON the synchronization contact cancellation contact (Y158 to Y15F).</p> <p>Synchronous operation cannot be executed on the axes for which this contact is turned ON.</p>
X159	Axis 2		
X15A	Axis 3		
X15B	Axis 4		
X15C	Axis 5		
X15D	Axis 6		
X15E	Axis 7 (virtual)		

## 6.2 Allocation of Each Contact

Allocation of each contact	Target axis	Name	Description
X15F	Axis 8 (virtual)		

### WX16 (Slot No. 0: WX16, 1: WX24, 2: WX32, 3: WX40)

Allocation of each contact	Target axis	Name	Description
X160	Axis 1	Slave axis clutch operation notification	The clutch starts operating when the slave axis clutch ON request contact (Y160 to Y167) or clutch OFF request contact (Y168 to Y16F) turns ON. After the clutch operation is completed, the contact for the corresponding axis turns ON.
X161	Axis 2		
X162	Axis 3		
X163	Axis 4		
X164	Axis 5		
X165	Axis 6		
X166	Axis 7 (virtual)		
X167	Axis 8 (virtual)		
X168	-	-	-
X169	-	-	-
X16A	-	-	-
X16B	-	-	-
X16C	-	-	-
X16D	-	-	-
X16E	-	-	-
X16F	-	-	-

### WY10 (Slot No. 0: WY10, 1: WY18, 2: WY26, 3: WY34)

Allocation of each contact	Target axis	Name	Description
Y100	All axes	System stop	Contact for requesting system stoppage. When it turns ON, all axes stop at zero deceleration time.
Y101	-	-	-
Y102	-	-	-
Y103	-	-	-
Y104	-	-	-
Y105	All axes	Error clearing request	Requests clearing of errors on all the connected amplifiers. When this signal turns ON, error recovery processing is performed and the error logs are cleared.

## 6.2 Allocation of Each Contact

Allocation of each contact	Target axis	Name	Description
			Note 1: Recovery from unrecoverable errors is not possible even if this signal turns ON.
Y106	All axes	Warning clearing request	Requests clearing of warnings on all the connected amplifiers. The warning logs are cleared by turning ON this signal.
Y107	All axes	Recalculation request	Turn ON this signal when each piece of positioning data (in the standard area) in the shared memory is changed. By turning ON this signal, positioning data after the recalculation start table number stored in the shared memory can be re-created and made executable. When re-creation of positioning data is complete, the recalculation completion contact (X107) turns ON. (Note 1): This contact is used only when positioning data has been rewritten using ladder programs.
Y108	Axis 1	Servo ON request	Requests servo locked for the corresponding amplifier. Servo-locked status processing is requested by the ON edge of this contact. When RUN mode is switched to PROG mode while the axis is in the servo-locked status, the servo-free status does not occur automatically. To set the servo-free status, turn ON the servo OFF request contact. (The operation is an edge type.)
Y109	Axis 2		
Y10A	Axis 3		
Y10B	Axis 4		
Y10C	Axis 5		
Y10D	Axis 6		
Y10E	Axis 7 (virtual)		
Y10F	Axis 8 (virtual)		

### WY11 (Slot No. 0: WY11, 1: WY19, 2: WY27, 3: WY35)

Allocation of each contact	Target axis	Name	Description
Y110	Axis 1	Servo OFF request	Requests the servo-free status for the corresponding amplifier. Servo-free status processing is requested by the ON edge of this contact. (The operation is the edge type.)
Y111	Axis 2		
Y112	Axis 3		
Y113	Axis 4		
Y114	Axis 5		
Y115	Axis 6		
Y116	Axis 7 (virtual)		
Y117	Axis 8 (virtual)		
Y118	Axis 1	Positioning startup	Requests positioning control for the corresponding amplifier. The execution start table is set in the area for specifying the position control start table number in the shared memory. (The operation is the edge type.)
Y119	Axis 2		
Y11A	Axis 3		

## 6.2 Allocation of Each Contact

Allocation of each contact	Target axis	Name	Description
Y11B	Axis 4		
Y11C	Axis 5		
Y11D	Axis 6		
Y11E	Axis 7 (virtual)		
Y11F	Axis 8 (virtual)		

### WY12 (Slot No. 0: WY12, 1: WY20, 2: WY28, 3: WY36)

Allocation of each contact	Target axis	Name	Description
Y120	Axis 1	Home return startup	Requests home return for the corresponding amplifier. The direction, pattern, and other items of home return are set in the home return operation setting area in the shared memory or by Configurator PM7-RTEX. (The operation is the edge type.)
Y121	Axis 2		
Y122	Axis 3		
Y123	Axis 4		
Y124	Axis 5		
Y125	Axis 6		
Y126	Axis 7 (virtual)		
Y127	Axis 8 (virtual)	J-point positioning start contact	Turning ON this signal during the J-point operation for the corresponding axis terminates the J-point operation and shifts to the processing for the next table. (The operation is the edge type.)
Y128	Axis 1		
Y129	Axis 2		
Y12A	Axis 3		
Y12B	Axis 4		
Y12C	Axis 5		
Y12D	Axis 6		
Y12E	Axis 7 (virtual)		
Y12F	Axis 8 (virtual)		

### WY13 (Slot No. 0: WY13, 1: WY21, 2: WY29, 3: WY37)

Allocation of each contact	Target axis	Name	Description
Y130	Axis 1	Forward JOG	Requests JOG operation for the corresponding amplifier.
Y131		Reverse JOG	

## 6.2 Allocation of Each Contact

Allocation of each contact	Target axis	Name	Description
Y132	Axis 2	Forward JOG	Acceleration time and other settings are specified in the JOG operation settings in the shared memory or by Configurator PM7-RTEX. (The operation is a level type.)
Y133		Reverse JOG	
Y134	Axis 3	Forward JOG	
Y135		Reverse JOG	
Y136	Axis 4	Forward JOG	
Y137		Reverse JOG	
Y138	Axis 5	Forward JOG	
Y139		Reverse JOG	
Y13A	Axis 6	Forward JOG	
Y13B		Reverse JOG	
Y13C	Axis 7 (virtual)	Forward JOG	
Y13D		Reverse JOG	
Y13E	Axis 8 (virtual)	Forward JOG	
Y13F		Reverse JOG	

### WY14 (Slot No. 0: WY14, 1: WY22, 2: WY30, 3: WY38)

Allocation of each contact	Target axis	Name	Description
Y140	Axis 1	Emergency stop	Requests emergency stop for the corresponding amplifier. The deceleration time during emergency stop is specified using Configurator PM7-RTEX or the emergency stop settings in the shared memory. (The operation is the level type.) Note 1: The deviation counter cannot be cleared.
Y141	Axis 2		
Y142	Axis 3		
Y143	Axis 4		
Y144	Axis 5		
Y145	Axis 6		
Y146	Axis 7 (virtual)		
Y147	Axis 8 (virtual)		
Y148	Axis 1	Deceleration stop	Requests deceleration stop for the corresponding amplifier. The deceleration time during deceleration stop is specified using Configurator PM7-RTEX or the deceleration stop settings in the shared memory. (The operation is the level type.) (Note 1): The deviation counter cannot be cleared.
Y149	Axis 2		
Y14A	Axis 3		
Y14B	Axis 4		
Y14C	Axis 5		
Y14D	Axis 6		
Y14E	Axis 7 (virtual)		



## 6.2 Allocation of Each Contact

Allocation of each contact	Target axis	Name	Description
Y14F	Axis 8 (virtual)		

### WY15 (Slot No. 0: WY15, 1: WY23, 2: WY31, 3: WY39)

Allocation of each contact	Target axis	Name	Description
Y150	Axis 1	Synchronous setting request	Turn ON this contact after changing the synchronous operation settings. Turn ON this contact when reflecting the setting changes in the synchronous control common area of the shared memory. This flag is an edge trigger flag.
Y151	Axis 2		
Y152	Axis 3		
Y153	Axis 4		
Y154	Axis 5		
Y155	Axis 6		
Y156	Axis 7 (virtual)		
Y157	Axis 8 (virtual)		
Y158	Axis 1	Synchronization cancellation request	Turns ON the contact for the axis for which synchronous operation is to be canceled. The unit does not perform synchronous operation on the axis for which this contact is turned ON. Turn ON this contact to cancel the synchronous state temporarily during synchronous control. To set a synchronous state, turn OFF this contact.
Y159	Axis 2		
Y15A	Axis 3		
Y15B	Axis 4		
Y15C	Axis 5		
Y15D	Axis 6		
Y15E	Axis 7 (virtual)		
Y15F	Axis 8 (virtual)		

### WY16 (Slot No. 0: WY16, 1: WY24, 2: WY32, 3: WY40)

Allocation of each contact	Target axis	Name	Description
Y160	Axis 1	Slave axis clutch ON request	Clutch ON operation is started by turning ON the contact for the corresponding axis during synchronous operation. Only axes that use a clutch are started. (Set the operation to level type, rising edge, or falling edge.)
Y161	Axis 2		
Y162	Axis 3		
Y163	Axis 4		
Y164	Axis 5		
Y165	Axis 6		

## 6.2 Allocation of Each Contact

---

Allocation of each contact	Target axis	Name	Description
Y166	Axis 7 (virtual)		
Y167	Axis 8 (virtual)		
Y168	Axis 1	Slave axis clutch OFF request	<p>Clutch OFF operation is started by turning ON the contact for the corresponding axis during synchronous operation.</p> <p>Only axes that use a clutch are started.</p> <p>(Set the operation to rising edge or falling edge.)</p> <p>These signals are disabled while the slave axis clutch ON request signal is set to level type.</p>
Y169	Axis 2		
Y16A	Axis 3		
Y16B	Axis 4		
Y16C	Axis 5		
Y16D	Axis 6		
Y16E	Axis 7 (virtual)		
Y16F	Axis 8 (virtual)		

# 7 Configurator PM7-RTEX Configuration Tool


---

7.1	Connecting to PC.....	7-3
7.2	Functions of Configurator PM7-RTEX .....	7-4
7.2.1	Overview of Configurator PM7-RTEX .....	7-4
7.3	Starting Configurator PM7-RTEX.....	7-6
7.3.1	Starting Configurator PM7-RTEX.....	7-6
7.4	Allocation of Axes to Be Used.....	7-7
7.4.1	Settings in Configurator PM7-RTEX .....	7-7
7.5	Saving and Managing Files.....	7-10
7.5.1	File Types.....	7-10
7.5.2	Saving Positioning Parameters as Files .....	7-10
7.5.3	Exporting to CSV File.....	7-11
7.6	Exiting Configurator PM7-RTEX .....	7-12
7.7	Connecting to Positioning Unit RTEX .....	7-13
7.7.1	Selecting Slot Number .....	7-13
7.7.2	Overview of Communication Settings .....	7-13
7.8	Positioning Parameter Settings.....	7-14
7.9	Changing Axis Information.....	7-19
7.10	Setting Positioning Data.....	7-22
7.11	How to Edit Positioning Data.....	7-23
7.11.1	Inputting Positioning Data .....	7-23
7.11.2	Copying Positioning Data .....	7-24
7.11.3	Selecting All Cells.....	7-25
7.11.4	Searching Character Strings .....	7-25
7.11.5	Replacing Character Strings .....	7-25
7.11.6	Selecting Rows.....	7-26
7.11.7	Selecting Columns .....	7-26
7.11.8	Editing Data Items Collectively.....	7-26
7.12	Customizing the Software .....	7-28
7.13	Checking Settings .....	7-31
7.13.1	Checking positioning parameter data .....	7-31
7.13.2	Collating Positioning Parameter Information (Collation with Files) .....	7-31
7.13.3	Collating Positioning Parameter Information (Collation with PLC) .....	7-32
7.14	Transferring Positioning Parameters .....	7-34
7.14.1	Downloading Using Configurator PM7-RTEX .....	7-34
7.14.2	Uploading from Configurator PM7-RTEX.....	7-34

## 7 Configurator PM7-RTEX Configuration Tool

---

7.15 Data Monitor .....	7-36
7.16 Status Display .....	7-38
7.17 Tool Operation.....	7-40
7.17.1 Tool Operation: Servo ON/OFF .....	7-41
7.17.2 Tool Operation: Home Return .....	7-42
7.17.3 Tool Operation: Positioning .....	7-44
7.17.4 Tool Operation: JOG Operation .....	7-47
7.17.5 Tool Operation: Teaching .....	7-48

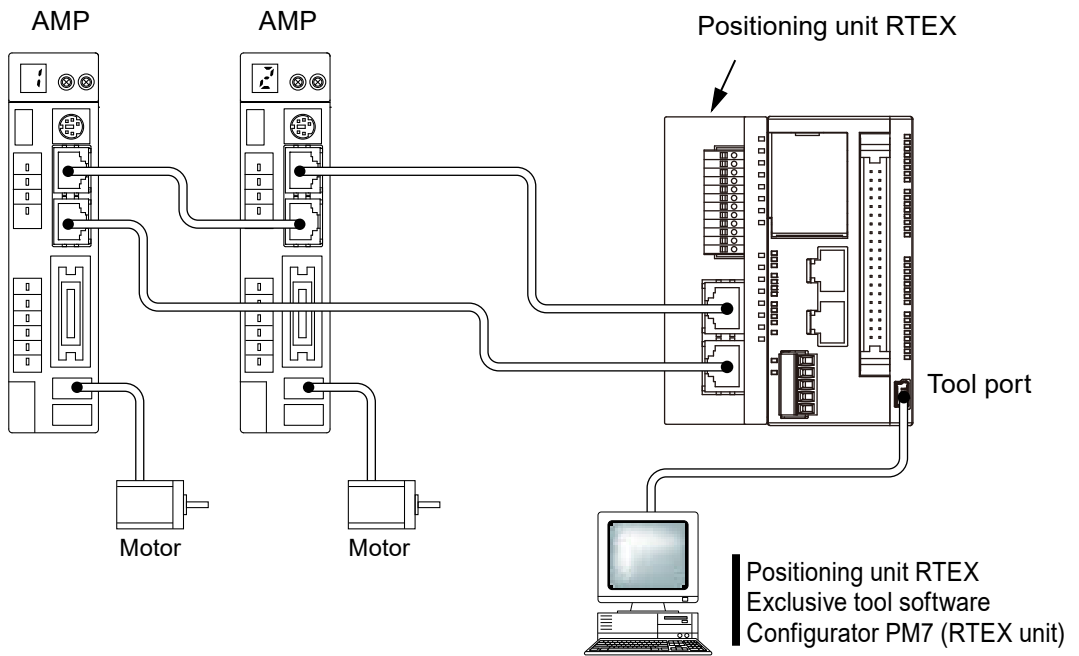**7.1 Connecting to PC**

Install the programming tool on a PC and connect it to the tool port of the FP0H control unit.

### 7.2 Functions of Configurator PM7-RTEX

#### 7.2.1 Overview of Configurator PM7-RTEX

##### ■ Copy and paste

Edited data can be copied and pasted into Microsoft® Excel or other software.

Similarly, positioning data calculated in Microsoft® Excel can also be pasted into Configurator PM7-RTEX.

##### ■ Positioning parameter and data transfer

Specified positioning parameters and positioning data can be transferred to the positioning unit RTEX.

Positioning parameters and positioning data can also be loaded from the positioning unit RTEX.

##### ■ Batch checking of positioning parameters and data

The contents of all positioning parameters and positioning data can be checked at once.

The cursor jumps to places where there are out-of-range positioning parameters or data.

This function is also executed automatically when positioning parameters and positioning data are transferred to the positioning unit RTEX.

##### ■ Collation function

Edited positioning parameters and positioning data can be collated with the files on the disk or the settings in the positioning unit RTEX.

The collation result dialog box can be used to jump the cursor to any different data, making it easy to find any differences.

##### ■ Search-and-replace functions

Search and replacement can be performed for each data item. Twenty searched strings and twenty replaced strings can be memorized, so it is convenient for repetitive searching or replacement.

##### ■ Showing annotations for all positioning parameters and positioning data

Annotations are displayed for all positioning parameters and positioning data when settings are configured.

##### ■ Up to 100 single-byte characters can be entered as data comments

Up to 100 single-byte characters (50 double-byte characters) of comments can be entered for each table of positioning data.

This is useful for the revision or management of programs.

However, comments cannot be stored in the positioning unit RTEX.

##### ■ Tool Operation

Starting the tool operation mode enables the user to check the operations easily at the time of system installation and check the behaviors of the specified positioning parameters. There is no need to use ladder programs.

Also, the teaching function is provided, which reflects the current position to the movement amount of data item.

## 7.3 Starting Configurator PM7-RTEX

---

### 7.3 Starting Configurator PM7-RTEX

#### 7.3.1 Starting Configurator PM7-RTEX

Use Configurator PM7-RTEX to specify positioning parameters. The following procedure is described assuming that FPWIN GR7 has already been started.

#### **1 2** Procedure

1. Select **Tool>Configurator PM7-RTEX** from the menu bar.

#### **i** Info.

- Configurator PMX and Configurator PM7-RTEX cannot be simultaneously used to edit data.




## 7.4 Allocation of Axes to Be Used

### 7.4.1 Settings in Configurator PM7-RTEX

Use Configurator PM7-RTEX to allocate the axes to be used and the usage of each axis. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.


#### 1 2 Procedure

1. Select **Axis Settings>Change Axis** from the menu bar.  
The "Axis Settings" dialog box is displayed.

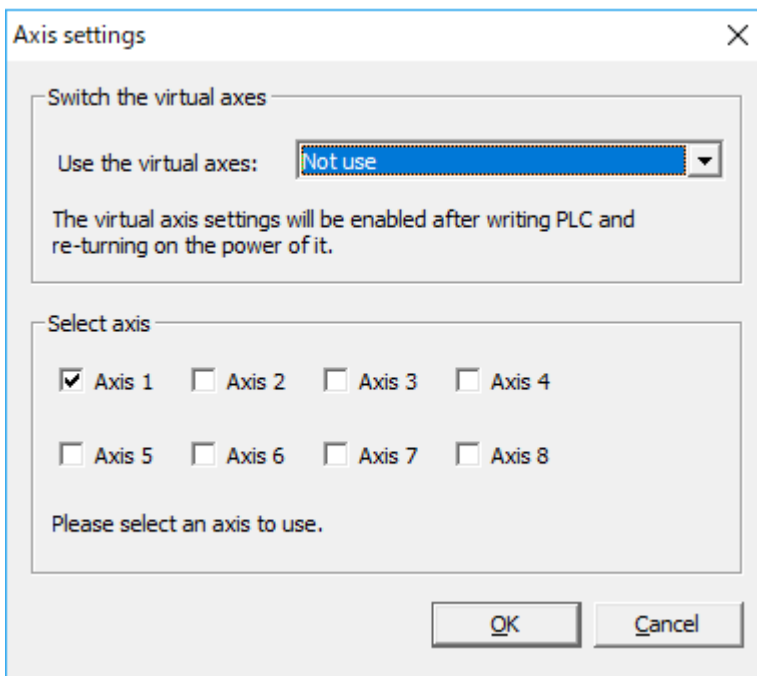


2. When using virtual axes for synchronous control, select from the drop-down list.  
When "Virtual axis 1" is selected, "Axis 8" changes to "V-Axis 1".  
When "V-Axis 1 through V-Axis 2" is selected, "Axis 7" changes to "V-Axis 1", and "Axis 8" changes to "V-Axis 2".
3. Select the axes to be used, and click the [OK] button.  
The "Interpolation Operation Group Settings" dialog box is displayed.
4. To perform interpolation control, drag the icon of each axis to be allocated to interpolation to the interpolation group field.  
The following screenshot shows the allocation of Axis 1 and Axis 2 to the interpolation group.

## 7.4 Allocation of Axes to Be Used

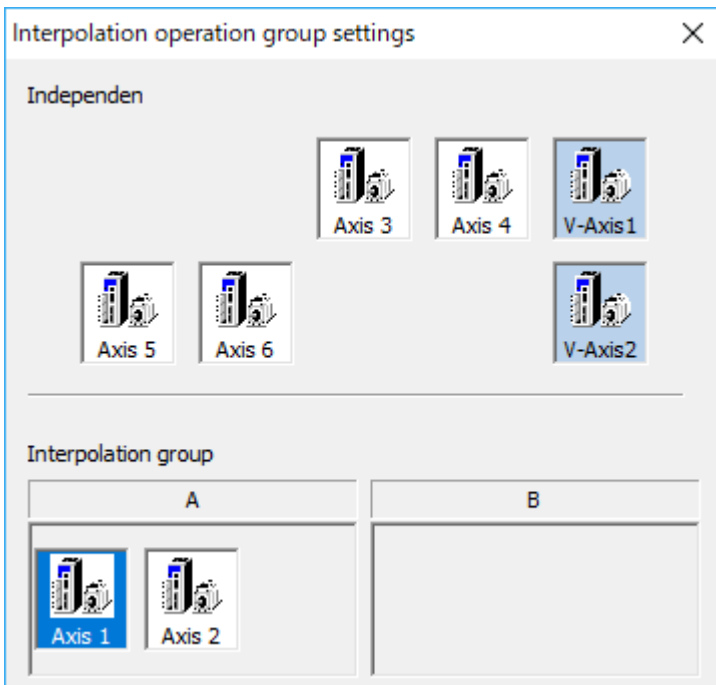

- Click the [OK] button.  
A confirmation message will be displayed.

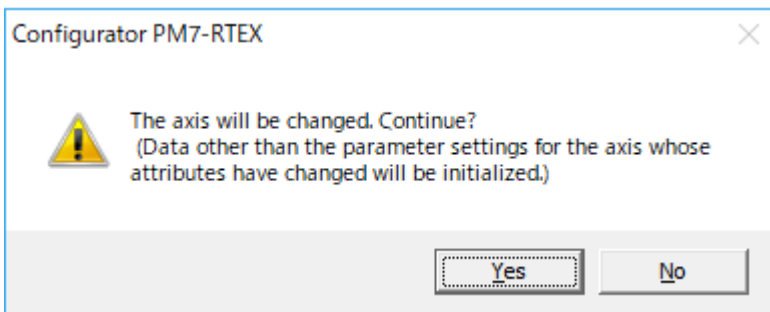

- Confirm the changes and click the [Yes] button.  
A data table tab will be created for each set group.

31	E: End point	I: Increment	0	L: Linear	100	100	1000
32	E: End point	I: Increment	0	L: Linear	100	100	1000

Virtual 1Axis / Virtual 2Axis / [A] 1,2Axis / 3Axis / 4Axis / 5Axis / 6Axis

### Info.

- Setting items, such as the movement and interpolation of X-, Y-, and Z-axis, will be added to the data table, and group name [A] or [B] will be displayed on the tab when the interpolation group is set.
- Virtual axes and slave axes under synchronous control cannot be set to interpolation groups.  
The master axis under synchronous control can be set to interpolation groups.
- When changing the setting of “use of virtual axes”, turn the power OFF and then ON after writing to the PLC. The set information will be reflected.
- Closing the window by clicking the X mark during editing cancels and terminates the operation.

## 7.5 Saving and Managing Files

### 7.5 Saving and Managing Files

#### 7.5.1 File Types

The set positioning parameters and positioning table information can be saved or exported in the following two formats.

File name	Extension	application	Operation of Configurator PM7-RTEX
Configurator PM7-RTEX file	.pm7rtx	Positioning parameters set using Configurator PM7-RTEX are saved as files. Saved data can also be reused among multiple units and projects.	Save settings Load settings
CSV file	.csv	Positioning parameters set using Configurator PM7-RTEX are exported in CSV format. These files can be used to check positioning parameters.	Export to CSV

#### 7.5.2 Saving Positioning Parameters as Files

Positioning parameters set using Configurator PM7-RTEX can be saved as a file. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### 12 Procedure

##### 1. Specify the file to save.

The following methods are available to save files.

(The procedure for saving and the operation of this software differ depending on whether the file is saved by overwriting an existing file or whether the file is saved under a new name.)

- Saving a file by overwriting an existing file  
Select **File>Save** from the menu bar, or click the [Save] icon on the toolbar.
- Saving a file under a new name  
Select **File>Save As** from the menu bar.

##### 2. Enter the saving destination and file name, and click the [Save] button.

Information on the positioning parameters and positioning tables is saved as a file with the extension ".pm7rtx".

#### **i** Info.


- The files saved by the above operations contain information on all positioning parameters and positioning tables set on Configurator PM7-RTEX.

### 7.5.3 Exporting to CSV File

Information on the set positioning parameters and positioning tables can also be exported in CSV format. It is possible to open the CSV files and check the settings of each positioning parameter and positioning table. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### 1 2 Procedure

1. Select **File>Export to CSV** from the menu bar.  
The "Export to CSV" dialog box is displayed.

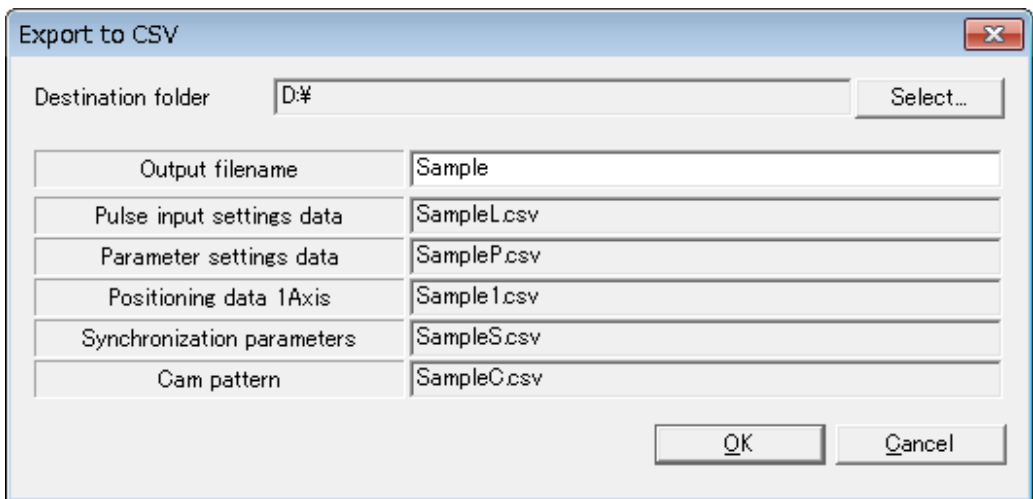

2. Enter an output file name and click the [OK] button.  
CSV files with assigned file names will be saved for each positioning parameter type.

## 7.6 Exiting Configurator PM7-RTEX

---

### 7.6 Exiting Configurator PM7-RTEX

To exit Configurator PM7-RTEX, select **File>Exit** from the menu bar or click the  in the top right corner of the window.

If the file is unsaved, a message prompting for saving will be displayed.

- Click [Yes] to save the file.
- Click [No] to close the window without saving the file.

## 7.7 Connecting to Positioning Unit RTEX

### 7.7.1 Selecting Slot Number

If Configurator PM7-RTEX will access the positioning unit RTEX, specify the mounting slot number of the positioning unit RTEX in advance.

Select **Online** > **Select Slot Number** from the menu bar. The following dialog box will be displayed.

PLC	Slot No.
FP0H	<p>The positioning unit RTEX is installed on the left side of the CPU unit, and is defined as shown below.</p> <p>Expansion unit 1: Slot number 0</p> <p>Expansion unit 2: Slot number 1</p> <p>Expansion unit 3: Slot number 2</p> <p>Expansion unit 4: Slot number 3</p>

### 7.7.2 Overview of Communication Settings

Configurator PM7-RTEX takes over the communication settings that are used when it is started from FPWIN GR7.

Therefore, settings are uploaded to or downloaded from the communication partner specified by FPWIN GR7.

### 7.8 Positioning Parameter Settings

The positioning parameters common to various controls such as command units, connection directions of limit inputs, and stoppage time, and the positioning parameters related to home return and JOG operation are allocated using Configurator PM7-RTEX. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### 1.2 Procedure

1. Select **Axis Settings>Parameter Settings** from the menu bar.  
The "Positioning Parameters" dialog box is displayed.

	V-Axis1	V-Axis2	Axis 1 [A]	Axis 2 [A]
Unit setting	P:pulse	P:pulse	P:pulse	P:pulse
Number of pulses per revolution	1	1	1	1
Movement per revolution	1	1	1	1
Clockwise/counterclockwise direction setting	-----	-----	0: Clockwise positive	0: Clockwise positive
Limit switch	-----	-----	N: Disabled	N: Disabled
Limit switch connection	-----	-----	S: Standard	S: Standard
Software limit (Positioning control)	N: Disabled	N: Disabled	N: Disabled	N: Disabled
Software limit (Home return)	N: Disabled	N: Disabled	N: Disabled	N: Disabled
Software limit (JOG operation)	N: Disabled	N: Disabled	N: Disabled	N: Disabled
Software limit upper limit value	1073741823	1073741823	1073741823	1073741823
Software limit lower limit value	-1073741823	-1073741823	-1073741823	-1073741823
Auxiliary output mode	N: Not used	N: Not used	N: Not used	N: Not used
Auxiliary output on time (ms)	10	10	10	10
Auxiliary output delay ratio (%)	0	0	0	0
Completion width (pulse)	-----	-----	10	10
Monitor error - Torque judgment	-----	-----	N: Disabled	N: Disabled
Monitor error - Torque judgment value (%)	-----	-----	500.0	500.0

Specify axis units.  
Please select from the following.  
P:pulse, Mum [Min 0.1], Mum [Min 1], Inch [Min 0.00001], Inch [Min 0.0001], D:degree [Min 0.1], D:degree [Min 1]

OK Cancel Copy axis Initialize Help

2. Specify the necessary positioning parameters according to the application and click the [OK] button.  
After displaying the message "Updating data display", the screen returns to the base screen of Configurator PM7-RTEX.
3. Select **File>Apply Settings** from the menu bar.  
The positioning parameters set in Configurator PM7-RTEX are applied as the project data being edited.

#### Info.

- Closing the window by clicking the X mark during editing in the "Parameter Settings" dialog box cancels and terminates the operation.
- To save positioning parameters as a file, select **File>Save Setting**.



## Positioning parameter setting items

Name	Description	Related page
Unit setting	Specify the unit of each axis. Select from the following items. "P: Pulses", "M: um [Min 0.1]", "M: um [Min 1]", "I: Inches [Min 0.0001]", "D: Degrees [Min 0.1]", "D: Degrees [Min 1]"	"5.1 Procedures for System Construction"
Number of pulses per revolution	Specify the number of pulses per motor rotation. (Default value: 1) pulse <a href="#">(Note 1)</a>	
Movement amount per rotation	Specify the movement amount per motor rotation.	
CW/CCW direction setting	CW+: CW is the direction in which the elapsed value increases. CCW+: CCW is the direction in which the elapsed value increases.	
Limit switch	Set whether to enable or disable the limit switch. Select from the following items. "A: Enable", "N: Disable"	
Limit switch connection	Set the connections of the + direction limit switch and - direction limit switch. Select from the following items. "S: Standard", "R: Reverse connection"	
Soft limits: (Positioning control)	Set whether to enable or disable soft limits for positioning control, home return, JOG operation, and pulser operation. Select from the following items. "N: Disabled", "A: Enabled"	"14.2 Soft Limit"
Soft limits: (Home return)		
Soft limits: (JOG operation)		
Soft limits: (Pulser operation)		
Soft limits: Upper limit value	When any data that causes the current position to exceed this value is started during operation, an error occurs. For performing infinite rotation, set both soft limits to 0. Setting range: -2,147,482,624 to +2,147,482,624	
Soft limits: Lower limit value		
Auxiliary output mode	Set the timing when auxiliary output contact turns ON and the output timing of auxiliary output code. In With mode, auxiliary output is reflected in operation. In Delay mode, auxiliary output is reflected when the table moves by the amount of the delay ratio (%) to the total movement amount. Select from the following items. "N: Not used", "W: With mode", "D: Delay mode"	"14.3 Auxiliary Output"
Auxiliary output ON time (ms)	Set the time period during which auxiliary output contact is ON. Setting range: 0 to 255 ms (Default: 10 ms)	
Auxiliary output delay ratio (%)	Set the delay ratio (ratio of current movement amount to the total movement amount) when Delay mode is used for auxiliary output mode. Auxiliary output is reflected when the movement amount exceeds the delay ratio after positioning operation starts. Setting range: 0 to 100% (Default: 0%)	
Completion width (pulse)	Specify the width of the completion of command operation. Setting range: 0 to 2,147,482,624 pulses (Default: 10pulses)	

## 7.8 Positioning Parameter Settings

Name	Description	Related page
		<a href="#">Complete Signal</a>
Monitor error - Torque judgment	This is the setting to notify errors or warnings by setting judgement values for the torque command values of motors controlled by the amplifier of each axis. Select from the following items. "N: Disabled", "E: Enabled (Error)", "W: Enabled (Warning)"	<a href="#">"14.11 Monitor Error (Torque / Actual Speed Judgement)"</a>
Monitor error - Torque judgment value (%)	This judgement value is not set in the amplifier, and used only for monitoring monitored values. Setting range: 0.0 to 500.0% (Default value: 500%)	
Monitor error - Actual speed judgment	This is the setting to notify errors or warnings by setting judgement values for the actual speed of motors controlled by the amplifier of each axis. Select from the following items. "N: Disabled", "E: Enabled (Error)", "W: Enabled (Warning)"	
Monitor error - Actual speed judgment value (rpm)	This judgement value is not set in the amplifier, and used only for monitoring monitored values. Setting range: 0 to 10,000 rpm (Default value: 5000 rpm)	
Stop-on-contact torque value for home return - Return setting code	Sets a pattern of home return. Select from the following items. "0: DOG method 1 (based on front end + Z phase)", "1: DOG method 2 (based on front end)" "2: DOG method 3 (based on back end + Z phase)", "3: Limit method 1 (limit signal + Z phase)" "4: Limit method 2 (limit signal)", "5: Z-phase method", "6: Stop-on-contact method 1" "7: Stop-on-contact method 2 (stop-on-contact + Z phase)", "8: Data set method" "9: DOG method 1 (E2) (based on front end + EXT2)" "A: DOG method 1 (E3) (based on front end + EXT3)" "B: DOG method 3 (E2) (based on back end + EXT2)" "C: DOG method 3 (E3) (based on back end + EXT3)" "D: Limit method 1 (E2) (limit signal + EXT2)" "E: Limit method 1 (E3) (limit signal + EXT3)", "F: EXT2 method" "G: EXT3 method", "H: Stop-on-contact method 2 (E2) (stop-on-contact + EXT2)" "I: Stop-on-contact method 2 (E3) (stop-on-contact + EXT3)", "J: High-speed home return method" "K: Absolute data set method"	<a href="#">"11.1 Types of Home Return (Incremental)"</a>
Stop-on-contact torque value for home return - Stop-on-contact torque value (%)	Set the torque value for using the stop-on-contact method for home return. Whether the torque value of the amplifier exceeds the set value of this parameter due to stop-on-contact is used as the judgment criteria for home return. Setting range: 0 to 5000% (Default value: 100%)	
Stop-on-contact torque value for home return - Stop-on-contact judgment time (ms)	Set the judgement time for using the stop-on-contact method for home return. Whether this set time elapses after the torque value of the amplifier exceeds the stop-on-contact torque value in the event of stop-on-contact is regarded as a criterion for home return. Setting range: 0 to 10000 ms (Default: 100 ms)	

## 7.8 Positioning Parameter Settings

Name	Description	Related page
Stop-on-contact torque value for home return - Return direction	Sets the moving direction of home return. The limit (-) direction means the direction in which elapsed values decrease. The limit (+) direction means the direction in which elapsed values increase. Select from the following items. "0: Limit (-) direction", "1: Limit (+) direction"	
Stop-on-contact torque value for home return - Return acceleration time (ms)	Set the acceleration time or deceleration time during home return. Acceleration is performed for the specified acceleration time at the start of home return, deceleration is performed for the specified deceleration time after near home input, and then the speed changes to the creep speed. Setting range: 0 to 10000 ms (Default: 100 ms)	
Stop-on-contact torque value for home return - Return deceleration time (ms)		
Stop-on-contact torque value for home return - Return target speed	Set the target speed during home return. If there is no near home input after home return starts, acceleration is performed to shift to the target speed. Setting range: 1 to 2,147,482,624	
Stop-on-contact torque value for home return - Return creep speed	Set the speed to search for the home position after near home input. Setting range: 1 to 2,147,482,624	
Stop-on-contact torque value for home return - Home coordinates	The coordinates specified as the coordinates of the home position are registered as the home position upon completion of home return. Setting range: -2,147,482,624 to +2,147,482,624 (Default: 0)	
JOG operation - Acceleration/ deceleration method	Sets the acceleration/deceleration method for JOG operation. Select from the following items. "0: Linear acceleration/deceleration", "1: S-shaped acceleration/ deceleration"	
JOG operation - JOG acceleration time (ms)	Sets the acceleration time or deceleration time during JOG operation. Acceleration is performed for the specified acceleration time at the beginning of the JOG operation, deceleration is performed for the specified deceleration time when the starting contact (I/O) of JOG operation turns OFF, and then the motor stops. Setting range: 0 to 10000 ms (Default: 100 ms)	
JOG operation - JOG deceleration time (ms)		
JOG operation - JOG target speed	Sets the target speed for JOG operation. After the JOG operation is started, the specified acceleration operation is performed to shift to the target speed while the starting contact (I/O) of the JOG operation is ON. After the target speed is reached, operations are performed at the target speed. Setting range: 1 to 2,147,482,624	
Emergency stop deceleration time (ms)	When emergency stop is requested by I/O, the deceleration operation is completed in this deceleration time. Setting range: 0 to 10000 ms (Default: 100 ms)	"13.1 Types and Settings of Stop Function"
Limit stop deceleration time (ms)	The deceleration operation is completed in this deceleration time at the time of limit input. Setting range: 0 to 10000 ms (Default: 100 ms)	
Error stop deceleration time (ms)	When an error occurs, the deceleration operation is completed in this deceleration time. Setting range: 0 to 10000 ms (Default: 100 ms)	

## 7.8 Positioning Parameter Settings

Name	Description	Related page
J-point - Operation setting code	Sets the acceleration/deceleration method for J-point control. Select from the following items. "0: Linear acceleration/deceleration", "1: S-shaped acceleration/deceleration"	"8.1.5 Settings and Operation of J-Point Control"
J-point - Acceleration time (ms)	Sets the acceleration time or deceleration time for J-point control.	
J-point - Deceleration time (ms)	Setting range: 0 to 10000 ms (Default: 100 ms)	
J-point - Target speed	Sets the target speed for J-point control. After J- point control is started, the target speed is reached in the specified acceleration time. Setting range: 1 to 2,147,482,624 (Default: 1000)	
Pulsar operation setting code	Select from the channels whose pulse input application is set to "Pulsar". Select from the following items. "0: Pulse input CH1", "1: Pulse input CH2", "2: Pulse input CH3"	"12.2 Settings and Operation of Pulsar Operation"
Pulsar input method	Sets a pulser input method. Select from the following items. "0: Standard operation", "1: Speed limit (pulses held)", "2: Speed limit (time held)"	
Pulsar operation ratio numerator	Sets the pulser operation ratio by multiplying the input pulse train from the pulser by (the pulser operation ratio numerator) / (the pulser operation ratio denominator) to obtain the number of amplifier movement pulses.	
Pulsar operation ratio denominator	Setting range: 1 to 32767 (Default: 1)	
Pulsar operation maximum speed	Sets the maximum pulser operation speed. Setting range: 1 to 2,147,482,624 (Default value: 1)	


(Note 1) Set only if the set unit is  $\mu\text{m}$ , inches, or degrees.

## 7.9 Changing Axis Information

Use Configurator PM7-RTEX to allocate the axes to be used and the usage of each axis. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.


### 1 2 Procedure

1. Select **Axis Settings>Change Axis** from the menu bar.  
The "Axis Settings" dialog box is displayed.

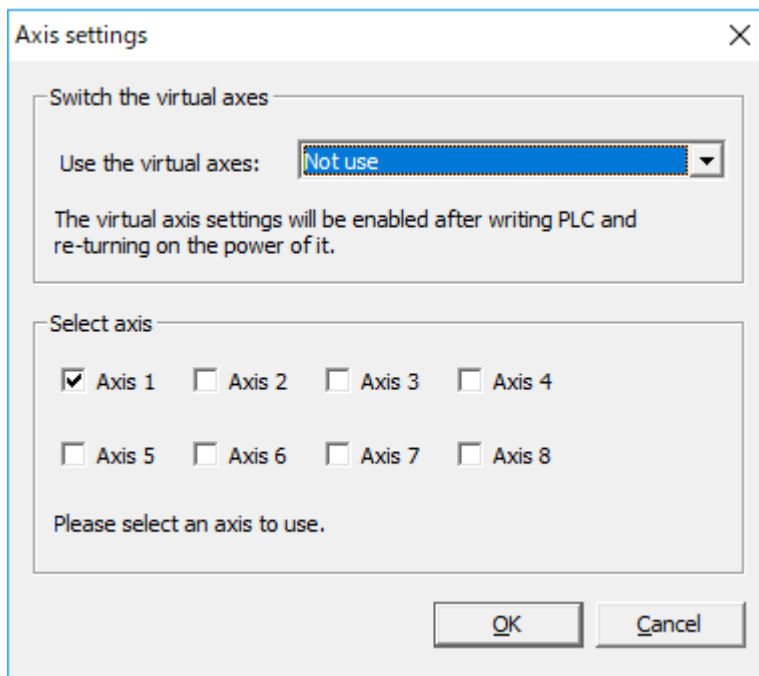


2. When using virtual axes for synchronous control, select from the drop-down list.  
When "Virtual Axis 1" is selected, "Axis 8" changes to "V-Axis 1".  
When "V-Axis 1 through V-Axis 2" is selected, "Axis 7" changes to "V-Axis 1", and "Axis 8" changes to "V-Axis 2".
3. Select the axes to be used, and click the [OK] button.  
The "Interpolation Operation Group Settings" dialog box is displayed.
4. To perform interpolation control, drag the icon of each axis to be allocated to interpolation to the interpolation group field.  
The following screenshot shows the allocation of Axis 1 and Axis 2 to the interpolation group.

## 7.9 Changing Axis Information

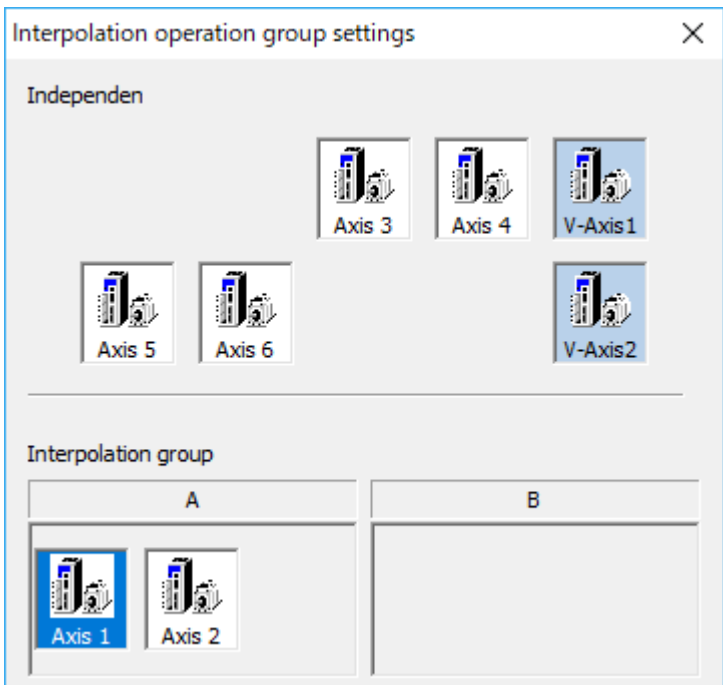

- Click the [OK] button.  
A confirmation message will be displayed.

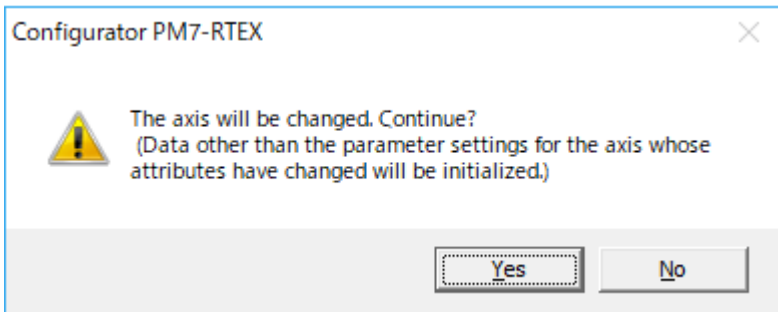

- Confirm the changes and click the [Yes] button.  
A data table tab will be created for each set group.

31	E: End point	I: Increment	0	L: Linear	100	100	1000
32	E: End point	I: Increment	0	L: Linear	100	100	1000

Virtual 1Axis / Virtual 2Axis / [A] 1,2Axis / 3Axis / 4Axis / 5Axis / 6Axis

### Info.

- Setting items, such as the movement and interpolation of X-, Y-, and Z-axis, will be added to the data table, and group name [A] or [B] will be displayed on the tab when the interpolation group is set.
- Virtual axes and slave axes under synchronous control cannot be set to interpolation groups.  
The master axis under synchronous control can be set to interpolation groups.
- When changing the setting of “use of virtual axes”, turn the power OFF and then ON after writing to the PLC. The set information will be reflected.
- Closing the window by clicking the X mark during editing cancels and terminates the operation.

## 7.10 Setting Positioning Data

### 7.10 Setting Positioning Data

Use Configurator PM7-RTEX to allocate positioning data tables. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### ■ Initial display screen of Configurator PM7-RTEX

- Separate sheets are used for each axis and data tables can be set.

The screenshot shows the 'Configurator PM7-RTEX' window with a menu bar (File, Edit, View, Online, Debug, Axis Settings, Options, Help) and a toolbar. Below the toolbar is a status bar with 'Communications destination: Home - Slot No. 0 | Position unit: pulse | Speed unit: pulse / s'. The main area contains a table with the following data:

Table number	Operation pattern	Control method	X axis (I) movement	Acceleration/deceleration method	Acceleration time (ms)	Deceleration time (ms)	Target speed	Dwell time (ms)	Auxiliary output
1	E: End point	I: Increment	0	L: Linear	100	100	1000	0	0
2	E: End point	I: Increment	0	L: Linear	100	100	1000	0	0
3	E: End point	I: Increment	0	L: Linear	100	100	1000	0	0
4	E: End point	I: Increment	0	L: Linear	100	100	1000	0	0
5	E: End point	I: Increment	0	L: Linear	100	100	1000	0	0

#### ■ Setting item

Name	Description
Operation pattern	Select one from the following operation patterns. E-point: Executes trapezoidal control for only one table. C-point: Execute trapezoidal control continuously. Specify the end point (E-point) at the end of continuance point (C-point) control. P-point: Executes continuous speed change control. Specify the end point (E-point) at the end of pass point (P-point) control. J-point: Executes speed control. Specify the end point (E-point) at the end of speed control (J-point).
Control method	Select either incremental or absolute coordinates.
X-axis movement amount	Input the movement amount of X-axis. The movement amount depends on the unit system specified in the positioning parameter settings.
Acceleration/ deceleration method	Select an acceleration/deceleration method.
Acceleration time (ms)	Set an acceleration time. Settable unit: ms
Deceleration time (ms)	Set a deceleration time. Settable unit: ms
Target speed	Set a target speed. Settable units: pps, $\mu\text{m/s}$ , inches/s, rev/s
Dwell time (ms)	Set the time from completion of the positioning command in E-point control until the operation done flag turns ON. For C-point control, dwell time is the waiting time between each table. For P-point control, dwell time is ignored.
Auxiliary Output	Set an auxiliary output code. If auxiliary output is enabled in the positioning parameter settings, the auxiliary output code specified here is output.
Comment	Arbitrary comments can be input for each table.

(Note 1) Details of the settings for each positioning parameter are displayed on the guidance bar.

(Note 2) If interpolation control is selected, interpolation, Y-axis movement amount, Z-axis movement amount, X-axis auxiliary point, Y-axis auxiliary point, Z-axis auxiliary point, and interpolation speed are also displayed as items.



## 7.11 How to Edit Positioning Data

### 7.11.1 Inputting Positioning Data

The cursor on the positioning data editing screen can be moved by clicking or double-clicking the mouse button or pressing the up, down, right, or left arrow key, the "Enter" key, or the "Tab" key.

#### ■ Moving the cursor to data items

Using the up, down, right, or left arrow key moves the cursor to the adjacent cell in the direction of the arrow.

Using the mouse enables the cursor to be moved only by clicking the cell. If the cell you want to specify is not in the data editing screen, scroll the screen using the scroll bar until you can see the cell.

#### ■ Entering data items

Pressing any character input key or double-clicking the mouse button in the cell where you want to input data enables you to input the data as below.

5	E: End	O: Line...	I: Inc...	0
6	E: End	O: Line...	I: Inc...	0
7	E: End	O: Line...	I: Inc...	0
8	E: End	O: Line...	I: Inc...	<input type="text"/>
9	E: End	O: Line...	I: Inc...	0
10	E: End	O: Line...	I: Inc...	0
11	E: End	O: Line...	I: Inc...	0
12	E: End	O: Line...	I: Inc...	0

However, in columns with a combo box as below, data items can be set only by inputting an initial character from the keyboard. For example, if you enter [C] directly in the pattern column, the data item will be [C: Continuance point]. It is also possible to select using the up or down arrow key after input is enabled.

3	E: End	I: Increm...
4	E: End <input type="text"/>	I: Increm...
5	E: End	
6	C: Continuance	
7	P: Pass	
	J: JOG positioning control	
8	E: End	I: Increm...
9	E: End	I: Increm...

#### ■ Press the "Enter" key to confirm or the "ESC" key to cancel.

#### ■ Clicking the tab of a desired sheet to change to the sheet

If a keyboard is used, the sheet can be switched by simultaneously pressing "Ctrl"+"Page Up" or "Ctrl"+"Page Down".

## 7.11 How to Edit Positioning Data

23	E: End	I: Increme...	
24	E: End	I: Increme...	
25	E: End	I: Increme...	
26	E: End	I: Increme...	
27	E: End	I: Increme...	

Navigation icons: Home, Left, Right, End. Buttons: 1Axis, 2Axis, 3Axis

### 7.11.2 Copying Positioning Data

Data can be stored in the clipboard by specifying a cell selection area on the positioning data editing screen. The data stored in the clipboard can be pasted in Microsoft Excel® as well as the data editing screen of this software.


- Pasting is not possible if the contents of the clipboard do not match the attributes of the pasting area.



If numerical values are contained in the contents of the clipboard, according to the maximum number of digits of data that can be pasted for the data item, only the maximum number of digits of data starting from the first digit will be pasted and the remaining digits will be truncated.

#### **i** Info.

- If the structure of the pasting area is an integer multiple of the contents of the clipboard, a set of numerical values whose number is an integer multiple of the contents of the clipboard can be pasted using the same pattern as shown below.

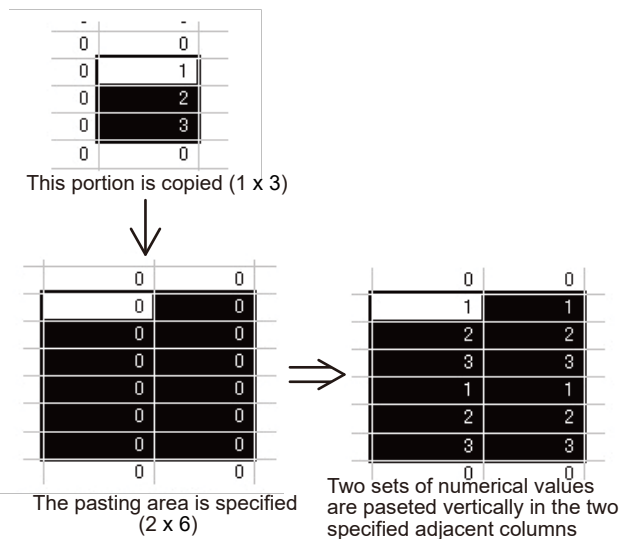

### 7.11.3 Selecting All Cells

All cells can be selected before edited data is copied and pasted, for example. This function is convenient when all the settings of the specified axis are copied to another axis.

To select all cells, press "Ctrl" + "A" on the keyboard or click the [Table No.] header on the upper left corner of the data editing screen.

### 7.11.4 Searching Character Strings

#### 1 2 Procedure

1. Select **Edit Data>Find** on the menu bar, or click the [Find] icon on the toolbar. The following dialog box is displayed.

2. Input the character string to search in the "Character string to find" box, and select the target line (setting item).
3. Click [Next].

#### **i** Info.

- Press "Esc" to cancel the search. Click [Replace] to switch to the "Replacement" screen.


### 7.11.5 Replacing Character Strings

#### 1 2 Procedure

1. Select **Replace>Find** from the menu bar. The following dialog box will be displayed.

## 7.11 How to Edit Positioning Data

---

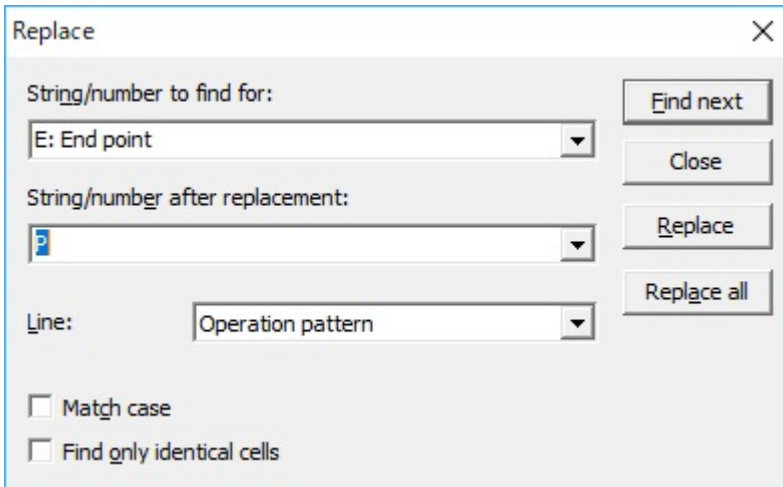

2. Input the character string to search in the "Character string to find" box.
3. Input the character string to replace it with in the "Character string after replacement" box.
4. Select the target line (setting item).
5. Click the [Next] button, [Replace] button, or [Replace all] button.

### 7.11.6 Selecting Rows

The cells in a row or multiple rows can be selected before edited data is copied and pasted, for example.

Click the [Table No.] header (displayed as the gray button) on the left end of the positioning data editing screen to select all the cells in one line. Drag the mouse up or down (with the left mouse button pressed) to select multiple lines.


### 7.11.7 Selecting Columns

This function is convenient to use before copying and pasting data during data editing, as well as to edit all data collectively for each data item.

Click a header on the top of the data editing screen to select all the cells in one column. Drag a header on the top of the screen with the left mouse button pressed to select multiple columns.

### 7.11.8 Editing Data Items Collectively

Select a series of data items in the same column and change them all at once.

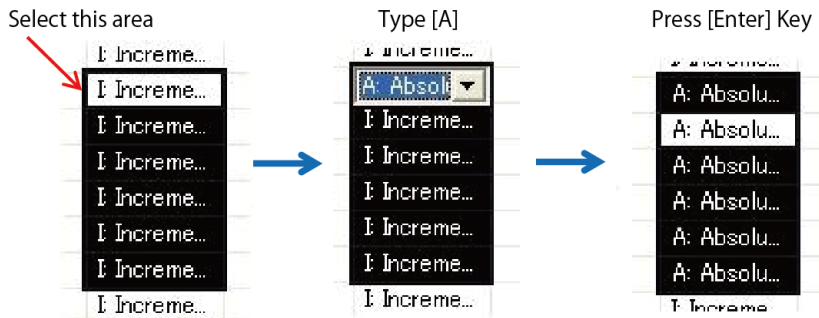

## 12 Procedure

1. Select the section to be changed with the mouse or the up and down arrow keys on the keyboard.
2. Enter data items.  
In the above example, to change the X-axis pattern from "I: Incremental" to "A: Absolute", press "A" on the keyboard.
3. Press the "Enter" key to finalize the selected data items.  
Using this procedure, data items can be edited collectively.

### **i** Info.

When inputting data items using the edit box (e.g. movement amount, acceleration time, etc.), input the data items directly using numerical keys.

### 7.12 Customizing the Software

#### ■ Changing the column width

Widen the column width to enable all the characters to be displayed during data editing, or narrow it when the resolution of the PC you use is low. As the column width is saved when the software is closed, the same width will be retained the next time the software is started.

#### Procedure

1. Move the mouse cursor to the right end of the target column (that you want to widen) in the header columns on the top of the data editing screen.  
The mouse cursor will change to a plus sign (+).
2. While the mouse is in this state, move the mouse right or left with the left mouse button pressed.
3. Release the left mouse button to finish changing the column width.

#### Info.

- While the mouse is in the state shown in step 1 above, double-clicking the mouse button causes the column width to return to the width at the time of startup.

#### ■ Showing or hiding the toolbar

You can show or hide the toolbar.

#### ■ Showing or hiding the status bar

You can show or hide the status bar.

From the menu bar, select **View>Status Bar** and select or clear the menu item. The status bar is displayed when the menu item is selected (there is a check mark), and is not displayed when the menu item is cleared (there is no check mark).

#### ■ Showing or hiding the positioning parameter status bar

You can show or hide the positioning parameter status bar.


#### ■ Showing or hiding the guidance bar

You can show or hide the guidance bar on the main screen that provides guidance on various settings.

#### ■ Configuration settings

Select **Option>Configuration** from the menu bar. The following dialog box is displayed.

In the configuration settings window, the current folder of the setting data files can be changed.

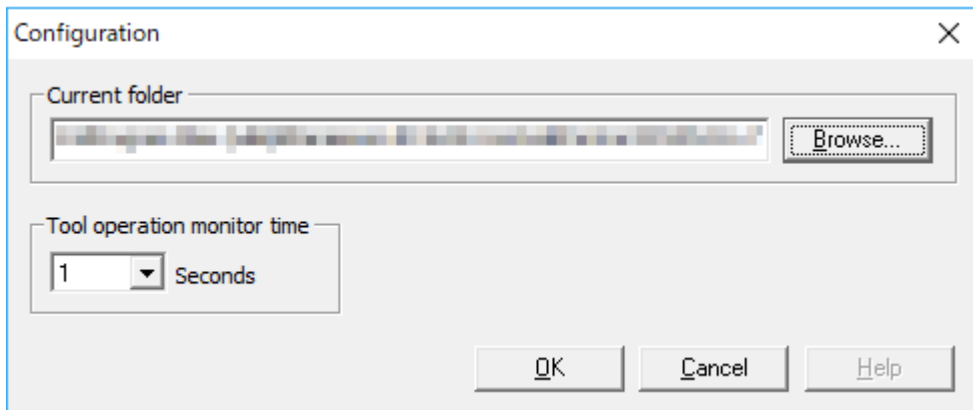


Current folder	Specify the current folder to be used for this software.
Tool operation monitoring time	Set the communication error detection time during tool operation.

#### ■ Setting the font to be used

Select **Option>Font** from the menu bar. The following dialog box is displayed.

## 7.12 Customizing the Software

---

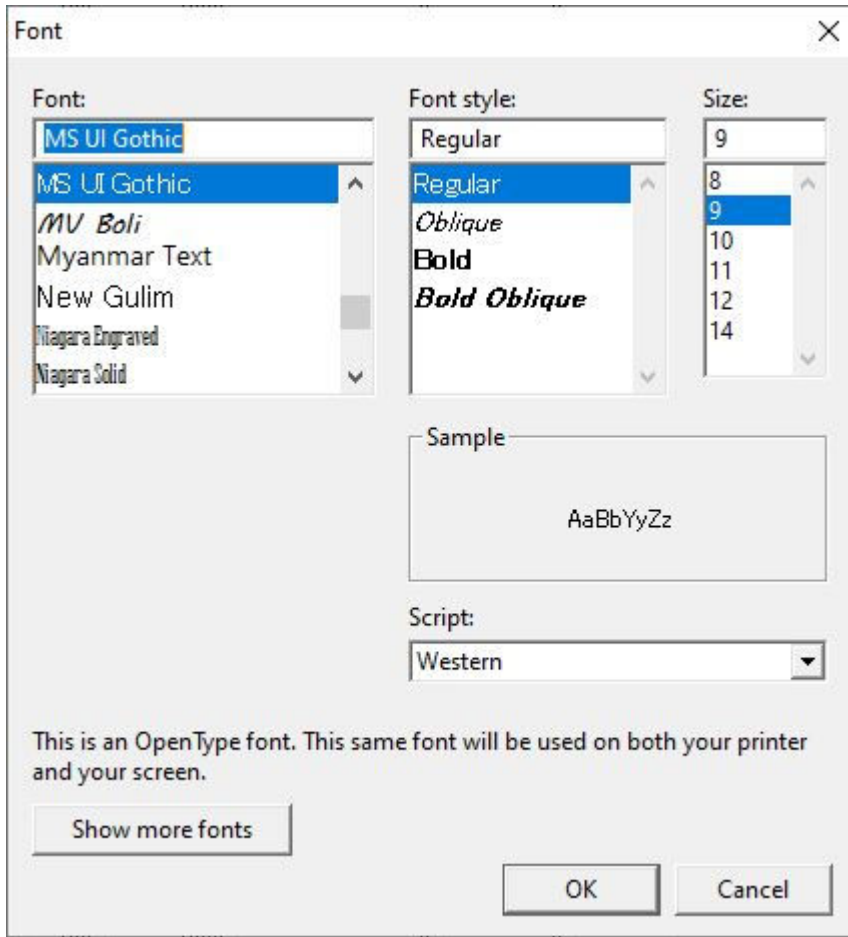



## 7.13 Checking Settings


### 7.13.1 Checking positioning parameter data

The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### 1 2 Procedure

1. Select **Debug>Check Parameter and Data Values** from the menu bar.

A message box will be displayed indicating the check results. If there is an error in the settings for the positioning data tables, an error message will appear and the cursor will move to the corresponding error position.

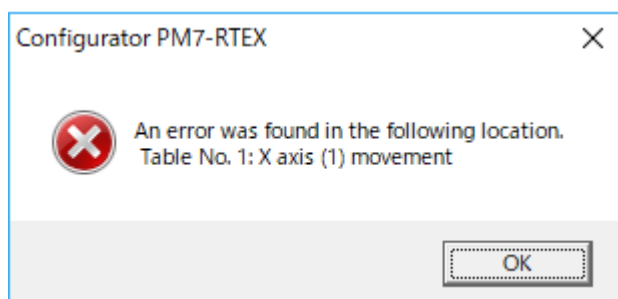

### 7.13.2 Collating Positioning Parameter Information (Collation with Files)

With Configurator PM7-RTEX, positioning parameter information being edited can be collated with the configuration information that has been stored. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### 1 2 Procedure


1. Select **Debug>Verify>File** from the menu bar.

When "File" is selected, the "Select a File to Verify" dialog box appears.

2. In the "Select a File to Verify" dialog box, select the target file and click the [OK] button. The information being edited in Configurator PM7-RTEX will be compared with the configuration information stored in the file, and the comparison results will be displayed.

## 7.13 Checking Settings

---

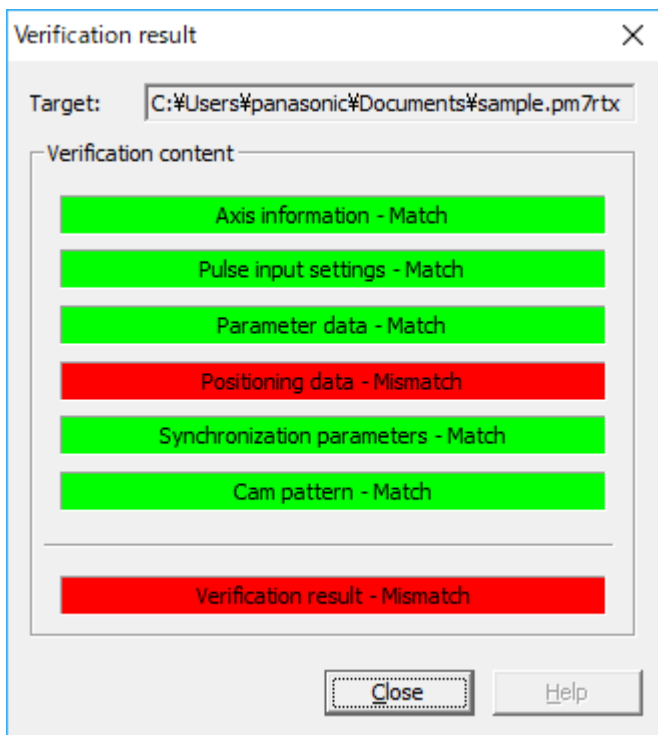


### 7.13.3 Collating Positioning Parameter Information (Collation with PLC)

With Configurator PM7-RTEX, positioning parameter information being edited can be collated with the configuration information that has been stored. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### **1 2** Procedure

1. Select **Debug>Verify>Unit** from the menu bar.

When "PLC" is selected, the information being edited in Configurator PM7-RTEX will be compared with the configuration information stored in the PLC, and the comparison results will be displayed.

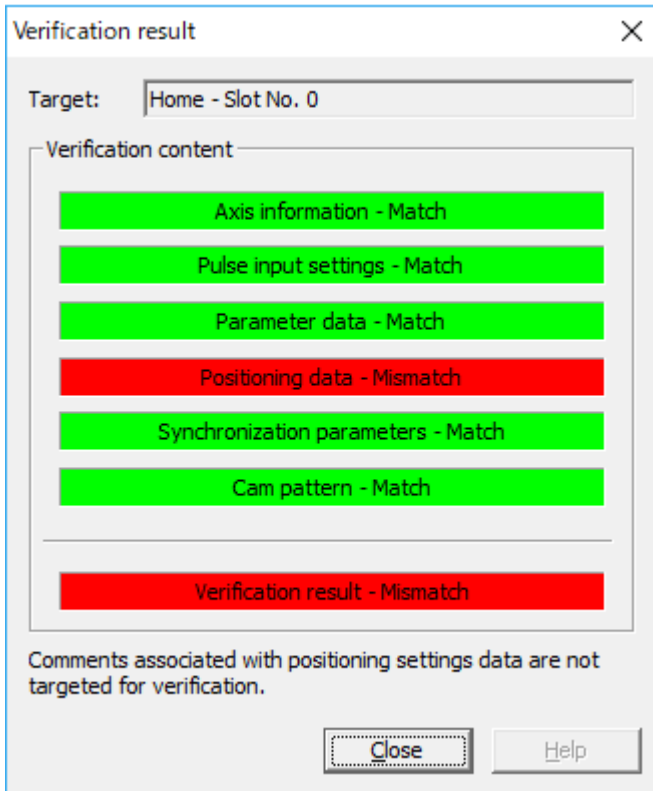

## 7.14 Transferring Positioning Parameters

### 7.14 Transferring Positioning Parameters


#### 7.14.1 Downloading Using Configurator PM7-RTEX

Positioning parameters and positioning data can be downloaded or uploaded using Configurator PM7-RTEX. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### 1 2 Procedure

**1.** Select **File>Download to Unit**.

A confirmation message box will be displayed.

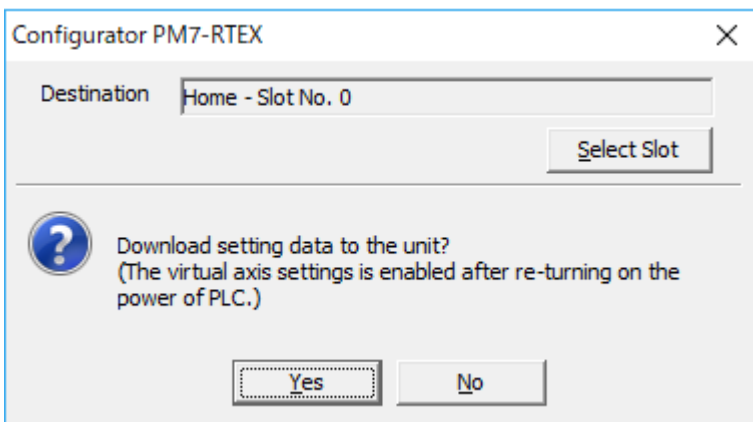

**2.** When a download confirmation window appears, click the [Yes (Y)] button.

**3.** After the download is complete, a confirmation window is displayed asking whether to write to FROM. Click the [Yes (Y)] button.

#### **i** Info.


- Data is downloaded to the slot number specified by selecting **Online>Select Slot Number**.
- Even if FPWIN GR7 is offline, data can be downloaded to the positioning unit RTEX.
- Even if PLC is in RUN mode, data can be downloaded.
- If data is not written to FROM, the data that has been downloaded will be erased when the positioning unit RTEX is turned OFF.

#### 7.14.2 Uploading from Configurator PM7-RTEX

#### 1 2 Procedure

**1.** Select **File>Upload from Unit** from the menu bar of Configurator PM7-RTEX.

A confirmation message box will be displayed.

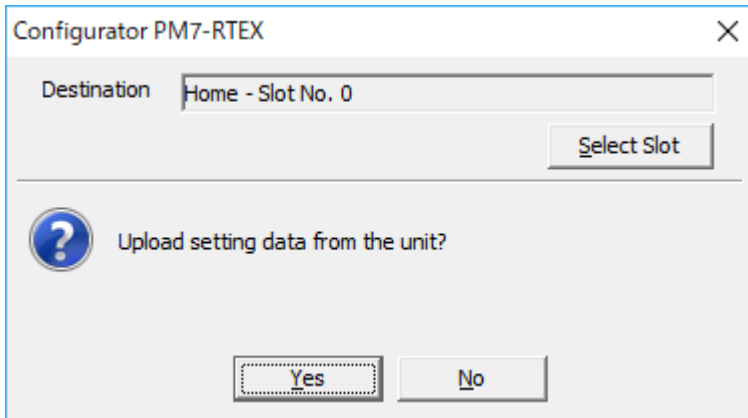

2. When an upload confirmation window appears, click [Yes (Y)].
3. When a confirmation window is displayed asking whether to clear the comments, select "Yes (Y)" or "No (N)".

### **i** Info.


- Data is uploaded from the slot number specified by selecting **Online>Select Slot Number**.
- Even if FPWIN GR7 is offline, data can be uploaded from the positioning unit RTEK.

## 7.15 Data Monitor

The connection state of each axis and input state of external terminals can be monitored. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

### 1.2 Procedure

1. Select **Online>Data Monitor** from the menu bar. The "Data Monitor" dialog box is displayed.

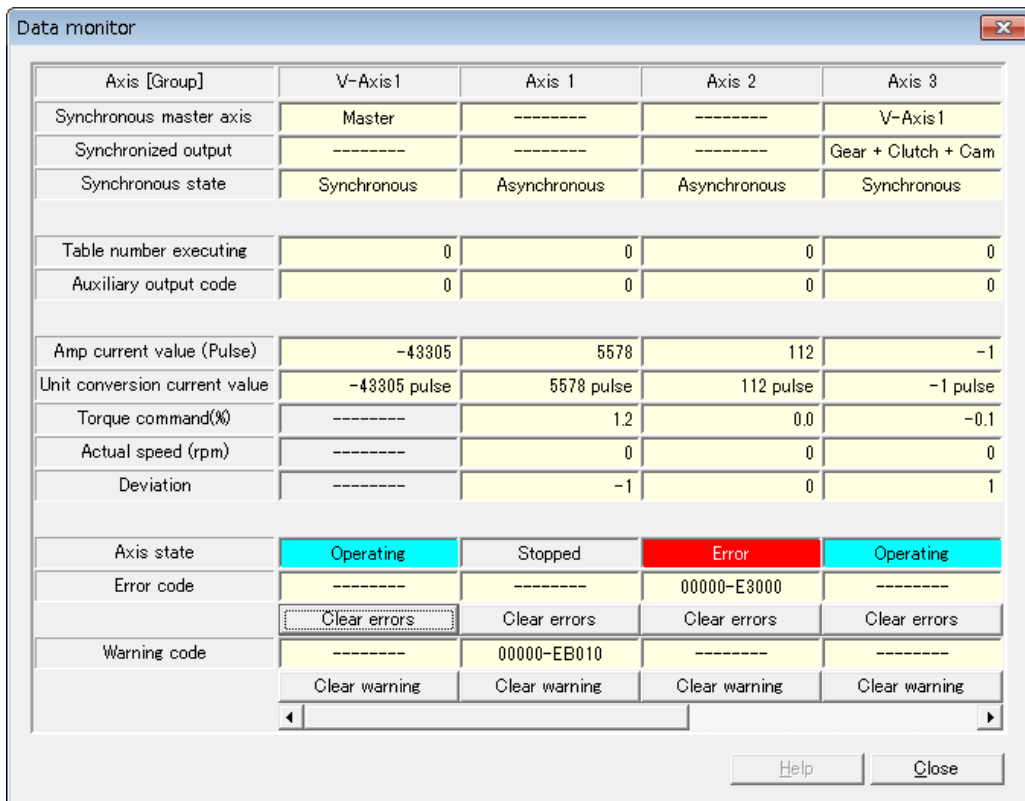

### Monitoring Items

Item	Description	Related page
synchronous master axis	Displays "Master" when an axis has been set as a master axis. When an axis has been set as a slave axis, the master axis on which this axis is based is displayed. Example: When Axis 2 has been set as a slave axis for the master axis that is Axis 1, "Axis 1" is displayed in the column of Axis 2. Displays "-----" for axes that are not used for synchronous control.	"9.1 Synchronous control"
Synchronous output	The functions of synchronous operation that have been set for slave axes are displayed. "Gear", "clutch", "cam" "Gear + clutch", "gear + cam", "clutch + cam"	


Item	Description	Related page
	"Gear + clutch + cam" Displays "-----" for the master axis and axes that are not used for synchronous control.	
Synchronous state	Displays the state ("synchronous"/"asynchronous") that has been set for each axis.	
Table number executing	Displays the number of the table where positioning data is being executed or has been executed.	"7.10 Setting Positioning Data"
Auxiliary output code	When the auxiliary output function is enabled, the output code is output in the range of 0 to 65,535.	"14.3 Auxiliary Output"
Amplifier current value	Displays the pulse value fed back from the servo amplifier. The value becomes "0" upon completion of home return.	
Unit-converted current value	Displays the pulse value fed back from the servo amplifier after unit conversion. The value becomes "0" upon completion of home return. If home coordinates have been set, the value will be preset to the home coordinates upon completion of home return.	"14.4 Home Coordinates""14.5 Current value update"
Torque command (%)	Monitors the torque command value of the servo amplifier.	
Actual speed (rpm)	Monitors the actual speed of the servo amplifier.	"14.11 Monitor Error (Torque / Actual Speed Judgement)"
Deviation	Monitors the difference (deviation) between the current position managed within the positioning unit RTEX and the current position fed back from the amplifier.	"14.13 Simplified Position Deviation Monitor"
Axis state	Displays the operating state of each axis. "Operating"(green): The motor is running. "Stopped"(gray): The motor is stopped. "Error"(red): An error has occurred.	
Error code	Displays the last error code when an error has occurred. Clicking the[Clear errors]button clears errors.	"15.3 Error Code List"
Warning code	Displays the last warning code when a warning has occurred. Clicking the[Clear warning]button clears the warning.	"15.4 Warning Code List"

## 7.16 Status Display

The connection status of each axis and input state of external terminals can be monitored. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

### 1 2 Procedure

1. Select **Online>Status Display** from the menu bar. The "Status Monitor" dialog box is displayed.

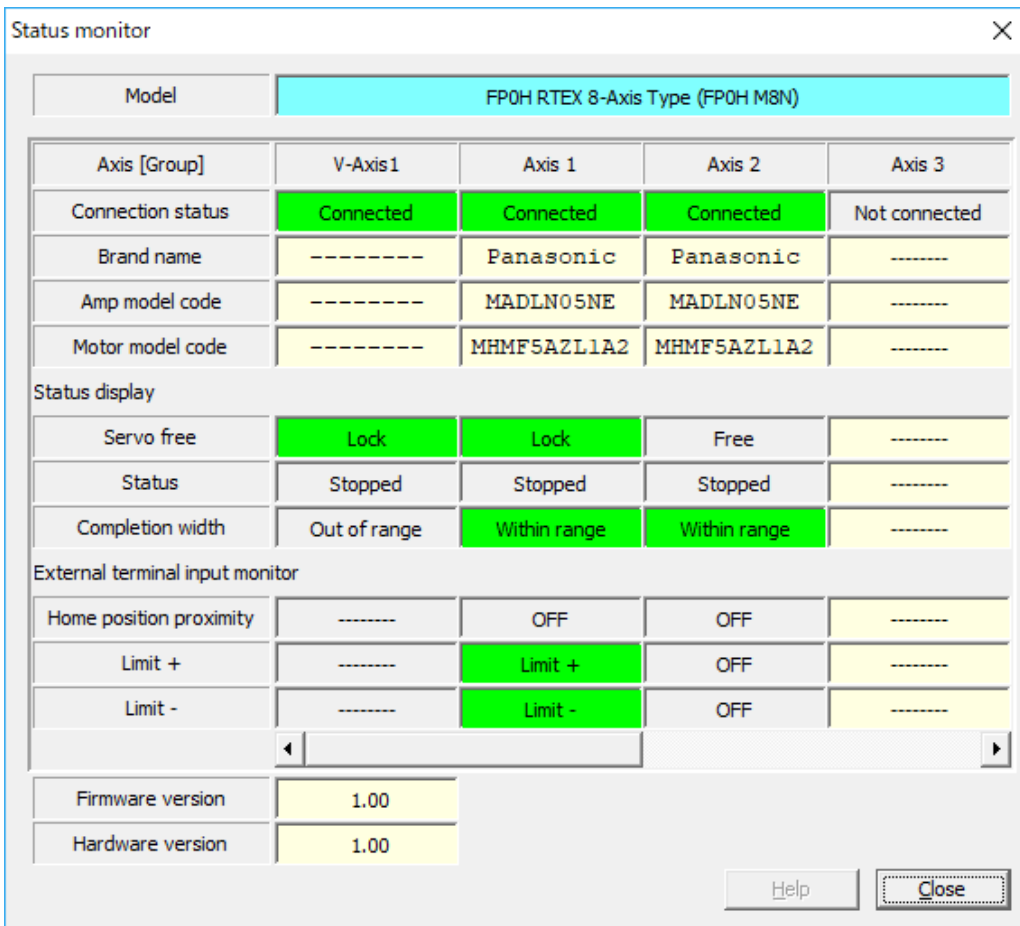

### Monitored items

Item	Description
Model	Displays the model name of the positioning unit RTEX.
Axis [Group]	Indicates the axis numbers. For interpolation axes, group names (such as [A], [B], [C], and [D]) are also displayed.
Connection status	Indicates whether the network is established and whether the communication between the positioning unit RTEX and servo amplifier is normal.



Item	Description
	"Connected" (green): Communication is being performed. "Not connected" (gray): Communication is not being performed.
Brand name	Displays the brand names of the connected servo amplifier and motor and the model codes of the amplifier and motor.
Amplifier model code	
Motor model code	
Status display	
Servo free	Displays the servo-locked or servo-free status. "Locked" (green): Indicates the servo-locked status. "Free" (gray): Indicates the servo-free status.
Status	Displays the operating state of each axis. "Operating" (green): The motor is running. "Stopped" (gray): The motor is stopped. "-----" (gray): The motor is not connected.
Completion width	Indicates whether the deviation counter is within the in-position range. "Within range" (green): The deviation counter is in an in-position state. "Out of range" (gray): The deviation counter is not in an in-position state.
External input terminal monitor	
Near home	Displays the input state of the near home and limit inputs connected to the servo amplifiers. "Near home" (green): The near home input is ON (enabled). "Limit +" (green): The limit (+) input is ON (enabled). "Limit -" (green): The limit (-) input is ON (enabled). "OFF" (gray): The above inputs are OFF (disabled).
Limit +	
Limit -	
Firmware version	Displays the firmware version and hardware version of the positioning unit RTEX.
Hardware version	

(Note 1) The input logics of the near home, limit +, and limit - inputs depend on the settings on the servo amplifier side.


### 7.17 Tool Operation

- With Configurator PM7-RTEX, you can perform commissioning using tool software before actually starting the user program.
- Before starting tool operation, be sure to apply the settings and download the project to the positioning unit RTEX.
- The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

**1**

#### Procedure

1. Select **Online>Tool Operation** from the menu bar.  
The "Tool Operation" dialog box is displayed.

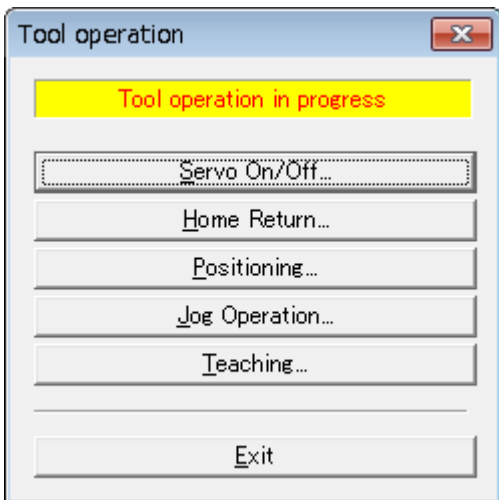

#### Types of tool operation

Item	Description
Serve ON/OFF	Controls servo ON/OFF setting for each axis.
Stop-on-contact torque value for home return	Performs home return to the origin of the machine coordinates according to the specified positioning parameter values.
positioning	Performs positioning starting from the start table number according to the settings of the positioning tables.
JOG operation	Moves the specified axis in the specified direction at the specified speed while the operation command is ON.
Teaching	Controls the axis manually in the same way as JOG operation, and reflects the resulting positioning address on the data editing screen.

**i Info.**


- The unit cannot be switched to tool operation mode while the unit is being operated with a user program.
- Operation requests based on I/O signals are disabled during tool operation.
- If a communication error occurs during tool operation, the positioning unit RTEK detects the error and stops automatically.
- If the previous tool operation did not finish properly due to a communication error, etc., the tool operation mode will be cancelled forcibly when the next tool operation starts.

**7.17.1 Tool Operation: Servo ON/OFF**

The following procedure is explained assuming that Configurator PM7-RTEX has already been started.


**1 2 Procedure**

1. Select **Online>Tool Operation** from the menu bar.  
The "Tool Operation" dialog box is displayed.
2. Select [Servo ON/OFF] in the "Tool Operation" dialog box.  
The "Servo ON/OFF" dialog box is displayed.

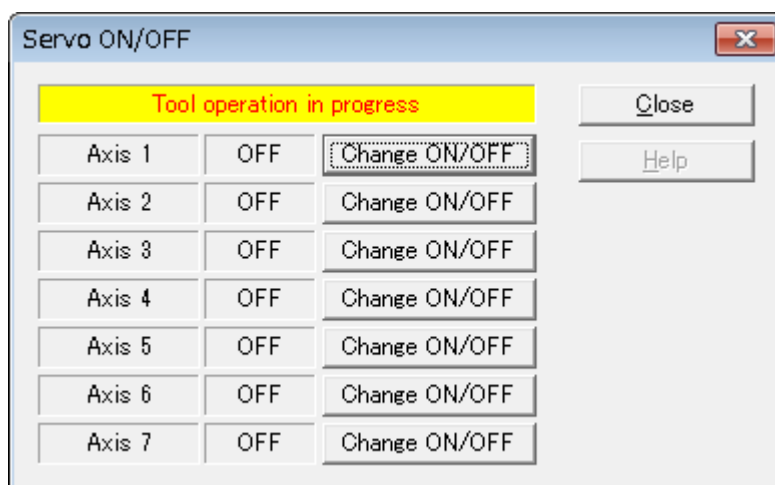

3. Click the [Change ON/OFF] button for the desired axis.  
The state is switched between servo locked (ON) and servo free (OFF).

## 7.17 Tool Operation

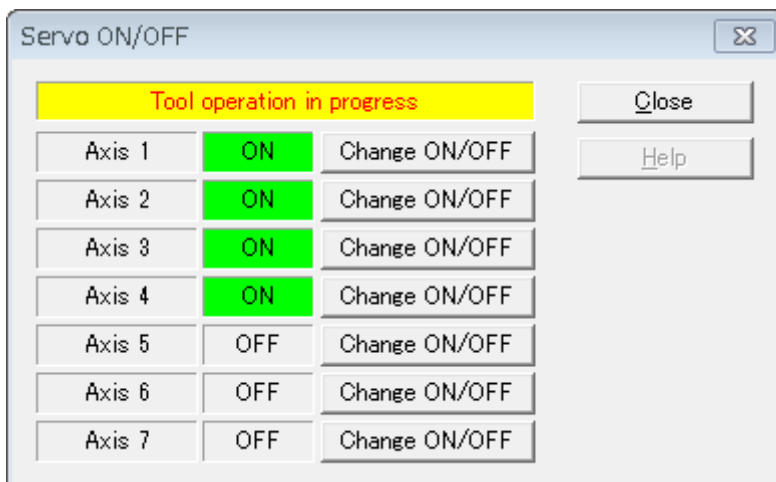

4. Confirm the servo ON/OFF status of the desired axis, and click the [Close] button. The display returns to the "Tool Operation" dialog box.

### **i** Info.

- If servo ON/OFF has been controlled using a ladder program, the servo-locked or servo-free status before the start of tool operation is maintained and the operation shifts to tool operation mode.
- Even if the tool operation mode is terminated, the servo-locked or servo-free status prior to the termination will be maintained.

### 7.17.2 Tool Operation: Home Return

- When the power is turned ON, the coordinates of the positioning unit RTEK do not match those of the machine position home position. Execute home return before starting positioning operation.
- With Configurator PM7-RTEK, you can perform commissioning before actually starting the user program.
- The following procedure is explained assuming that Configurator PM7-RTEK has already been started.

### **1** Procedure

1. Select **Online>Tool Operation** from the menu bar. The "Tool Operation" dialog box is displayed.
2. Select [Home Return] from the "Tool Operation" dialog box. The "Tool operation - Home Return" dialog box is displayed.

Tool operation - Return to home position

**Tool operation in progress**

Axis [Group]	V-Axis 1	Axis 1	Axis 2	Axis 3
Synchronous master axis	Master	-----	-----	V-Axis 1
Synchronized output	-----	-----	-----	Gear + Clutch + Cam
Synchronous state	Synchronous	Asynchronous	Asynchronous	Synchronous
	Change synchronization	Change synchronization	Change synchronization	Change synchronization
Current value	0	902	14	2
	Home position coordinate	Home position coordinate	Home position coordinate	Home position coordinate
Unit	pulse	pulse	pulse	pulse
Home return mode	Data set method	Dog method 1	Dog method 1	Dog method 1
	Start	Stop	Start	Start
Axis state	Stopped	Operating	Stopped	Error
Error code	-----	-----	-----	00000-E3000
	Clear errors	Clear errors	Clear errors	Clear errors
Warning code	-----	-----	-----	-----
	Clear warning	Clear warning	Clear warning	Clear warning
Speed Rate	100 %			
	Help			Exit

- Click the [Start] button for the axis for which home return is to be performed. Execute the home return operation.
- Click the [Exit] button to terminate the home return operation.

### **i** Info.

- This dialog box cannot be closed during the operation.

### Dialog box items

Item	Description	Related page
synchronous master axis	Displays "Master" when an axis has been set as a master axis. When an axis has been set as a slave axis, the master axis on which this axis is based is displayed. Example: When Axis 2 has been set as a slave axis for the master axis that is Axis 1, "Axis 1" is displayed in the column of Axis 2. Displays "-----" for axes that are not used for synchronous control.	"9.1 Synchronous control"
Synchronous output	The functions of synchronous operation that have been set for slave axes are displayed. "Gear", "clutch", "cam" "Gear + clutch", "gear + cam", "clutch + cam" "Gear + clutch + cam" Displays "-----" for the master axis and axes that are not used for synchronous control.	

## 7.17 Tool Operation

Item	Description	Related page
Synchronous state	Displays the state ("synchronous"/"asynchronous") that has been set for each axis. Clicking the [Change synchronization] button switches the state between synchronous and asynchronous.	
Current value	Displays the feedback values for each axis after unit conversion. Click [Home coordinates] to display the value input dialog box for changing the value after home return.	"14.4 Home Coordinates""14.5 Current value update"
Unit	Displays the unit of position commands for each axis that is specified in positioning parameter settings.	
Home return mode	Displays the content of the home return setting code registered in the positioning setting data.	"11.1 Types of Home Return (Incremental)"
Start/Stop	Executes a home return start/stop operation. <ul style="list-style-type: none"> <li>Click [Start] to execute a home return operation. The button name changes to [Stop].</li> <li>Click [Stop] to execute a deceleration stop operation. The button name changes to [Start].</li> </ul>	
Axis state	Displays the operating state of each axis. "Operating" (green): The motor is running. "Stopped" (gray): The motor is stopped. "Error" (red): An error has occurred.	
Error code	Displays the last error code when an error has occurred. If a recoverable error occurs in the positioning unit RTE <sub>X</sub> , click the [Clear errors] button to clear the error.	"15.3 Error Code List"
Warning code	Displays the last warning code when a warning has occurred. Clicking the [Clear warning] button clears the warning.	"15.4 Warning Code List"
Speed rate	An operation is executed at the specified speed rate, with the target speed of home return for each axis that is specified in the positioning parameter settings taken as 100%. Clicking [Speed rate] displays the value input dialog box.	

### 7.17.3 Tool Operation: Positioning

The tool operation function enables the user to specify a starting table number and check if positioning operation is performed correctly according to the starting table.

#### 1 2 Procedure

1. Select **Online>Tool Operation** from the menu bar.  
The "Tool Operation" dialog box is displayed.
2. Select [Positioning] from the "Tool Operation" dialog box.  
The "Tool Operation - Positioning" dialog box is displayed.

Tool operation - Positioning				
Tool operation in progress				
Axis [Group]	V-Axis1	Axis 1	Axis 2	Axis 3
Synchronous master axis	Master	-----	-----	V-Axis1
Synchronized output	-----	-----	-----	Gear + Clutch + Cam
Synchronous state	Synchronous	Asynchronous	Asynchronous	Synchronous
	Change synchronization	Change synchronization	Change synchronization	Change synchronization
Current value	0	119325	9	-1
	Current value update	Current value update	Current value update	Current value update
Unit	pulse	pulse	pulse	pulse
Table number executing	-----	1	-----	-----
Start table number	1	1	1	1
	Change	Change	Change	Change
	Operation	Stop	Operation	Operation
Axis state	Stopped	Operating	Stopped	Error
Error code	-----	-----	-----	00000-E3000
	Clear errors	Clear errors	Clear errors	Clear errors
Warning code	-----	-----	-----	-----
	Clear warning	Clear warning	Clear warning	Clear warning
Speed Rate	100 %			Help Exit

- Click the [Change] button under the target start table number field.  
The "Start Table No. Setting" dialog box is displayed.
- Enter a start table number.
- Click the [Operation] button.  
Positioning will start from the specified start table number.
- Click the [Exit] button to terminate the positioning operation.

#### Dialog box items

Item	Description	Related page
synchronous master axis	Displays "Master" when an axis has been set as a master axis. When an axis has been set as a slave axis, the master axis on which this axis is based is displayed. Example: When Axis 2 has been set as a slave axis for the master axis that is Axis 1, "Axis 1" is displayed in the column of Axis 2. Displays "-----" for axes that are not used for synchronous control.	"9.1 Synchronous control"
Synchronous output	The functions of synchronous operation that have been set for slave axes are displayed. "Gear", "clutch", "cam" "Gear + clutch", "gear + cam", "clutch + cam" "Gear + clutch + cam"	

## 7.17 Tool Operation

Item	Description	Related page
	Displays "-----" for the master axis and axes that are not used for synchronous control.	
Synchronous state	Displays the state ("synchronous"/"asynchronous") that has been set for each axis. Clicking the [Change synchronization] button switches the state between synchronous and asynchronous.	
Current value	Displays the feedback values for each axis after unit conversion. Click [Current value update] to display the value input dialog box for changing the current value.	<a href="#">"14.5 Current value update"</a>
Unit	Displays the unit of commands for each axis that is specified in positioning parameter settings.	
Table number executing	Displays the table number during the operation or when it completes.	<a href="#">"7.10 Setting Positioning Data"</a>
Starting table number	Position control start table number Click [Change] to change the start table number.	
Operation/Stop	Executes a positioning control operation or stop operation. <ul style="list-style-type: none"> <li>Click [Operate] to execute a positioning control operation. The button name changes to [Stop].</li> <li>Click [Stop] to execute a deceleration stop operation. The button name changes to [Operate].</li> </ul>	
Axis state	Displays the operating state of each axis. "Operating" (green): The motor is running. "Stopped" (gray): The motor is stopped. "Error" (red): An error has occurred.	
Error code	Displays the last error code when an error has occurred. If a recoverable error occurs in the positioning unit RTEK, click the [Clear errors] button to clear the error.	<a href="#">"15.3 Error Code List"</a>
Warning code	Displays the last warning code when a warning has occurred. Clicking the [Clear warning] button clears the warning.	<a href="#">"15.4 Warning Code List"</a>
Speed rate	The target speed of JOG operations for each axis that is specified in positioning parameter settings is regarded as 100%, and the operation is executed at the specified speed rate. Click the [Speed rate] button to display the value input dialog box.	

### Info.

- For positioning operations, setting data must be downloaded to the positioning unit RTEK in advance. The operations after the starting table number vary depending on operation patterns.
- The positioning operation of the interpolation group starts and stops the axis with the smallest number in the group within the program. For the tool operation function, a positioning operation is also started by clicking the [Operate] button for any axis; however, a warning message is displayed when the [Operate] button for any axis other than the smallest axis number is clicked.
- This dialog box cannot be closed during the operation.
- If conditions are changed during tool operation, the positioning memory will be updated temporarily and the operation will be performed; however, the changed conditions will not be reflected in the configuration data written to the positioning unit RTEK. Therefore, when the mode is changed to RUN mode again, the unit will start based on the configuration data downloaded to the positioning unit RTEK.



### 7.17.4 Tool Operation: JOG Operation

With Configurator PM7-RTEX, you can perform commissioning before actually starting the user program. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### 1 2 Procedure

1. Select **Online>Tool Operation** from the menu bar.  
The "Tool Operation" dialog box is displayed.
2. Select [JOG Operation] from the "Tool Operation" dialog box.  
The "Tool Operation - JOG Operation" dialog box is displayed.

Tool operation in progress				
Axis [Group]	V-Axis1	Axis 1	Axis 2	Axis 3
Synchronous master axis	Master	-----	-----	V-Axis1
Synchronized output	-----	-----	-----	Gear + Clutch + Cam
Synchronous state	Synchronous	Asynchronous	Asynchronous	Synchronous
	Change synchronization	Change synchronization	Change synchronization	Change synchronization
Current value	0	1008	7	1
	Current value update	Current value update	Current value update	Current value update
Unit	pulse	pulse	pulse	pulse
Jog target speed	1000	1000	1000	1000
	Change	Change	Change	Change
JOG	+ -	+ -	+ -	+ -
Axis state	Stopped	Operating	Stopped	Error
Error code	-----	-----	-----	00000-E3000
	Clear errors	Clear errors	Clear errors	Clear errors
Warning code	-----	-----	-----	-----
	Clear warning	Clear warning	Clear warning	Clear warning
Speed Rate	100 %			
	Help		Exit	

3. Click the [+] or [-] button in the JOG field.  
The JOG operation will be executed.
4. Click the [Exit] button to terminate the JOG operation.

#### **i** Info.

- This dialog box cannot be closed during the operation.

## 7.17 Tool Operation

### Dialog box items

Item	Description	Related page
synchronous master axis	Displays "Master" when an axis has been set as a master axis. When an axis has been set as a slave axis, the master axis on which this axis is based is displayed. Example: When Axis 2 has been set as a slave axis for the master axis that is Axis 1, "Axis 1" is displayed in the column of Axis 2. Displays "-----" for axes that are not used for synchronous control.	"9.1 Synchronous control"
Synchronous output	The functions of synchronous operation that have been set for slave axes are displayed. "Gear", "clutch", "cam" "Gear + clutch", "gear + cam", "clutch + cam" "Gear + clutch + cam" Displays "-----" for the master axis and axes that are not used for synchronous control.	
Synchronous state	Displays the state ("synchronous"/"asynchronous") that has been set for each axis. Clicking the [Change synchronization] button switches the state between synchronous and asynchronous.	
Current value	Displays the feedback values for each axis after unit conversion. Click [Current value update] to display the value input dialog box for changing the current value.	"14.5 Current value update"
Unit	Displays the unit of position commands for each axis that is specified in positioning parameter settings.	
JOG target speed	Monitors and displays the target speed for JOG operation. Click [Change] to change the target speed for JOG operation.	"10.1 Settings and Operation of JOG Operation"
JOG [+]	Performs JOG forward rotation while [+] is being clicked.	
JOG [-]	Performs JOG reverse rotation while [-] is being clicked.	
Axis state	Displays the operating state of each axis. "Operating" (green): The motor is running. "Stopped" (gray): The motor is stopped. "Error" (red): An error has occurred.	
Error code	Displays the last error code when an error has occurred. If a recoverable error occurs in the positioning unit RTE <sub>X</sub> , click the [Clear errors] button to clear the error.	"15.3 Error Code List"
Warning code	Displays the last warning code when a warning has occurred. Clicking the [Clear warning] button clears the warning.	"15.4 Warning Code List"
Speed rate	The target speed of JOG operations for each axis that is specified in positioning parameter settings is regarded as 100%, and the operation is executed at the specified speed rate. Click the [Speed rate] button to display the value input dialog box.	

### 7.17.5 Tool Operation: Teaching

The tool operation function enables each axis to be operated manually and the position addresses where each axis stops to be registered as point data.

## 1 2 Procedure

1. Select **Online>Tool Operation** from the menu bar.  
The "Tool Operation" dialog box is displayed.
2. Select [Teaching] in the "Tool Operation" dialog box.  
The "Tool operation - Teaching" dialog box is displayed.

Tool operation - Teaching

Tool operation in progress

Axis [Group]	V-Axis1	Axis 1	Axis 2	Axis 3
Synchronous master axis	Master	-----	-----	V-Axis1
Synchronized output	-----	-----	-----	Gear + Clutch + Cam
Synchronous state	Synchronous	Asynchronous	Asynchronous	Synchronous
	Change synchronization	Change synchronization	Change synchronization	Change synchronization
Current value	0	2014	9	-1
	Current value update	Current value update	Current value update	Current value update
Unit	pulse	pulse	pulse	pulse
Jog target speed	1000	1000	1000	1000
	Change	Change	Change	Change
JOG	+	+	+	+
	-	-	-	-
Table number	1	1	1	1
	Teaching	Teaching	Teaching	Teaching
Axis state	Stopped	Operating	Stopped	Error
Error code	-----	-----	-----	00000-E3000
	Clear errors	Clear errors	Clear errors	Clear errors
Warning code	-----	-----	-----	-----
	Clear warning	Clear warning	Clear warning	Clear warning
Speed Rate	100 %			
	Help			Exit

3. Have the JOG operation stop the axis at the positioning point.
4. Click the [Teaching] button.
5. Enter the table number where the desired positioning information is registered, and click the [OK] button.  
The current value will be registered for the movement amount in the specified table number. Also, if the axis that has been taught is an interpolation axis, the current value is registered for the movement amount of the corresponding coordinates within the interpolation group.
6. Click the [Exit] button to terminate the teaching operation.

## 7.17 Tool Operation

### Dialog box items

Item	Description	Related page
synchronous master axis	Displays "Master" when an axis has been set as a master axis. When an axis has been set as a slave axis, the master axis on which this axis is based is displayed. Example: When Axis 2 has been set as a slave axis for the master axis that is Axis 1, "Axis 1" is displayed in the column of Axis 2. Displays "-----" for axes that are not used for synchronous control.	"9.1 Synchronous control"
Synchronous output	The functions of synchronous operation that have been set for slave axes are displayed. "Gear", "clutch", "cam" "Gear + clutch", "gear + cam", "clutch + cam" "Gear + clutch + cam" Displays "-----" for the master axis and axes that are not used for synchronous control.	
Synchronous state	Displays the state ("synchronous"/"asynchronous") that has been set for each axis. Clicking the [Change synchronization] button switches the state between synchronous and asynchronous.	
Current value	Displays the feedback values for each axis after unit conversion. Click [Current value update] to display the value input dialog box for changing the current value.	"14.5 Current value update"
Unit	Displays the unit of commands for each axis that is specified in positioning parameter settings.	
JOG target speed	Displays the target speed for JOG operation. Click [Change] to change the target speed for JOG operation.	"10.1 Settings and Operation of JOG Operation"
JOG [+]	If [+] is clicked, forward JOG is performed while [+] is being clicked.	
JOG [-]	If [-] is clicked, reverse JOG is performed while [-] is being clicked.	
Table No.	Displays the table number for which teaching is performed. Click [Teaching] to change the table number for which teaching is performed and register the current value.	"7.10 Setting Positioning Data"
Axis state	Displays the operating state of each axis. "Operating" (green): The motor is running. "Stopped" (gray): The motor is stopped. "Error" (red): An error has occurred.	
Error code	Displays the last error code when an error has occurred. If a recoverable error occurs in the positioning unit RTEX, click the [Clear errors] button to clear the error.	"15.3 Error Code List"
Warning code	Displays the last warning code when a warning has occurred. Clicking the [Clear warning] button clears the warning.	"15.4 Warning Code List"
Speed rate	The target speed of home return for each axis that is specified in positioning parameter settings is regarded as 100%, and the operation is executed at the specified speed rate. Click the [Speed rate] button to display the value input dialog box.	

### Info.

- If teaching is performed, the control method for the table number for which teaching is performed will be automatically changed to “Absolute”.
- The results of the teaching operation take effect after the tool operation finishes and the setting data is downloaded to the positioning unit RTEK.
- This dialog box cannot be closed during the operation.

(MEMO)

# 8 Automatic Operation (Position Control)

---

8.1 Basic Operations.....	8-2
8.1.1 Patterns of Position Control .....	8-2
8.1.2 Settings and Operation of E-Point Control .....	8-4
8.1.3 Settings and Operation of P-Point Control .....	8-5
8.1.4 Settings and Operation of C-Point Control.....	8-6
8.1.5 Settings and Operation of J-Point Control .....	8-7
8.1.6 Notes on programming .....	8-8
8.1.7 Sample Programs (E-point, P-point and C-point Controls) .....	8-9
8.1.8 Sample Program (for J-point Control) .....	8-10
8.2 Interpolation Control.....	8-12
8.2.1 Types of Interpolation Control .....	8-12
8.2.2 Settings and Operation of Two-Axis Linear Interpolation .....	8-15
8.2.3 Settings and Operation of 2-Axis Circular Interpolation .....	8-16
8.2.4 Settings and Operation of 3-Axis Linear Interpolation .....	8-18
8.2.5 Settings and Operation of 3-Axis Spiral Interpolation .....	8-20
8.2.6 Sample Program (for Interpolation Control) .....	8-22
8.3 Positioning Repetition Function .....	8-24
8.3.1 Overview of positioning repeat function .....	8-24
8.3.2 Settings and Action of Positioning Repetition Function .....	8-26

## 8.1 Basic Operations



### 8.1 Basic Operations

#### 8.1.1 Patterns of Position Control

##### ■ Operation pattern

Name	Timing chart	Operation and application	Repetition Return	Interpolation
E-point Control		<p>"E-point control" refers to movement up to an end point.</p> <p>This method is used for single-speed acceleration/deceleration control.</p>	•	•
P-point Control		<p>"P-point control" refers to control that passes through a pass point.</p> <p>This method is used for acceleration/deceleration control using two or more speeds.</p> <p>When P-point control is started, pulse output is performed for the specified amount of movement and then the control shifts to E-point control.</p>	•	•
C-point Control		<p>"C-point control" refers to control that passes through a continuance point.</p> <p>This method is used for successive single-speed positioning controls with different target speeds or acceleration/deceleration times.</p> <p>The time taken for shifting from C-point control to E-point control is specified as dwell time.</p>	•	•

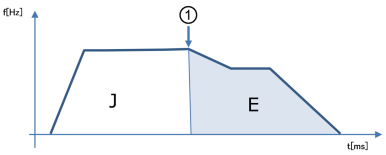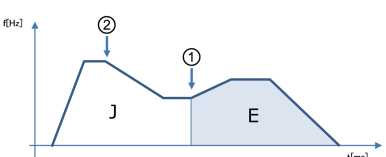

Name	Timing chart	Operation and application	Repetition Return	Interpolation				
J-point Control	<p>Without speed change</p>  <p>With speed change</p> 	<p>"J-point control" refers to control that passes through a speed point known as a "JOG Operation Point".</p> <p>After startup, control is performed at the specified speed.</p> <p>Once the J-point positioning start contact turns ON, positioning control starts.</p> <p>When the J-point speed change contact is set, the speed changes.</p> <table border="1" data-bbox="706 653 1077 734"> <tr> <td>(1)</td> <td>J-point positioning start contact</td> </tr> <tr> <td>(2)</td> <td>J-point speed change contact</td> </tr> </table>	(1)	J-point positioning start contact	(2)	J-point speed change contact	-	-
(1)	J-point positioning start contact							
(2)	J-point speed change contact							

■ **Selecting the positioning operation mode**

The positioning operation mode is selected on Configurator PM7-RTEX.

- For E-point control, enter the settings in one row.
- If consecutive tables are entered using P-point, C-point, and J-point controls, enter them in combination so that the last table is E-point control.

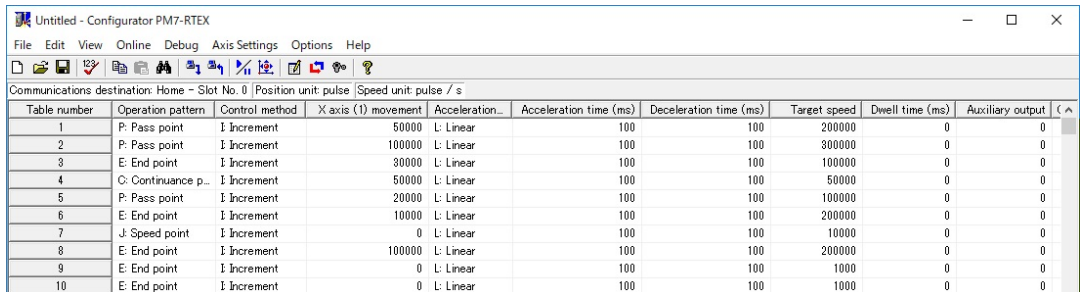


Table number	Operation pattern	Control method	X axis (1) movement	Acceleration...	Acceleration time (ms)	Deceleration time (ms)	Target speed	Dwell time (ms)	Auxiliary output
1	P: Pass point	I: Increment	50000 L: Linear	100	100	200000	0	0	
2	P: Pass point	I: Increment	100000 L: Linear	100	100	300000	0	0	
3	E: End point	I: Increment	30000 L: Linear	100	100	100000	0	0	
4	C: Continuance p...	I: Increment	50000 L: Linear	100	100	50000	0	0	
5	P: Pass point	I: Increment	20000 L: Linear	100	100	100000	0	0	
6	E: End point	I: Increment	10000 L: Linear	100	100	200000	0	0	
7	J: Speed point	I: Increment	0 L: Linear	100	100	10000	0	0	
8	E: End point	I: Increment	100000 L: Linear	100	100	200000	0	0	
9	E: End point	I: Increment	0 L: Linear	100	100	1000	0	0	
10	E: End point	I: Increment	0 L: Linear	100	100	1000	0	0	

**i Info.**

- If E: End point is not selected in the last row when using P: Pass point, C: Continuance point, or J: Speed point, a self-diagnostic error will be detected.


■ **Settings of J-point control**

- For J-point control, only "Incremental" can be selected as the control method.
- To change the speed during J-point control, set the post-change target speed in the "Positioning Parameter" dialog box.

## 8.1 Basic Operations

### 8.1.2 Settings and Operation of E-Point Control


The example below is the case where single axis control is performed on Axis 1 by using slot number 0. The amount of movement is set using the incremental method and the unit is the number of pulses.

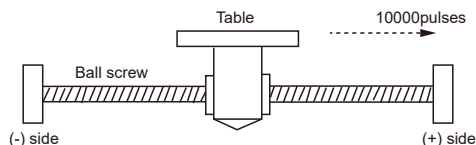

#### ■ Settings

Item	Setting example
Operation pattern	E: End point
Control method	I: Incremental
X-axis movement amount	10,000 pulses
Acceleration/deceleration method	L: Linear
Acceleration time (ms)	100 ms
Deceleration time (ms)	100 ms
Target speed	10,000 pps

#### ■ Operation diagram

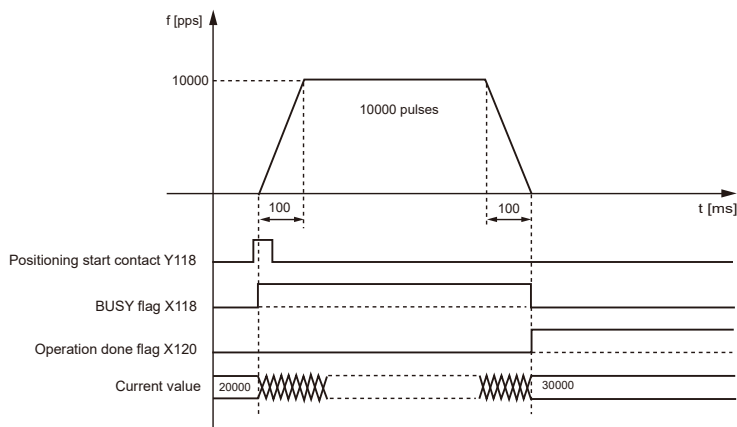


#### ■ Operations of each contact

- The BUSY flag (X118), which indicates that the motor is running, turns ON when position control starts, and turns OFF when the operation is completed.
- The operation done flag (X120), which indicates the completion of the operation, turns ON when the current operation is completed, and remains ON until the next position control, JOG operation, home return, or pulser operation starts. The flag turns ON after the unit transmits commands up to the target position.

### 8.1.3 Settings and Operation of P-Point Control


The example below is the case where single axis control is performed on Axis 1 by using slot number 0. The amount of movement is set using an incremental method and the unit is the number of pulses.

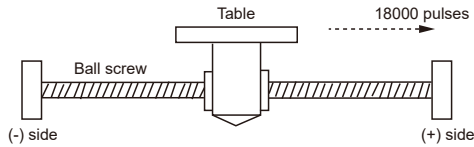

#### ■ Settings

Item	Setting example		
	Table 1	Table 2	Table 3
Operation pattern	P: Pass point	P: Pass point	E: End point
Control method	I: Incremental	I: Incremental	I: Incremental
X-axis movement amount	5,000 pulses	10,000 pulses	3,000 pulses
Acceleration/deceleration method	L: Linear	L: Linear	L: Linear
Acceleration time (ms)	100 ms	200 ms	30 ms
Deceleration time (ms)	10 ms	20 ms	150 ms
Target speed	10,000 pps	20,000 pps	5,000 pps

#### ■ Behavior diagram

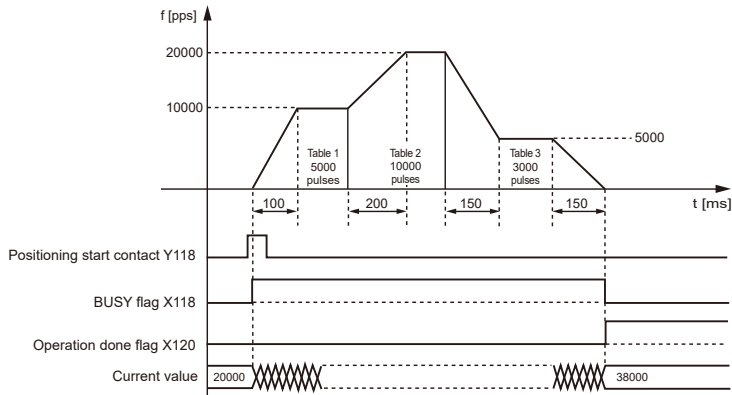


#### ■ Behaviors of each contact

- The BUSY flag (X118), which indicates that the motor is running, turns ON when positioning control starts, and turns OFF when the operation is completed.
- The operation done flag (X120), which indicates the completion of operation, turns ON when the current operation is completed, and remains on hold until the next positioning control, JOG operation, home return, or pulser operation starts. The flag turns ON after the unit transmits commands up to the target position.

## 8.1 Basic Operations

### 8.1.4 Settings and Operation of C-Point Control

The example below is the case where single axis control is performed on Axis 1 by using slot number 0. The amount of movement is set using the incremental method and the unit is the number of pulses.

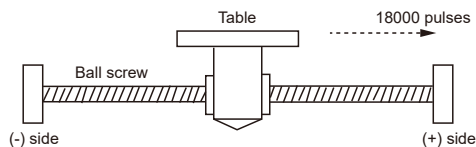


#### ■ Settings

Use the tool software to set positioning data and positioning parameters. The unit is set to pulses.

Item	Setting example		
	Table 1	Table 2	Table 3
Operation pattern	C: Continuance point	C: Continuance point	E: End point
Control method	I: Incremental	I: Incremental	I: Incremental
X-axis movement amount	5,000 pulses	10,000 pulses	3,000 pulses
Acceleration/deceleration method	L: Linear	L: Linear	L: Linear
Acceleration time (ms)	100 ms	200 ms	30 ms
Deceleration time (ms)	10 ms	20 ms	150 ms
Target speed	10,000 pps	20,000 pps	5,000 pps
Dwell Time	0 ms	0 ms	0 ms

#### ■ Behavior diagram

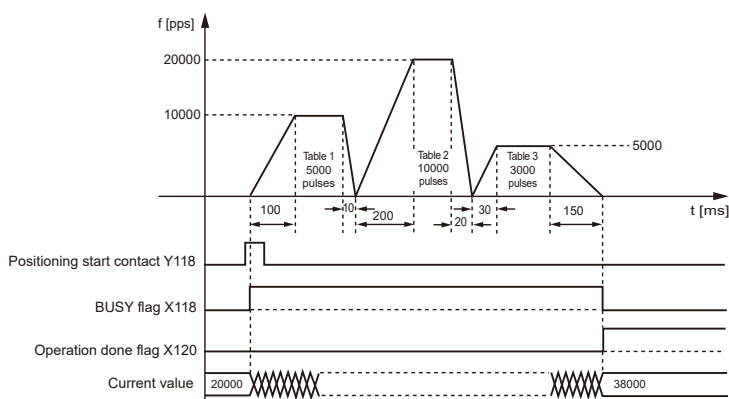

#### ■ Behaviors of each contact

- The BUSY flag (X118), which indicates that the motor is running, turns ON when positioning control starts, and turns OFF when the operation is completed.
- The operation done flag (X120), which indicates the completion of operation, turns ON when the current operation is completed, and remains on hold until the next positioning control,

JOG operation, home return, or pulser operation starts. The flag turns ON after the unit transmits commands up to the target position.

### 8.1.5 Settings and Operation of J-Point Control

J-point control (speed point control) performs operations at the target speed until the starting contact of J-point positioning turns ON when the operation starts, and the next positioning control starts when the start contact of J-point positioning turns ON. (The example below is the case where slot No. 0 is used.)

#### ■ Settings


Item	Setting example			
	Table 1	J-point positioning Parameter Settings	Table 2	Table 3
Operation pattern	J: Speed point	-	P: Pass point	E: End point
Control method	I: Incremental	-	I: Incremental	I: Incremental
X-axis movement amount	5,000 pulses	-	10,000 pulses	3,000 pulses
Acceleration/ deceleration method	L: Linear	-	L: Linear	L: Linear
Acceleration time (ms)	100 ms	-	200 ms	30 ms
Deceleration time (ms)	10 ms	-	20 ms	150 ms
Target speed	10,000 pps	-	20,000 pps	5,000 pps
J-point operation setting code	-	Linear acceleration / deceleration	-	-
J-point acceleration time (ms)	-	10 ms	-	-
J-point deceleration time (ms)	-	10 ms	-	-
J-point target speed	-	30,000 pps	-	-

#### Info.

- Specify positioning parameters for operation startup in the positioning data table. Specify positioning parameters for speed change in the axis parameter setting menu.
- J-point control can be used for single-axis control only. It is not available for interpolation control.
- Use increment mode as a position specification method for P-point control, C-point control, or E-point control executed after J-point control.
- Speed control is performed during J-point control, so be sure to enter the amount of movement for positioning that can secure a constant speed zone based on the target speed.

## 8.1 Basic Operations

### ■ Behavior diagram

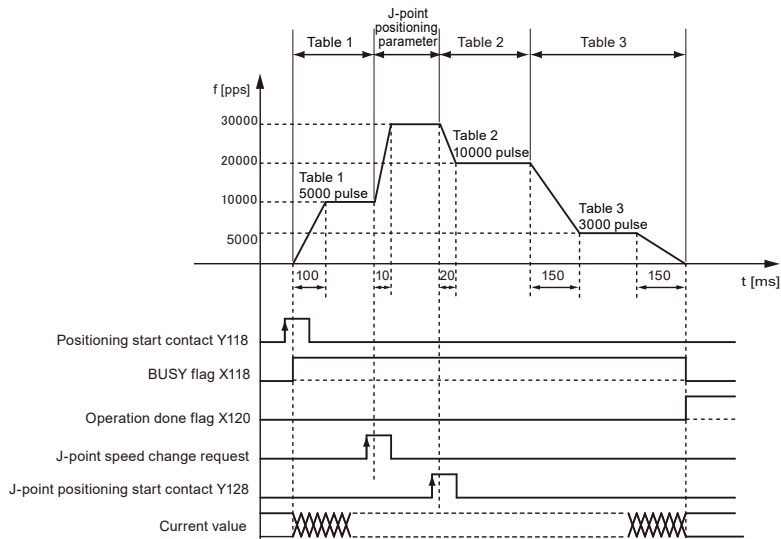


### ■ Behaviors of each contact

- The BUSY flag (X118) turns ON when the operation starts and turns OFF when the operation is completed.
- The operation done flag (X120) turns ON when the operation is completed, and remains on hold until the next positioning control, JOG operation, home return, or pulser operation starts.
- The target speed is changed when the J-point speed change request bit turns ON. The J-point speed change request bit is enabled at the edge where OFF changes to ON.
- Positioning control starts when the J-point positioning start contact (Y128) turns ON.

### ■ Behaviors when the speed change contact turns ON during acceleration or deceleration

- J-point control allows speed change during operation but does not allow speed change during acceleration or deceleration.
- If the speed change signal turns ON during acceleration or deceleration, speed change will be executed after the unit enters a constant speed state.

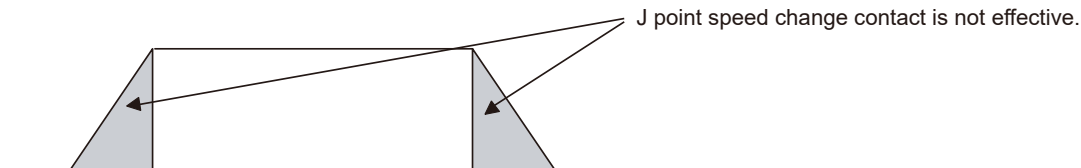

### 8.1.6 Notes on programming

#### ■ Notes on programming

- The last table must be set as E: End point.

- If any value such as a movement amount, acceleration time, deceleration time or target speed is out of the specified range, a setting value error will occur when position control starts.
- The starting contact and flag number vary depending on the axis number.

#### ■ Behavior at limit input


Condition	Direction	Limit status	Operation
When each control starts	Forward	Limit input (+): ON	Startup failure, error occurrence
		Limit input (-): ON	Startup failure, error occurrence
	Reverse	Limit input (+): ON	Startup failure, error occurrence
		Limit input (-): ON	Startup failure, error occurrence
While each control is being performed	Forward	Limit input (+): ON	Deceleration stoppage, error occurrence
	Reverse	Limit input (-): ON	Deceleration stoppage, error occurrence

### 8.1.7 Sample Programs (E-point, P-point and C-point Controls)

#### ■ Sample programs

- The following sample programs perform single axis control on Axis 1 by using slot No. 0.
- It is assumed that positioning control is set from table No.1.  
(For examples of table settings using Configurator PM7-RTEX, refer to "Settings" in ["8.1.2 Settings and Operation of E-Point Control"](#) to ["8.1.4 Settings and Operation of C-Point Control"](#).)

## 8.1 Basic Operations

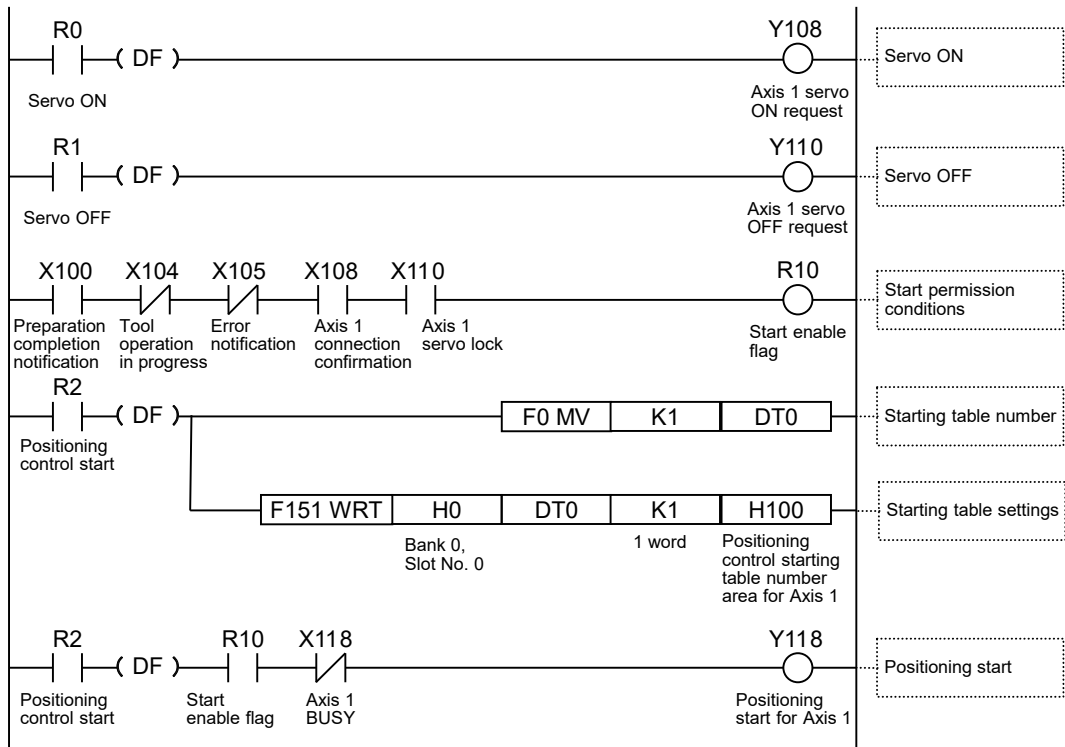


### 8.1.8 Sample Program (for J-point Control)

#### ■ Sample programs

- The following sample program performs single axis control on Axis 1 by using slot number 0.
- It is assumed that positioning control is set from table number 1.  
(For examples of table settings using Configurator PM7-RTEX, refer to "Settings" in "8.1.5 Settings and Operation of J-Point Control".)



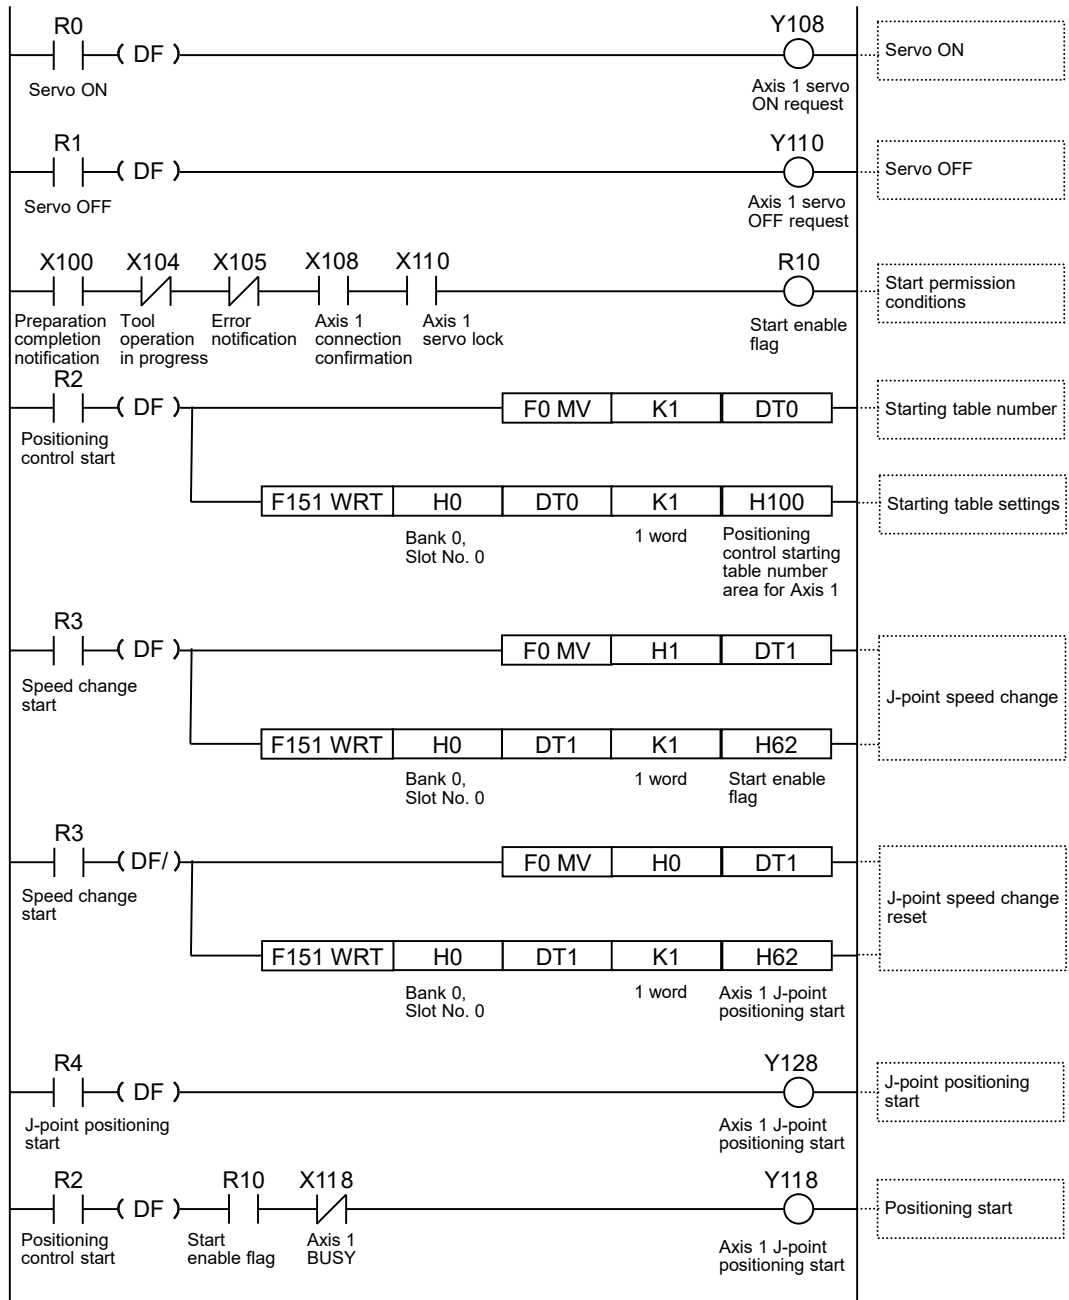

## ■ Related positioning parameters

Bank	address End of offset	Name	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtua l)	8 axes (virtua l)
00H (common area)	H62	J-point speed change request	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6	Bit7

## 8.2 Interpolation Control

### 8.2 Interpolation Control






#### 8.2.1 Types of Interpolation Control

##### ■ Types of operation

- Interpolation control is classified into 2-axis linear interpolation control, 2-axis circular interpolation control, 3-axis linear interpolation control, and 3-axis spiral interpolation control. The methods for specifying the operation of each interpolation control are shown in the table below. Select an appropriate method according to the application. The axes in a relationship of interpolation are called X-axis and Y-axis for 2-axis interpolation and are called X-axis, Y-axis and Z-axis for 3-axis interpolation. X-, Y-, and Z-axes are automatically assigned in ascending order of axis signal levels.
- In each interpolation control, E-point control that uses one table of positioning data, P-point control and C-point control that use multiple tables can be freely combined.
- For example, using P-point control enables continuous interpolation control from 2-axis linear interpolation control to 2-axis circular interpolation control. Acceleration time and deceleration time can be specified individually. For P-point and C-point controls, the last table must be set as an end point (E-point).


Type	Operation specification method	Necessary data
2-axis linear interpolation control	Composite speed specification	Composite speed of X-axis and Y-axis
	Long axis speed specification	Speed of long axis (axis whose movement distance is long)
2-axis circular interpolation control	Center point specification/CW direction	X-axis and Y-axis coordinates of center point
	Center point specification/CCW direction	X-axis and Y-axis coordinates of center point
	Pass point specification	X-axis and Y-axis coordinates of pass point on arc
3-axis linear interpolation control	Composite speed specification	Composite speed of X-axis, Y-axis, and Z-axis
	Long axis speed specification	Speed of long axis (axis whose movement distance is long)
3-axis spiral interpolation control	Center point specification/CW direction/ X-axis feed	Y-axis and Z-axis coordinates of center point
	Center point specification/CCW direction/X-axis feed	Y-axis and Z-axis coordinates of center point
	Center point specification/CW direction/ Y-axis feed	X-axis and Z-axis coordinates of center point
	Center point specification/CCW direction/Y-axis feed	X-axis and Z-axis coordinates of center point
	Center point specification/CW direction/ Z-axis feed	X-axis and Y-axis coordinates of center point
	Center point specification/CCW direction/Z-axis feed	X-axis and Y-axis coordinates of center point
	Pass point specification/X-axis feed	Y-axis and Z-axis coordinate of pass point on arc

Type	Operation specification method	Necessary data
	Pass point specification/Y-axis feed	X-axis and Z-axis coordinates of pass point on arc
	Pass point specification/ Z-axis feed	X-axis and Y-axis coordinates of pass point on arc

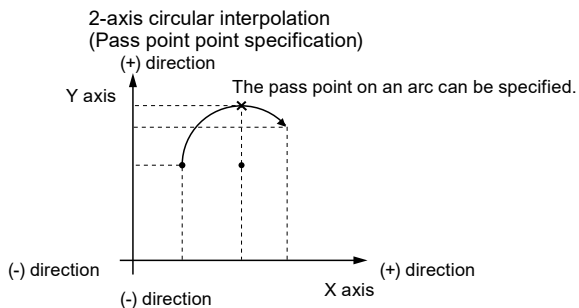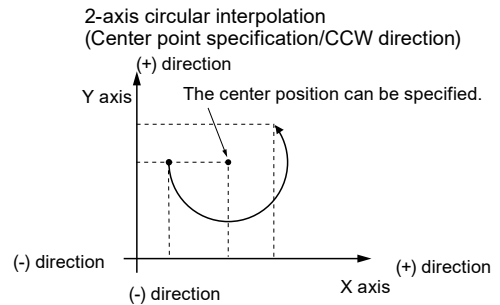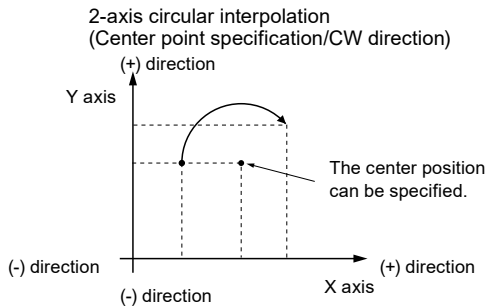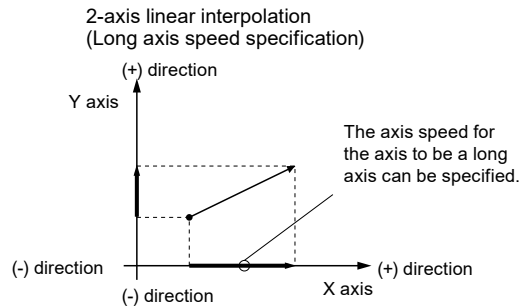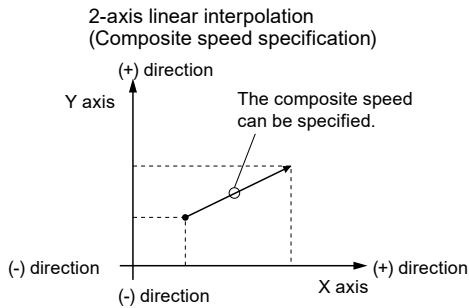


## 8.2 Interpolation Control


### 3-axis linear interpolation (Composite speed specification)

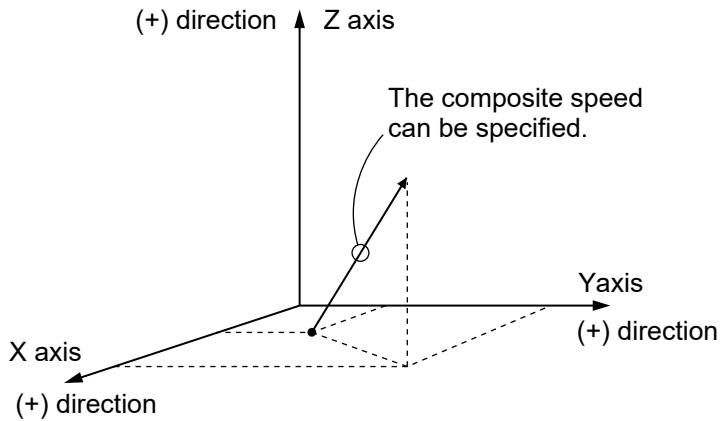


### 3-axis linear interpolation (Composite speed specification)

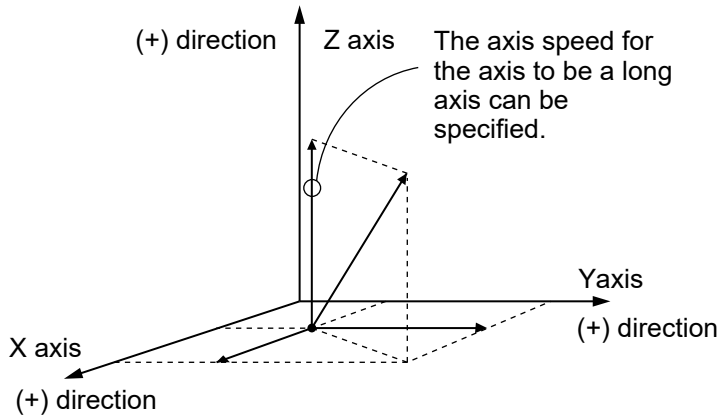


### 3-axis spiral interpolation (Center point specification/CW direction/Z-axis movement)

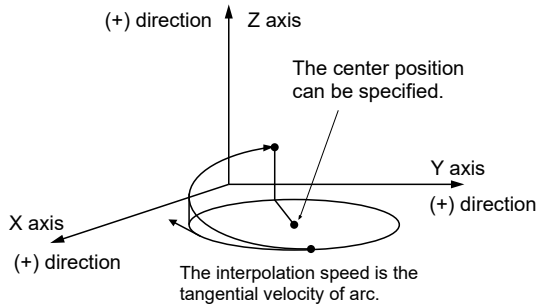

### 3-axis spiral interpolation (Center point specification/CCW direction/Z-axis movement)

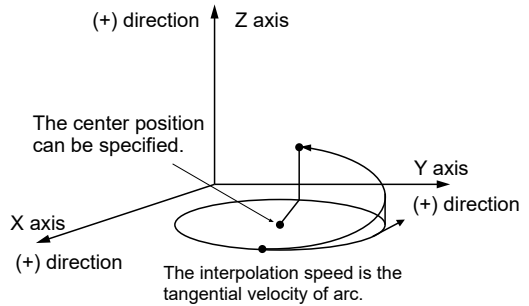

3-axis spiral interpolation (Pass point specification/  
Z-axis movement)

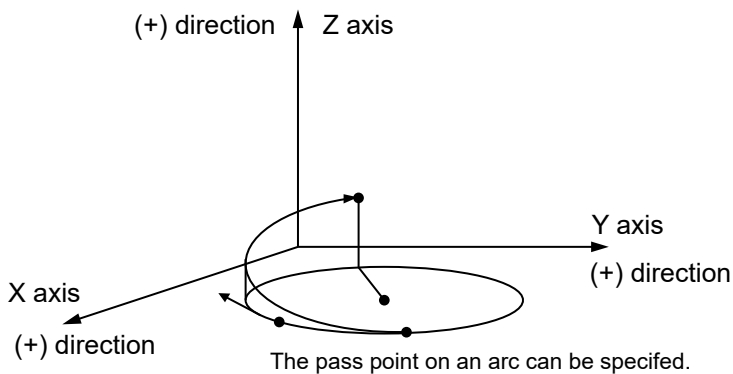


The interpolation speed is the tangential velocity of arc.

(Note 1) If the X-axis and Y-axis are feed axes in 3-axis spiral interpolation, they behave as if each axis in the above diagram is replaced.

**8.2.2 Settings and Operation of Two-Axis Linear Interpolation**

The example below is the case where E-point control is performed. The X-axis is set as Axis 1 and the Y-axis is set as Axis 2. The amount of movement is set using an incremental method and the unit is the number of pulses. (The example below is the case where slot No. 0 is used.)

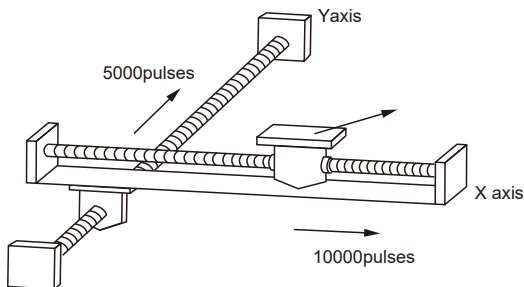


■ Settings

Item	Setting example
Operation pattern	E: End point
Interpolation operation	0: Linear (Composite speed)
Control method	I: Incremental
X-axis movement amount	10,000 pulses
X-axis auxiliary point	0
Y-axis movement amount	5,000 pulses
Y-axis auxiliary point	0
Acceleration/deceleration method	L: Linear

## 8.2 Interpolation Control

Item	Setting example
Acceleration time (ms)	100 ms
Deceleration time (ms)	100 ms
Interpolation speed	10,000 pps

### ■ Behavior diagram

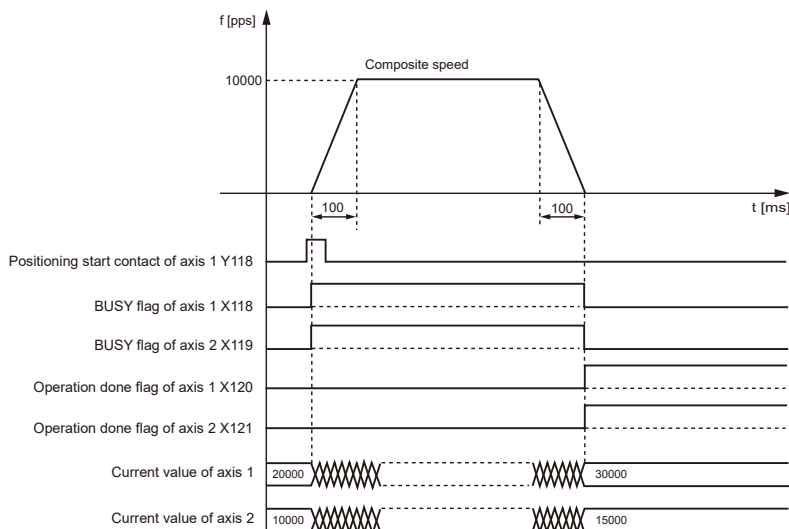


### ■ Behaviors of each contact

- Axis-1 and Axis-2 BUSY flags (X118 and X119), which indicate that the motor is running, turn ON when positioning control starts and turn OFF when the operation is completed.
- Axis-1 and Axis-2 operation done flags (X120 and X121), which indicate that the operation is completed, turn ON when the operation is completed and remain on hold until the next positioning control, JOG operation, home return, or pulser operation starts.

### 8.2.3 Settings and Operation of 2-Axis Circular Interpolation

The example below is the case where E-point control is performed. The X-axis is set as Axis 1 and the Y-axis is set as Axis 2. The amount of movement is set using the incremental method and the unit is pulses. (The example below is the case where slot number 0 is used.)

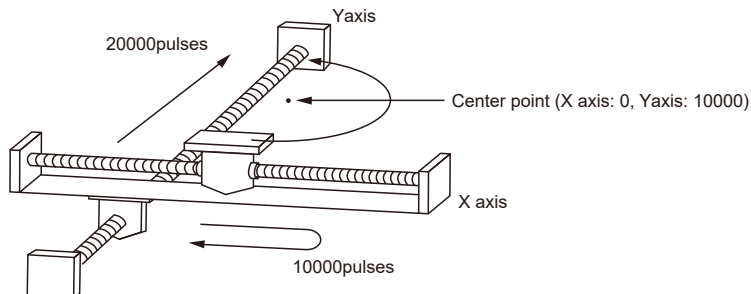


### ■ Settings

Use the tool software to set the positioning data and positioning parameters. The unit is set to pulses.

Item	Setting example
Operation pattern	E: End point
Interpolation operation	S: Circular (center point/CW direction)
Control method	I: Incremental
X-axis movement amount	0 pulses
X-axis auxiliary point	0 pulses
Y-axis movement amount	20,000 pulses
Y-axis auxiliary point	10,000 pulses
Acceleration/deceleration method	L: Linear
Acceleration time (ms)	100 ms
Deceleration time (ms)	100 ms
Interpolation speed	10,000 pps

### ■ Behavior diagram

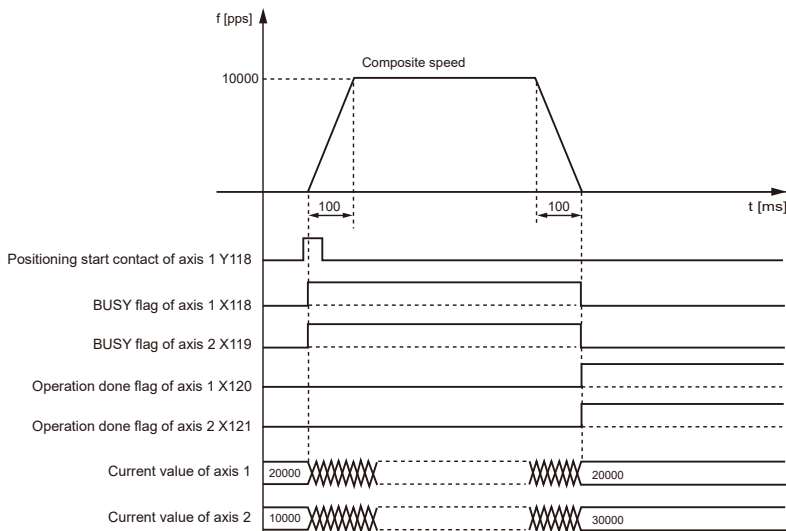

### ■ Behaviors of each contact

- The Axis-1 and Axis-2 BUSY flags (X118 and X119), which indicate that the motor is running, turn ON when position control starts and turn OFF when the operation is completed.
- The Axis-1 and Axis-2 operation done flags (X120 and X121), which indicate that the operation is completed, turn ON when the operation is completed and remain ON until the next position control, JOG operation, home return, or pulser operation starts.


## 8.2 Interpolation Control

### ■ Notes on programming

- To start interpolation control, turn ON the positioning start contact of the axis with the smallest number in the same group.
- For the center point specification, the X-axis auxiliary point is the center point of the X-axis, and the Y-axis auxiliary point is the center point of the Y-axis. Pass points must be set as the respective pass points of the X-axis and Y-axis.
- When the control method is the incremental method, both the center point and pass point are expressed as incremental coordinates from the start point.
- If the start point and the operation complete point are the same, one circular operation is performed when the center position method is used, but an error occurs when the pass position method is used.
- For the pass position method, if the start point, the pass point, and the operation complete point exist on the same straight line, an arc will not be formed, resulting in an error.
- For the long axis speed specification, composite speed is faster than long axis speed.
- If any value such as a movement amount, acceleration time, deceleration time, or target speed is out of the specified range, a setting value error will occur when position control starts.
- The starting contact and flag number vary depending on the axis number.

### 8.2.4 Settings and Operation of 3-Axis Linear Interpolation

The example below is the case where E-point control is performed. The X-axis is set as Axis 1, the Y-axis is set as Axis 2, and the Z-axis is set as Axis 3. The amount of movement is set using the incremental method and the unit is the number of pulses. (The example below is the case where slot No. 0 is used.)

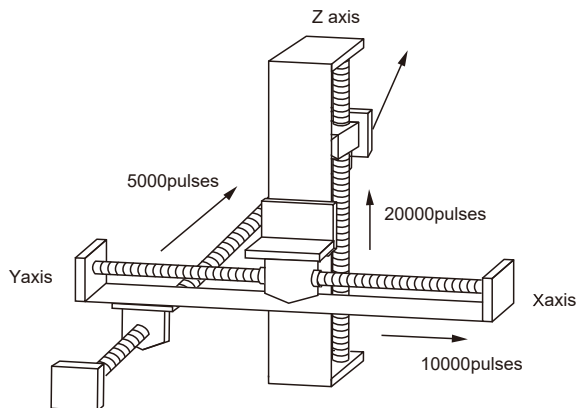


### ■ Settings

Item	Setting example
Operation pattern	E: End point
Interpolation operation	0: Linear (composite speed)
Control method	I: Incremental
X-axis movement amount	10,000 pulses



Item	Setting example
X-axis auxiliary point	0
Y-axis movement amount	5,000 pulses
Y-axis auxiliary point	0
Z-axis movement amount	20,000 pulses
Z-axis auxiliary point	0
Acceleration/deceleration method	L: Linear
Acceleration time (ms)	100 ms
Deceleration time (ms)	100 ms
Interpolation speed	10,000 pps

### ■ Behavior diagram

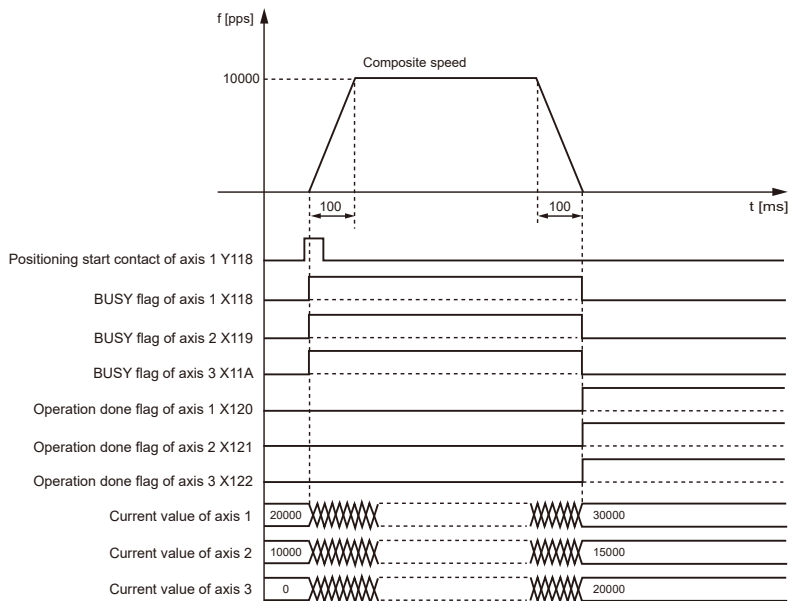

### ■ Behaviors of each contact

- Axis 1, Axis 2, and Axis 3 BUSY flags (X118, X119, and X11A), which indicate that the motor is running, turn ON when position control starts and turn OFF when the operation is completed.
- Axis 1, Axis 2, and Axis 3 operation done flags (X120, X121, and X122), which indicate that the operation is completed, turn ON when the operation is completed and remain ON until the next position control, JOG operation, home return, or pulser operation starts.

### ■ Notes on programming


- To start interpolation control, turn ON the positioning start contact of the axis with the smallest number in the same group.
- The values of the X-axis auxiliary point and Y-axis auxiliary point are invalid for linear interpolation.

## 8.2 Interpolation Control

- For long axis speed specification, composite speed is faster than long axis speed.
- If any value such as a movement amount, acceleration time, deceleration time or target speed is out of the specified range, a setting value error will occur when position control starts.
- The starting contact and flag number vary depending on the axis number.

### 8.2.5 Settings and Operation of 3-Axis Spiral Interpolation


The example below is the case where E-point control is performed. The X-axis is set as Axis 1, the Y-axis is set as Axis 2, and the Z-axis is set as Axis 3. The amount of movement is set using an incremental method and the unit is the number of pulses. (The example below is the case where slot No. 0 is used.)

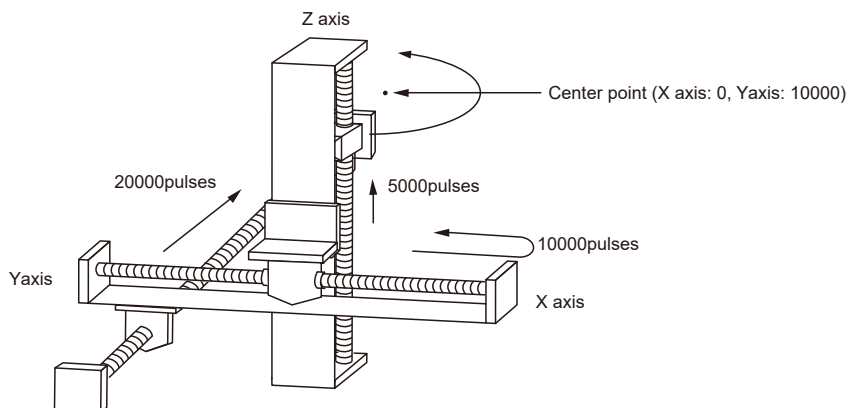

#### ■ Settings

Item	Setting example
Operation pattern	E: End point
Interpolation operation	E: Spiral (Center point/CW direction/Z-axis feed)
Control method	I: Incremental
X-axis movement amount	0 pulses
X-axis auxiliary point	0 pulses
Y-axis movement amount	20,000 pulses
Y-axis auxiliary point	10,000 pulses
Z-axis movement amount	5,000 pulses
Z-axis auxiliary point	0
Acceleration/deceleration method	L: Linear
Acceleration time (ms)	100 ms
Deceleration time (ms)	100 ms
Interpolation speed	10,000 pps

### ■ Behavior diagram

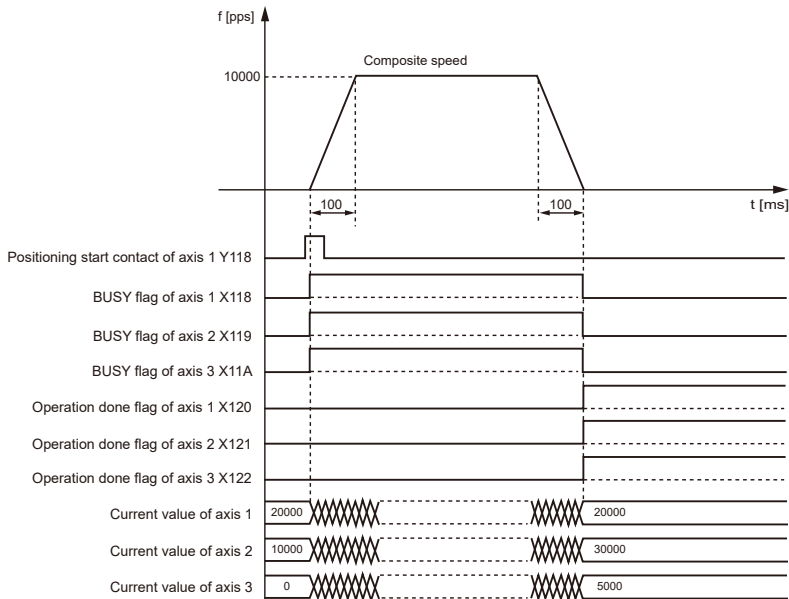

### ■ Behaviors of each contact

- Axis-1, Axis-2, and Axis-3 BUSY flags (X118, X119, and X11A), which indicate that the motor is running, turn ON when positioning control starts and turn OFF when the operation is completed.
- Axis-1, Axis-2, and Axis-3 operation done flags (X120, X121, and X122), which indicate that the operation is completed, turn ON when the operation is completed and remain on hold until the next positioning control, JOG operation, home return, or pulser operation starts.

### ■ Notes on programming

- For center point specification, in the X-Y plane, the X-axis auxiliary point is the center point of the X-axis, and the Y-axis auxiliary point is the center point of the Y-axis. Pass points must be set as the respective pass points of the X-axis and Y-axis. The same applies to the Y-Z plane and X-Z plane.
- When the control method is the incremental method, both the center point and pass point are expressed as the incremental coordinates from the start point.
- If the start point and the operation completion point are the same, one circular operation is performed when the center point method is used, but an error occurs when the pass point method is used.
- For the pass point method, if the start point, the pass point, and the operation completion point exist on the same straight line, an arc will not be formed, resulting in an error.
- For long axis speed specification, composite speed is faster than long axis speed.
- If any value such as a movement amount, acceleration time, deceleration time or target speed is out of the specified range, a setting value error will occur when position control starts.
- The starting contact and flag number vary depending on the axis number.


## 8.2 Interpolation Control

---

### 8.2.6 Sample Program (for Interpolation Control)

#### ■ Sample programs

- The following sample programs perform three-axis interpolation control on Axes 1 to 3 by using slot No. 0.
- It is assumed that positioning control is set from table No.1.  
(For examples of table settings using Configurator PM7-RTEX, refer to "Settings" in ["8.2.4 Settings and Operation of 3-Axis Linear Interpolation"](#) and ["8.2.5 Settings and Operation of 3-Axis Spiral Interpolation"](#).)

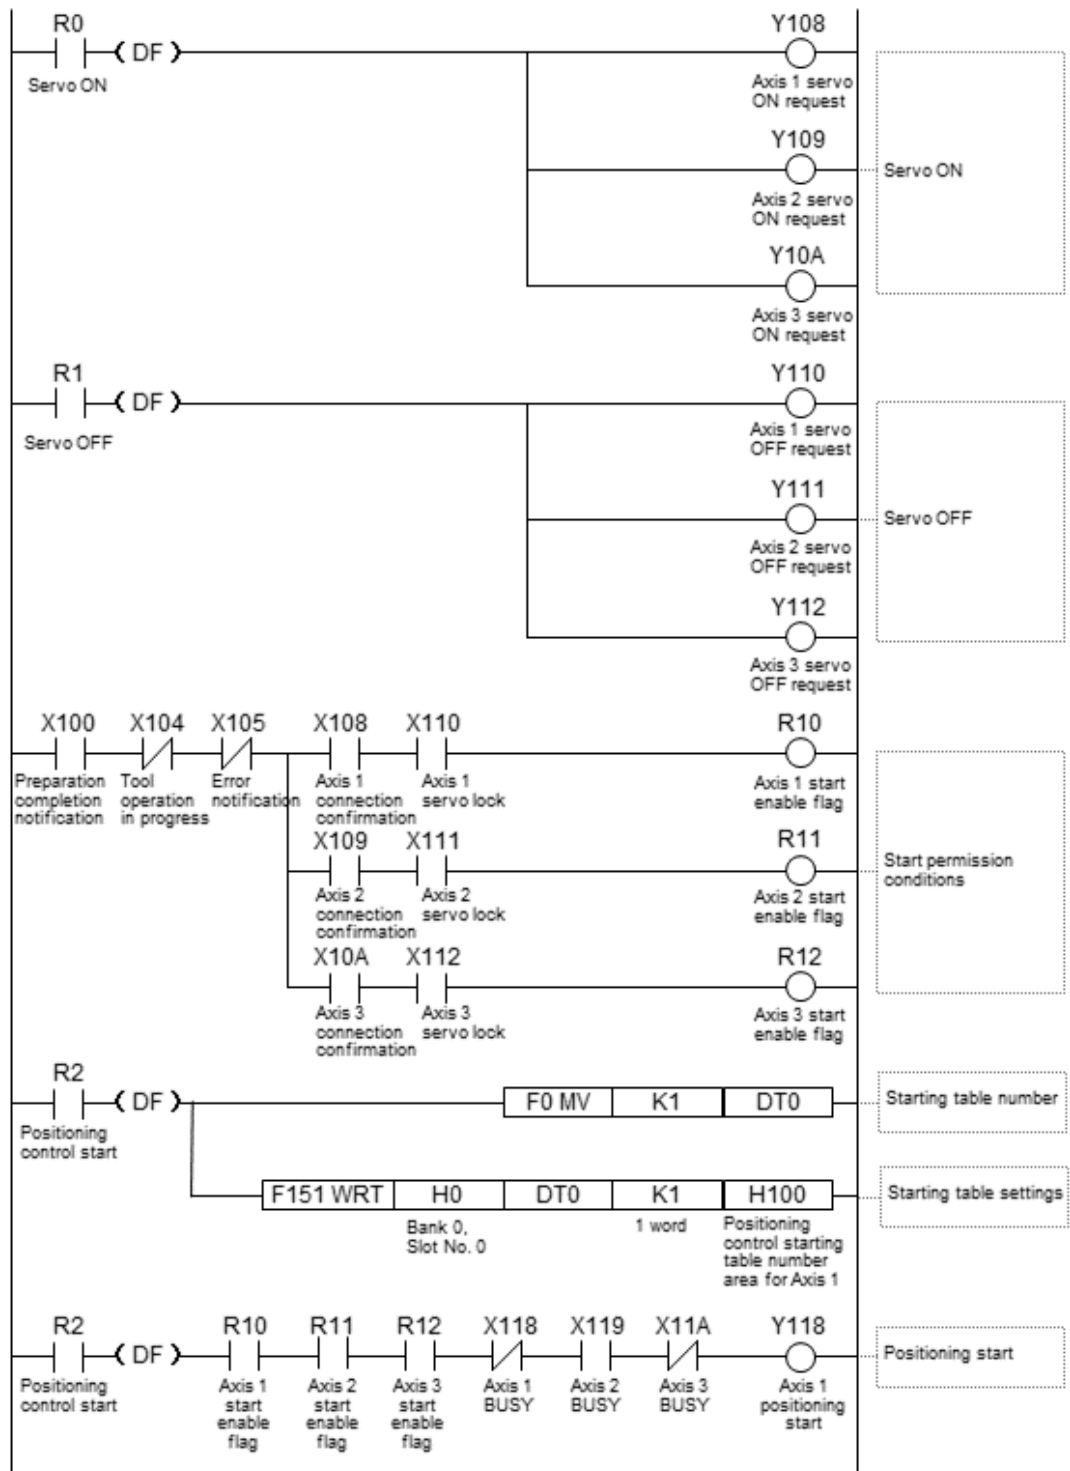

## 8.3 Positioning Repetition Function


### 8.3 Positioning Repetition Function

#### 8.3.1 Overview of positioning repeat function


- The positioning repeat function executes continuous positioning control according to the specified number of repetitions.
- The number of repetitions is set in the area for specifying the number of positioning repetitions for each axis. The number of repetitions can be set within a range of 2 to 254. You can also specify a limitless number of repetitions by setting 255 in the area for specifying the number of positioning repetitions.

#### ■ Overview of positioning repetition function


Positioning operations when positioning control is repeated three times are performed as shown in the figure below.

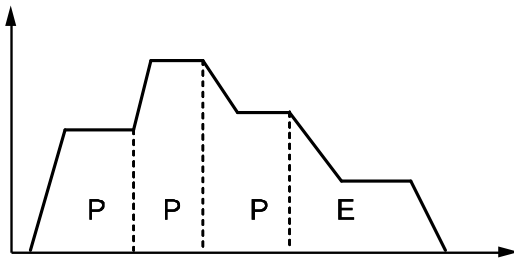

If a dwell time of 0 is set for E-point control (the end point of positioning control), the positioning unit RTEX will perform E-point control as P-point control and complete the operation after repeating positioning control three times continuously (without stopping the operation).

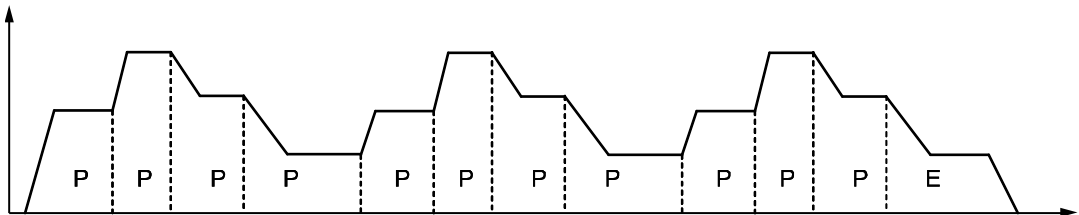

If the dwell time is set to a value other than 0 for E-point control (the end point of positioning control), the positioning unit RTEX will perform E-point control as C-point control and execute positioning control again after stopping for the time period specified as the dwell time (ms). The positioning unit RTEX completes the operation after repeating the positioning control three times.

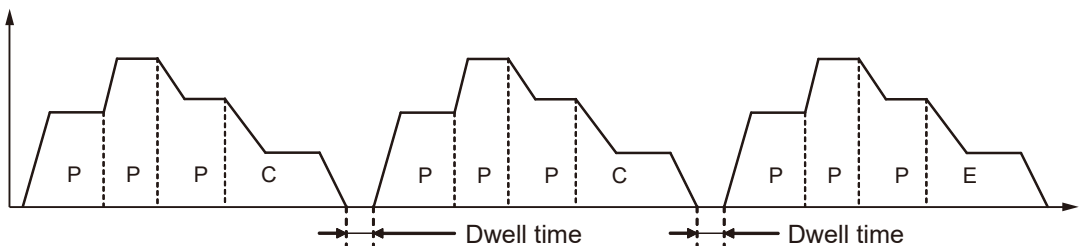

### ■ Setting area for positioning repetition function (bank 00H: common area)

This area is used to set the number of repetitions of positioning control to be started for each axis. The positioning unit RTEX repeats the started positioning control for the specified number of repetitions and then completes the operation. The number of repetitions is also changed to 0 (default value) at the beginning of the operation.


Positioning memory Offset address	Name	Description	Default	Setting range	Unit
H108	Axis 1 positioning Repetition count	Stores the number of repetitions of the operation starting from the position control starting table number up to the end point. If 255 is set, positioning control is repeated unlimitedly until the operation is stopped.	K0	0 to 255	Number of times
H109	Axis 2 positioning Repetition count				
H10A	Axis 3 positioning Repetition count				
H10B	Axis 4 positioning Repetition count				
H10C	Axis 5 positioning Repetition count				
H10D	Axis 6 positioning Repetition count				
H10E	Axis 7 (virtual) positioning Repetition count				
H10F	Axis 8 (virtual) positioning Repetition count				

### ■ Stop processing for repetitive positioning operations

The following operations will occur only if a deceleration stop is performed during repetitive positioning.

#### When repeating E-point control (dwell time: 0 ms)


When the positioning unit RTEX detects a deceleration stop, it comes to a stop after positioning control is repeated N+2 times.

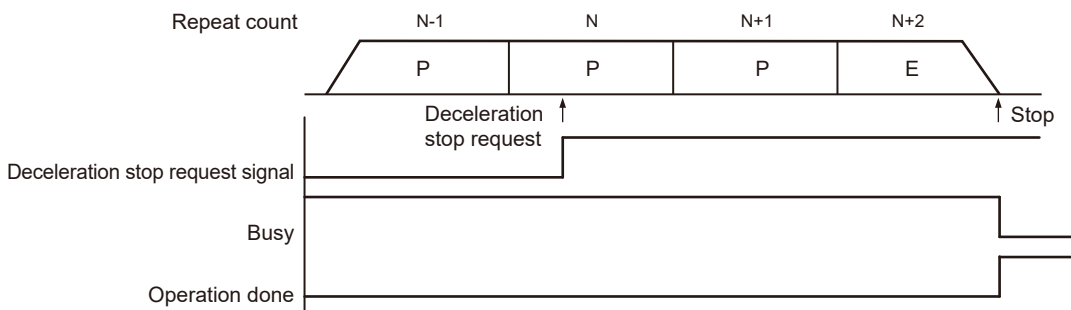

## 8.3 Positioning Repetition Function


### When executing multiple positioning tables continuously

When the positioning unit RTEX detects a deceleration stop, it comes to a stop after positioning control is repeated N+1 times.

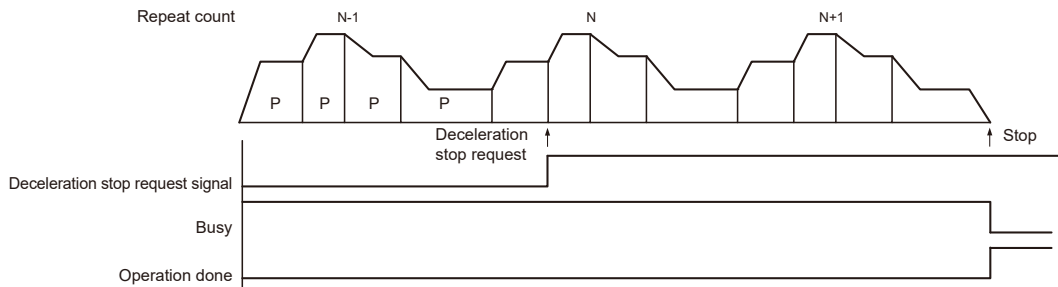

### 8.3.2 Settings and Action of Positioning Repetition Function

The example below is the case where single axis control is performed using slot number 0. The amount of movement is set using an incremental method and the unit is the number of pulses.

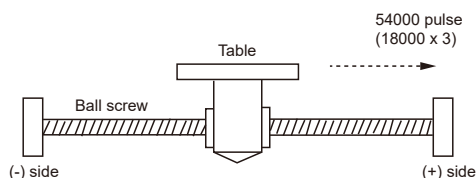


#### ■ Settings

Item	Setting example		
	Table 1	Table 2	Table 3
Operation pattern	P: Pass point	P: Pass point	E: End point
Control method	I: Incremental	I: Incremental	I: Incremental
X-axis movement amount	5,000 pulses	10,000 pulses	3000 pulse
Acceleration/deceleration method	L: Linear	L: Linear	L: Linear
Acceleration time (ms)	100 ms	200 ms	30 ms
Deceleration time (ms)	10 ms	20 ms	150 ms
Target speed	10,000 pps	20000 pps	6000 pps
Dwell time	0 ms	0 ms	0 ms
Positioning repetition count	3 (Write to the setting area for the positioning repeat function)		



### ■ Behavior diagram

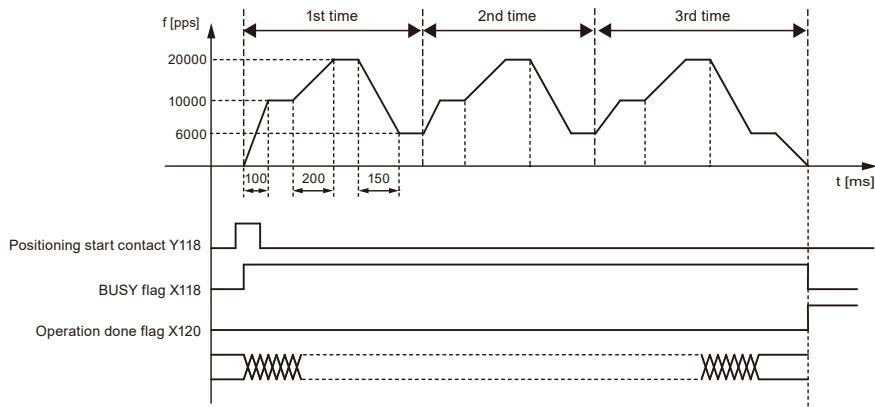


### ■ Behaviors of each contact

- The BUSY flag (X118), which indicates that the motor is running, turns ON when positioning control starts, and turns OFF when the operation is completed.
- The operation done flag (X120), which indicates the completion of operation, turns ON when the current operation is completed, and remains on hold until the next positioning control, JOG operation, home return, or pulser operation starts.

### ■ Sample programs

- The following sample program repeats single axis control on Axis 1 three times by using slot number 0.
- It is assumed that positioning control is set from table number 1.  
(For examples of table settings using Configurator PM7-RTEX, refer to "Settings".)

### 8.3 Positioning Repetition Function

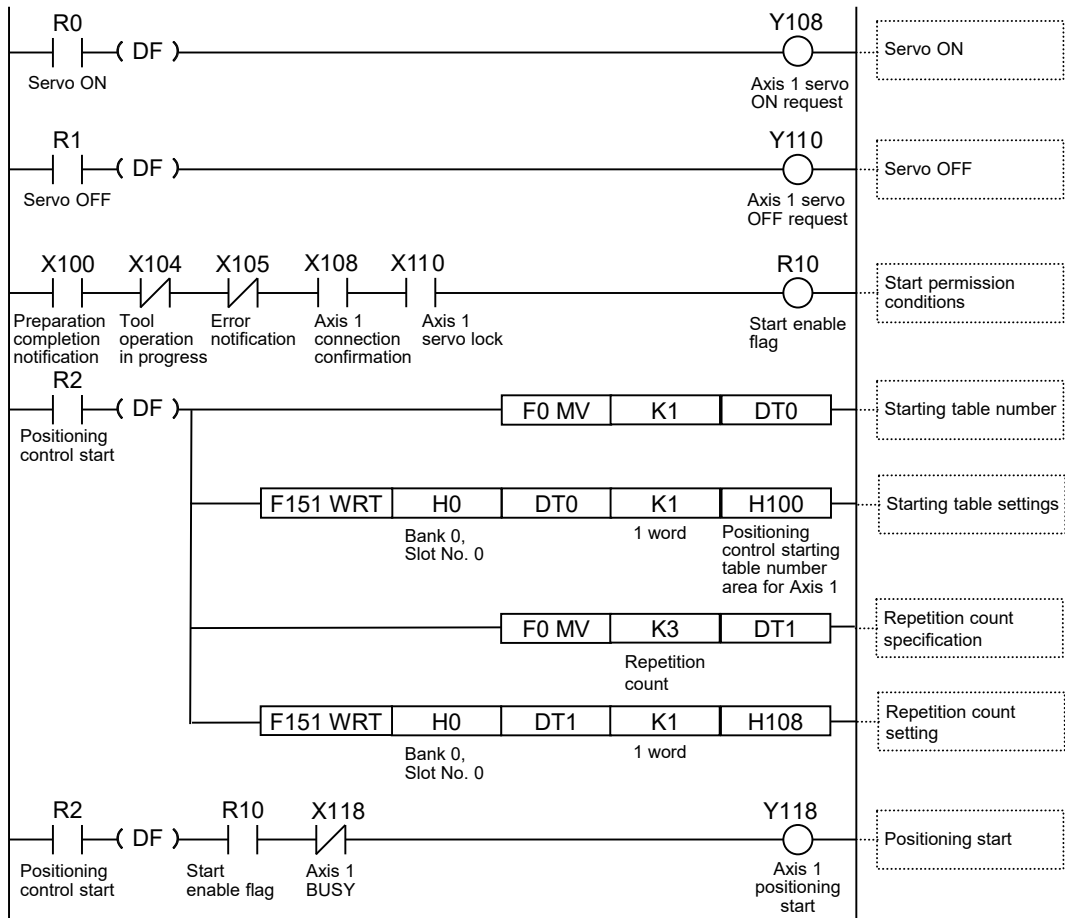

# 9 Automatic Operation (Synchronous Control)

---

9.1 Synchronous control .....	9-2
9.1.1 Overview of Synchronous Control .....	9-2
9.2 Setting Up the Master Axis and Slave Axes .....	9-4
9.2.1 Selecting and Setting up the Master Axis .....	9-4
9.2.2 Selecting and Setting Up the Slave Axis.....	9-5
9.3 Starting and Canceling Synchronous Control.....	9-7
9.3.1 Starting and Canceling Synchronous Control.....	9-7
9.3.2 Notes on Canceling or Starting Synchronous Control .....	9-8
9.4 Electronic gear function .....	9-13
9.4.1 Overview of Electronic Gear Function .....	9-13
9.4.2 Types and Contents of Positioning Parameters to Set .....	9-13
9.4.3 Changing the Gear Ratio during Operation .....	9-14
9.5 Electronic clutch function .....	9-16
9.5.1 What Is the Electronic Clutch Function? .....	9-16
9.5.2 Types and Contents of Positioning Parameters to Set .....	9-16
9.5.3 Trigger Types for Electronic Clutch .....	9-17
9.5.4 Electronic Clutch Engagement Method.....	9-18
9.5.5 Phase specification clutch OFF function.....	9-19
9.6 Electronic Cam Function.....	9-22
9.6.1 Overview of Electronic Cam Function.....	9-22
9.6.2 Types and Contents of Positioning Parameters to Set .....	9-23
9.6.3 Rewriting the Cam Pattern with Program.....	9-24
9.6.4 Cam Pattern Setting Method (Cam Curve Method).....	9-32
9.6.5 Cam Pattern Setting Method (Cam Point Method) .....	9-40
9.6.6 Advance Angle Correction Function .....	9-46

## 9.1 Synchronous control

---

### 9.1 Synchronous control

#### 9.1.1 Overview of Synchronous Control

##### ■ What is synchronous control?

Synchronization control involves operating the master axis (the axis used as the operation reference) to operate the slave axis (the axis interlocked or synchronized with the master axis). The use of synchronous control provides the following advantages.

1. Ease of settings

If the operations of multiple axes are related to each other, operations among multiple axes can be easily set up by, based on the master axis, designing the operations of other axes.

2. Ensuring operational safety

If an axis comes to a stop for some reason while synchronous control is running, all the relevant axes under synchronous control will be stopped. Therefore, you can easily enhance the safety of the system.


##### ■ Functions of synchronous control

Synchronous control provides the following functions. These functions are executed in order, and the slave axes operate according to the operation result of each function.

Function	Overview
Electronic gear	The number of pulses multiplied by the preset electronic gear ratio is output according to the operation of the master axis.
Electronic clutch	The operations of the slave axes can be separated from the operation of the master axis by disengaging the clutch.
Electronic cam	A function to output pulses according to the preset cam pattern. Calculates the operational phase of the master axis and outputs cam pulses according to the phase. The cam pattern is set with the configuration tool.

##### ■ Execution order and setup procedure of synchronous control

The functions achieved by synchronous control and the procedures for setting up the functions are outlined below.

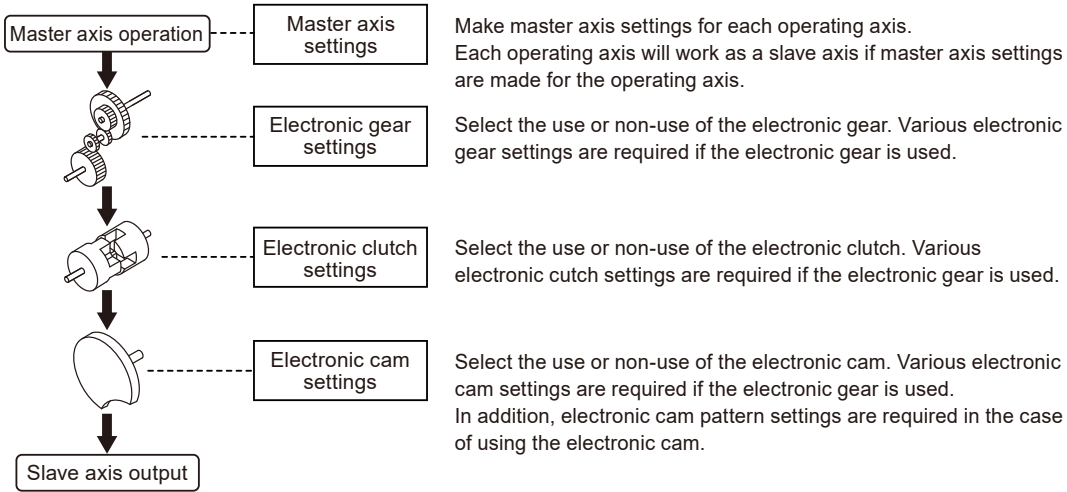

## 9.2 Setting Up the Master Axis and Slave Axes

### 9.2 Setting Up the Master Axis and Slave Axes

#### 9.2.1 Selecting and Setting up the Master Axis

The master axis serves as the operation reference for synchronous control. Start and stop requests for various operations are made to the master axis under synchronous control. It is possible to select one of the following master axes.

##### ■ Types of master axis

Master axis type	Overview
Real axis	Axis (one to eight axes) that can be physically controlled by the positioning unit RTEK. Use this type if the master axis also needs to be controlled. If a real axis is used as the master axis, all other axes (seven axes) can be used as slave axes.
Virtual axis	A virtual axis that exists in the positioning unit RTEK. Virtual axes are not subject to motor control. When using virtual axes, select the check box for virtual axes in the "Axis Settings" dialog box of Configurator PM7-RTEK.
Pulse input	The master axis operates according to the pulses input to the positioning unit RTEK. Use pulse input when an external device such as an external encoder is connected as the reference for synchronous control. If pulse input is used for the master axis, the slave axes will operate according to the pulse input. Therefore, take care when starting or stopping the operation of the positioning unit RTEK.

##### ■ Types of master axis and possible operations

Operation	Master axis type			
	Real axis	Virtual axis	Pulse Input	
Stop-on-contact torque value for home return	Possible	Possible only for "data set method"	Not possible	
JOG operation	Possible	Possible	Not possible	
positioning	Single axis	Possible	Possible	Not possible
	Interpolation	Possible	Not possible	Not possible
Stop Functions	System stop / Emergency stop / Deceleration stop	Possible	Possible	Not possible
	Limit stop	Possible	Possible for only stopped by soft limit because of no limit signal input	Not possible
	Error stop	Possible	Possible	Not possible

#### Info.

- While the unit is under synchronous control, slave axes set to use the master axis operate only in synchronization with the master axis, so the slave axes cannot operate independently.

### ■ Notes on selecting "pulse input"

When "pulse input" is selected for the master axis, you need to be aware of the following notes.



- Because slave axes are synchronous with external pulse input, the master axis cannot be controlled from the positioning unit RTEK. To stop synchronous control, stop the slave axes.
- The slave axes are not set to be synchronous at power ON. Follow the steps below to issue a synchronous setting request.
  1. Turn ON the positioning unit RTEK.
  2. Servo ON the slave axes.
  3. Turn ON the synchronous setting request signals (Y150 to Y157).
- If a synchronous setting request is made when the slave axes are servo OFF, a "synchronous operation not settable (pulse input)" (error code 3046H) error occurs.

### 9.2.2 Selecting and Setting Up the Slave Axis

#### ■ Selecting the slave axis

- One to eight axes can be used as slave axes. Virtual axes can be used only as the master axis.
- When "Synchronous master axis" is selected for the axis to be operated as a slave axis in the "Synchronization Parameter Settings" dialog box of Configurator PM7-RTEX, the axis will operate as a slave axis for the master axis specified as "Synchronous master axis".
- Up to eight slave axes can be set for a single master axis.

Slave axes can be allocated by using the "Synchronization Parameter Settings" dialog box of Configurator PM7-RTEX. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### Procedure

1. Select **Axis Settings>Synchronization Parameter Settings** from the menu bar.  
The "Synchronization Parameter Settings" dialog box is displayed.

2. In the slave axis column of the dialog box, select the axis to be set as a slave axis for the master axis.

In the following screenshot, Axis 1 is set as the master axis and Axes 2 and 3 are set as a slave axis.

## 9.2 Setting Up the Master Axis and Slave Axes

Synchronous parameter settings

	Axis 1	Axis 2	Axis 3	Axis 4
Select synchronous master axis	No synchronous master	Axis 1	Axis 1	No synchronous master
Deceleration stop method	Linear deceleration	Linear deceleration	Linear deceleration	Linear deceleration
Deceleration stop time	100	100	100	100
Electronic gear operation settings				
Gear ratio numerator	1	1	1	1
Gear ratio denominator	1	1	1	1
Gear ratio change time	1	1	1	1
Clutch operation settings				
Clutch on trigger type	I/O clutch on request	I/O clutch on request	I/O clutch on request	I/O clutch on request
Edge selection	Level	Level	Level	Level
Method	Direct	Direct	Direct	Direct
Slip method	Specify slip time	Specify slip time	Specify slip time	Specify slip time
Slip time	1	1	1	1
Slip curve selection	Linear	Linear	Linear	Linear
Clutch off trigger type	I/O clutch off request	I/O clutch off request	I/O clutch off request	I/O clutch off request
Edge selection	Disable	Disable	Disable	Disable
Phase ratio	0	0	0	0

Select the axis and master axis to synchronize.  
Please select from the following.  
No synchronous master, Axis 1, Axis 2, Axis 3, Axis 4, Axis 5, Axis 6, Axis 7, Axis 8, Virtual Axis 1, Virtual Axis 2, Pulse input CH1, Pulse input CH2, Pulse input CH3, Pulse input CH4

OK Cancel Copy axis Initialize Help

3. Click the [OK] button.

### **i** Info.

- Axes set as slave axes operate in synchronization with the master axis as long as synchronous control is enabled. No slave axes can perform positioning and other control independently from the master axis while synchronous control is enabled.

### ■ Slave axis positioning parameter settings

Slave axes operate in synchronization with the master axis, but the following items are basic axis settings and must be set for each slave axis.

- Unit setting
- Number of pulses per revolution
- Movement amount per rotation

### **i** Info.

- For details of positioning parameter setting items, refer to "7.8 Positioning Parameter Settings".



### 9.3 Starting and Canceling Synchronous Control

#### 9.3.1 Starting and Canceling Synchronous Control

■ **Startup and cancellation operations**

- It is possible to cancel synchronous control temporarily by turning ON the sync cancellation request signal.
- It is possible to operate any slave axes individually while synchronous control is being canceled.
- Synchronous control can be started again by turning OFF the sync cancellation request signal.
- Synchronous control can be cancelled even while the master axis is running.

■ **Related positioning parameters**

Signal name	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Warning clearing for Axis 7 (virtual)	Axis 8 (virtual)	Operation
Synchronization cancellation request	Y158	Y159	Y15A	Y15B	Y15C	Y15D	Y15E	Y15F	ON: Cancel synchronous control OFF: Execute synchronous control
Synchronization cancellation in progress notification	X158	X159	X15A	X15B	X15C	X15D	X15E	X15F	ON: Synchronization canceled OFF: Under synchronous control

■ **Behaviors while synchronous control is being performed or canceled**

Operation request for axis	Behavior while synchronous control is being performed		Behavior while synchronous control is being canceled
	Master axis	Slave axis	Master/slave axis
Stop-on-contact torque value for home return	× Home return operation is performed on the master axis.  Home return operation is not performed on slave axes. Synchronous operation is performed according to output from the master axis.  Before performing home return, cancel synchronous control.	× The slave axes do not operate in response to operation requests.	○ Regardless of master or slave axes, home return operation is performed only on the axes that are so requested.
JOG operation	○		○

## 9.3 Starting and Canceling Synchronous Control

Operation request for axis		Behavior while synchronous control is being performed		Behavior while synchronous control is being canceled
		Master axis	Slave axis	Master/slave axis
positioning	Single axis	The slave axes operate in synchronization with the operation request for the master axis.		Regardless of master or slave axes, JOG operation is performed only on the axes that are so requested.  ○ Interpolation is executed upon request if the requested axis is the start axis of interpolation.
	Interpolation	○ Interpolation is executed upon request if the master axis is the start axis of interpolation. The slave axes operate in synchronization with the master axis.		
Stop Functions	System stop	All the axes come to a stop regardless of the synchronization settings.		
	Emergency stop	○ The master axis comes to a stop upon request.	○ Only requested axes come to a stop.	○ Only requested axes come to a stop.
	Deceleration stop	The slave axes come to a stop in synchronization with the master axis.	The master axis and other slave axes set for the same master axis continue operating.	(All the target axes come to a stop during interpolation operation.)
	Limit stop	The master axis and all the slave axes come to a stop.		Only axes resulting in a limit error come to a stop.
	Error stop			Only axes resulting in an error come to a stop.

(Note 1) If an error occurs on the master axis or any slave axis, all axes will stop at the same time as the master axis stops.

(Note 2) If a limit stop or error stop occurs on any slave axis, the master axis will stop. Consequently all slave axes will stop at the same time as the master axis stops.

### 9.3.2 Notes on Canceling or Starting Synchronous Control

#### ■ Notes on canceling synchronous control

- Synchronous control can be canceled during the master operation, however, slave axes will stop immediately.
- We recommend that synchronous control be canceled after slave axes are stopped using the clutch function.
- When synchronous control is canceled, relays related to synchronous control (relays for synchronous slave gear ratio change state notification and synchronous slave clutch connection state notification) turn OFF.

#### ■ Conditions for starting synchronous control

Synchronous control can only be started when the following conditions are met.


- Slave axes must be stopped.
- No stop request for slave axes must be generated.

- No error must occur on slave axes.

If these conditions are not met, the unit will not enter a synchronous state and the synchronization cancellation in-progress notification will not turn OFF. If the synchronization cancellation request remains OFF while the conditions are not met, synchronous control will start once the conditions for starting synchronous control are met.

### ■ Phase at the start of synchronous control

The phase is calculated from the “current value after unit conversion” parameter and the “cam control synchronous master axis cycle” synchronization parameter for the master axis. The remainder obtained by dividing “current value after unit conversion” by “cam control synchronous master axis cycle” is used as the phase.

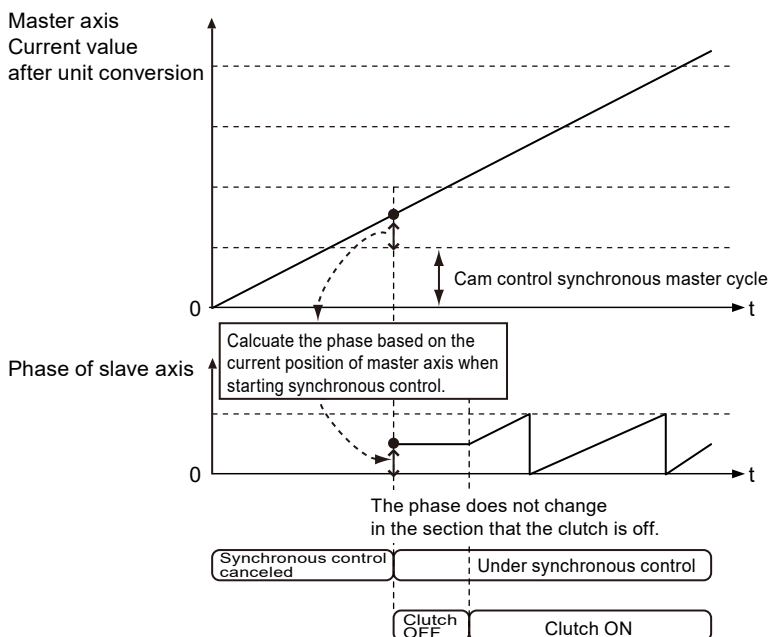


### ■ Procedures for canceling and starting synchronous control

As an example, the following shows the procedures when "Level" is selected for the clutch trigger type.

Section	Procedure	Operation by user program and operation by the unit
Synchronization cancellation	1	The user program turns OFF the synchronous slave clutch ON request.
	2	The unit turns OFF the synchronous slave clutch connection state notification.
	3	The user program turns ON the synchronous state cancellation request.
	4	The unit cancel synchronous control when the synchronization cancellation in-progress notification turns ON.
Synchronization startup	5	The user program turns OFF the synchronization cancellation request.
	6	The unit turns OFF the synchronization cancellation in-progress notification.
	7	The user program turns ON the synchronous slave clutch ON request.
	8	The slave axis starts synchronous operation when the synchronous slave clutch connection state notification turns ON.

### 9.3 Starting and Canceling Synchronous Control

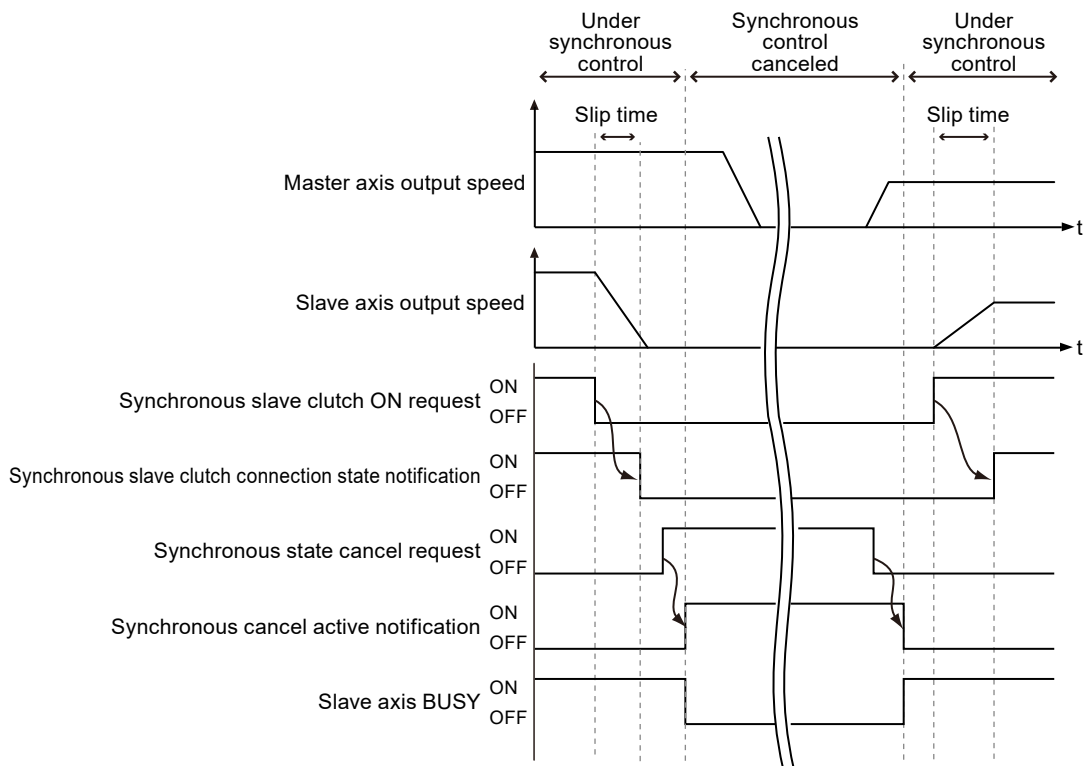


Signal name	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Warning clearing for Axis 7 (virtual)	Axis 8 (virtual)
Synchronization cancellation request	Y158	Y159	Y15A	Y15B	Y15C	Y15D	Y15E	Y15F
Synchronization cancellation in-progress notification	X158	X159	X15A	X15B	X15C	X15D	X15E	X15F
Synchronous slave axis clutch ON request	Y160	Y161	Y162	Y163	Y164	Y165	Y166	Y167
Synchronous slave axis clutch operation notification	X160	X161	X162	X163	X164	X165	X166	X167
Slave axis BUSY	X118	X119	X11A	X11B	X11C	X11D	X11E	X11F

#### ■ Operation when "Level" is selected for the clutch ON trigger type

- If the "synchronous slave clutch ON request" is ON when synchronous control start processing is executed, the clutch will be connected by the direct method regardless of the setting of "slip method".
- However, if the "synchronous slave clutch ON request" is OFF when synchronous control start processing is executed, the clutch will be connected according to the setting of "slip method".

## 9.3 Starting and Canceling Synchronous Control

**When the synchronous slave clutch ON request is on when synchronous control start processing is executed**

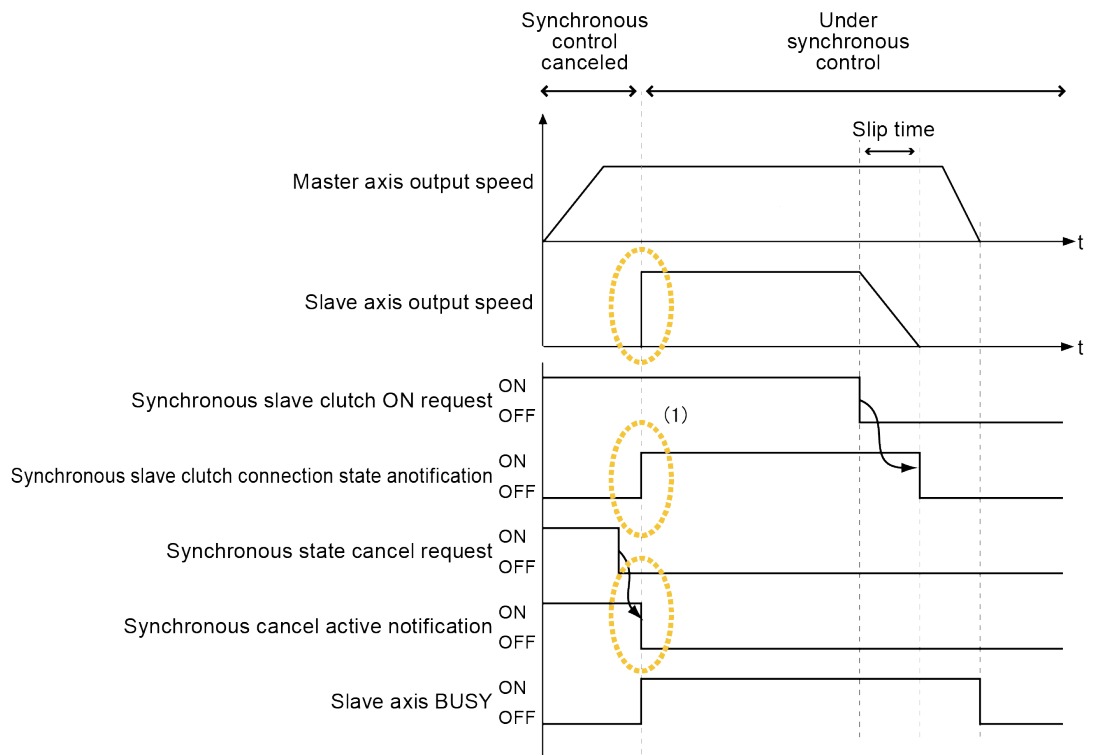


(1)

The slave axes start operations immediately because the clutch is connected (synchronous slave clutch connection state notification: ON) when synchronous control starts (synchronization cancellation in-progress notification: OFF).

## 9.3 Starting and Canceling Synchronous Control

### When the synchronous slave clutch ON request is OFF when synchronous control start processing is executed

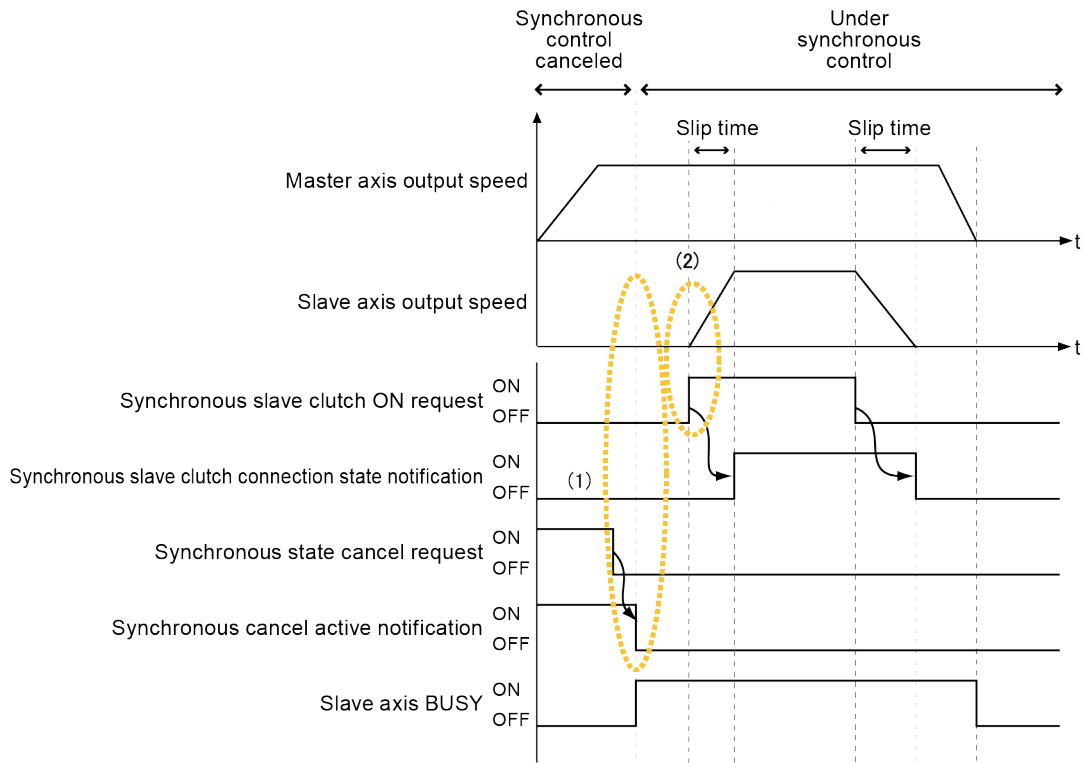

(1)	The slave axes do not operate immediately because the clutch is not connected (synchronous slave clutch connection state notification: OFF) when synchronous control starts (synchronization cancellation in-progress notification: OFF).
(2)	Slave axes start operations according to the synchronous slave clutch ON request.

#### ■ I/O allocations


Signal name	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Warning clearing for Axis 7 (virtual)	Axis 8 (virtual)
Synchronization cancellation request	Y158	Y159	Y15A	Y15B	Y15C	Y15D	Y15E	Y15F
Synchronization cancellation in-progress notification	X158	X159	X15A	X15B	X15C	X15D	X15E	X15F
Synchronous slave axis clutch ON request	Y160	Y161	Y162	Y163	Y164	Y165	Y166	Y167
Synchronous slave axis clutch operation notification	X160	X161	X162	X163	X164	X165	X166	X167
Slave axis BUSY	X118	X119	X11A	X11B	X11C	X11D	X11E	X11F

## 9.4 Electronic gear function

### 9.4.1 Overview of Electronic Gear Function

#### ■ Electronic gear function

The electronic gear function operates the positioning unit at the speed of the master axis that is multiplied by a preset gear ratio.

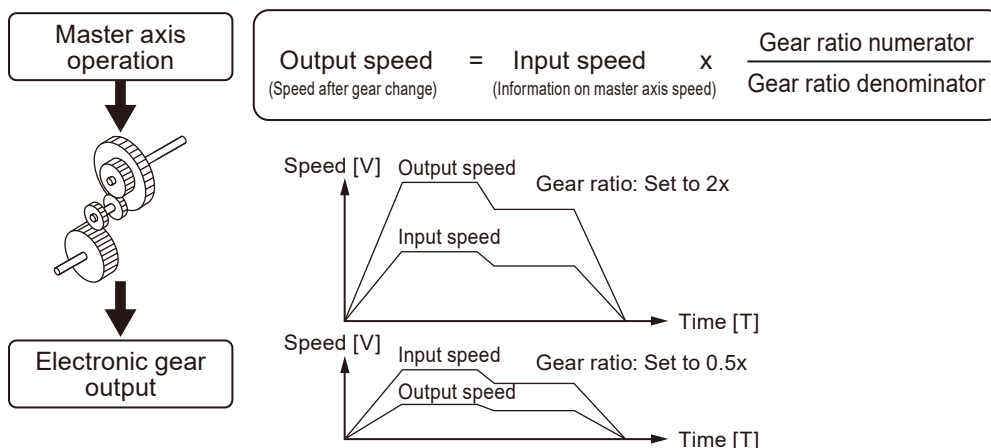

#### ■ Notes on using the electronic gear function

The use of the electronic gear function makes it possible to set the slave axes to a desired speed relative to the master axis. The movement amount of the slave axes, however, is obtained from the following formula. Therefore, the movement amount of the master axis does not match that of the slave axes.

Movement amount of slave axes = Movement amount of master axis × (Gear ratio numerator / Gear ratio denominator)

constant during operation

Note: When the gear ratio is

Do not use the electronic gear function if the movement amount of the master axis needs to match that of the slave axes.



- Keep in mind that the slave axes may come to a sudden stop if an emergency stop or deceleration stop is executed while the gear ratio is being changed.

### 9.4.2 Types and Contents of Positioning Parameters to Set

The following positioning parameters must be set up when electronic gears are used.

Name	Overview
Electronic gear operation setting	Specifies whether to use the electronic gear function. If the electronic gear is not used, the gear ratio of the electronic gear is fixed at 1:1 and the operation of the master axis is input directly into the electronic clutch function.


## 9.4 Electronic gear function

Name	Overview
Gear ratio numerator	Determines the gear ratio of the electronic gear.
Gear ratio denominator	The gear ratios of electronic gears are determined by the following formula: Output speed of electronic gear = Operating speed of master axis x (Gear ratio numerator/Gear ratio denominator)
Gear ratio change time	The time required to change the current gear ratio to a new gear ratio when the gear ratio of the electronic gear is changed during operation.

### 9.4.3 Changing the Gear Ratio during Operation

#### ■ Notes on changing the gear ratio during operation

- If the gear ratio is changed during operation, the new gear ratio will take effect after the time specified for "Gear ratio change time" has elapsed.
- If "Gear ratio change time" is set to 1, the gear ratio will be changed at an acceleration/ deceleration time of 0.
- Acceleration or deceleration during gear ratio change is linear acceleration/deceleration. S-shaped acceleration/deceleration cannot be used.

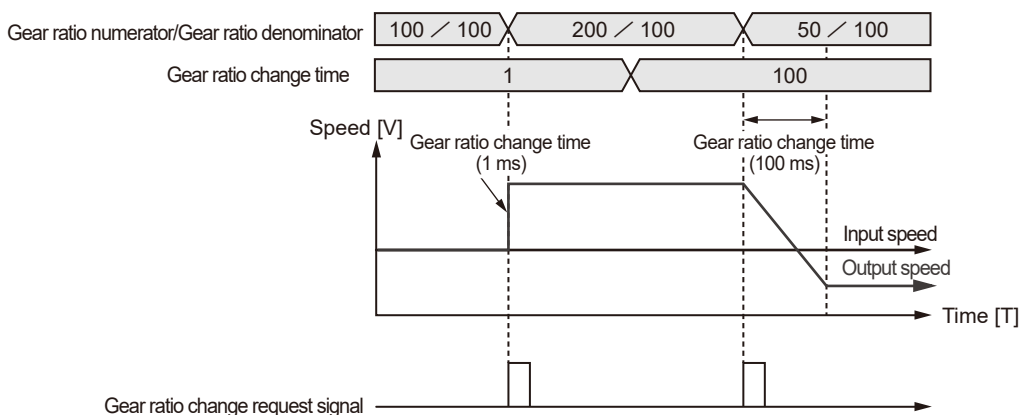

#### ■ Programming method

When changing the gear ratio during operation, use the following procedure to write a user program.

##### 1. Changing the gear ratio

- Change the "gear ratio numerator" and "gear ratio denominator" of the electronic gear in the electronic gear setting area.
- The gear ratio set in this area is the one at the time of starting the positioning unit RTE<sub>X</sub>. Therefore, when returning the gear ratio to the one at the time of starting the positioning unit RTE<sub>X</sub>, we recommend that the pre-change gear ratio be saved.

##### 2. Turning ON the gear ratio change request contact

- Turn ON the "slave axis gear ratio change request" bit in the common area of the positioning unit memory for the target axis allocated to the unit.
- This signal becomes enabled by the "edge type" detection method. Start of gear ratio change is triggered when the "slave axis gear ratio change request" bit turns ON.



### ■ Related positioning parameters

Bank	address End of offset	Name	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtua l)	8 axes (virtua l)
00H (common area)	H64	Slave axis gear ratio change request	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6	Bit7
	H76	Slave axis gear ratio change state notification	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6	Bit7

Turn OFF the slave axis gear ratio change request bit after changing the gear ratio.

### **i** Info.


- For details of the gear ratio setting area, refer to "18.9 Synchronous Control Setting Area in Shared Memory".

## 9.5 Electronic clutch function

### 9.5 Electronic clutch function

#### 9.5.1 What Is the Electronic Clutch Function?

The electronic clutch function engages (turns ON) or disengages (turns OFF) the clutch in response to output from the electronic gear function. When the electronic clutch is disengaged (turned OFF), the master axis is disconnected from the slave axes and the slave axes are no longer interlocked with the master axis and come to a stop. When the electronic clutch is engaged (turned ON), the master axis and slave axes will operate in synchronization.

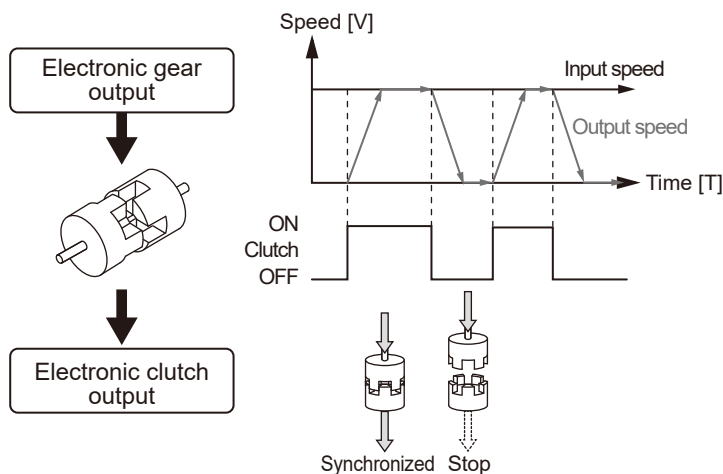

- Keep in mind that the slave axes may come to a sudden stop if the clutch is disengaged while the master axis is decelerating.

#### 9.5.2 Types and Contents of Positioning Parameters to Set

The following positioning parameters must be set up when electronic clutches are used.

Name		Overview
Electronic clutch use/non-use		<p>Specify whether to use the electronic clutch function.</p> <p>When the electronic clutch function is used, the electronic clutch is disengaged (OFF) by default.</p> <p>When performing an operation, be sure to engage the electronic clutch according to the operation.</p> <p>If the electronic clutch function is not used, the electronic clutch will remain engaged, causing output data from the electronic gear to be input directly into the electronic cam. In this case, the master axis always operates in synchronization with the slave axes.</p>
Clutch ON	trigger type	Set "I/O clutch ON request" as the trigger to be detected.
	edge selection	Select from "Level", "Rise", or "Fall" for the method of detecting trigger signals.
	method	Select "Direct" or "Slip" for the clutch engagement method.
	slip time	If "Slip" is selected for the method, set the slip time.

Name		Overview
Clutch OFF	trigger type	Set "I/O clutch OFF request" or "I/O + Phase after clutch (phase specification clutch OFF function)" as the trigger to be detected.
	edge selection	Select "Invalid", "Rise", or "Fall" as the method of detecting trigger signals.
	method	Select "Direct" or "Slip" for the clutch engagement method.
	slip time	If "Slip" is selected for the method, set the slip time.
	Phase ratio	Set if "I/O + Phase after clutch" is selected as the trigger type. After performing clutch OFF using the clutch request signal, continue operation until the slave axis phase reaches the set value.

### Info.

- For details of the mode to stop at any phase after clutch OFF (I/O + Phase after clutch), refer to ["9.5.5 Phase specification clutch OFF function"](#).

### 9.5.3 Trigger Types for Electronic Clutch

The following methods are used to engage (turn ON) or disengage (turn OFF) the electronic clutch.

#### ■ Clutch request signals (Y160 to Y167, Y168 to Y16F)

The electronic clutch is controlled by the "clutch request signals", which are I/O signals allocated to the unit.

#### ■ I/O allocations

Signal name	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual )	8 axes (virtual )	Operation
Slave axis clutch ON request	Y160	Y161	Y162	Y163	Y164	Y165	Y166	Y167	
Slave axis clutch OFF request	Y168	Y169	Y16A	Y16B	Y16C	Y16D	Y16E	Y16F	
Slave axis clutch operation notification	X160	X161	X162	X163	X164	X165	X166	X167	ON: Engaged, OFF: Disengaged

#### ■ edge selection




edge selection	Operation
Level	The clutch operation is switched by using only the slave axis clutch ON request (Y160 to Y167). It can be used by setting the slave axis clutch ON trigger type to "Level". When "Level" is selected for the edge, clutch OFF edge selection and the slave clutch OFF request (Y168 to Y16F) are disabled.
Rise	The clutch turns ON at the rise of the slave clutch ON request (Y160 to Y167). Also, the clutch turns OFF at the rise of the slave clutch OFF request (Y168 to Y16F).

## 9.5 Electronic clutch function

edge selection	Operation
Fall	The clutch turns ON at the fall of the slave clutch ON request (Y160 to Y167). Also, the clutch turns OFF at the fall of the slave clutch OFF request (Y168 to Y16F).

### ■ Operation of each edge selection

The operation of each edge selection is as follows. (Using "Direct method" as the clutch connection method.)

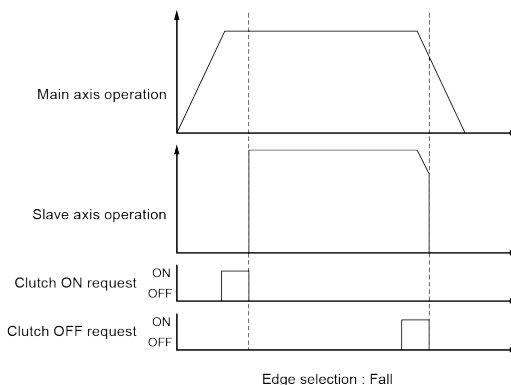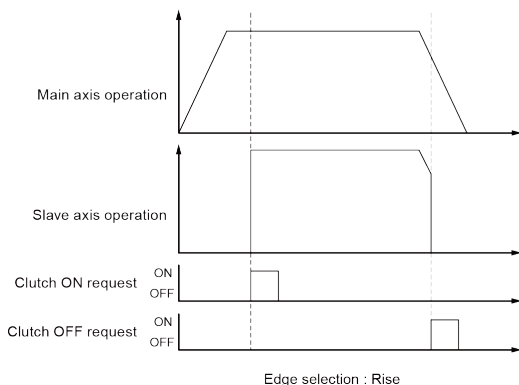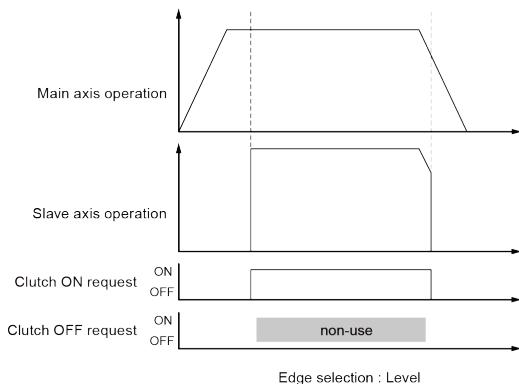


### 9.5.4 Electronic Clutch Engagement Method

The electronic clutch function engages (turns ON) the clutch to start operating the slave axes and disengages (turns OFF) the clutch to stop operating the slave axes. The acceleration or deceleration of the slave axes can be set as shown below.


#### ■ Direct method

This method detects the engagement (ON) or disengagement (OFF) of the clutch to adjust the operating speed of the master axis to match that of the slave axes. With the direct method, the speed of the slave axes with the clutch engaged (ON) or disengaged (OFF) matches the operating speed of the master axis with the acceleration/deceleration time set to 0.

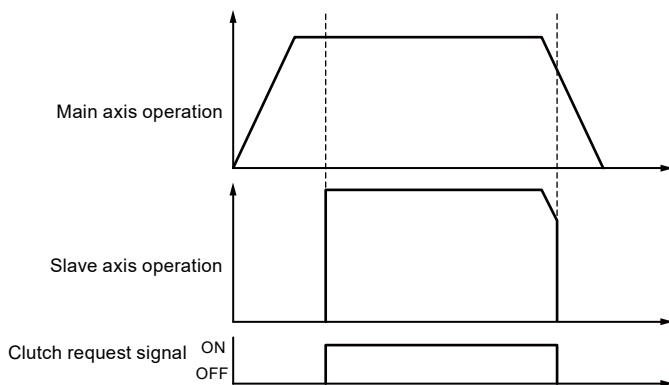

■ **slip method**

This method detects the engagement (ON) or disengagement (OFF) of the clutch and sets the slip time to the acceleration time and deceleration time so that the operating speed of the slave axes can follow the operation speed of the master axis. The acceleration/deceleration method is linear acceleration/deceleration.

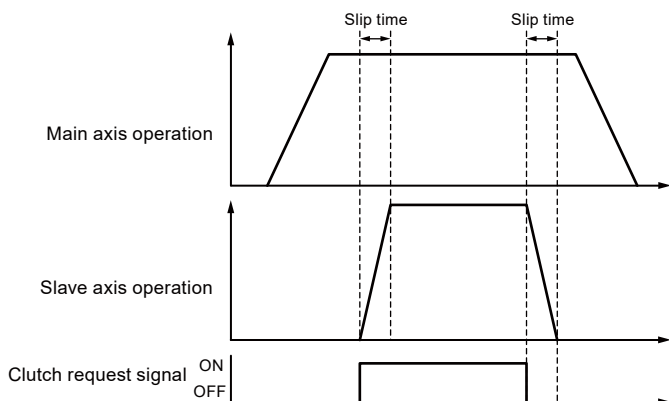

**9.5.5 Phase specification clutch OFF function**


The phase specification clutch OFF function turns OFF an electronic clutch at any specified phase. This function provides consistent control when operations are repeatedly started and stopped at the same phase, for example.

■ **Operation when not using the phase specification clutch OFF function**

When an OFF request is issued as an I/O signal, clutch OFF operation is executed regardless of the phase.

## 9.5 Electronic clutch function


### [Edge selection: Level]

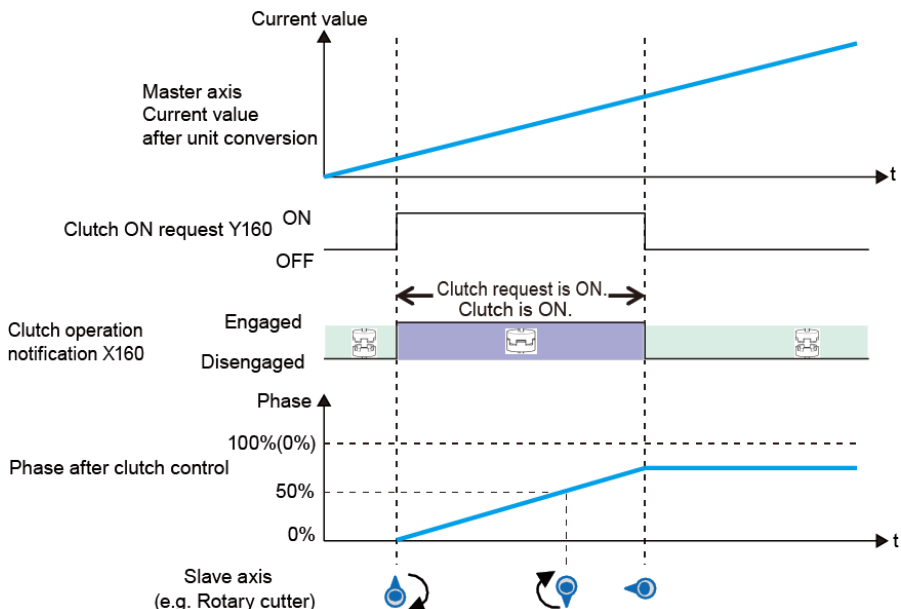

Using the phase specification clutch OFF function disengages the clutch when the phase reaches the set phase after a clutch OFF request is received as an I/O signal.

### ■ Operation when using the phase specification clutch OFF function

#### [Edge selection: Level]

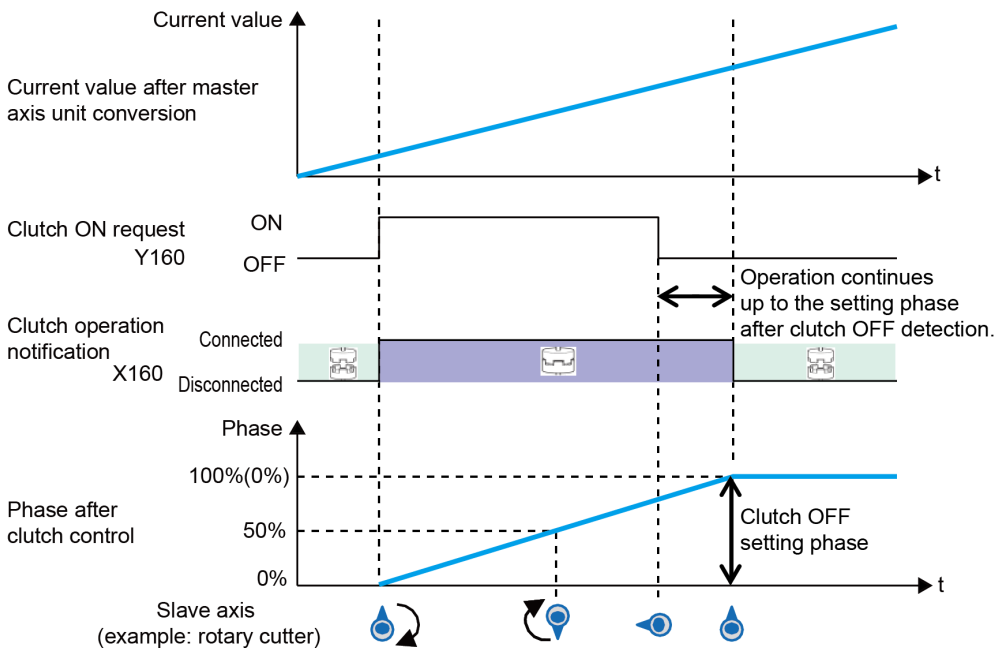


(Note 1) The above figure shows the case where the clutch ON request is set to "Level". Also, either "Rise" or "Fall" can be selected.


(Note 2) The above figure shows the case where the clutch OFF setting phase ratio is set to "0%". The phase ratio can be set to 0% to 99%.

### ■ Notes on operation characteristics

- If "Slip" is set for the clutch OFF method, deceleration stop will be performed when the specified slip time elapses after the phase reaches the clutch OFF setting ratio. To stop the motor at the phase matching the set ratio, set the clutch OFF method to "Direct" beforehand.

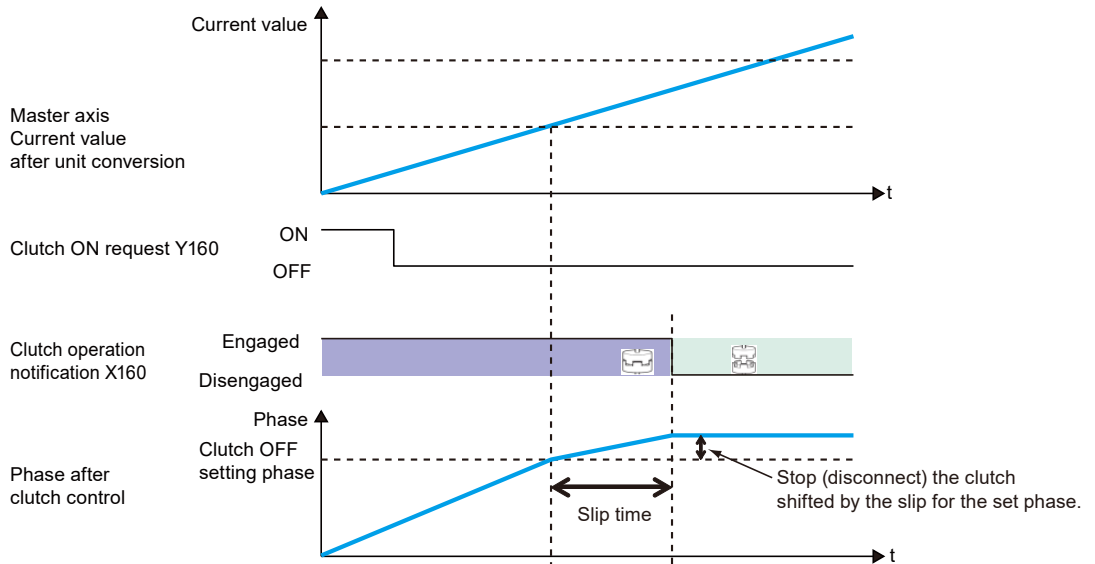

- If the clutch OFF trigger signal is detected at a phase larger than the set clutch OFF setting ratio (0% to 99%), the clutch will be disengaged the next time the phase reaches the set ratio.

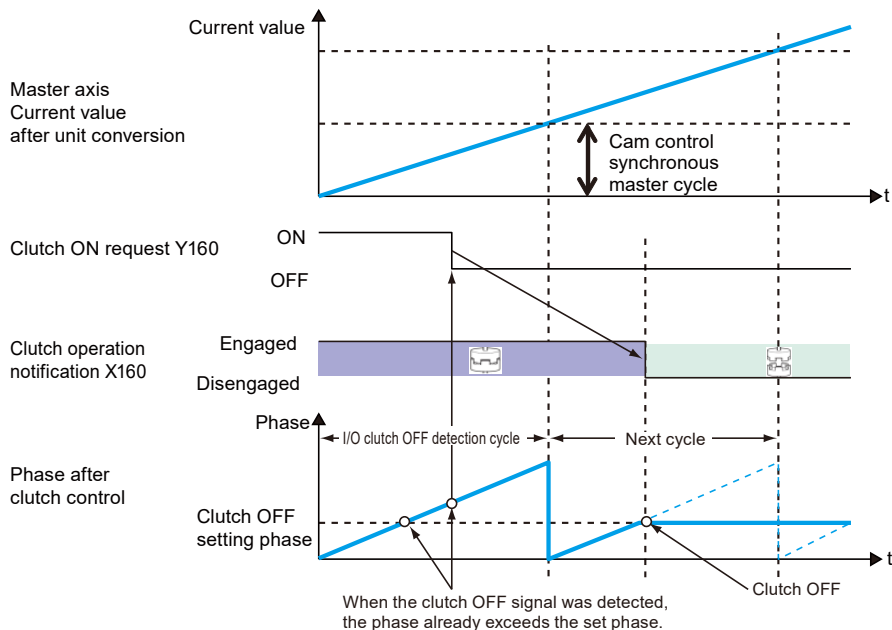


9.6 Electronic Cam Function

9.6.1 Overview of Electronic Cam Function


■ What is the electronic cam function?

The electronic cam function uses a preset cam pattern, determines the movement amount of the slave axes according to the operation of the master axis (phase information) and cam pattern, and outputs the movement amount. The cam pattern uses one rotation of the master axis as an operation reference, based on which the displacement of the slave axes in each phase (rotation angle) of the master axis is defined and set on the "Configurator" screen.

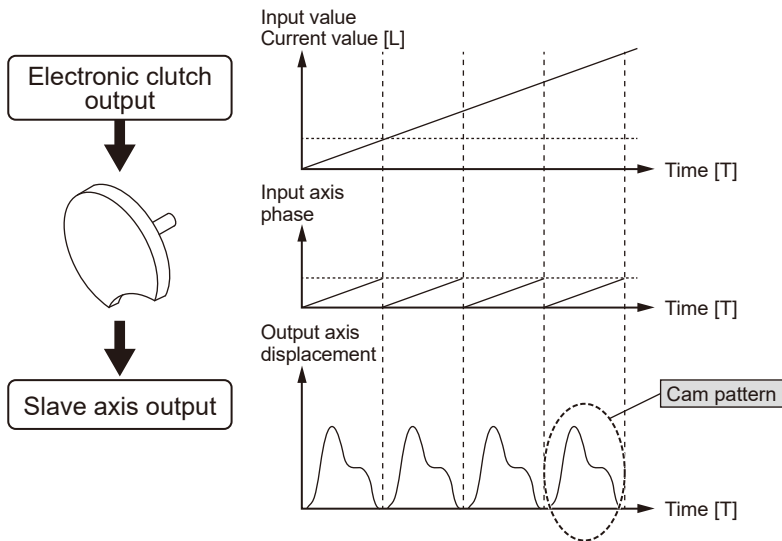

■ Cam pattern

Cam patterns use one rotation of the master axis as an operation reference, based on which the displacement of the slave axes in each phase (rotation angle) of the master axis is defined. Cam patterns are defined with the phase (rotation angle) of the master axis based on one rotation as a reference on the X-axis and the displacement on the Y-axis in percent. Cam patterns are set on the configuration screen of Configurator PM7-RTEX.

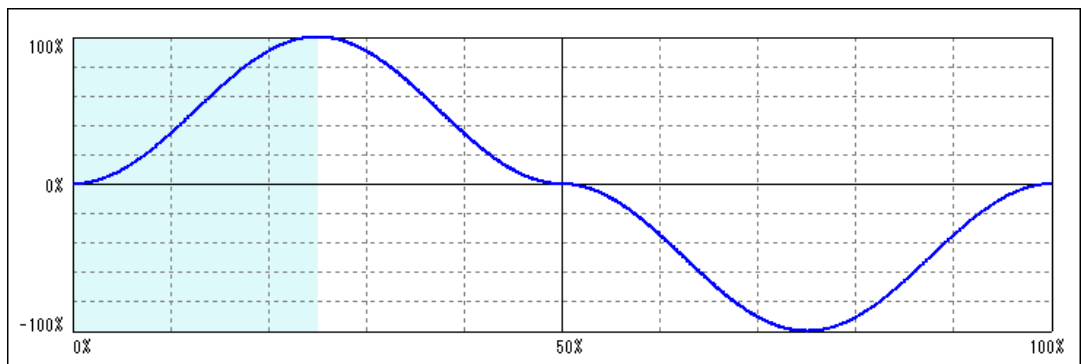



### ■ Cam pattern specifications

Setting item	Specifications
Resolution	1024, 2048, 4096, 8192, 16384, 32768
Number of cam patterns	16 when the resolution is 1024, 2048, 4096, or 8192 8 when the resolution is 16384 4 when the resolution is 32768
Section setting	100%/cycle, 20 sections max.
Displacement setting	100% setting
Cam curve	Select one of the following methods: Uniform velocity/Constant acceleration/Simple harmonic motion/Cycloid/Modified trapezoid/Modified sine/Modified uniform velocity/Trapezoid One-dwell cycloidal $m = 1$ /One-dwell cycloidal $m = 2/3$ /One-dwell modified trapezoid $m = 2/3$ /One dwell modified trapezoidal (Ferguson)/One-dwell modified sine/One-dwell trapezoid/No-dwell modified trapezoid/No-dwell modified uniform velocity/NC2 curve/Asymmetric cycloid/Asymmetric modified trapezoid
Adjustment function	Function to adjust the displacement of desired point data: Max. 1,000 points (in units of cam data)
Shift function	Phase shift in created cam data: 0% to 100%
Display	Displacement/Speed/Acceleration/Jerk Desired display can be specified by check box.

#### **i** Info.

- The phase (current value) of each slave axis is stored in the positioning memory (each axis information area: H20-H21). Values can be read using the F150 READ instruction. For details on the positioning memory, refer to "[18.6.2 Each Axis Information & Monitor Area](#)".

### 9.6.2 Types and Contents of Positioning Parameters to Set

The following positioning parameters must be set up when electronic cams are used.

Name	Overview
Electronic cam use/non-use	Select the use or non-use of the electronic cam function. If the electronic cam is not used, the electronic cam function will not work, and outputs from the electronic clutch will be output as pulses.
Cam pattern	The cam pattern is the most fundamental setting for using the electronic cam function. Cam patterns are set on the "Cam Pattern Settings" screen opened from the configuration screen. The positioning unit RTEX manages cam patterns by converting them into point data according to the preset cam curves and resolution.
Cam control master axis cycle	Set the number of pulses equivalent to all phases of the cam pattern used (master axis single-turn data).
Used cam pattern number	Specify the number of the cam pattern to be used from multiple cam patterns created.
Cam stroke amount	Set the number of pulses equivalent to the total displacement (100%) of the cam pattern to be used.

## 9.6 Electronic Cam Function

Name	Overview
Advance angle correction operation setting	Select the use or non-use of the advance angle correction function.
reference amount	The unit follows the unit system of the master axis. Setting range: -2,147,482,624 to +2,147,482,624 (The decimal point position is based on the unit system.)
reference speed	The unit follows the unit system of the master axis. Setting range: 1 to 2,147,482,624 (The decimal point position is based on the unit system.)
Parameter change time	Setting range: 1 to 10,000 (ms)

### 9.6.3 Rewriting the Cam Pattern with Program

The function for editing cam patterns by program is used to execute changes in cam patterns via a user program.

#### ■ Procedure for editing cam patterns


Editing cam patterns is executed by two operations: "reading cam tables" and "rewriting cam tables". These operations are performed using the "cam pattern editing area" in the positioning memory.

#### (1) Procedure for changing a cam pattern that has already been set

Procedure	Operation by the user program and operation by the unit
1	Read a cam table into the cam pattern editing area.
2	Change the positioning parameters in the cam table read into the cam pattern editing area.
3	Rewrite the cam table.

#### (2) Procedure for creating a new cam pattern

Procedure	Operation by user program and operation by the unit
1	Write the positioning parameters of cam pattern data to be created to the cam pattern editing area.
2	Rewrite the cam pattern data.

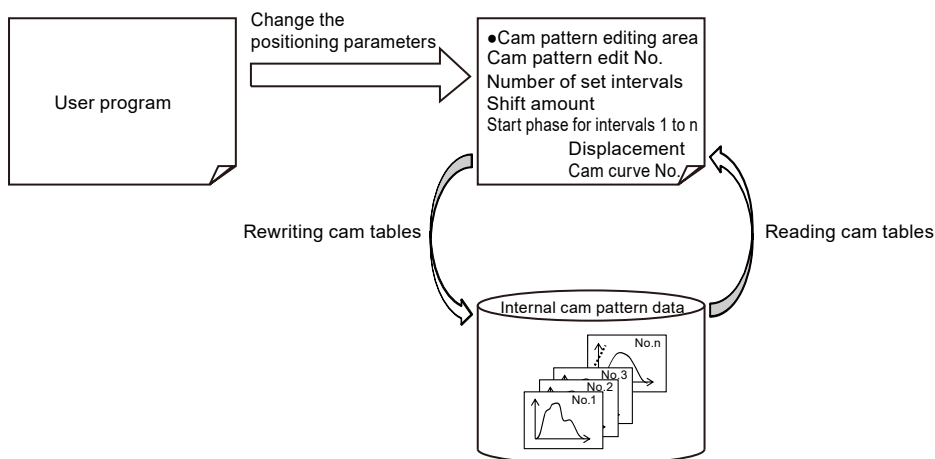

■ Execution conditions for editing cam patterns

Editing cam patterns by program can be executed when the following three conditions are met.


- No axis is in the process of synchronous operation. (The synchronization cancellation in-progress notification flag for each axis is ON.)
- No axis is operating. (The BUSY flag of each axis is OFF.)
- Positioning parameters are set correctly.

Also, when a read request and a rewrite request are executed simultaneously, reading takes priority. In this case, the execution result of the rewrite request is abnormal termination (response code: FF21H).

■ Procedure for reading cam pattern data

Procedure	Operation by user program and operation by the unit
1	The cam pattern number to be read into the cam pattern editing area is set by the user program.
2	The ladder program turns ON the cam table read request.
3	After reading is complete, the unit stores the response code in "Cam table read result" and then turns ON the cam pattern read completion notification flag.
4	Once the cam table read request turns OFF, the unit turns OFF the cam pattern read completion notification flag.

## 9.6 Electronic Cam Function

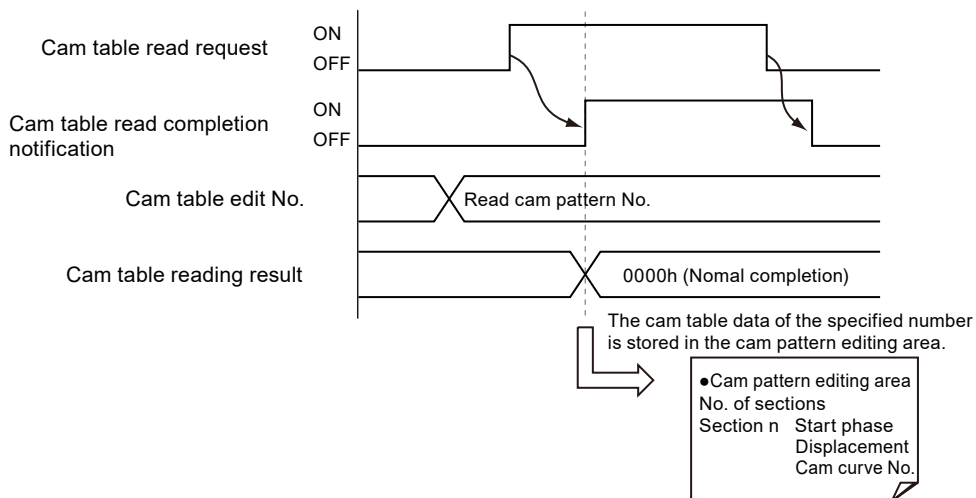


### ■ Related positioning parameters

Bank	address End of offset	Name	Default	Description
60H (cam pattern editing area)	H54	Cam table read request/ completion	H0	H0: Cam table read request OFF H1: Cam table read request ON
	H58	Cam pattern Read result	H0	Stores the result of read processing (response code). [Range] (Hexadecimal number) H0000: Normal termination Other than H0000: Abnormal termination

### ■ Procedure for rewriting cam pattern data

Procedure	Operation by user program and operation by the unit
1	The user program stores the necessary setting/positioning parameters in the cam pattern editing area. Cam pattern number to be rewritten Number of sections: The following positioning parameters for sections 1 to n (n is the specified number of sections) Start phase Displacement Cam curve no.
2	The ladder program turns ON the cam table rewrite request.
3	After rewriting is complete, the unit stores the response code in "Cam table rewrite result" and then turns ON the cam pattern rewrite completion notification flag.
4	Once the cam table rewrite request turns OFF, the unit turns OFF the cam pattern rewrite completion notification flag.

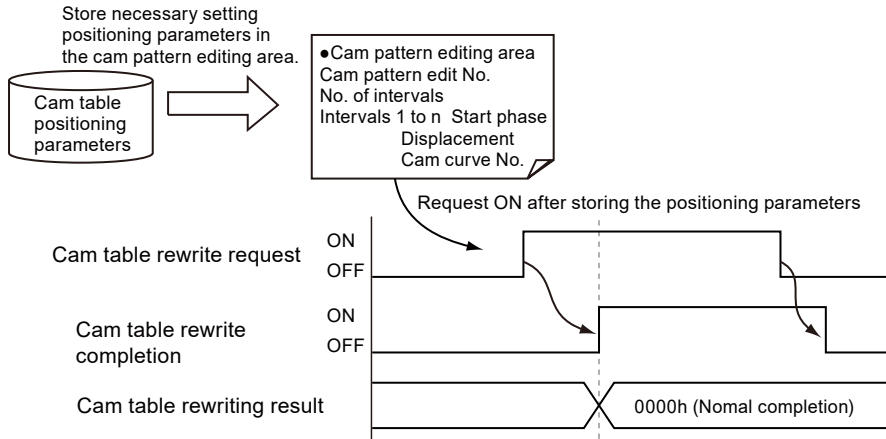


■ Related positioning parameters


Bank	address End of offset	Name	Default	Description
60H (cam pattern editing area)	H55	Cam table rewrite request/ completion	H0	H0: Cam table rewrite request OFF H1: Cam table rewrite request ON
	H59	Cam pattern rewrite result	H0	Stores the result of rewriting processing (response code). [Range] (Hexadecimal) H0000: Normal termination Other than H0000: Abnormal termination

■ Sample programs

- The following sample program shows the case where slot number 0 is used, Axis 1 is set as the master axis and axes 2 to 8 are set as slave axes, and the phase, displacement, and curve type of section 3 of cam table number 2 are changed.
- Synchronous control cancellation is executed for all the slave axes (axes 2 to 8). It is verified that all slave axes (axes 2 to 8) are not in the process of synchronous control and all axes (axes 1 to 8) are not active.
- The cam table is read and positioning parameters are changed and rewritten.

## 9.6 Electronic Cam Function

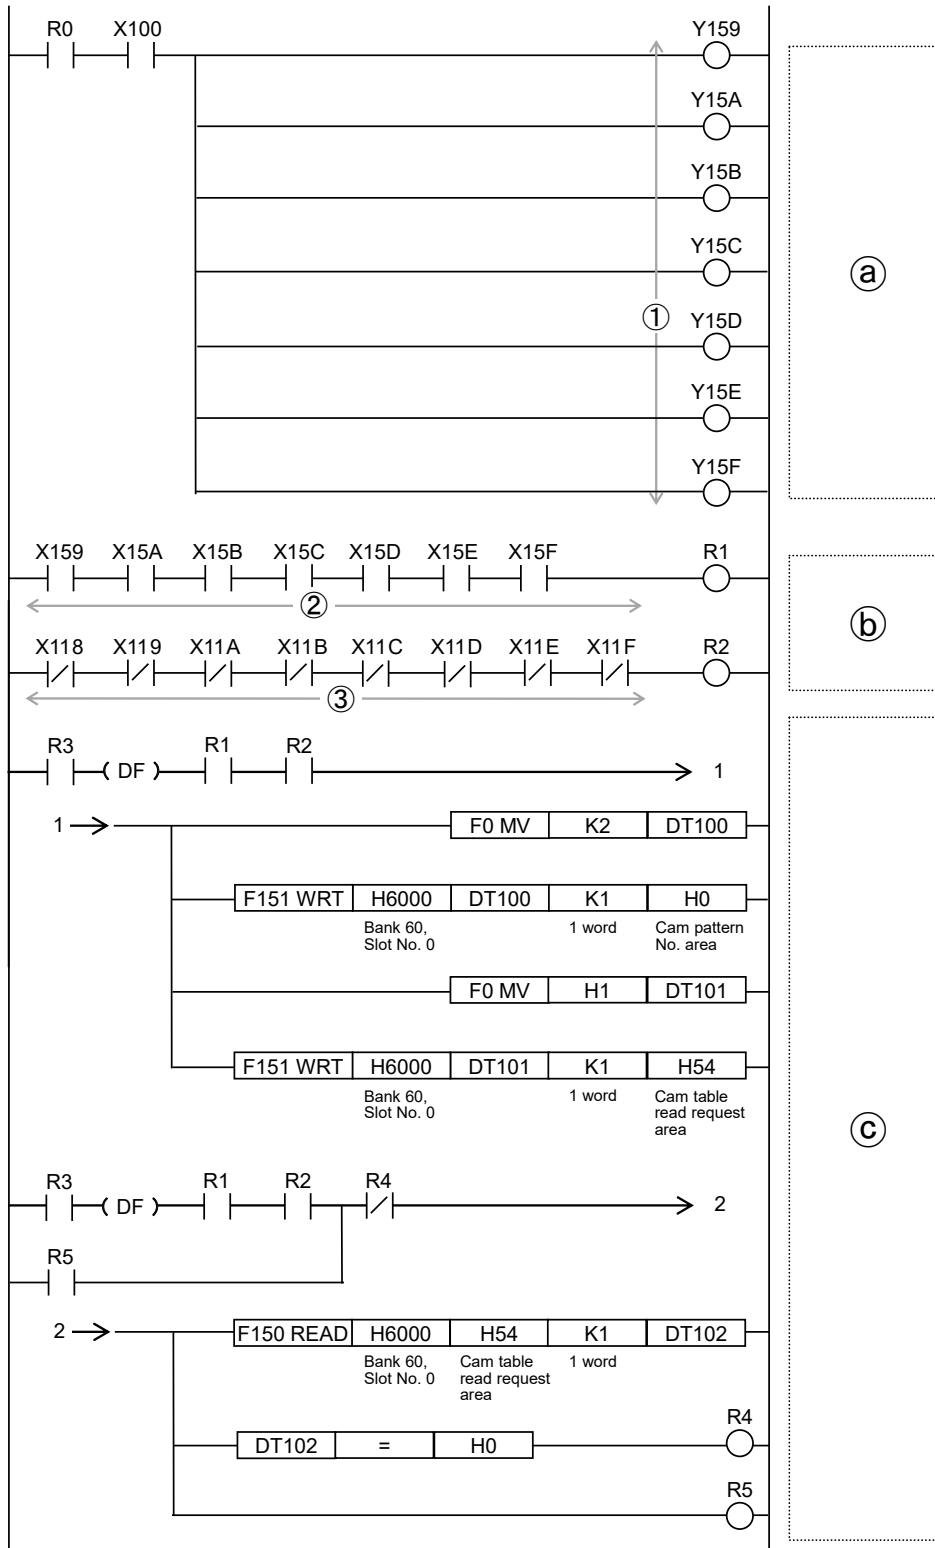

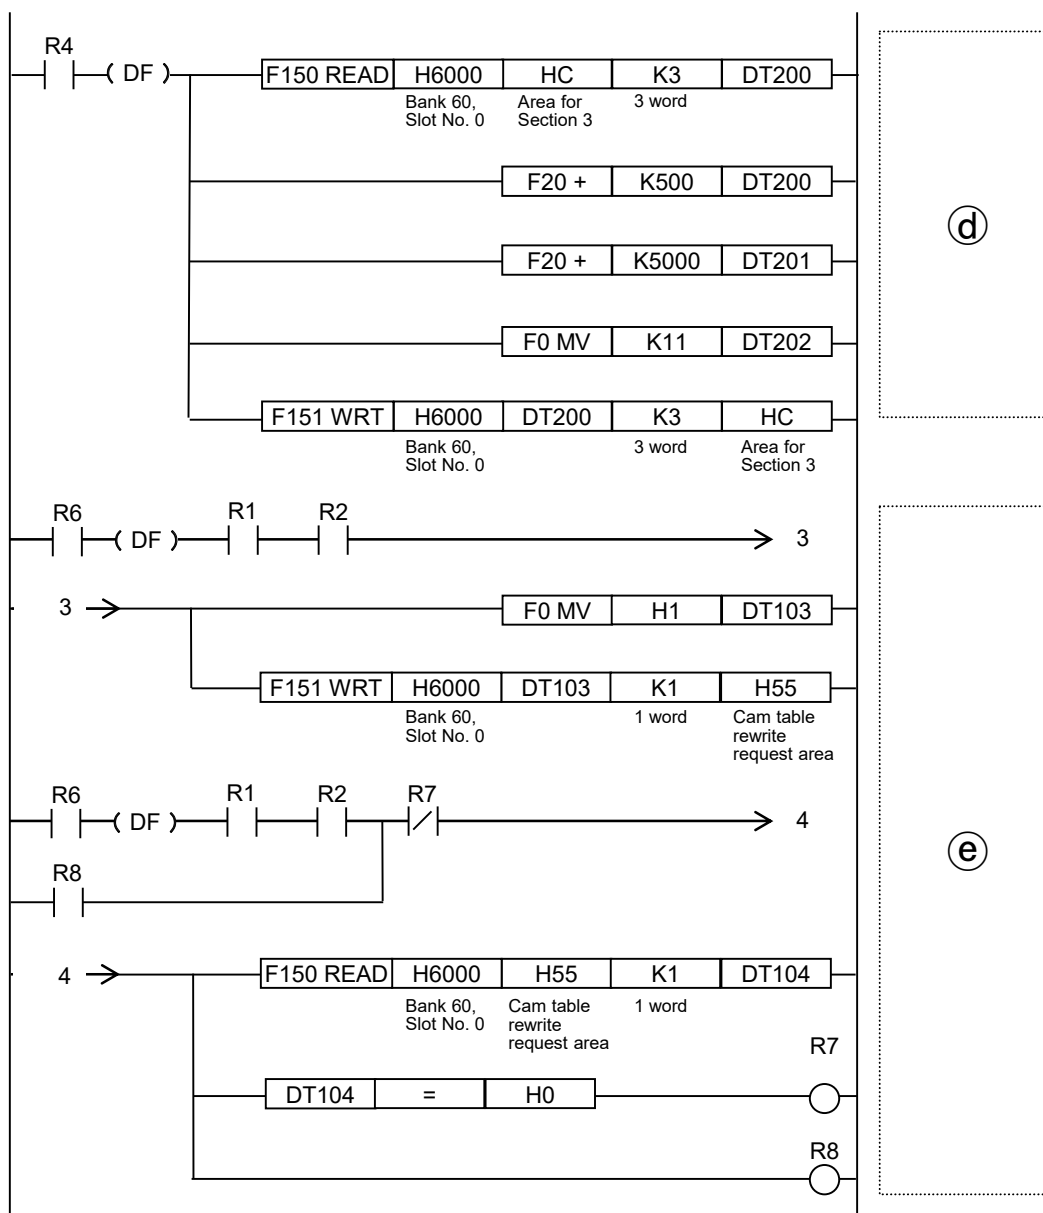

Code	Items specified in the program	Description
(a)	Canceling synchronous control for all axes	Cancels synchronous control for all slave axes.
(b)	Confirming the conditions for execution enable	Confirms that synchronous control is canceled for all slave axes and all axes are stopped.
(c)	Starting to read the cam table	Specifies a cam pattern number and executes a read request.
(d)	Changing positioning parameters in the cam table editing area	Edits the cam table data for section 3 upon completion of reading the cam table. In this example, the start phase is

## 9.6 Electronic Cam Function

Code	Items specified in the program	Description
		set to +5%, the displacement is set to +50%, and the cam curve is set to constant acceleration.
(e)	Starting to rewrite the cam table	Rewrites the specified cam pattern data.

Code	Items specified in the program	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
(1)	Synchronization cancellation request	Y158	Y159	Y15A	Y15B	Y15C	Y15D	Y15E	Y15F
(2)	Synchronization cancellation in-progress notification	X158	X159	X15A	X15B	X15C	X15D	X15E	X15F
(3)	BUSY	X118	X119	X11A	X11B	X11C	X11D	X11E	X11F

### ■ Notes on rewriting cam patterns by program

- Even if cam pattern data is rewritten by this function, the cam pattern data of positioning parameters will not be updated.
- If the mode changes from PROG. mode to RUN mode when the power is turned ON or configuration data is rewritten, the cam pattern will be rewritten again to the cam pattern set in Configurator PM7-RTEX. If necessary, rewrite the cam pattern again using a program.
- The "cam pattern update" flag can be used to check whether the cam pattern has been rewritten with the positioning parameter data.
- If a read request specifying an unregistered cam pattern number is issued at the time of read processing, all the read data will be "0".
- If a rewrite request is issued when no cam is registered (the resolution is undetermined), rewriting will be performed assuming that the resolution is 1024.
- Cam adjustment data set in Configurator PM7-RTEX cannot be used. Also, when rewriting is executed, the pre-rewrite adjustment data will be initialized.

### **i** Info.

- For details on the "cam pattern update" flag, refer to "[18.11.3 Cam Pattern Editing Execution Confirmation Area](#)".

### ■ Notes on using phase shift

(1) For the values of cam pattern parameters (start phase, displacement, and cam curve), specify the values that are obtained when the phase shift amount is 0(%).

(2) The start phase of section number 1 is 0(%). If any values other than 0(%) are set, an error will occur. For the start phases after section number 2, specify any start phase. When settings are read or written, the phase that is the nearest to the resolution within the unit is automatically calculated.


(3) After setting the cam pattern that is obtained when the phase shift amount is 0(%), set a phase shift amount. For the phase shift amount also, when settings are read or written, the value that is the nearest to the resolution within the unit is automatically calculated.

When replacing the cam pattern set in Configurator PM7-RTEX (configuration tool software) with a user program, perform the following procedure.

(5) Record the phase shift amount specified in Configurator PM7-RTEX.




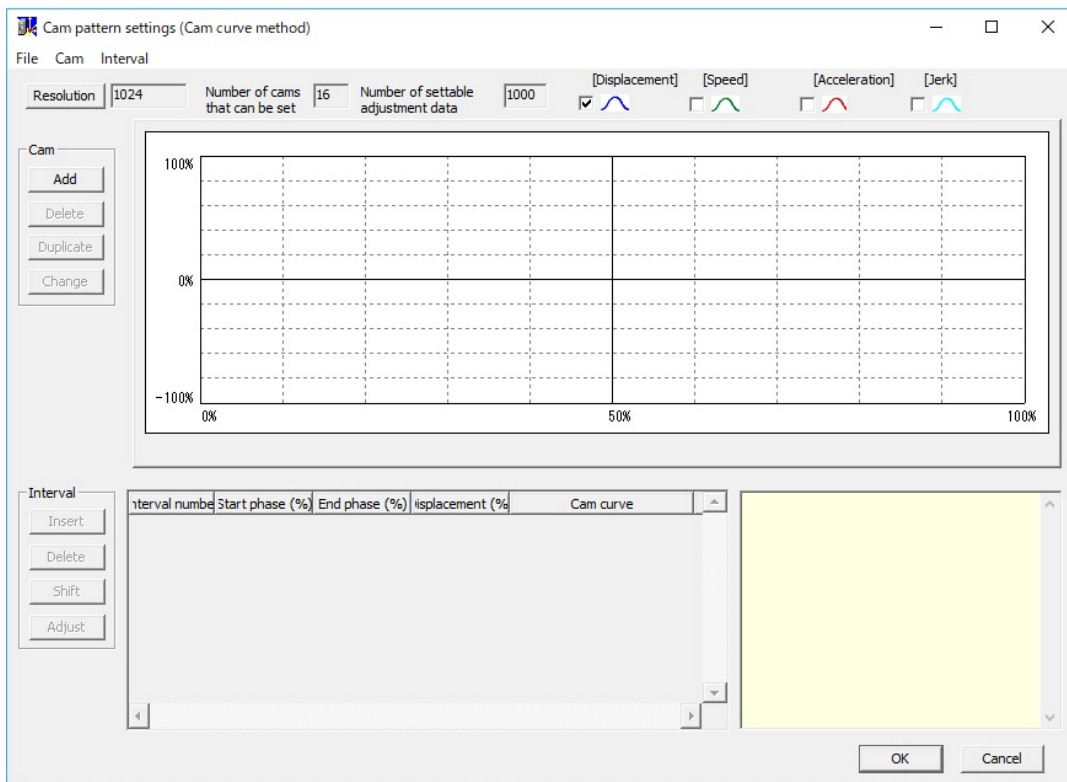
- (6) The start phase displayed in Configurator PM7-RTEX is the one to which the phase shift amount has been added. Set the phase shift amount to 0(%) to check the values of the cam pattern parameters (start phase, displacement, and cam curve).
- (7) In the user program, use the parameter values obtained in (6). For the start phase, use values to two decimal places.
- (8) Set the phase shift amount recorded in (5). As is the case with the start phase, use values to two decimal places.

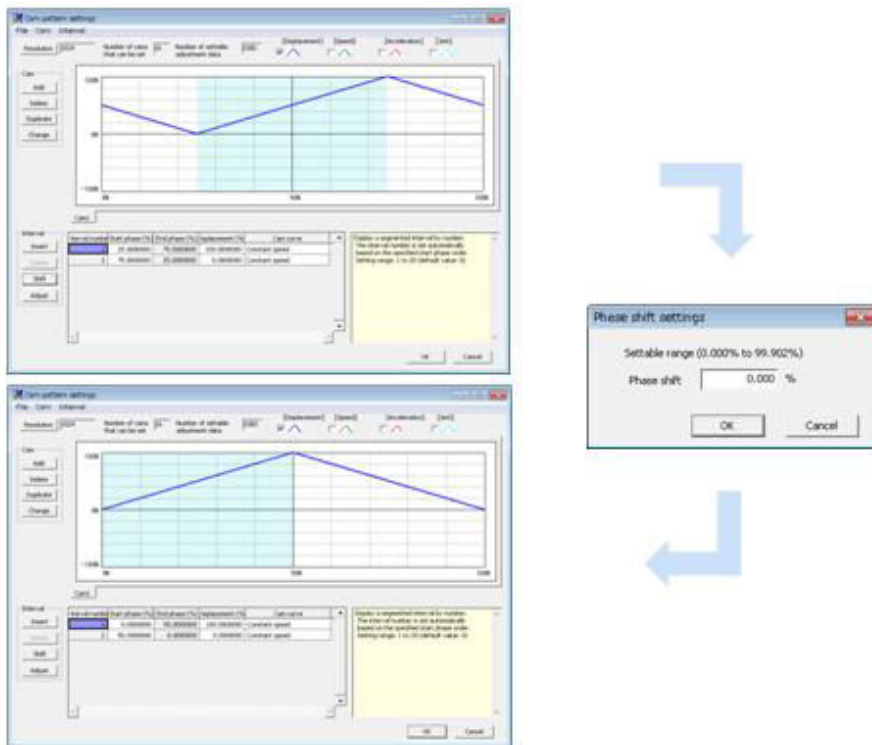

**9.6.4 Cam Pattern Setting Method (Cam Curve Method)**

■ **Starting the cam pattern setting screen**

- In FPWIN GR7, selecting **Tool>Configurator PM7-RTEX** from the menu bar starts the configuration tool.
- Select **Axis Settings>Cam Pattern Settings** from the menu bar of the unit setting tool or click the  icon on the toolbar. The "Cam Pattern Settings" screen will be displayed.
- A blank screen is displayed for a new file, or settings of cam pattern 1 are displayed when data already exists.




■ **Resolution settings**


Click the [Resolution] button on the "Cam Pattern Settings" screen. The Resolution Settings screen is displayed. Select "Resolution" and click the [OK] button.

**i Info.**


- The resolution is valid for all cam patterns. You cannot set a different resolution for each cam pattern.
- The number of cam patterns that can be set varies with each resolution. The current resolution cannot be changed to a new resolution if the current number of cam patterns exceeds the number of cam patterns that can be used for the new resolution. In this case, delete cam patterns and then change the resolution again.

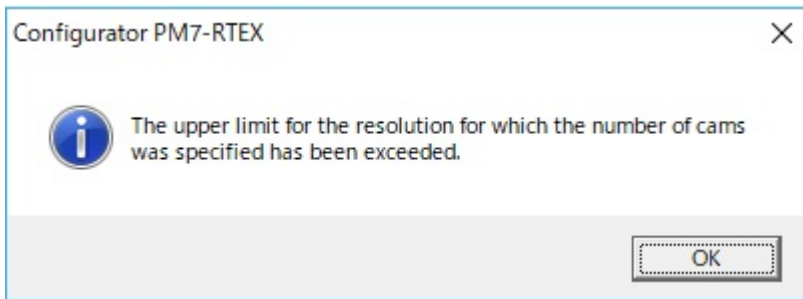**■ Creating or copying new cam patterns**

The cam number selection screen is displayed by clicking the [Add] button in the "Cam" field. Select the desired cam number and click the [OK] button.

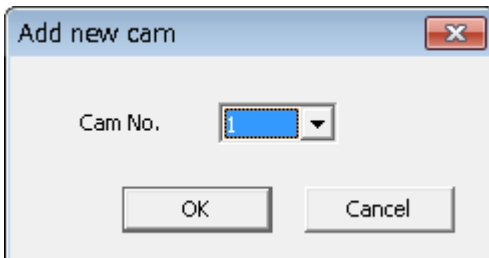


Cam patterns can also be copied. Click the [Copy] button and select the cam pattern numbers for the copy destination and copy source.

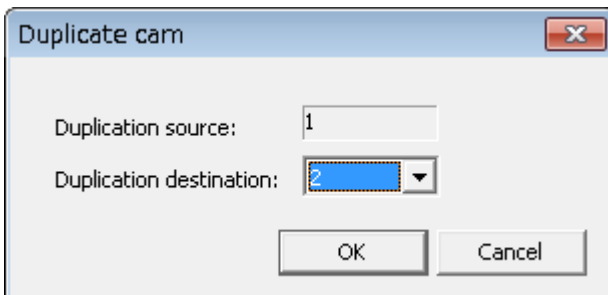

When changing the cam number, click the [Change] button and select a new cam number.


## 9.6 Electronic Cam Function

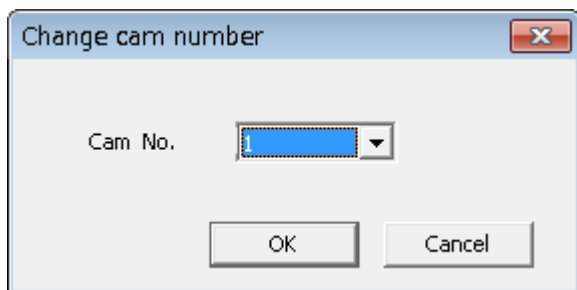


(Note 1) Existing cam pattern numbers cannot be set.

### ■ Setting cam patterns

Click the [Insert] button in the “Section” field. Set the start phase, and click the [OK] button. By default, only one section whose phase is 0% to 100% is set for the cam pattern. By setting the start phase, the above section is divided into multiple sections.

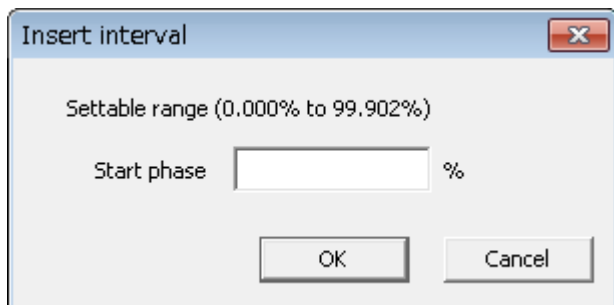

The background of selected sections is displayed in white, and the background of unselected sections is displayed in gray.

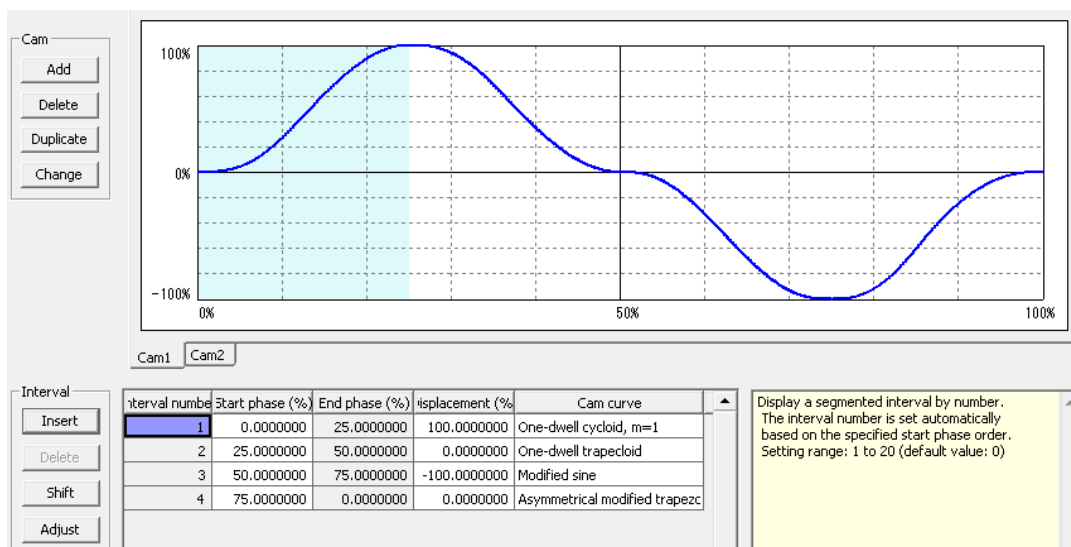

### Note

- The start phase may not become the specified phase value, depending on the resolution.


### ■ Editing the cam table

You can edit the cam table data that has been created.

Set the following items for each section that has been set.

- Start phase (%)
- Displacement (%)
- Cam curve

The cam curve changes according to the settings.

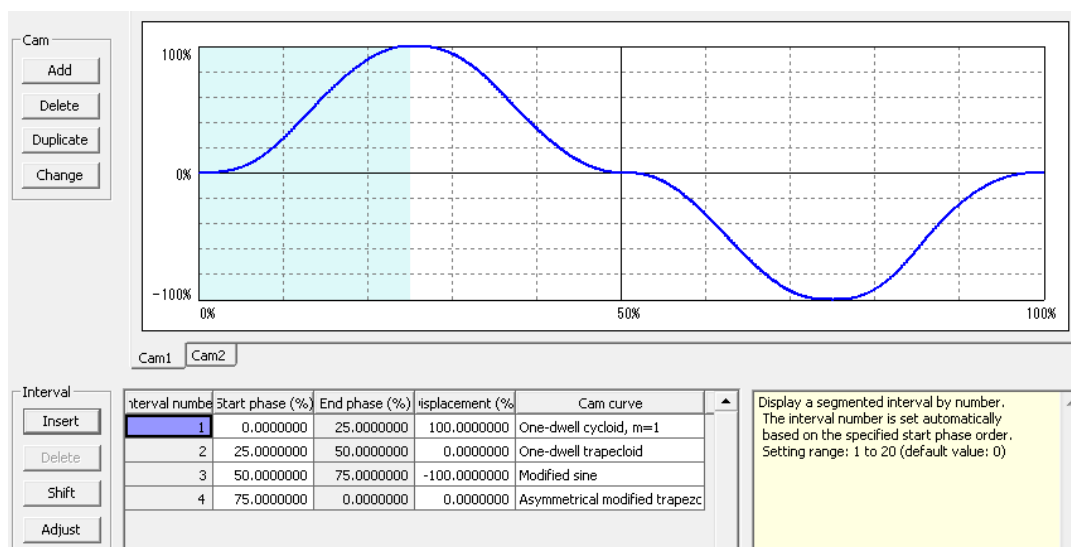

### **i** Info.

- The end phase cannot be set. The end phase is automatically changed when the start phase is changed.
- Do not change to rapid displacement on the cam curve that has been set. In the case of rapid displacement, the motor may not be able to follow the output.
- Similarly, set the 0% and 100% of the phase to be the same displacement.

### ■ Checking the cam table


Check the set cam table (cam curve). In synchronous control, slave axes operate by following the cam curve. Therefore, the motor may not be able to follow the output if the change in the cam curve is rapid. For changes in the cam curve, information such as not only displacement but also acceleration is important. The following information including displacement can be displayed on the "Cam Table Setting" screen.

Display item	Overview
Displacement	This item is set in the cam table.
Speed	The operating speed of the cam table with a set displacement amount is displayed. Also, the speed is displayed as a relative value.
Acceleration	Accelerations in each phase are displayed. Care is required, as a rapid speed change occurs in any section where acceleration significantly changes.

## 9.6 Electronic Cam Function

Display item	Overview
Jerk	Jerk refers to a change rate of acceleration. It is obtained by differentiating acceleration by time.


Each displayed item can be set by selecting the following check boxes on the "Cam Table Setting" screen. Refer to each display items, and change the cam table settings.



Interval number	Start phase (%)	End phase (%)	Displacement (%)	Cam curve
1	0.0000000	25.0000000	100.0000000	One-dwell cycloid, m=1
2	25.0000000	50.0000000	0.0000000	One-dwell trapezoid
3	50.0000000	75.0000000	-100.0000000	Modified sine
4	75.0000000	0.0000000	0.0000000	Asymmetrical modified trapezoid

### ■ Adjusting the cam table

The "Cam Table Setting" screen provides a function to finely adjust data for set cam curves. Rapid change can be lessened by performing fine adjustments for set cam data using the adjustment function. To perform adjustment, select the section number to be adjusted and click the [Adjust] button. The adjustment screen will be displayed. The adjustment screen shows the table of the portion corresponding to the specified section number among all the sections (0% to 100%) divided by the specified resolution.

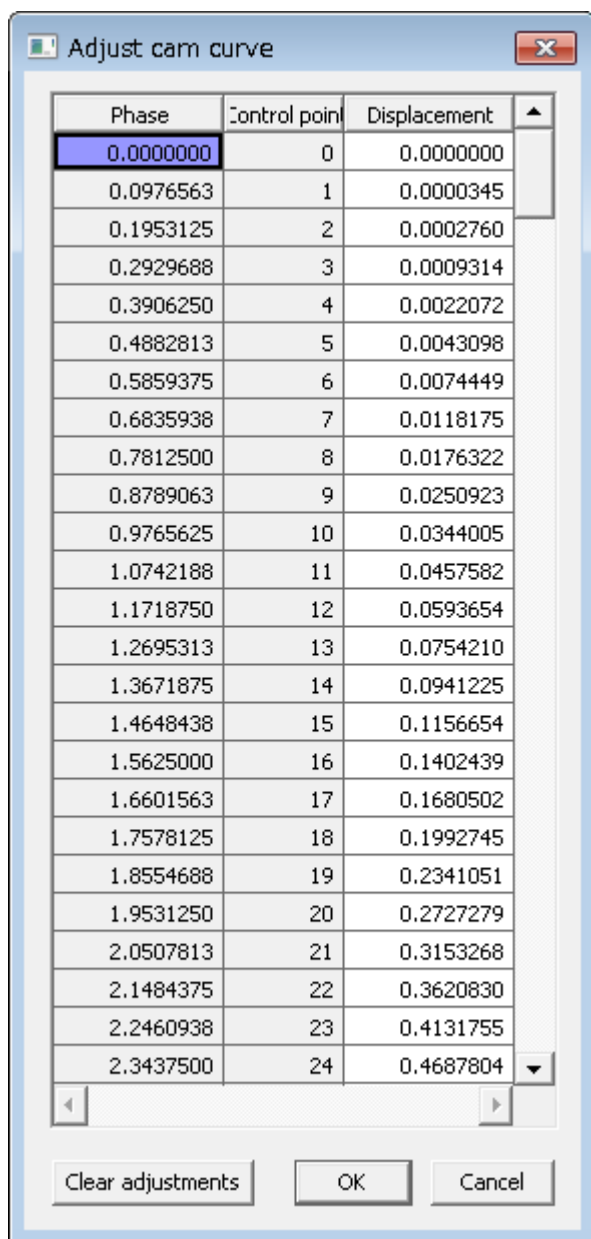

Select the data of the phase (control point) you want to adjust and change the displacement data. Select [OK] to reflect the adjustment. Select [Clear Adjustment] to clear the set adjustment data. The cam curve of the section number for which the adjustment was executed is displayed in red, indicating that adjustment has been performed.


## 9.6 Electronic Cam Function

Interval number	Start phase (%)	End phase (%)	Displacement (%)	Cam curve
1	0.0000000	25.0000000	100.0000000	One-dwell cycloid, m=1
2	25.0000000	50.0000000	0.0000000	One-dwell trapezoid
3	50.0000000	75.0000000	-100.0000000	Modified sine
4	75.0000000	0.0000000	0.0000000	Asymmetrical modified trapezoid


### ■ Shifting the cam table

The cam pattern that has been created is defined as phase 0% to 100%. In actual operations, created cam patterns may not match the phases used as the references. Cam table shifting is a function that sets the percentage of the phase of a position in current value coordinate system 0 to the created cam pattern.


### Image of shifting electronic cam

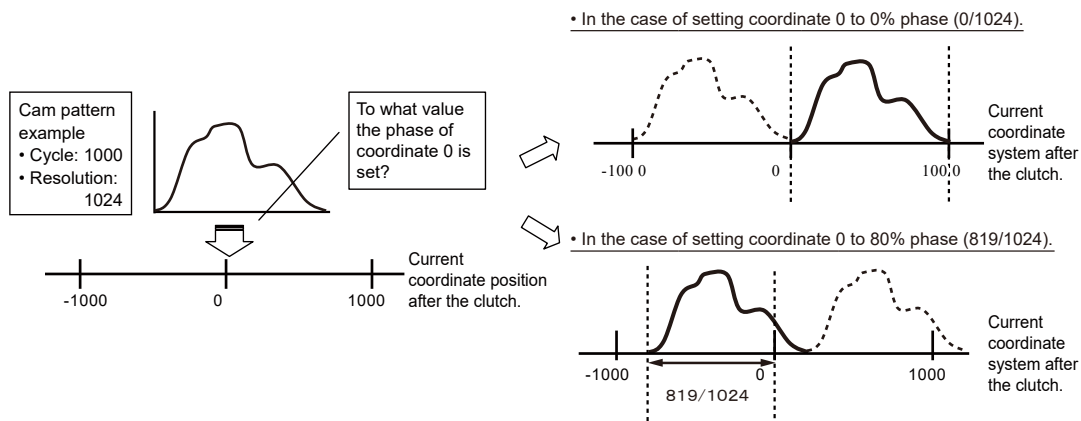


Select "Shift" from "Section", and set a shift amount.

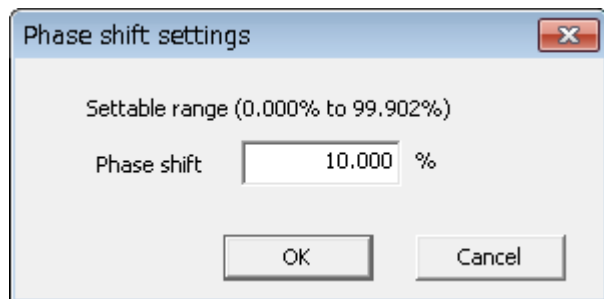

The created cam pattern is shifted by 10% and the display is refreshed.

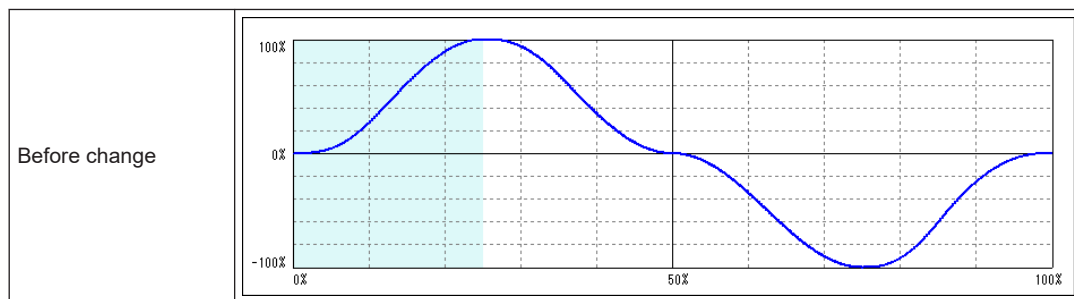



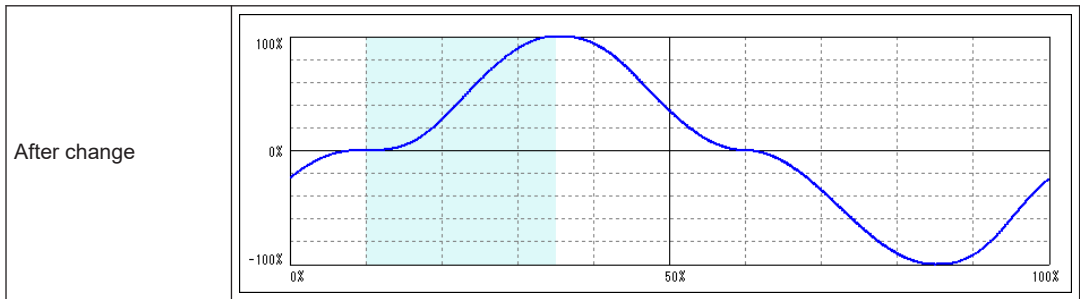

#### ■ Saving the cam table

Created cam tables can be automatically saved by clicking the [OK] button on the "Cam Table Setting" screen. Saved cam tables are managed by FPWIN GR7, and set by downloading them to the positioning unit RTEX.

## 9.6 Electronic Cam Function

### 9.6.5 Cam Pattern Setting Method (Cam Point Method)

The cam point method enables electronic cams to be used by loading cam data created with external tools.

- Cam data created with external tools must be data obtained by splitting a cam curve by resolution (cam point data).
- The specifications of the cam point method are as below.

Item	Description
Resolution	32,769 points For point data, be sure to set 32,769 points. (Control point 0 is fixed at displacement 0%.) Express master axis phases as 0% to 100% and slave axis displacements as $\pm 100\%$ . Displacements from control point 1 to control point 32768 can be set freely.
Number of cam patterns	Max. 4
Cam point data creation	Use spreadsheet software to create data. Data can also be edited on the "Cam Pattern Settings (Cam Point Method)" screen of Configurator PM7-RTEX.
Cam point data input	Copy the slave axis displacement data edited in spreadsheet software to the displacement cell of the cam point data in Configurator PM7-RTEX.
Cam operation method	Select the cam pattern number to be used in the "Synchronization Parameter Settings" dialog box of Configurator PM7-RTEX.

### Precautions when using "Cam point method"



- "Cam curve method" and "Cam point method" cannot be used at the same time.
- If the cam pattern setting method is switched between "Cam curve method" and "Cam point method", the pre-switchover data will be discarded when the settings are applied after the switchover.

- Restrictions apply to the combinations of FP0H Positioning Unit RTEX and Configurator PM7-RTEX versions. Check the restrictions in the table below.

**Combinations of FP0H Positioning Unit RTEX and Configurator PM7-RTEX versions**



FP0H Positioning Unit RTEX version	Configurator PM7-RTEX version	
	2.11.0.0 or earlier	2.12.0.0 or later
Ver1.02 or earlier	Old	x
Ver1.10 or later	x	New

(Note 1) "Old": Resolution is 32,769 points and control point 0 is fixed at displacement 0%


"New": Resolution is 32,768 points and control point 0 can be set to any displacement

x: Not available

- "Cam point data" created when FP0H Positioning Unit RTEX V1.02 or earlier is used cannot be directly used with FP0H Positioning Unit RTEX V1.10 or later.
- To reuse data for old versions, data must be recreated in a new environment.

**Cam point data creation method**

Use spreadsheet software to create cam point data.  
Create cam point data according to the following rules.

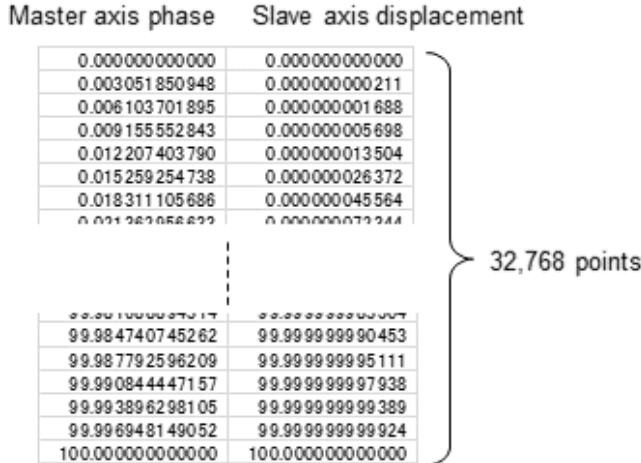

Master axis phase	Slave axis displacement
Create cam point data for 32,768 points from the phase of control point 1 (0.0030518%) to the end phase (100%). (Start phase 0% for control point 0 is fixed.)	Specify a displacement for each phase within a range of -100% to +100%.

## 9.6 Electronic Cam Function

### **i** Info.

- Set the following items in the "Synchronization Parameter Settings" dialog box of Configurator PM7-RTEX.

Name	Description
Cam synchronous control master axis cycle	Set the movement amount of the master axis when the phase is 100%.
Used cam pattern number	Select the cam pattern to be used from the registered cam patterns.
Cam stroke amount	Set the movement amount of the slave axis when the phase is 100%.

	Axis 1	Axis 2	Axis 3	Axis 4
Slip time	1	1	1	1
Slip curve selection	Linear	Linear	Linear	Linear
Clutch off trigger type	I/O clutch off request	I/O clutch off request	I/O clutch off request	I/O clutch off request
Edge selection	Disable	Disable	Disable	Disable
Phase ratio	0	0	0	0
Method	Direct	Direct	Direct	Direct
Slip method	Specify slip time	Specify slip time	Specify slip time	Specify slip time
Slip time	1	1	1	1
Slip curve selection	Linear	Linear	Linear	Linear
Electronic cam operation settings	Use	Not use	Use	Not use
Cam control synchronization master period	1000000	1	1	1
Cam pattern number to use	1	1	1	1
Cam stroke	1000000	1	1	1
Advance angle correction operation setting	Not use	Not use	Not use	Not use
Reference value	0	0	0	0
Reference speed	0	0	0	0
Parameter change time	0	0	0	0


Set the cam control synchronization master period.  
The unit conforms to the master axis unit system.  
Setting range: 1 to 2147483647 (default value: 1) pulses

### Cam point data registration method


Use the following procedure to register the created cam point data to Configurator PM7-RTEX. The following procedure is explained assuming that Configurator PM7-RTEX has already been started.

#### **1 2** Procedure

- Select **Axis Settings>Cam Pattern Settings** from the menu bar. The "Select Cam Editing Mode" dialog box is displayed.

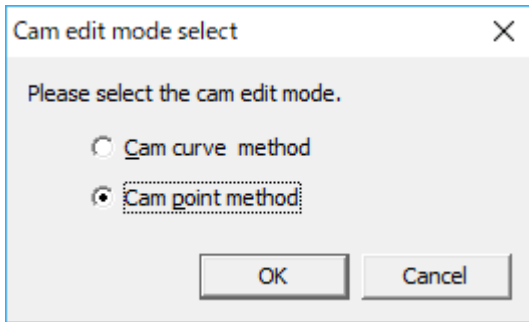

2. Select "Cam Point Method".  
The "Cam Pattern Settings (Cam Point Method)" screen is displayed.

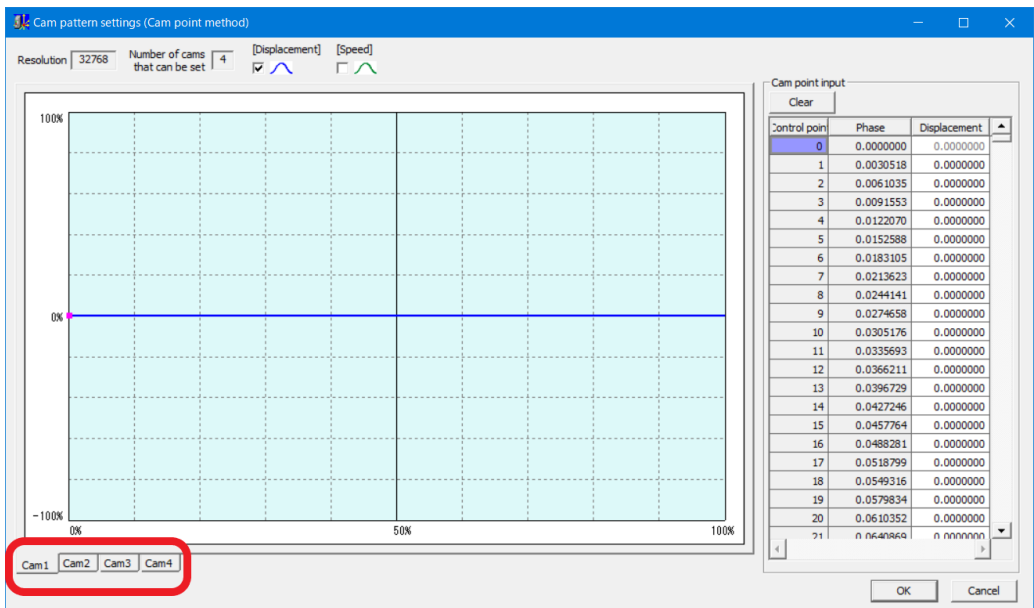


3. Use one of the tabs on the bottom left of the screen to select the cam number to be registered.
4. Open the cam point data created with the spreadsheet software and select and copy all the slave axis displacement data.

## 9.6 Electronic Cam Function

---


0.003051850948	0.00000000211
0.006103701895	0.000000001688
0.009155552843	0.000000005698
0.012207403790	0.000000013504
0.015259254738	0.000000026372
0.018311105686	0.000000045564
0.021362956633	0.000000072344
0.024414807581	0.000000107975
0.027466658528	0.000000153717
0.030518509476	0.000000210831
0.033570360424	0.000000280579
0.036622211371	0.000000364218
0.039674062319	0.000000463010
0.042725913266	0.000000578210
0.045777764214	0.000000711078
0.048829615162	0.000000862869

5. Select the position of "Control point 0" in the "Cam point input" area and paste the copied data.

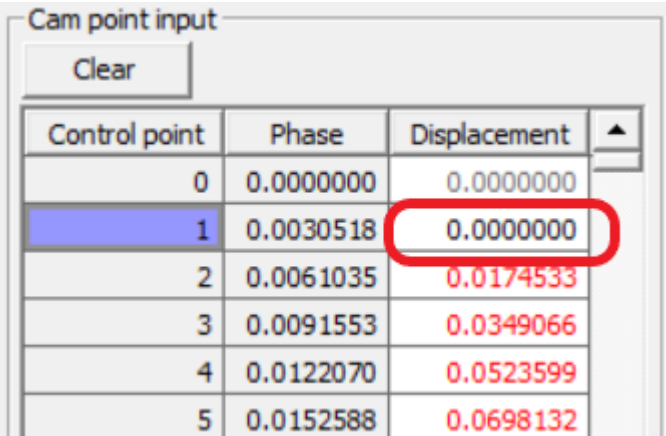

Control point	Phase	Displacement
0	0.0000000	0.0000000
1	0.0030518	0.0000000
2	0.0061035	0.0174533
3	0.0091553	0.0349066
4	0.0122070	0.0523599
5	0.0152588	0.0698132

6. The point data created with the spreadsheet software is registered. The displacement data of each control point (0 to 32,767) can be edited in the "Cam point input" area.

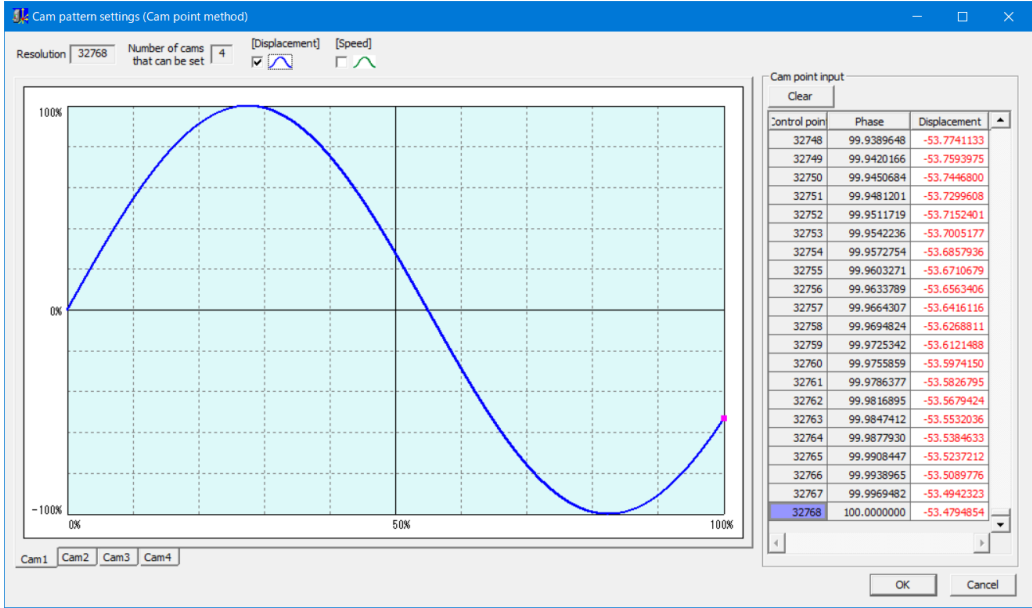

## 9.6 Electronic Cam Function

### 9.6.6 Advance Angle Correction Function

"Advance angle correction function" is used to correct any delays in responses from the mechanical system connected to an electronic cam output or any delays in PLC arithmetic processing time.

#### ■ Specification of advance angle correction amount


- Advance angle correction amounts are specified for each slave axis by using tool software or a user program.
- By setting the "advance angle correction reference speed" and "advance angle correction reference amount", correction amounts are automatically calculated using "master axis input speed" during operation. The advance angle correction amount is calculated using the following formula.

$$\text{Advance angle correction amount} = \text{Master axis input speed} \times \frac{\text{Advance angle correction reference amount}}{\text{Advance angle correction reference speed}}$$

(\*) Master axis input speed : Speed after clutch control

#### ■ Internal processing for advance angle correction

The phase of the master axis that is used as the reference for slave axis correction is obtained as calculation data according to the set value of the advance angle correction amount. The value is used as a reference when the correction amount for the slave axis is obtained.

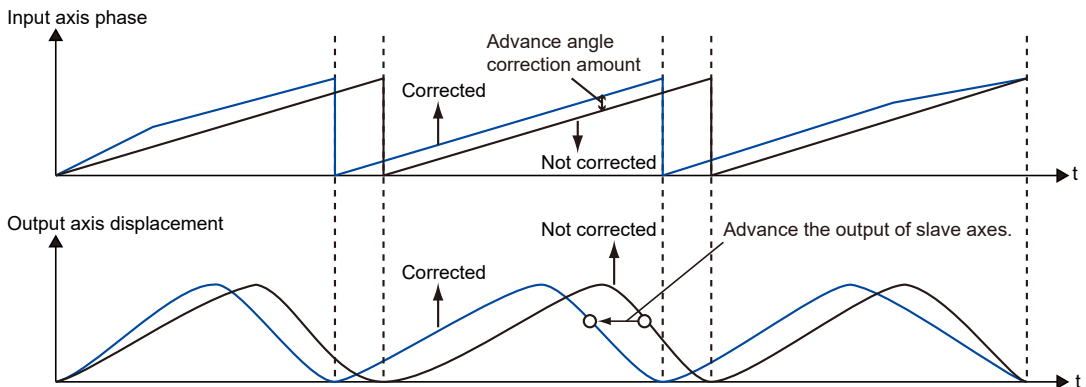

#### ■ Settings using tool software

Specify settings in the "Synchronous Control Setting" dialog box.




Electronic cam operation settings	Use
Cam control synchronization master period	1000000
Cam pattern number to use	1
Cam stroke	1000000
Advance angle correction operation setting	Use
Reference value	0
Reference speed	100
Parameter change time	100

Name	Overview
Advance angle correction operation setting	Select the use or non-use of the advance angle correction function.
Reference amount	The unit follows the unit system of the master axis. Setting range: -2,147,482,624 to +2,147,482,624 (The decimal point position is based on the unit system.)
Reference speed	The unit follows the unit system of the master axis. Setting range: 1 to 2,147,482,624 (The decimal point position is based on the unit system.)
Parameter change time	Setting range: 1 to 10,000 (ms)

■ Sample programs

The following sample programs use slot No. 0 to change the advance angle correction reference value and advance angle correction reference speed of Axis 1 to 50 and 3000, respectively.

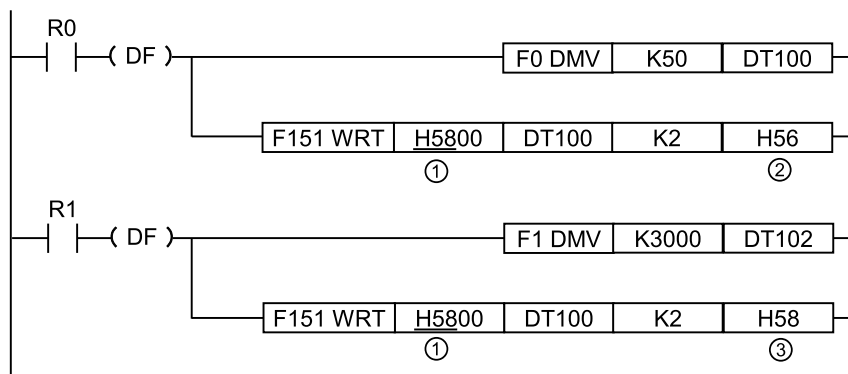


Code	Items specified in the program	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
(1)	Bank	H58							
(2)	Advance angle correction reference setting area	H56-H57	HC6-HC7	H136-H137	H1A6-H1A7	H216-H217	H286-H287	H2F6-H2F7	H366-H367

## 9.6 Electronic Cam Function

Code	Items specified in the program	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
(3)	Advance angle correction reference speed setting area	H58-H59	HC8-HC9	H138-H139	H1A8-H1A9	H218-H219	H288-H289	H2F8-H2F9	H368-H369

### ■ Changing the advance angle correction amount during operation

- The advance angle correction amount can be changed during operation.
- After the unit detects any change in "advance angle correction reference speed" or "advance angle correction reference amount", the advance angle correction amount is reflected after the specified "advance angle correction change time" has elapsed.

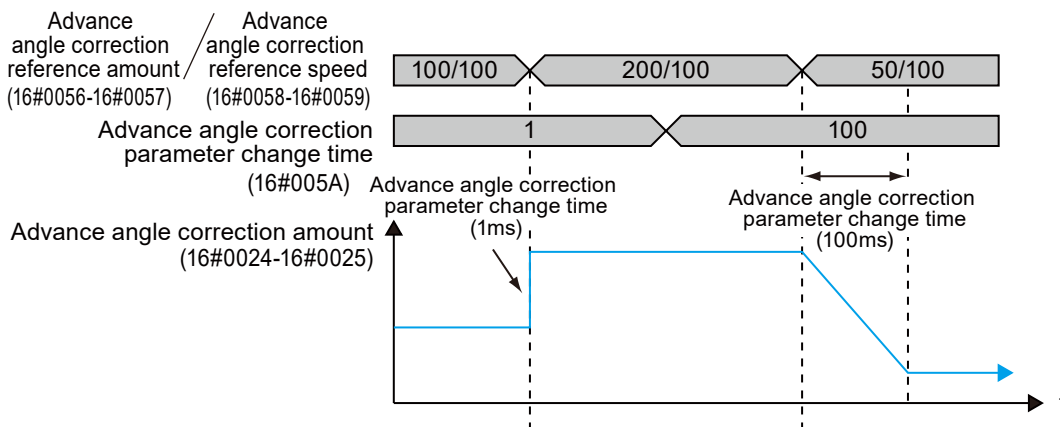


- "Advance angle correction reference speed" and "advance angle correction reference amount" are 32-bit data. If they are changed in 16-bit (1-word) units, they may be changed to unintended values. Always rewrite them in 32-bit (2-word) units.




- If "advance angle correction reference speed" or "advance angle correction reference amount" is changed during operation, the timing of changed data acquisition by the unit may be delayed. Change the synchronization parameter of either "advance angle correction reference speed" or "advance angle correction reference amount" to prevent the "advance angle correction amount" from being rapidly changed.

### ■ Notes on settings

- An overshoot or undershoot may occur depending on the settings when sufficient acceleration/deceleration time is not set for the start or stop of the master axis when the advance angle correction function is used or when the input speed is rapidly increased or decreased by directly engaging or disengaging the clutch when the master axis is operating.
- When using the advance angle correction function, set a sufficient acceleration/deceleration time for the master axis. When using the clutch function in combination, specify settings to prevent the occurrence of rapid acceleration or deceleration by using the slip function.

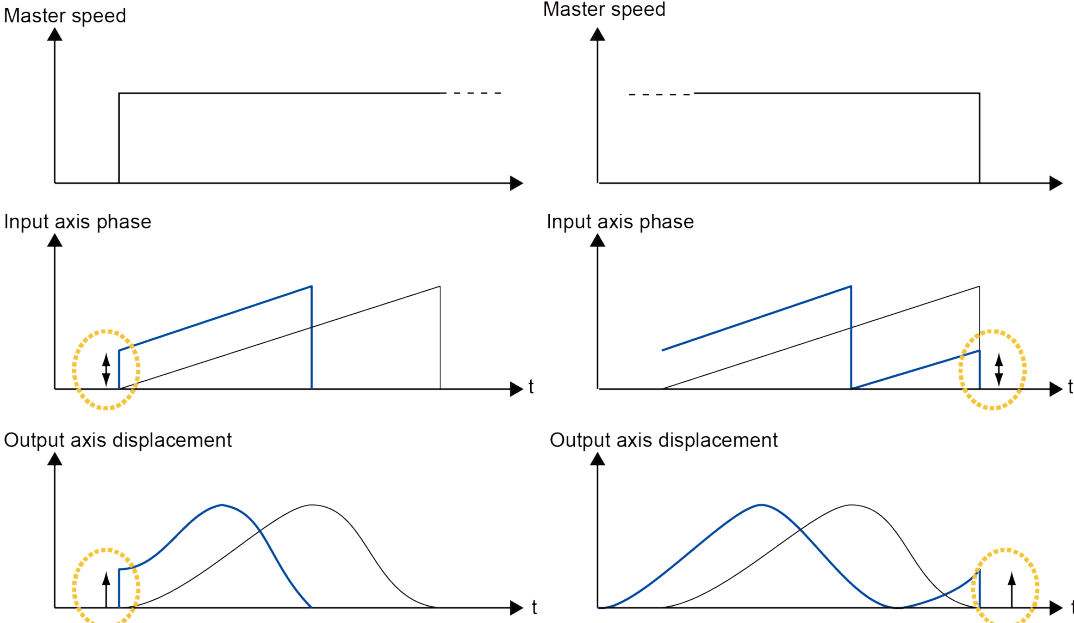

- Depending on the setting of "advance angle correction reference speed" or "advance angle correction reference amount", the calculated advance angle correction amount may exceed the "cam control synchronous master axis cycle". If the advance angle correction amount exceeds the "cam control synchronous master axis cycle", the "synchronous cam master axis cycle" will be the upper limit as shown in the figure below. Set the advance angle correction positioning parameter that matches the input speed.

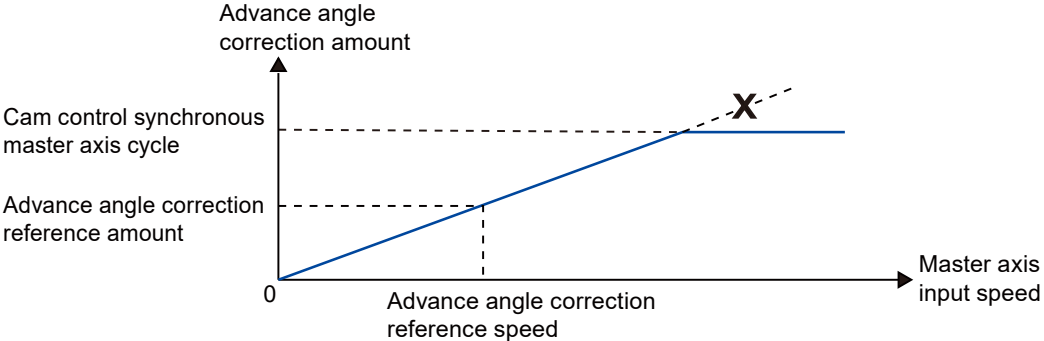

(MEMO)

# 10 Manual Operation (JOG Operation)


---

10.1 Settings and Operation of JOG Operation .....	10-2
10.2 Changing the Speed during JOG Operation .....	10-5

## 10.1 Settings and Operation of JOG Operation

### 10.1 Settings and Operation of JOG Operation

The example below is the case where JOG operation is performed on Axis 1 by using slot number 0. The unit is the number of pulses.

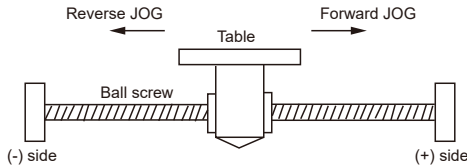


#### ■ Settings

The positioning parameters required for setting up JOG operation are specified in the positioning setting menu of the programming tool.

Item	Setting example
Acceleration/deceleration method	0: Linear acceleration / deceleration
JOG acceleration time (ms)	100 ms
JOG deceleration time (ms)	100 ms
JOG target speed	10,000 pps

#### ■ Behavior diagram

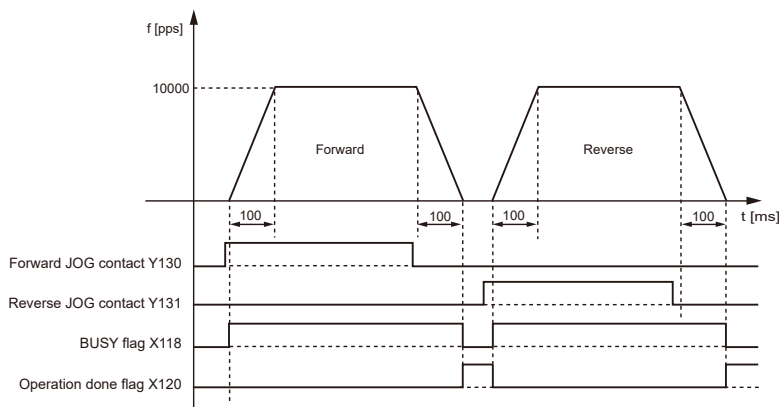

#### ■ Behaviors of each contact


- The BUSY flag (X118), which indicates that the motor is running, turns ON when JOG operation starts, and turns OFF when the operation is completed.
- The operation done flag (X120), which indicates the completion of operation, turns ON when the current operation is completed, and remains on hold until the next positioning control, JOG operation, home return, or pulser operation starts.

#### ■ Notes on programming

The starting contact and flag number vary depending on the axis number.

### ■ Sample programs

- The following sample programs perform JOG operation on Axis 1 by using slot No. 0.
- For setting examples of JOG operation and positioning parameters, refer to “Settings”.

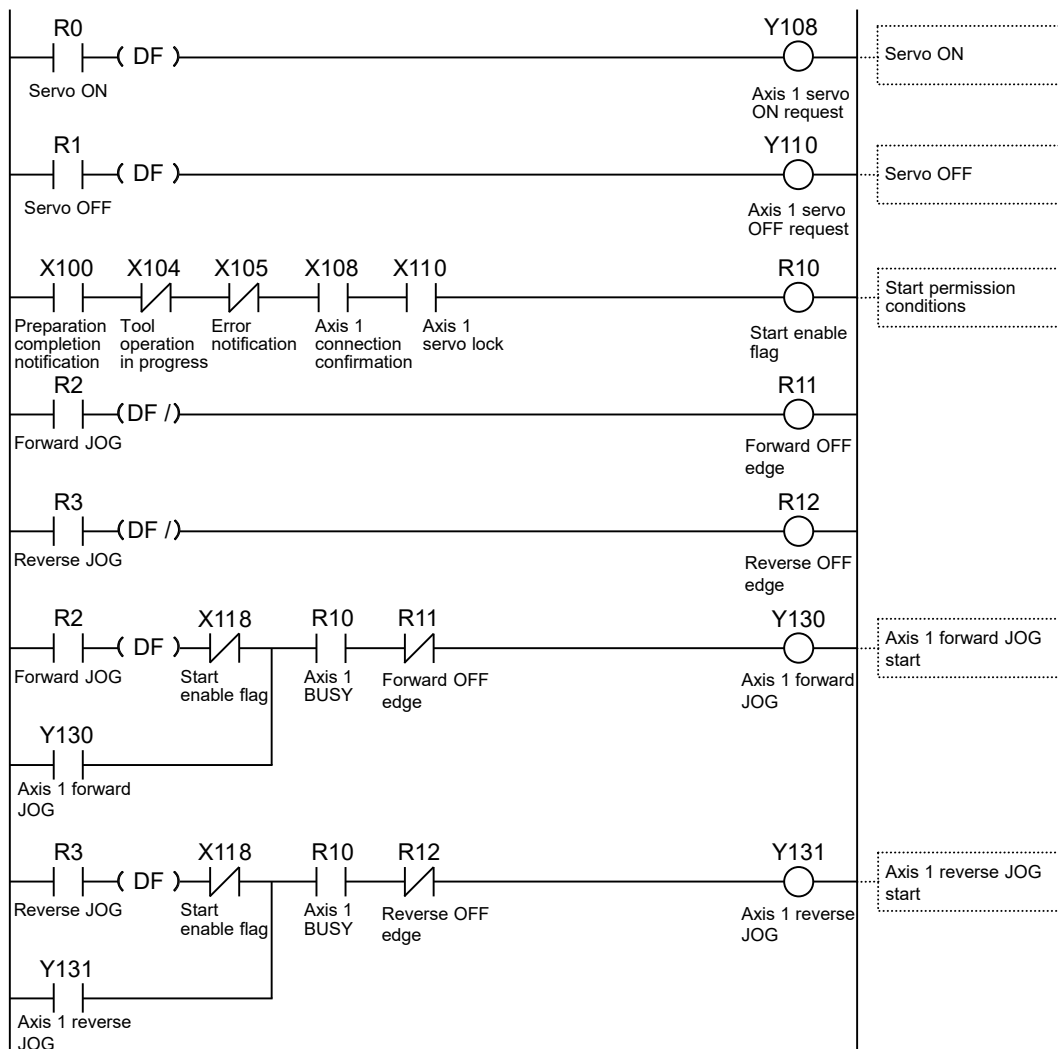

### ■ Behavior at limit input

Condition	Direction	Limit status	Operation
When JOG operation is started	Forward	Limit input (+): ON	Startup failure, error occurrence
		Limit input (-): ON	Startup possible
	Reverse	Limit input (+): ON	Executable
		Limit input (-): ON	Startup failure, error occurrence
During JOG operation	Forward	Limit input (+): ON	Deceleration stoppage, error occurrence

## 10.1 Settings and Operation of JOG Operation

---

Condition	Direction	Limit status	Operation
	Reverse	Limit input (-): ON	Deceleration stoppage, error occurrence



## 10.2 Changing the Speed during JOG Operation


The example below is the case where the target speed is changed while JOG operation is being performed on Axis 1 by using slot number 0.

### ■ Settings

The positioning parameters required for setting up JOG operation are specified in the positioning setting menu of the programming tool.

Item	Setting example	
Acceleration/deceleration pattern	0: Linear acceleration / deceleration	
Acceleration time 1 (ms)	100 ms	
Deceleration time 1 (ms)	50 ms	
Target speed 1	10,000 pps	
Acceleration time 2 (ms)	200 ms	After the speed is changed, the set values of acceleration time, deceleration time, and target speed are written to the positioning memory by the program.
Deceleration time 2 (ms)	150 ms	
Target speed 2	20000 pps	

### ■ Behavior diagram

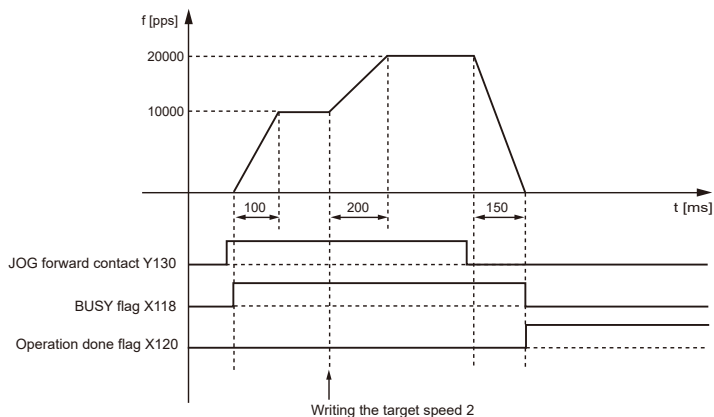

### ■ Behaviors of each contact

- The BUSY flag (X118), which indicates that the motor is running, turns ON when JOG operation starts, and turns OFF when the operation is completed.
- The target speed can be freely changed during JOG operation. Change the target speed by using the program.
- The operation done flag (X120), which indicates the completion of operation, turns ON when the current operation is completed, and remains on hold until the next positioning control, JOG operation, home return, or pulser operation starts.

### ■ Notes on programming

- To change the speed during JOG operation, use the user program to rewrite the values of the positioning parameter setting area for each axis (addresses H2A to H2D in the bank of each axis). The following items in the user program are set in each address of the positioning


## 10.2 Changing the Speed during JOG Operation

memory. (H2A: JOG acceleration time, H2B: JOG deceleration time, H2C/H2D: JOG target speed)

- The starting contact and flag number vary depending on the axis number.

### ■ Sample programs

- The following sample programs perform JOG operation on Axis 1 by using slot No. 0.
- For setting examples of JOG operation and positioning parameters, refer to “Settings”.
- The speed during JOG operation is changed when a set value is written to the positioning memory.

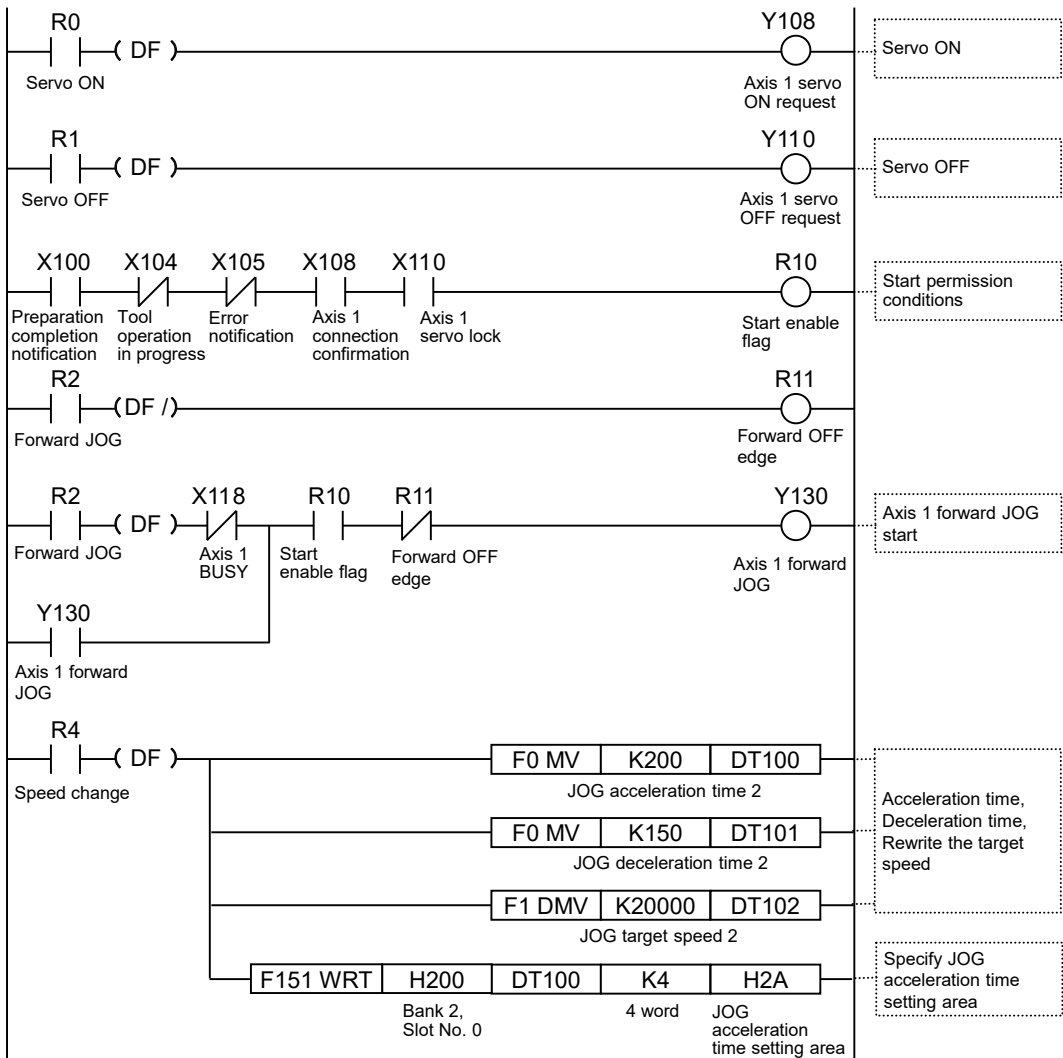

# 11 Manual Operation (Home Return)

---


11.1	Types of Home Return (Incremental)	11-2
11.1.1	DOG Method 1 [Edge detection of near home switch + Home position (Z phase) based on front edge]	11-3
11.1.2	DOG Method 2 (Edge Detection of Near Home Switch)	11-4
11.1.3	DOG Method 3 [Edge detection of near home switch + Home position (Z phase) based on rear edge]	11-5
11.1.4	Limit Method 1 [Edge detection of limit switch + Home position (Z phase) based on front edge]	11-6
11.1.5	Limit Method 2 (Edge Detection of Limit Switch)	11-7
11.1.6	Z-phase Method [Edge detection of home position (Z phase)]	11-7
11.1.7	Stop-on-contact Method 1	11-8
11.1.8	Stop-on-Contact Method 2 [Stop-on-Contact Detection + Home Position (Z Phase) Based on Front End]	11-8
11.1.9	Data setting method	11-9
11.2	Combination of Parameters and Home Return	11-10
11.2.1	Home Return Method and AMP Parameter Setting	11-10
11.2.2	Patterns	11-11
11.3	Types of Home Return (Absolute)	11-12
11.3.1	High-speed Home Return	11-12
11.3.2	Absolute Data Set Method	11-12
11.4	Settings and Operation of Home Return	11-14

## 11.1 Types of Home Return (Incremental)

### 11.1 Types of Home Return (Incremental)

Home return is a function that moves the axis to the preset reference position (home position) and set the coordinates of the position to 0.

If an incremental encoder is used for the servomotor, the home return methods shown in the table below can be selected.

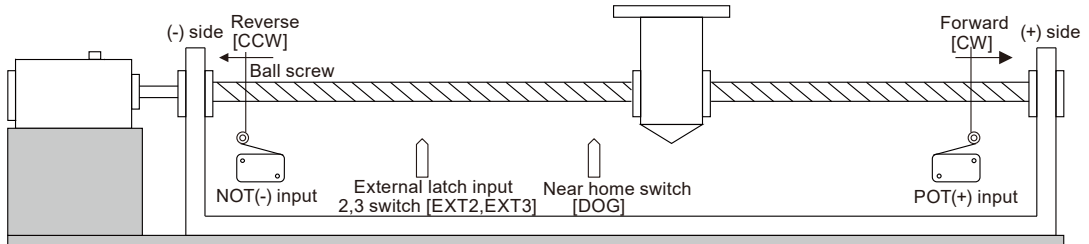

Types of home return	Reference home position	Behavior overview
DOG method 1	Home (Z phase): Based on front edge	After the rising edge (front edge) of the near home switch (DOG) is detected, the rising edge of the first home position (Z phase) is detected and the motor stops. The stop position is set as the home position. (Note 1)
	E2 External latch input 2: Based on front edge	
	E3 External latch input 3: Based on front end	
DOG method 2	Edge detection of near home switch	The rising edge of the near home switch (DOG) is detected and the motor stops. The stopping position is set as the home position.
DOG method 3	Home (Z phase): Based on rear edge	After the falling edge (rear edge) of the near home switch (DOG) is detected, the rising edge of the first home position (Z phase) in the home return direction is detected and the motor stops. The stop position is set as the home position. (Note 1)
	E2 External latch input 2: Based on rear edge	
	E3 External latch input 3: Based on back end	
Limit method 1	Home (Z phase): Based on front edge	After the rising edge of the limit switch on the opposite side of the home return direction is detected, the rotation of the motor is reversed. Then, the rising edge of the first home position (Z phase) is detected and the motor stops. The stop position is set as the home position. (Note 1)
	E2 External latch input 2: Based on front edge	
	E3 External latch input 3: Based on front end	
Limit Method 2	Edge detection of limit switch	The rising edge of the limit switch in the home return direction is detected and the motor stops. The stopping position is set as the home position.
Z-phase method	Edge detection of home position (Z phase)	The axis moves from the current value toward the direction of home return. Then, the rising edge of the first home position (Z phase) is detected and the motor stops. The stop position is set as the home position. (Note 1)
EXT2 method	Edge detection of external latch input 2	
EXT3 method	Edge detection of external latch input 3	
Stop-on-contact Method 1	Stop-on-contact detection	The axis is stopped by a mechanical stopping mechanism such as a stopper. Then, when the torque value exceeding the specified value

## 11.1 Types of Home Return (Incremental)

Types of home return	Reference home position	Behavior overview
		continues for a certain period of time, the axis stops. The stopping position is set as the home position.
Stop-on-contact method 2	Home (Z phase): Based on front edge	After the axis is stopped by a mechanical stopping mechanism such as a stopper, the rotation of the motor is reversed. Then, the rising edge of the first home position (Z phase) is detected and the motor stops. The stop position is set as the home position. (Note 1)
	E2 External latch input 2: Based on front edge	
	E3 External latch input 3: Based on front end	
Data setting method	-----	The current value is set as the home position.

(Note 1) For E2, external latch input 2 (EXT2) is used instead of the home position (Z phase).

For E3, external latch input 3 (EXT3) is used instead of the home position (Phase Z).


### 11.1.1 DOG Method 1 [Edge detection of near home switch + Home position (Z phase) based on front edge]

After the rising edge (front edge) of the near home switch (DOG) is detected, the rising edge of the first home position (Z phase) is detected and the motor stops. The stopping position is set as the home position.

The reference home position can be selected from the three types shown in the following table.

Type	Reference home position
DOG method 1	Edge detection of near home switch + Home position (Z phase) based on front edge
DOG method 1 (E2)	Edge detection of near home switch + External latch input 2 (EXT2) based on front edge
DOG method 1 (E3)	Edge detection of near home switch + External latch input 3 (EXT3) based on front end

## 11.1 Types of Home Return (Incremental)

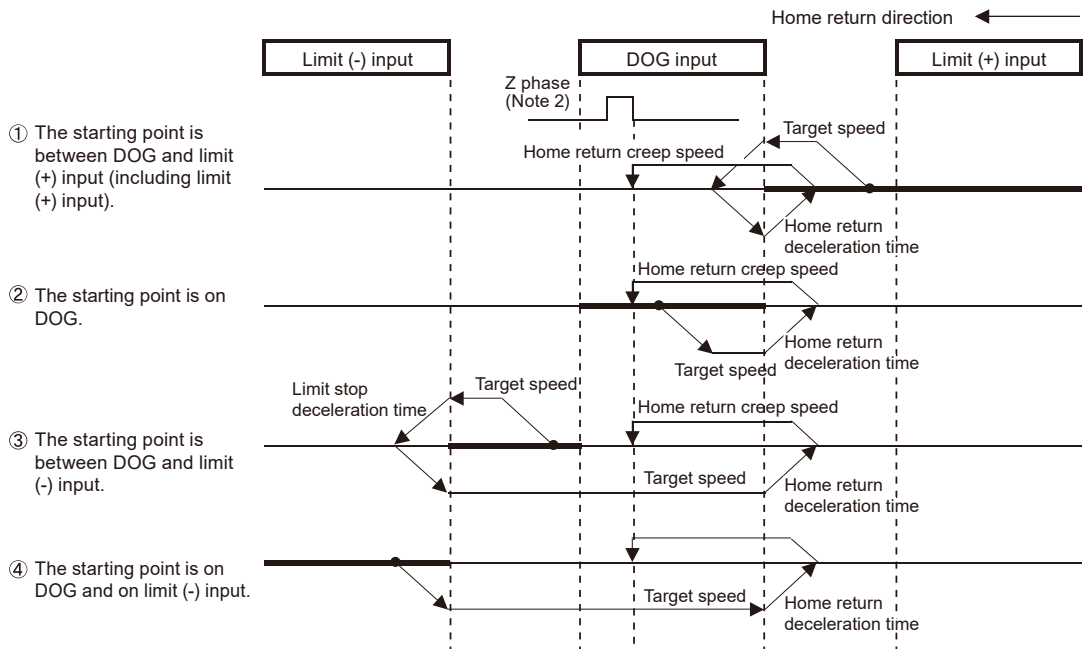


(Note 1) If the home position (Z phase) is ON at the time of startup, it will not be regarded as a home position (Z phase). Searches for a near home switch (DOG) will be started.

(Note 2) The reference home position differs according to the selected home return type. (Z-phase, EXT2, EXT3)

### 11.1.2 DOG Method 2 (Edge Detection of Near Home Switch)

The rising edge of the near home switch (DOG) is detected and the motor stops. The stopping position is set as the home position.

## 11.1 Types of Home Return (Incremental)

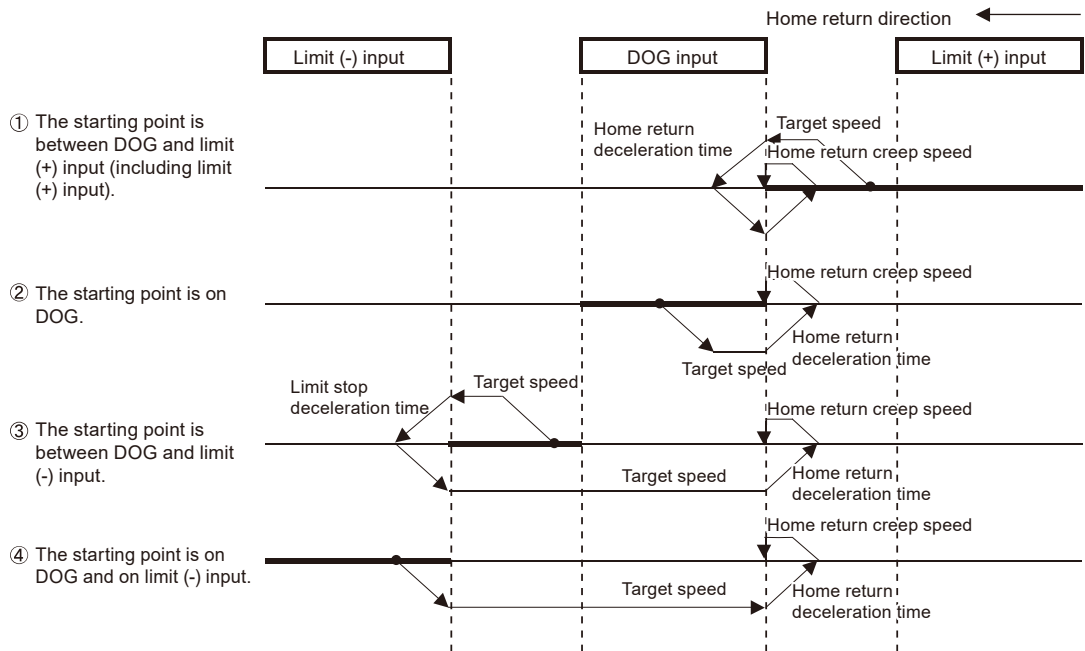


### 11.1.3 DOG Method 3 [Edge detection of near home switch + Home position (Z phase) based on rear edge]

After the falling edge (rear edge) of the near home switch (DOG) is detected, the rising edge of the first home position (Z phase) in the home return direction is detected and the motor stops. The stopping position is set as the home position.

The reference home position can be selected from the three types shown in the following table.

Type	Reference home position
DOG method 3	Edge detection of near home switch + Home position (Z phase) based on rear edge
DOG method 3 (E2)	Edge detection of near home switch + External latch input 2 (EXT2) based on rear edge
DOG method 3 (E3)	Edge detection of near home switch + External latch input 3 (EXT3) based on back end

# 11.1 Types of Home Return (Incremental)

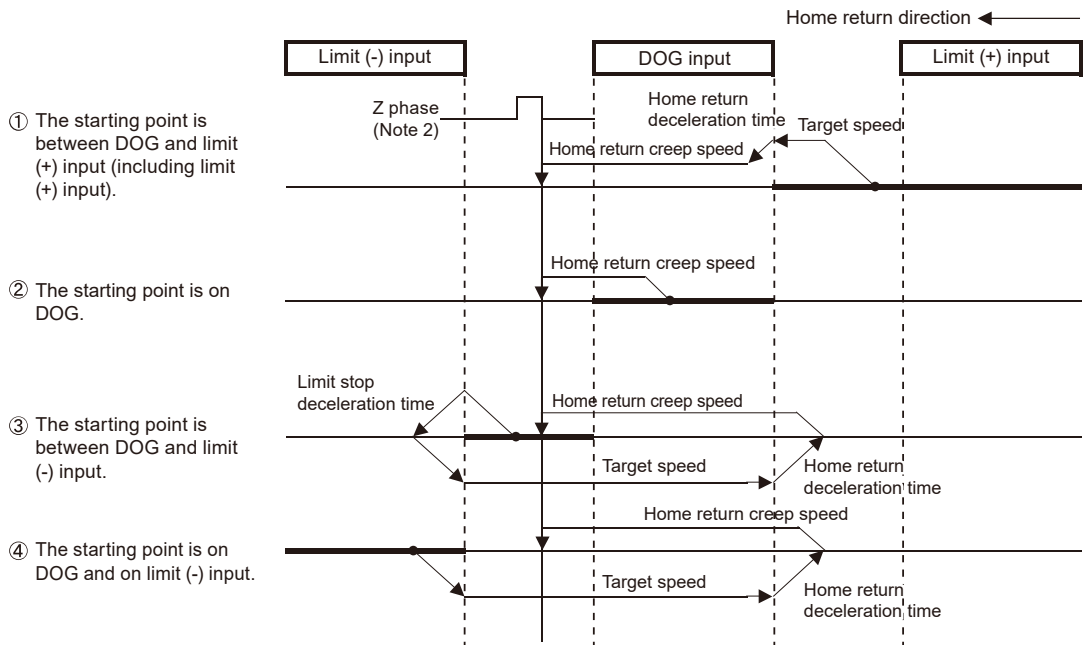

- (Note 1) If the home position (Z phase) is ON at the time of startup, it will not be regarded as a home position (Z phase). Searches for a near home switch (DOG) will be started.
- (Note 2) The reference home position differs according to the selected home return type. (Z-phase, EXT2, EXT3)

## 11.1.4 Limit Method 1 [Edge detection of limit switch + Home position (Z phase) based on front edge]


After the rising edge of the limit switch on the opposite side of the home return direction is detected, the rotation of the motor is reversed. Then, the rising edge of the first home position (Z phase) is detected and the motor stops. The stopping position is set as the home position.

The reference home position can be selected from the three types shown in the following table.

Type	Reference home position
Limit method 1	Edge detection of limit switch + Home position (Z phase) based on front edge
Limit method 1 (E2)	Edge detection of limit switch + External latch input 2 (EXT2) based on front edge
Limit method 1 (E3)	Edge detection of limit switch + External latch input 3 (EXT3) based on front end




## 11.1 Types of Home Return (Incremental)

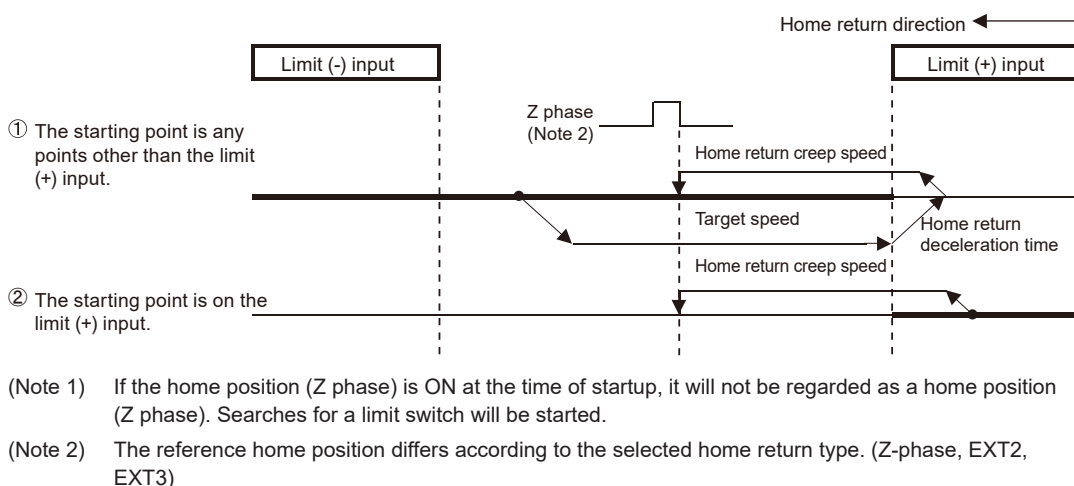

### 11.1.5 Limit Method 2 (Edge Detection of Limit Switch)

The rising edge of the limit switch in the home return direction is detected and the motor stops. The stopping position is set as the home position.

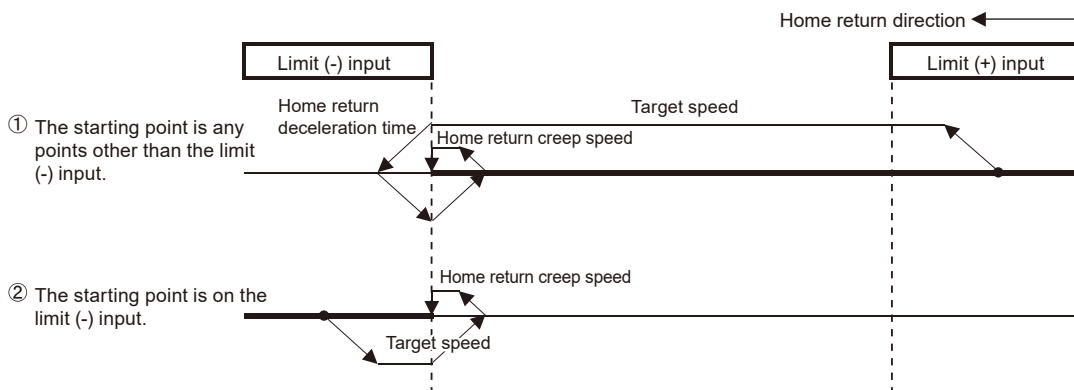


### 11.1.6 Z-phase Method [Edge detection of home position (Z phase)]

The axis moves from the current value toward the direction of home return. Then, the rising edge of the first home position (Z phase) is detected and the motor stops. The stopping position is set as the home position.

The reference home position can be selected from the three types shown in the following table.

Type	Reference home position
Z-phase method 1	Edge detection of home position (Z phase)
EXT2 method	Edge detection of external latch input 2 (EXT2)
EXT3 method	Edge detection of external latch input 3 (EXT3)


## 11.1 Types of Home Return (Incremental)

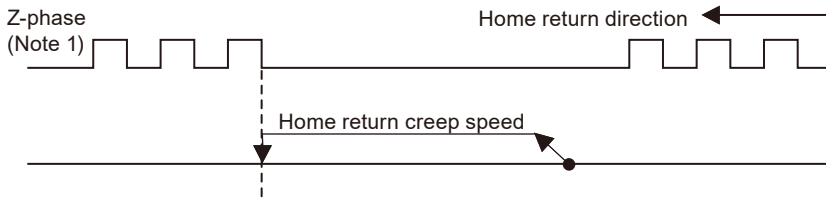

(Note 1) The reference home position differs according to the selected home return type. (Z-phase, EXT2, EXT3)

### 11.1.7 Stop-on-contact Method 1

The axis is stopped by a mechanical stopping mechanism such as a stopper. Then, when the torque value exceeding the specified value continues for a certain period of time, the axis stops. The stopping position is set as the home position.

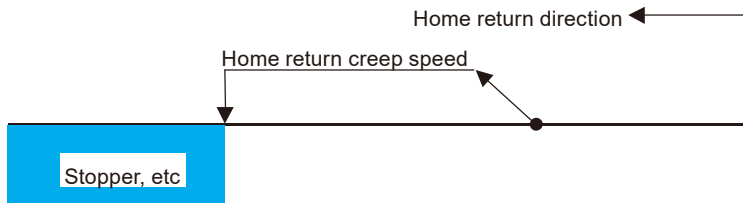


### 11.1.8 Stop-on-Contact Method 2 [Stop-on-Contact Detection + Home Position (Z Phase) Based on Front End]

After the axis is stopped by a mechanical stopping mechanism such as a stopper, the rotation of the motor is reversed. Then, the rising edge of the first home position (Z phase) is detected and the motor stops. The stopping position is set as the home position.

The reference home position can be selected from the three types shown in the following table.

Type	Reference home position
Stop-on-contact method 2	Stop-on-contact detection + Home position (Z phase) based on front end
Stop-on-contact method 2 (E2)	Stop-on-contact detection + External latch input 2 (EXT2) based on front end
Stop-on-contact method 2 (E3)	Stop-on-contact detection + External latch input 3 (EXT3) based on front end

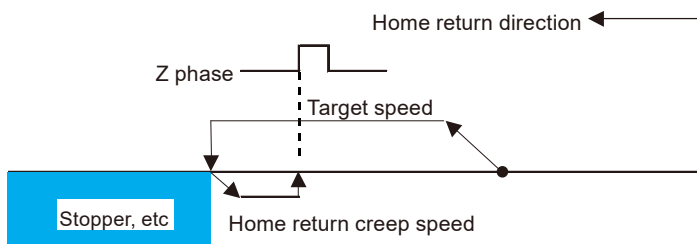

## 11.1 Types of Home Return (Incremental)


---

(Note 1) If the home position (Z phase) is ON at the time of startup, it will not be regarded as a home position (Z phase). Searches for a limit switch will be started.

(Note 2) The reference home position differs according to the selected home return type. (Z-phase, EXT2, EXT3)

### 11.1.9 Data setting method

The current position is set as the home position.



## 11.2 Combination of Parameters and Home Return

### 11.2 Combination of Parameters and Home Return

When using either "DOG method 2" or "Limit method 2" as the home return method, change the paramers on the AMP side to pattern B shown below. If the operation is executed with the pattern A setting (factory default setting), the latch input allocation error protection (error code 0821H: 3-38) will occur.

#### 11.2.1 Home Return Method and AMP Parameter Setting

(●: Available, Blank: Not available)

FP0H Positioning Unit Home return method	Reference home position	A6N / A5N parameters	
		Pattern A	Pattern B
DOG method 1	Home (Z phase)	●	●
DOG method 1 (E2)	External latch input 2	●	
DOG method 1 (E3)	External latch input 3	●	
DOG method 2	Near home (DOG)		●
DOG method 3	Home (Z phase)	●	●
DOG method 3 (E2)	External latch input 2	●	
DOG method 3 (E3)	External latch input 3	●	
Limit method 1	Home (Z phase)	●	●
Limit method 1 (E2)	External latch input 2	●	
Limit method 1 (E3)	External latch input 3	●	
Limit Method 2	Limit - (NOT) / Limit + (POT)		●
Z phase method	Home (Z phase)	●	●
EXT2 method	External latch input 2	●	
EXT3 method	External latch input 3	●	
Stop-on-contact method 1	Mechanical stop mechanism such as a stopper	●	●
Stop-on-contact Method 2	Home (Z phase)	●	●
Stop-on-contact method 2 (E2)	External latch input 2	●	
Stop-on-contact method 2 (E3)	External latch input 3	●	
Data set method	-	●	●

<b>11.2.2 Patterns</b>
------------------------

**Pattern A (factory default setting)**

Parameter No.	X4 connector		Parameter value (HEX)	Pin assignment setting		Revised items
	Terminal name	Terminal No.				
Pr 4.00	SI1	5	00323232H	SI-MON5	A contact	
Pr 4.01	SI2	7	00818181H	POT	B contact	●
Pr 4.02	SI3	8	00828282H	NOT	B contact	●
Pr 4.03	SI4	9	002E2E2EH	SI-MON1	A contact	
Pr 4.04	SI5	10	00222222H	HOME	A contact	
Pr 4.05	SI6	11	00212121H	EXT2	A contact	●
Pr 4.06	SI7	12	002B2B2BH	EXT3	A contact	●
Pr 4.07	SI8	13	00313131H	SI-MON4	A contact	

**Pattern B (after change)**

Parameter No.	X4 connector		Parameter value (HEX)	Pin assignment setting		Revised items
	Terminal name	Terminal No.				
Pr 4.00	SI1	5	00323232H	SI-MON5	A contact	
Pr 4.01	SI2	7	00000000H	Disabled		●
Pr 4.02	SI3	8	00000000H	Disabled		●
Pr 4.03	SI4	9	002E2E2EH	SI-MON1	A contact	
Pr 4.04	SI5	10	00222222H	HOME	A contact	
Pr 4.05	SI6	11	00010101H	POT	A contact	●
Pr 4.06	SI7	12	00020202H	NOT	A contact	●
Pr 4.07	SI8	13	00313131H	SI-MON4	A contact	

## 11.3 Types of Home Return (Absolute)

### 11.3 Types of Home Return (Absolute)


With the MINAS A6N Ver1.24 or higher version, the home return type available for the incremental encoder can also be used for the absolute encoder.

When using an amplifier with a version lower than the above, only the home return type described in the following section is available.

#### 11.3.1 High-speed Home Return

Executing high-speed home return enables the axis to move to the home position (position 0) of the coordinate system for the absolute encoder.

The operation is similar to that of a positioning operation. After home return is complete, the deviation counter is not cleared.

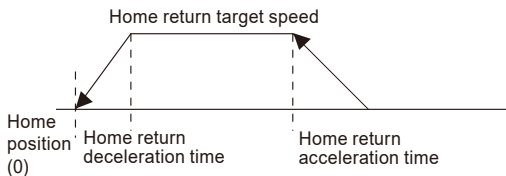


#### **i** Info.

- If clearing the deviation counter is required, it must be executed separately. For details on the deviation counter clearing function, refer to "[14.7 Deviation Counter Clearing Function](#)".

#### 11.3.2 Absolute Data Set Method

The current position is set as the home position.




##### ■ Operation of absolute data set method

- The current value managed within the controller becomes 0, but the current value of the servo amplifier does not become 0.
- The controller reads the current value from the servo amplifier. The data that has been read is stored in addresses H330 to H33F in bank 00H (common area) as a data set offset value.

##### ■ Operation diagram of absolute data set method

When home return is executed by the absolute data set method when both the current value of the servo amplifier and the current value within the controller are "1000000"

## 11.3 Types of Home Return (Absolute)

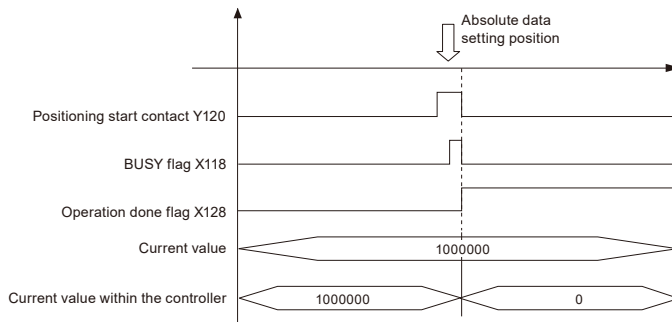


### **i** Info.

- With the FP0H Positioning Unit RTEX, no backup processing is required because the home position is managed by the unit. The data offset value is retained even after the system is restarted and, therefore, the data offset value is deducted from the current value within the controller as a display value.
- When using a servo amplifier of the MINAS A6N Ver.1.24 or higher version, the "Data set method" available for the incremental encoder can be used. The current value of the amplifier is set to 0 when the "Data set method" is used.

## 11.4 Settings and Operation of Home Return

### 11.4 Settings and Operation of Home Return

The example below is the case where home return is performed on Axis 1 by using slot number 0. The unit is the number of pulses.

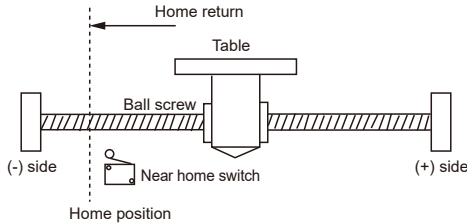


#### ■ Settings

Positioning parameters required for setting up home return can be set in **Axis Settings** >**Parameter Settings** on Configurator PM7-RTEX.

Item	Setting example
Return setting code	0: DOG method 1
Return direction	0: Limit (-) direction
Acceleration time (ms)	100 ms
Deceleration time (ms)	100 ms
Target speed	10,000 pps
Return creep speed	1000 pps

#### ■ Behavior diagram

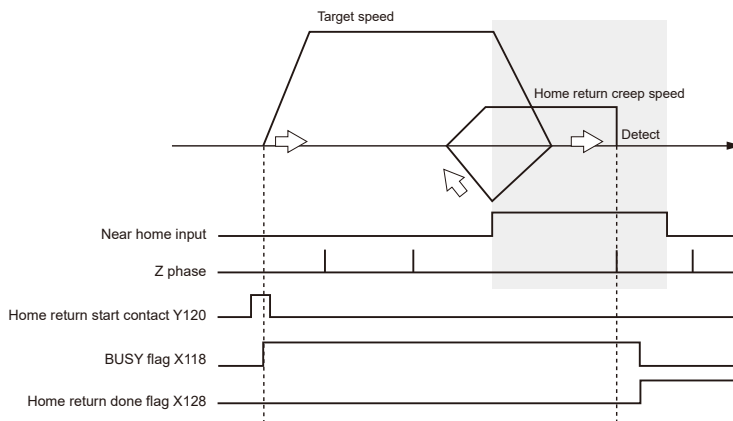

#### ■ Behaviors of each contact

- The BUSY flag (X118), which indicates that the motor is running, turns ON when home return starts, and turns OFF when the operation is completed.
- The home return complete flag (X128), which indicates the completion of operation, turns ON when the home return operation is completed, and remains ON until the next position control, JOG operation, home return, or pulser operation starts. The flag turns ON upon completion of the home return.




### ■ Notes on programming

- The starting contact and flag number vary depending on the axis number.

### ■ Sample programs

- The following sample programs perform home return operation on Axis 1 by using slot No. 0.
- For setting examples of positioning parameters for home return, refer to “Settings”.

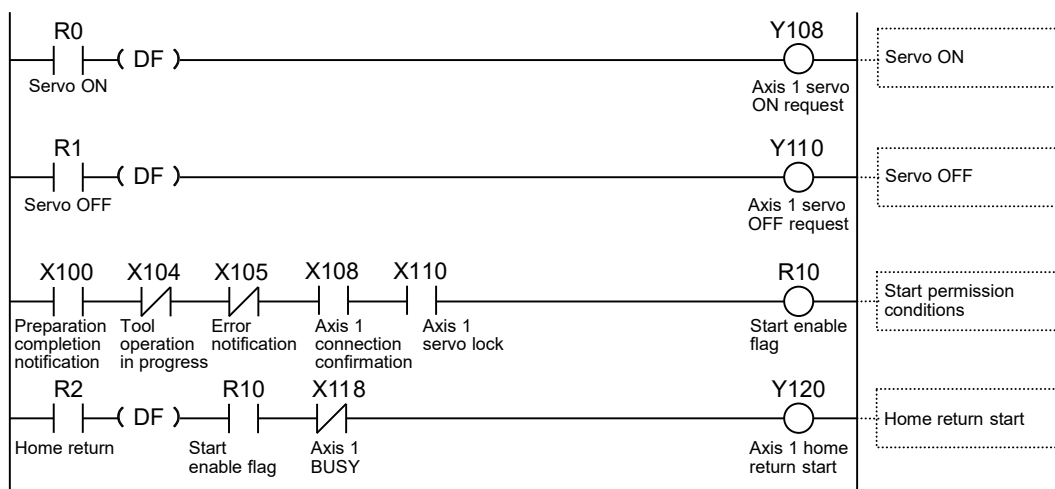

### ■ Behavior at limit input

Condition	Direction	Limit status	Operation
At home return startup	Forward	Limit input (+): ON	Executable
		Limit input (-): ON	Executable
	Reverse	Limit input (+): ON	Executable
		Limit input (-): ON	Executable
During home return operation	Forward	Limit input (+): ON	Automatic reverse operation
	Reverse	Limit input (-): ON	Automatic reverse operation

(MEMO)

# 12 Pulse Input Function

---


12.1 Pulse Input .....	12-2
12.1.1 Applications of pulse input .....	12-2
12.1.2 Selecting the Pulse Input Application.....	12-3
12.1.3 Input Methods of Pulse Input .....	12-4
12.1.4 Monitoring the Pulse Input Values.....	12-5
12.1.5 Pulse Input Value Change Function.....	12-6
12.2 Settings and Operation of Pulser Operation .....	12-8
12.2.1 Overview of Pulser Operation .....	12-8
12.2.2 Settings for Pulser Operation.....	12-9
12.2.3 Behaviors of Pulser Operation .....	12-10
12.3 High-speed Counter Function .....	12-13
12.3.1 Overview of High-speed Counter Function .....	12-13
12.3.2 Settings for Using the High-speed Counter .....	12-13
12.3.3 Count Disable/Enable Control.....	12-14

## 12.1 Pulse Input

### 12.1 Pulse Input

#### 12.1.1 Applications of pulse input

Pulse inputs can be used for the two applications shown below. Applications are selected in the **Axis Settings>Pulse Input Settings** dialog box of Configurator PM7-RTEX.

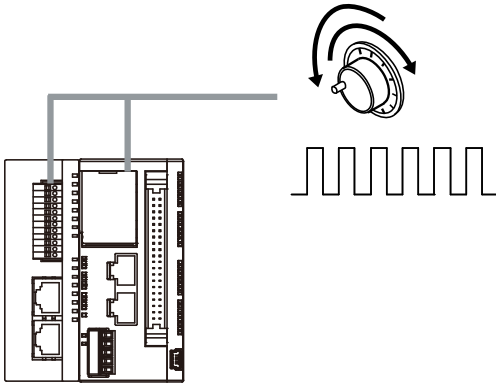

#### ■ Specifications

Item	Description
Number of channels	Max. 3 channels (for both pulser input and high-speed counter)
Countable range	Countable range: -2,147,483,648 to +2,147,483,647 pulses
Input mode	2-phase input, direction identification input, individual input (multiplication function provided for each mode)

#### ■ Applications of pulse input

Input target	Description
Pulser	Set this type when using a manual pulser. The pulser operation setting code can be used to specify the axis whose pulser is to be used .
High-speed counter	Set this type when using inputs for general-purpose counters. Various input methods (2-phase input, direction identification input, and individual input) are supported. The unit stores the number of input pulses in the monitor area.

#### ■ Restrictions on combinations according to the application


Pulse input method		Pulse input application	
		Pulser	High-speed counter
Input mode	2-phase input	○	○
	Direction identification input	×	○
	Individual input	×	○
Multiplication	Multiply by 1	×	○

Pulse input method		Pulse input application	
		Pulser	High-speed counter
	Multiply by 2	×	○
	Multiply by 4	○	○(Note 1)

(Note 1) This method can be set only when the input mode is "2-phase input".

### 12.1.2 Selecting the Pulse Input Application

The applications and methods for pulse input circuits are selected in the **Axis Settings>Pulse Input Setting** dialog box of Configurator PM7-RTEX.

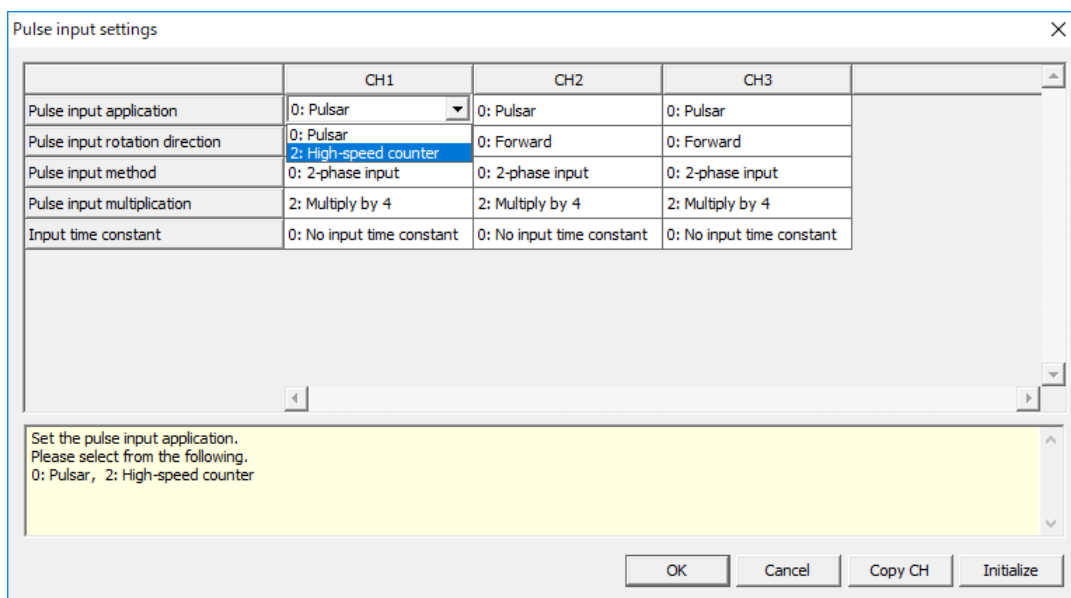

#### ■ Setting item

Item	Default	Range
Pulse input application	0: Pulsar	0: Pulsar, 2: High-speed counter
Pulse input rotation direction	0: Forward	0: Forward, 1: Reverse
Pulse input method	0: 2-phase input	0: 2-phase input, 1: Direction identification input (Pulse/Sign), 2: Individual input (CW/CCW)
Pulse input multiplication	2: Multiply by 4	0: Multiply by 1, 1: Multiply by 2, 2: Multiply by 4
Input time constant	0: No input time constant	0: No input time constant, 1: 0.1us, 2: 0.5us, 3: 1.0us, 4: 2.0us, 5: 10.0us

# 12.1 Pulse Input


## 12.1.3 Input Methods of Pulse Input


- Select from the following three types according to input devices to be connected.
- The count operation varies depending on the multiplication factor setting as shown below.

### Input mode


Method	Connection	Count
2-phase (phase difference)		<p>For 2-phase input, the input A signal and input B signal of each counter are connected to phase A and phase B, respectively, in the encoder.</p> <p>The count direction depends on the phase difference between phases A and B. When phase A is ahead of phase B by 90 degrees in terms of the electrical angle, the count value is incremented. When phase A is behind phase B by 90 degrees in terms of the electrical angle, the count value is decremented.</p>
Individual		<p>For individual input, the counter is incremented when the level of the input A signal rises or falls, and decremented when the level of the input B signal rises or falls.</p>
Direction identification		<p>For direction identification input, the count signal is connected to the input A signal. The count direction is controlled by the direction signal level of the input B signal.</p> <p>When the input B signal is OFF, the counter is incremented when the level of the input A signal rises or falls. When the input B signal is ON, the counter is decremented.</p>

### Count operation of 2-phase input

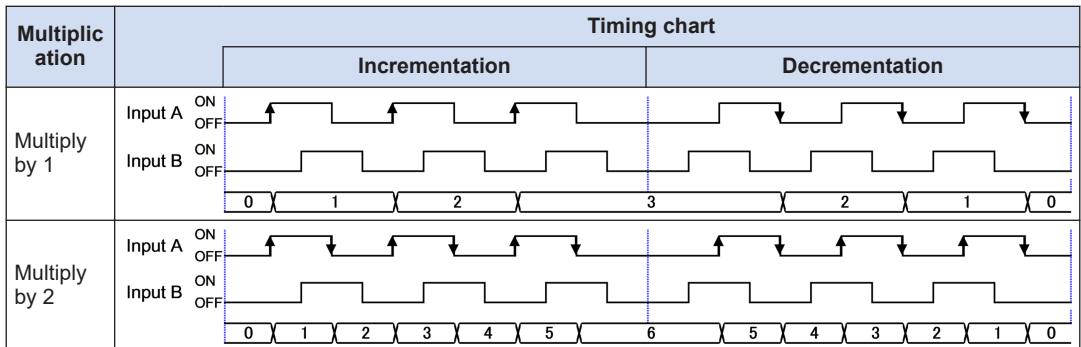


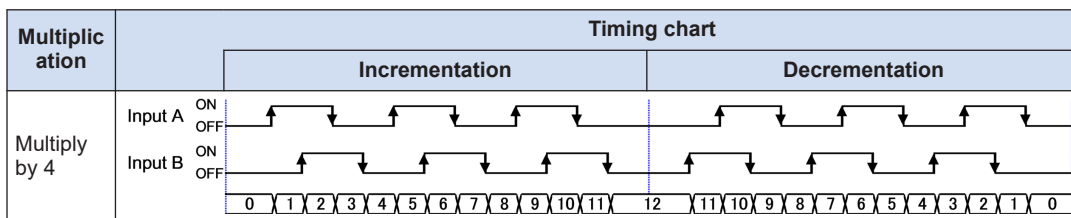

■ Count operation of individual input

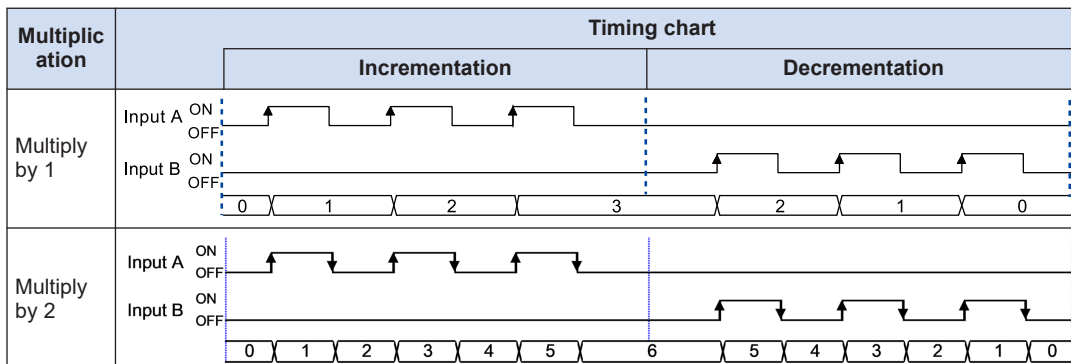

■ Count operation of direction identification input

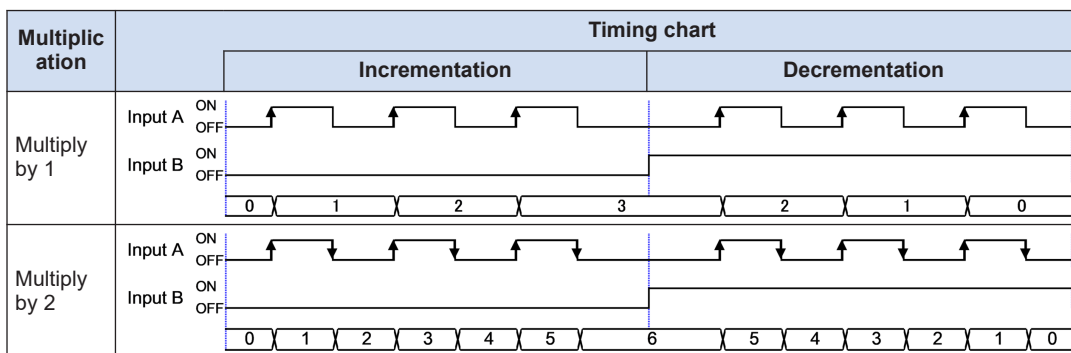


12.1.4 Monitoring the Pulse Input Values

- Pulse input values are stored in the positioning memory (addresses H3C0 to H3C7 in bank 00H). Pulse input values can be read and monitored with user programs.
- Pulse input values are stored according to the pulse input application (pulser or high-speed counter). (Units: Pulses)
- Pulse input values are cumulatively stored, and cleared when the pulse input application is changed or when processing for clearing pulse input values is performed.

■ Sample programs

The following sample program monitors the pulse input value for CH1 of slot number 0.

## 12.1 Pulse Input

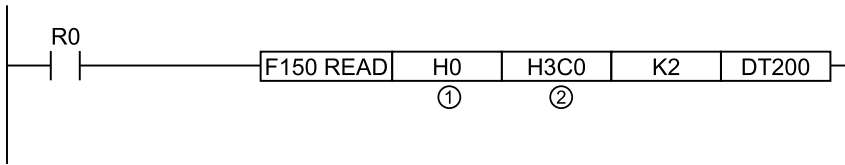

Code	Description	Values specified in the program		
		CH1	CH2	CH3
(1)	Bank, slot No.	H0 (Bank 0, slot No.)		
(2)	Pulse input value area	H3C0-H3C1	H3C2-H3C3	H3C4-H3C5

### 12.1.5 Pulse Input Value Change Function

When "High-speed counter" is selected as the pulse input application, a user program can be used to change the pulse input values stored in the positioning memory.

#### ■ Pulse count control area (bank 00H: common area)


End of offset address	Name	Description																		
H3A9	Pulse count value change request flag	When the bit corresponding to each axis changes from 0 to 1, the pulse input value is changed to the post-change pulse input value that has been set. This flag is an edge trigger flag. When changing the pulse count value, always change this flag from 0 to 1. After the pulse count value is changed, the unit automatically clears the corresponding bit to 0.																		
		<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>CH1 pulse count change</td> <td>0</td> <td rowspan="3">0: Do not change the pulse input value 0→1: Change the pulse input value</td> </tr> <tr> <td>1</td> <td>CH2 pulse count change</td> <td>0</td> </tr> <tr> <td>2</td> <td>CH3 pulse count change</td> <td>0</td> </tr> <tr> <td>15 to 3</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	CH1 pulse count change	0	0: Do not change the pulse input value 0→1: Change the pulse input value	1	CH2 pulse count change	0	2	CH3 pulse count change	0	15 to 3	-	-	-
		Bit	Name	Default	Description															
		0	CH1 pulse count change	0	0: Do not change the pulse input value 0→1: Change the pulse input value															
		1	CH2 pulse count change	0																
2	CH3 pulse count change	0																		
15 to 3	-	-	-																	
H3B0 to H3B1	CH1 pulse input changed value	Set the pulse input value to be changed for CH1.																		
H3B2- H3B3	CH2 pulse input changed value	Set the pulse input value to be changed for CH2.																		
H3B4- H3B5	CH3 pulse input changed value	Set the pulse input value to be changed for CH3.																		

#### ■ Sample programs

- The following sample program presets the pulse input value for CH1 of slot number 0 to the arbitrary value K0. The first line of the program reads and monitors pulse input values.



- The value to be written to pulse input values is preset in the corresponding positioning memory and the changed value request flag for the corresponding channel is set. When the input value change is completed, the change request flag area (address H3A9 in bank 00H) is reset to 0.

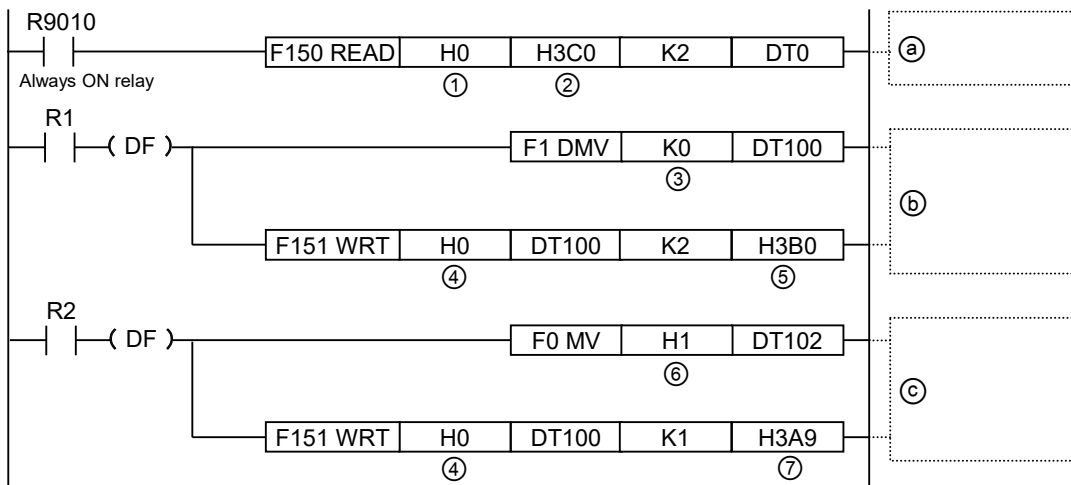

Code	Items specified in the program	Values specified in the program		
		CH1	CH2	CH3
(1)	Bank, slot No.	H0 (bank 0, slot number 0)		
(2)	Area in which pulse input values are stored	H3C0	H3C2	H3C4
(3)	Changed value	Arbitrary value		
(4)	Bank, slot No.	H0 (Bank 0, slot No.)		
(5)	Pulse count changed value area	H3B0	H3B2	H3B4
(6)	Set value in pulse count value change request flag area	H1	H2	H4
(7)	Pulse count value change request flag area	H3A9		
(a)	Reading the pulse input value			
(b)	Writing the preset value to be stored in the pulse input value area to the positioning memory			
(c)	Writing to the positioning memory based on a pulse input value change request			

## 12.2 Settings and Operation of Pulser Operation

### 12.2 Settings and Operation of Pulser Operation


#### 12.2.1 Overview of Pulser Operation

This function is used to connect axes by manual operation via the pulsers connected to the pulser input connectors of the positioning unit RTEK.

- Pulsers for up to three channels can be connected.
- Pulsers can be operated for up to eight axes. A pulser connected as an internal signal can be selected for each axis. Multiple channels can be activated simultaneously with one pulser.

#### ■ Pulser input method

Operation method	Operation
Standard operation	The number of pulses from a pulser is obtained every 1 ms to perform operations. The input contents of a pulser are reflected directly in actual operations.
Speed limit (Pulses held)	When the pulser input speed exceeds the specified maximum speed, operations are performed by holding the maximum speed. Pulses input from a pulser are held. Therefore, pulses that cannot be output are held, so pulses may be output even if there is no input from the pulser. The unit of speed is "Set unit x 1000/s".
Speed limit (Time held)	When the pulser input speed exceeds the specified maximum speed, operations are performed by holding the maximum speed. Pulses that cannot be output are discarded, and pulse output is interlocked with pulser operation. The unit of speed is "Set unit x 1000/s".

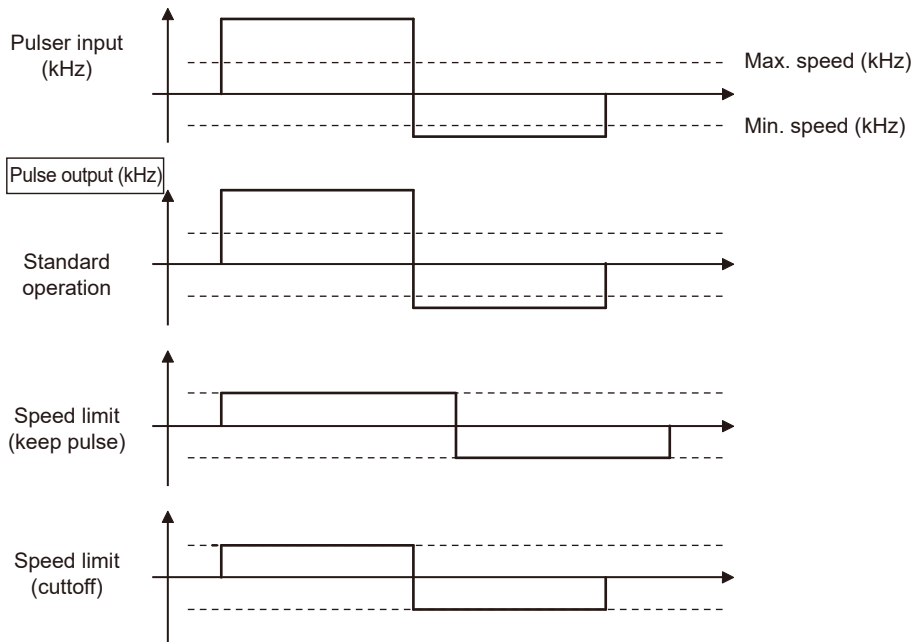

### 12.2.2 Settings for Pulsar Operation

When performing pulsar operation, set the parameters in the two dialog boxes "Pulse Input Settings" and "Parameter Settings" in Configurator PM7-RTEX.

#### ■ Pulse input settings

Select "Pulsar" from the Pulse input application row.

	CH1	CH2	CH3
Pulse input application	0: Pulsar	: Pulsar	0: Pulsar
Pulse input rotation direction	0: Pulsar	: Forward	0: Forward
Pulse input method	0: 2-phase input	0: 2-phase input	0: 2-phase input
Pulse input multiplication	2: Multiply by 4	2: Multiply by 4	2: Multiply by 4
Input time constant	0: No input time constant	0: No input time constant	0: No input time constant

Set the pulse input application.  
Please select from the following.  
0: Pulsar, 2: High-speed counter

OK Cancel Copy CH Initialize

Item	Setting example	Range
Pulse input application	0: Pulsar	"0: Pulsar"
Pulse input rotation direction	0: Forward	"0: Forward", "1: Reverse"
Pulse input method	0: 2-phase input	When using the pulsar, only "0: 2-phase input" can be set.
Pulse input multiplication	2: Multiply by 4	When using the pulsar, only "2: Multiply by 4" can be set.

#### ■ Parameter Settings menu

- For the "Pulsar operation setting code" item for the axis on which the pulsar operation is performed, select the channel number of the pulse input to be connected.
- The movement amount per pulse signal from the pulsar can be changed by setting the ratio numerator and ratio denominator for the input signal from the pulsar.


	Axis 1	Axis 2	Axis 3	Axis 4
Pulsar operation setting code	0: Pulse input CH1	: Pulse input CH1	0: Pulse input CH1	0: Pulse input CH1
Pulsar input method	0: Pulse input CH1	: Speed restriction (time h	2: Speed restriction (time h	0: Standard operation
Pulsar operation ratio numerator		2	2	2
Pulsar operation ratio denominator	1	1	1	1
Pulsar operation maximum speed	500	500	500	0

## 12.2 Settings and Operation of Pulser Operation


Item	Setting example	Range
Pulsar operation setting code	0: Pulse input CH1	"0: Pulse input CH1", "1: Pulse input CH2", "2: Pulse input CH3"
Pulsar input method	2: Speed limit (time held)	"0: Standard operation", "1: Speed limit (pulses held)", "2: Speed limit (time held)"
Pulsar operation ratio numerator	2	1 to 32,767
Pulsar operation ratio denominator	1	1 to 32,767
Pulsar operation maximum speed	500	Pulses: 0 to 2,147,482,624 pps

### 12.2.3 Behaviors of Pulser Operation

The example below is the case where pulser operation is performed for Axis 1. The unit is the number of pulses.

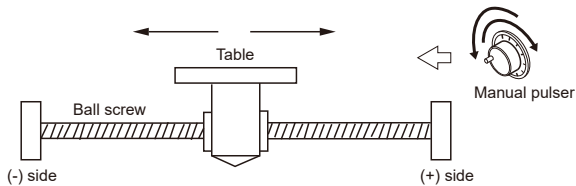

#### ■ Behavior diagram

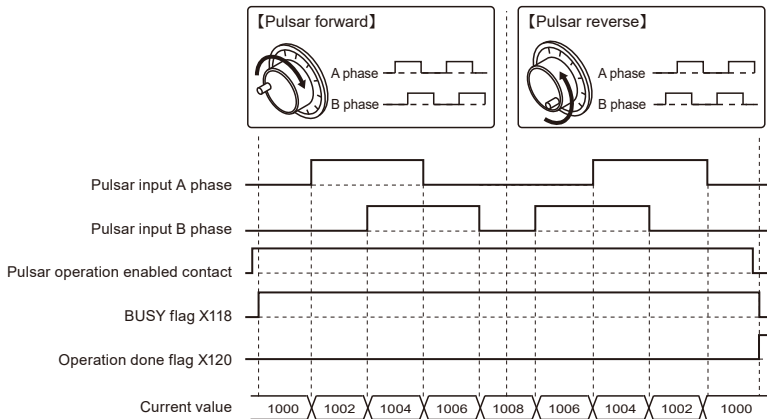

#### ■ Behaviors of each contact

- The BUSY flag (X118), which indicates that the motor is running, turns ON when the pulser operation enabled contact turns ON, and turns OFF when the pulser operation enabled contact turns OFF.
- The operation done flag (X120), which indicates the completion of operation, turns ON when the pulser operation enabled contact turns OFF, and remains ON until the next position control, JOG operation, home return, or pulser operation starts.

### ■ Notes on programming


- The starting contact and flag number vary depending on the axis number.

### ■ Related positioning parameters

Bank	address End of offset	Name	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtua l)	8 axes (virtua l)
00H (Common area)	H63	Maximum speed for pulser operation Permit	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6	Bit7

### ■ Sample programs

- The following sample programs perform pulser operation on Axis 1 of slot No. 0.
- For details on pulser operation settings, refer to "Pulse input settings" and "Parameter settings menu" in "12.2.2 Settings for Pulser Operation".

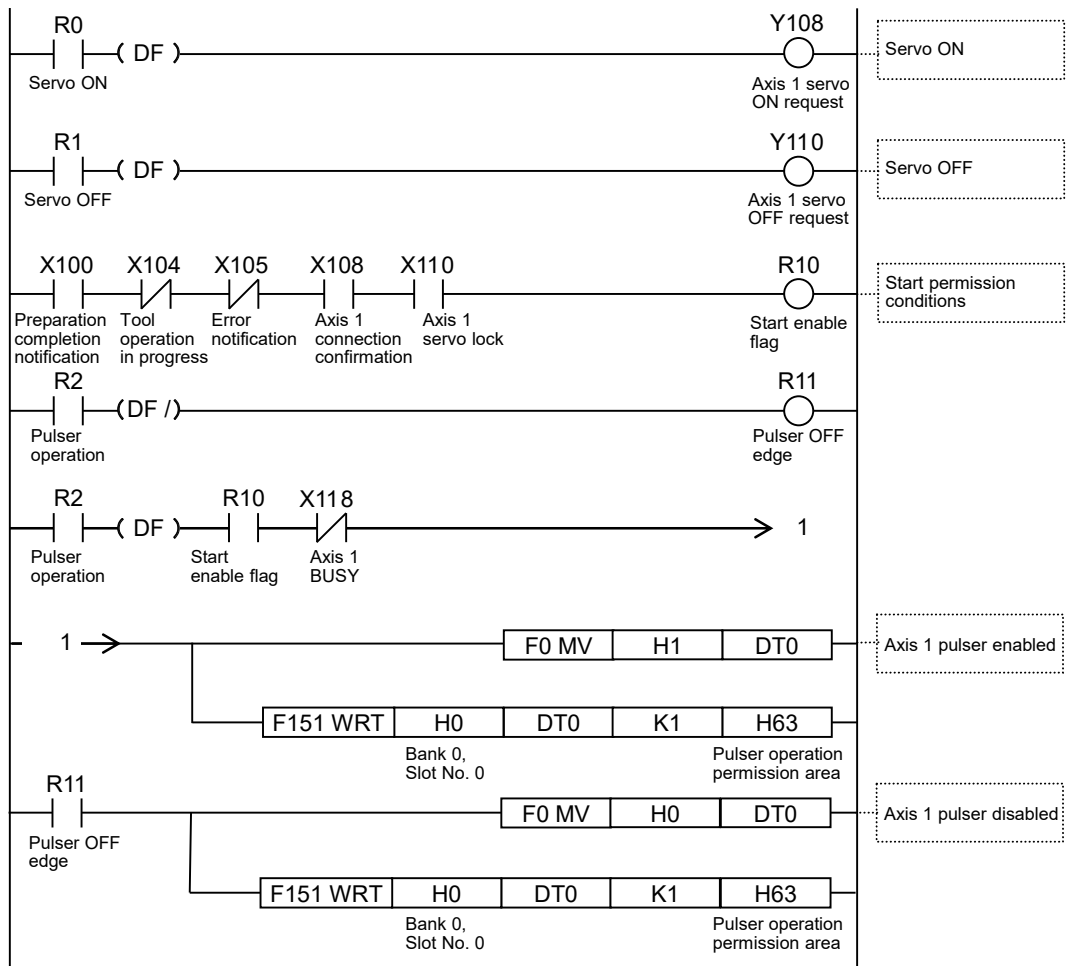

## 12.2 Settings and Operation of Pulser Operation

---

### ■ Behavior at limit input

Condition	Direction	Limit status	Operation
When pulser operation starts	Forward	Limit input (+): ON	Startup failure, error occurrence
		Limit input (-): ON	Executable
	Reverse	Limit input (+): ON	Executable
		Limit input (-): ON	Startup failure, error occurrence
During pulser operation	Forward	Limit input (+): ON	Deceleration stoppage, error occurrence
	Reverse	Limit input (-): ON	Deceleration stoppage, error occurrence

## 12.3 High-speed Counter Function

### 12.3.1 Overview of High-speed Counter Function

Setting the pulse input application to "High-speed counter" enables the unit to use pulse inputs as external counters.

#### **i** Info.

- For details on monitoring the count value, refer to "12.1.4 Monitoring the Pulse Input Values".
- For details on how to preset the count value, refer to "12.1.5 Pulse Input Value Change Function".
- For details on the high-speed counter function of the general-purpose I/O unit, refer to the "FP0H User's Manual (Positioning / PWM Output / High-speed Counter)".

### 12.3.2 Settings for Using the High-speed Counter

When using the pulse input function as a high-speed counter, specify settings in the "Pulse Input" dialog box of Configurator PM7-RTEX.

#### ■ Pulse input settings

Select "High-speed counter" from the Pulse input application row.

	CH1	CH2	CH3
Pulse input application	0: Pulsar	: Pulsar	0: Pulsar
Pulse input rotation direction	0: Pulsar 2: High-speed counter	: Forward	0: Forward
Pulse input method	0: 2-phase input	0: 2-phase input	0: 2-phase input
Pulse input multiplication	2: Multiply by 4	2: Multiply by 4	2: Multiply by 4
Input time constant	0: No input time constant	0: No input time constant	0: No input time constant

Set the pulse input application.  
Please select from the following.  
0: Pulsar, 2: High-speed counter

OK Cancel Copy CH Initialize


Item	Setting example	Range
Pulse input application	2: High-speed counter	"2: High-speed counter"
Pulse input rotation direction	0: Forward	"0: Forward", "1: Reverse"

## 12.3 High-speed Counter Function

Item	Setting example	Range
Pulse input method	0: 2-phase input	"0: 2-phase input", "1: Direction identification input (Pulse/Sign)", "2: Individual input (CW/CCW)"
Pulse input multiplication	2: Multiply by 4	"0: Multiply by 1", "1: Multiply by 2", "2: Multiply by 4"
Input time constant	0: No input time constant	"0: No input time constant", "1: 0.1 us", "2: 0.5 us", "3: 1.0 us", "4: 2.0 us", "5: 10.0 us"

### **i** Info.

- When using pulse inputs as the master axis for synchronous control, select an arbitrary pulse input channel from the "Select synchronous master axis" item in the "Synchronization Parameter Settings" dialog box.

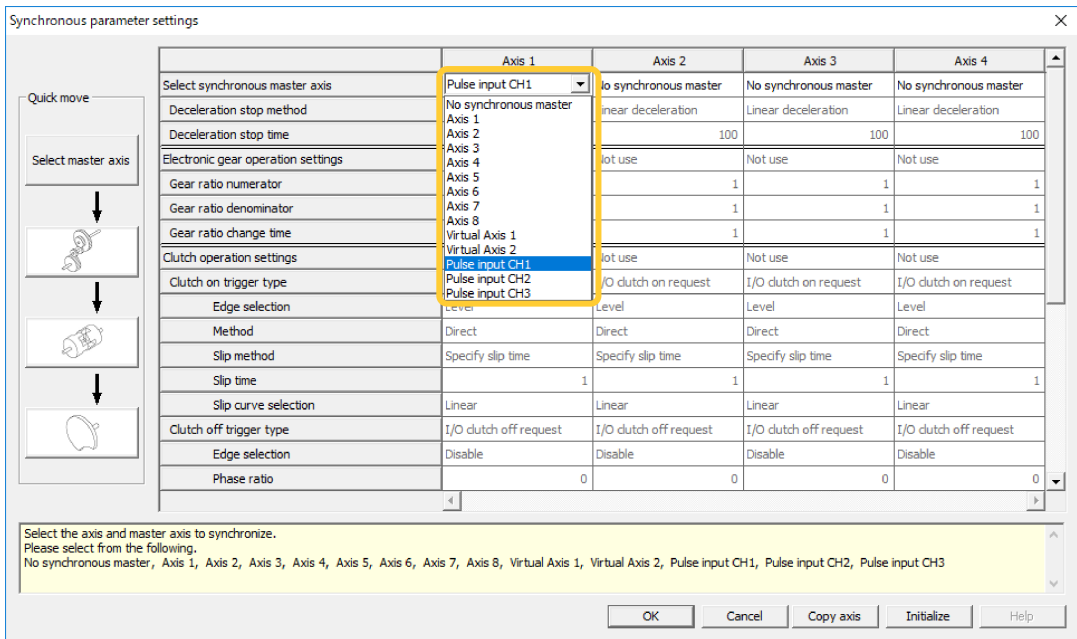

### 12.3.3 Count Disable/Enable Control

#### ■ Pulse input control


- If "High-speed counter" is selected for the pulse input application, counting the pulse input value can be stopped anytime. When counting the pulse input value is stopped, the current pulse input value is held.
- Whether to disable or enable counting of pulse inputs is set by writing to the following area by using a user program.

#### ■ Sample programs

The following sample program disables pulse input for CH1 of slot number 0.



## 12.3 High-speed Counter Function

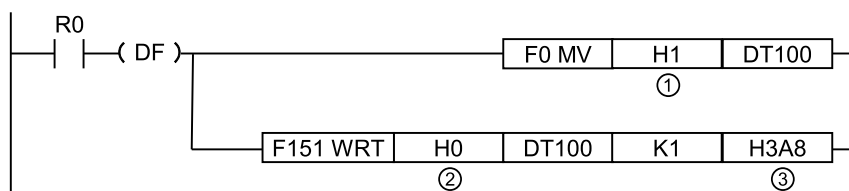

Code	Description	Values specified in the program		
		CH1	CH2	CH3
(1)	Value corresponding to the axis for which counting is disabled	H1 (bit0)	H2 (bit1)	H4 (bit2)
(2)	Bank, slot No.	H0 (Bank 0, slot No.)		
(3)	Pulse count enable flag area	H3A8		

(MEMO)

# 13 Stop Functions

---

13.1 Types and Settings of Stop Function .....	13-2
13.1.1 Stop Types .....	13-2
13.1.2 Setting the Stop Time.....	13-3
13.2 Processing during Stop.....	13-5
13.3 Pause Function .....	13-6
13.3.1 Overview of Pause Function .....	13-6
13.3.2 Settings of Pause.....	13-6

## 13.1 Types and Settings of Stop Function

### 13.1 Types and Settings of Stop Function

#### 13.1.1 Stop Types

- The following seven types of stop are available.
- System stop, emergency stop, deceleration stop, and pause take effect when allocated output signals are turned ON by the user program.
- Limit stop, soft limit stop, and error stop take effect when the corresponding conditions are met.

#### ■ Types of stop operation

Name	Time chart	Occurrence condition and operation
System stop		When the system stop contact (Y100) turns ON, the operations of all the axes immediately stop. System stop occurs in a deceleration time of 0 ms. A similar operation is also performed when the operating mode of the positioning unit RTEK is switched from RUN to PROG.
Emergency stop		When an emergency stop contact (Y140 to Y147) turns ON, the operation of the corresponding axis stops. Deceleration stop is performed in the "Emergency stop deceleration time" specified in the parameter settings menu of Configurator PM7-RTEX.
Limit stop		When limit input (+) or limit input (-) (X140 to X14F) turns ON, the operation of the corresponding axis stops. Deceleration is performed in the "Limit stop deceleration time" specified in the parameter settings menu of Configurator PM7-RTEX.

(Note 1) The contacts are indicated as allocated I/O when the positioning unit RTEK is installed in slot number 0.

Name	Timing chart	Occurrence condition and operation
Soft Limit stop		When the soft limit function is enabled, the operation of the corresponding axis stops when the range of the soft limit is exceeded. Deceleration is performed in the "Error stop deceleration time" specified in the parameter settings menu of Configurator PM7-RTEX.
Error stop		When a self-diagnostic error (error code 44: positioning operation error) occurs, the operation of the corresponding axis (all axes or each axis) stops.

## 13.1 Types and Settings of Stop Function

Name	Timing chart	Occurrence condition and operation
		Deceleration is performed in the "Error stop deceleration time" specified in the parameter settings menu of Configurator PM7-RTEX. (Note 1)
Deceleration stop (Note 1)		When a deceleration stop contact (Y148 to Y14F) turns ON, the operation of the corresponding axis stops. Deceleration is performed in the deceleration time specified for active positioning operations.
Temporary stop (Note 1)		When a deceleration stop (Y148 to Y14F) turns ON, the operation of the corresponding axis stops. Deceleration is performed in the deceleration time specified for active positioning operations. When a deceleration stop signal turns OFF, the deceleration stop is canceled and the stopped control restarts.

(Note 1) The operations of deceleration stop and pause are switched by using a user program to set up the system operation setting area in the positioning memory.

(Note 2) The contacts are indicated as allocated I/O when the positioning unit RTEX is installed in slot number 0.

### Allocation of I/O signals

Signal name	I/O number							
	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
System stop	Y100							
Emergency stop (Operation: Level type)	Y140	Y141	Y142	Y143	Y144	Y145	Y146	Y147
Deceleration stop (Operation: Level type)	Y148	Y149	Y14A	Y14B	Y14C	Y14D	Y14E	Y14F

(Note 1) For interpolation control, turn ON the contact corresponding to the smallest axis number in the interpolation group.

(Note 2) The contacts are indicated as allocated I/O when the positioning unit RTEX is installed in slot number 0.

### 13.1.2 Setting the Stop Time

The stop time is specified for each axis using Configurator PM7-RTEX.

## 13.1 Types and Settings of Stop Function

### ■ Setting stop time

Parameter settings				
	Axis 1	Axis 2	Axis 3	
Jog operation - Jog target speed	1000	1000	1000	
Emergency stop deceleration time (ms)	100	100	100	
Limit stop deceleration time (ms)	100	100	100	
Error stop deceleration time (ms)	100	100	100	
J-point - Operation setting code	0: Linear acceleration/deceleration	0: Linear acceleration/deceleration	0: Linear acceleration/deceleration	0

Item	Description
Emergency stop deceleration time	Set the deceleration time for emergency stop. 0 to 10,000 ms (Default value: 100 ms)
Limit stop deceleration time	Set the deceleration time for limit stop. 0 to 10000 ms (Default: 100 ms)
Error stop deceleration time	Set the deceleration time for error stop and soft limit stop. 0 to 10000 ms (Default: 100 ms)

---

## 13.2 Processing during Stop

### ■ Operation during stop

- System stop, emergency stop, deceleration stop, and pause are performed by turning ON each request contact in the I/O area.
- The stopped state is held while each contact is ON and until each request signal turns OFF. No operations can be performed during stop. The same applies to limit stop, soft limit stop, and error stop.

### ■ Priorities of each stop operation

- When stop control requests are made simultaneously, stop operations are executed according to the following priorities.  
(1) System stop > (2) Error stop/Soft limit stop/Limit stop > (3) Emergency stop > (4) Pause > (5) Deceleration stop
- The priorities of error stop, soft limit stop, and limit stop are the same.
- For stop operations with the same priority, the axis will stop at the stopping time of the stop operation that occurs first.

### ■ Dwell time setting

- Dwell time settings are disabled for stop operations, regardless of the pattern.
- However, dwell time settings are enabled for positioning operations after pause.

### ■ Flag processing

- For system stop, the BUSY signal turns OFF and the operation complete signal turns ON.
- For emergency stop, limit stop, soft limit stop, error stop, and deceleration stop, the BUSY signal turns OFF and the operation complete signal turns ON upon completion of deceleration.

### ■ Current value coordinates

- Even during stop operation, the current value coordinate area is always updated.
- After the emergency stop, limit stop, soft limit stop, error stop, deceleration stop, or pause, deceleration is performed in each specified deceleration time, and the values at the time of operation stop are stored.
- For system stop, the value at the time of operation stop is stored.

### 13.3 Pause Function

#### 13.3.1 Overview of Pause Function

- The pause function temporarily stops the control during operation. The pause function is used by switching between the pause and deceleration stop functions.
- When the deceleration stop request contact turns ON, the pause function performs a deceleration stop in the deceleration time of the active control. The stopped state is then held while the deceleration stop request contact (Y148 to Y14F) is ON, and the stopped control is restarted when the deceleration stop request contact turns OFF.

#### Info.

- Deceleration stop cannot be executed while the pause function is being used. Use the emergency stop function to execute a stop operation when using the pause function.
- The pause function is valid only when automatic operation (positioning control) is being performed. During manual operation (JOG operation/home return/pulser operation), the operation is the same as for deceleration stop.
- As is the case with other stop functions, the pause function holds the stopped state while the deceleration stop request signal is ON. If an emergency stop or system stop is executed during a stop, the pause function will be canceled and the state will change to an emergency stop or system stop state.

#### 13.3.2 Settings of Pause

- The operations of deceleration stop and pause are switched by using a user program to set up the system operation setting area (address H389 in bank 00H) in the positioning memory.


#### ■ System operation setting area (bank 00H: common area)

Offset address	Name	Default	Description
H389	Deceleration stop operation	K0	Specifies the operation to be performed when the deceleration stop request signal is set to "Active" (from OFF to ON).
			<p>0: Deceleration stop During repetitive operation, the axis stops after operations are performed up to the E-point of the repetitive operation.</p> <p>1: Pause Performs a deceleration stop, and restarts the positioning operation when the deceleration stop request signal is canceled (changed from ON to OFF). Also, the same operation as deceleration stop is performed during any operation other than positioning operation.</p> <p>During repetitive operation, the axis stops after operations are performed up to the E-point of the repetitive operation and the positioning operation is restarted when the deceleration stop request signal is cancelled (ON→OFF).</p> <p>If a system stop or emergency stop is executed while the positioning unit is paused, the pause state will be canceled and the operation will not restart even if the deceleration stop request signal is canceled (ON→OFF).</p>



### ■ Sample programs

- The following sample program switches the operation when the deceleration stop contact for Axis 1 of slot number 0 turns ON.
- The parameter corresponding to the operation to be performed is set in the system operation area (address H389 in bank 00H).

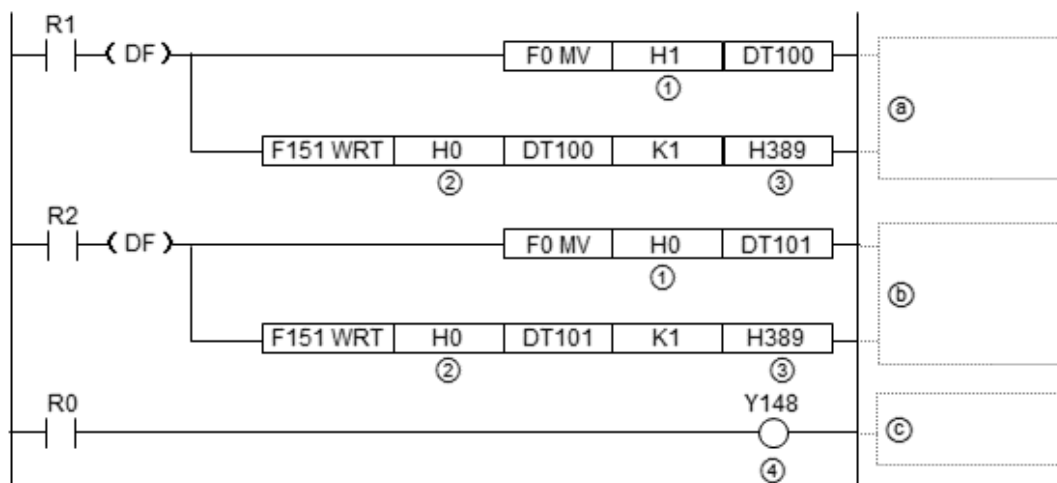

Code	Description	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
(1)	Positioning parameter values for switching operations	H0: Deceleration stop operation, H1: Pause operation							
(2)	Bank, slot No.	H0 (Bank 0, slot No.)							
(3)	System stop	H389							
(4)	Deceleration stop (Operation: Level type)	Y148	Y149	Y14A	Y14B	Y14C	Y14D	Y14E	Y14F
(a)	Switch the operation to pause when the deceleration stop contact turns ON.								
(b)	Switch the operation to deceleration stop when the deceleration stop contact turns ON.								
(c)	Perform deceleration stop or pause.								

(MEMO)

# 14 Auxiliary Functions

---

14.1 Dwell Time .....	14-3
14.2 Soft Limit .....	14-4
14.3 Auxiliary Output.....	14-6
14.3.1 Auxiliary Output Function .....	14-6
14.3.2 Setting Auxiliary Outputs.....	14-7
14.3.3 Monitoring Auxiliary Outputs .....	14-8
14.3.4 Behavior when Movement Amount is Changed during Operation ..	14-8
14.4 Home Coordinates .....	14-10
14.5 Current value update .....	14-12
14.6 Multi-turn Data Clearing Function .....	14-15
14.6.1 Overview of Multi-turn Data Clearing .....	14-15
14.6.2 Memory Area Used .....	14-15
14.6.3 Setting up the Multi-turn Data Clearing Function .....	14-15
14.7 Deviation Counter Clearing Function .....	14-17
14.7.1 Overview of Deviation Counter Clearing Function .....	14-17
14.7.2 Behavior of Deviation Counter Clearing.....	14-17
14.8 Target Speed Change Function .....	14-19
14.8.1 Overview of Target Speed Change Function .....	14-19
14.8.2 Setting Procedure and Behaviors (Direct Speed Specification Method).....	14-20
14.8.3 Setting Procedure and Operations (Ratio Specification Method) ..	14-23
14.9 Movement Amount Change Function .....	14-25
14.9.1 Overview of Movement Amount Change Function .....	14-25
14.9.2 Setting Procedure and Behaviors of Movement Amount Change Function .....	14-26
14.10 Torque Limit .....	14-30
14.11 Monitor Error (Torque / Actual Speed Judgement).....	14-34
14.12 Operation Complete Signal.....	14-36
14.12.1 Operation Done Flag and In-position Flag .....	14-36
14.13 Simplified Position Deviation Monitor.....	14-37
14.14 Amplifier Parameter R/W Function .....	14-38
14.14.1 Overview of Amplifier Parameter R/W Function .....	14-38
14.14.2 Reading Parameters from the Amplifier .....	14-38
14.14.3 Writing Parameters to the Amplifier .....	14-40
14.14.4 Saving Amplifier Parameters (Writing to EEPROM) .....	14-42
14.14.5 Resetting the Amplifier (Restart).....	14-44

## 14 Auxiliary Functions

---

14.15	Amplifier Monitor Function .....	14-47
14.15.1	Overview of the Amplifier Monitoring Function .....	14-47
14.15.2	Monitoring Items .....	14-47
14.15.3	Monitoring Procedure.....	14-48
14.16	Latch Correction J-point Control Function .....	14-51
14.16.1	Overview of Latch Correction J-point Control Function .....	14-51
14.16.2	Overview and Applications of Latch Correction J-point Control Function .....	14-51
14.16.3	Settings and Operations of Latch Correction J-Point.....	14-51
14.16.4	Restrictions on Latch Correction J-Point Control Function .....	14-53
14.17	Latch Stop Function .....	14-54
14.17.1	Overview of Latch Stop Function .....	14-54
14.17.2	Overview and Applications of Latch Stop Function.....	14-54
14.17.3	Settings and Operations of the Latch Stop Function .....	14-54
14.17.4	Restrictions on the Latch Stop Function .....	14-56
14.18	Counter Positioning Function.....	14-58
14.18.1	Overview of Counter Positioning Function.....	14-58
14.18.2	Settings and Operations of Counter Positioning Function .....	14-58
14.18.3	Operating Time of Counter Positioning .....	14-62
14.18.4	Restrictions on Counter Positioning Function .....	14-64
14.19	Positioning speed hold mode.....	14-65
14.19.1	Overview and Applications of Positioning Speed Hold Mode .....	14-65
14.19.2	Unit Memory.....	14-65
14.19.3	Operation in Positioning Speed Hold Mode .....	14-66
14.19.4	Restrictions on Positioning Speed Hold Mode.....	14-67

## 14.1 Dwell Time

Dwell time refers to the time from the completion of execution of a positioning table during automatic operation until transition to the next operation.

### ■ Operation pattern and dwell time

Operation pattern	Dwell time and operation	
E-point control		The dwell time is the time taken from the completion of the position command until the operation done flag turns ON.
P-point control		For P-point control, dwell time is invalid, as positioning tables operate continuously. For the final table (E point), as is the case with E-point control, the dwell time is the time from the completion of the position command until the operation done flag turns ON.
C-point control		The dwell time is the waiting time required to execute the next table after completion of the positioning table (deceleration stop). For the last table (E point), as is the case with E-point control, dwell time is the time from the completion of the position command until the operation done flag turns ON.

### ■ Dwell time setting

- Dwell time is specified for each positioning table by using Configurator PM7-RTEX.
- Dwell time can be specified for each positioning data table within a range of 0 to 32,767 (ms).

Untitled - Configurator PM7-RTEX

File Edit View Online Debug Axis Settings Options Help


Communications destination: Home - Slot No. 0 | Position unit: pulse | Speed unit: pulse / s

Table number	Operation pattern	Control method	X axis (I) movement	Acceleration/deceleration method	Acceleration time (ms)	Deceleration time (ms)	Target speed	Dwell time (ms)
1	E: End point	I: Increment	200000	L: Linear	100	100	200000	0
2	E: End point	I: Increment	1000000	L: Linear	100	100	500000	50
3	E: End point	I: Increment	0	L: Linear	100	100	1000	0
4	E: End point	I: Increment	0	L: Linear	100	100	1000	0


### 14.2 Soft Limit

#### ■ Soft limit function

- The system is designed to mechanically set the limit (+) and limit (-) to restrict the moving range of the motor.
- Soft limits are a function that adds software-based limits relative to the absolute coordinates managed within the unit, aside from mechanical limits (+) and (-). As soft limits are a function for the protection of motors, servo amplifiers, and motor drivers, we recommend that soft limits be set within the range of mechanical limits (+) and (-) as below.

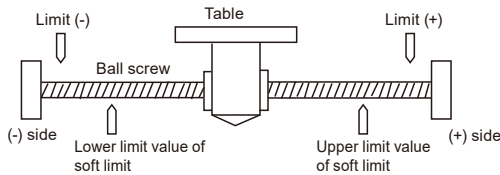

- When the setting range of soft limits (upper and lower limit values) is exceeded, an error occurs and deceleration stop is executed. After the motor stops, it is necessary to clear the error and move the motor within the range of soft limits by using an operation such as JOG operation.

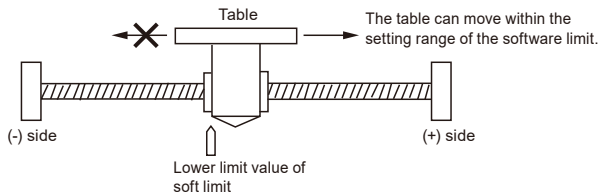

#### ■ Setting the soft limits

- Soft limits can be enabled or disabled using the "Parameter Settings" dialog box of Configurator PM7-RTEX.
- Soft limits can be enabled or disabled separately for positioning control, home return, JOG operation, and pulser operation. For example, soft limits can be disabled during home return or JOG operation.
- The soft limits of the slave axes when pulse input is specified for the master axis enable when the soft limits for pulser operation are enabled.

Parameter settings




	Axis 1	Axis 2	Axis 3	Axis 4	
Unit setting	P:pulse	P:pulse	P:pulse	P:pulse	
Number of pulses per revolution	1	1	1	1	
Movement per revolution	1	1	1	1	
Clockwise/counterclockwise direction setting	0: Clockwise positive	0: Clockwise positive	0: Clockwise positive	0: Clockwise positive	
Limit switch	N: Disabled	N: Disabled	N: Disabled	N: Disabled	
Limit switch connection	S: Standard	S: Standard	S: Standard	S: Standard	
Software limit (Positioning control)	N: Disabled	N: Disabled	N: Disabled	N: Disabled	
Software limit (Home return)	N: Disabled	N: Disabled	N: Disabled	N: Disabled	
Software limit (JOG operation)	N: Disabled	N: Disabled	N: Disabled	N: Disabled	
Software limit (Pulsar operation)	N: Disabled	N: Disabled	N: Disabled	N: Disabled	
Software limit upper limit value	1073741823	1073741823	1073741823	1073741823	
Software limit lower limit value	-1073741823	-1073741823	-1073741823	-1073741823	
Auxiliary output mode	N: Not used	N: Not used	N: Not used	N: Not used	
Auxiliary output on time (ms)	10	10	10	10	

## 14.3 Auxiliary Output

### 14.3 Auxiliary Output

#### 14.3.1 Auxiliary Output Function

- The auxiliary output function informs external devices which table is being executed when automatic operation (E-point control, C-point control, P-point control, or J-point control) is performed.
- The auxiliary output contact and auxiliary output code change according to the table currently being executed.
- The values in the auxiliary output code are held until the next positioning table is executed. Also, the auxiliary output code that is output immediately before the completion of automatic operation is held.

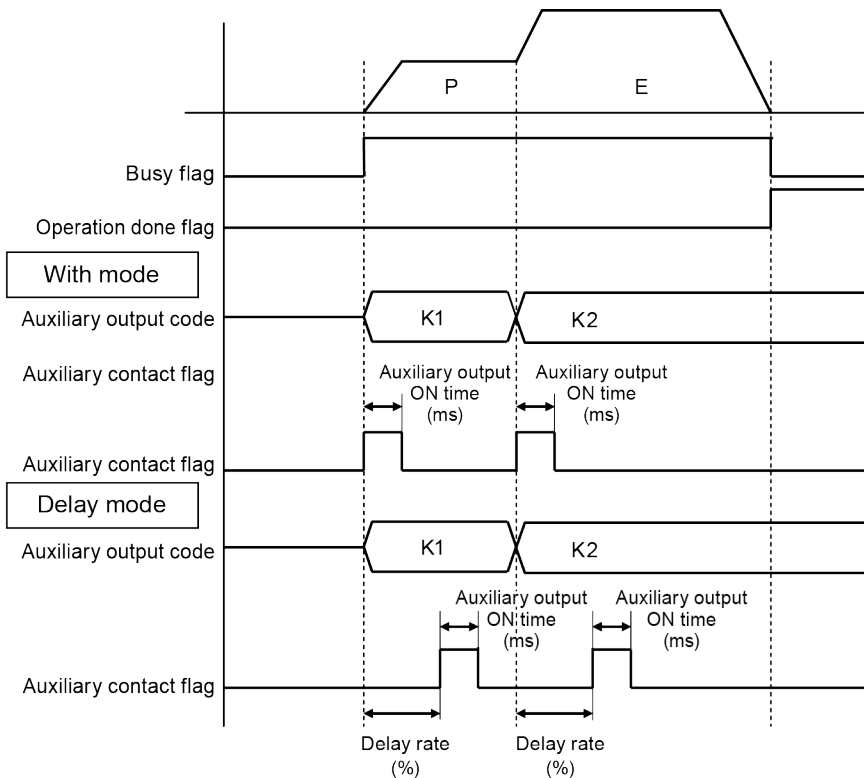

- The auxiliary output function is provided with two modes: With mode and Delay mode. The auxiliary output mode, auxiliary output ON time, and delay ratio are set on Configurator PM7-RTEX.
- Auxiliary output contacts can be monitored with the input contacts (X138 to X13F) allocated to each axis.
- Auxiliary output codes can be set for each positioning data table on Configurator PM7-RTEX. Auxiliary output codes can be monitored by reading them from the positioning memory (each axis information area).



### 14.3.2 Setting Auxiliary Outputs

Auxiliary outputs are specified for each axis in Configurator PM7-RTEX. The auxiliary output function is enabled when auxiliary output mode is selected in the "Parameter Settings" dialog box.

#### ■ Settings of auxiliary output mode and auxiliary output contact operation

	Axis 1	Axis 2	Axis 3	Axis 4
Auxiliary output mode	D: Delay mode	W: With mode	N: Not used	N: Not used
Auxiliary output on time (ms)	10	10	10	10
Auxiliary output delay ratio (%)	0	0	0	0
Completion width (pulse)	10	10	10	10
Monitor error - Torque judgment	N: Disabled	N: Disabled	N: Disabled	N: Disabled

Item	Description
Auxiliary output mode	N: Not used Select this item when no auxiliary output contact or auxiliary output code is used.
	W: With mode At the same time the automatic operation starts, the auxiliary contact flag of the corresponding axis allocated to the I/O area turns ON.
	D: Delay mode The auxiliary contact flag of the corresponding axis allocated to the I/O area turns ON according to the ratio (%) of the positioning movement amount of the automatic operation. However, when the automatic operation is set to J-point control, the operation is the same as that in With mode.
Auxiliary output ON time	Set the time period during which the auxiliary output contact is ON. 0 to 255 ms (Default value: 10 ms)
Auxiliary output Delay ratio	When Delay mode is selected as the auxiliary output mode, specify the ratio of the delay in the time until the auxiliary output contact turns ON. Setting range: 0 to 100% (Default value: 0%)

#### ■ Setting auxiliary output codes

Auxiliary output codes (one word) can be set for each table of positioning data.

Table number	Operation pattern	Control method	X axis (1) movement	Acceleration/deceleration method	Acceleration time (ms)	Deceleration time (ms)	Target speed	Dwell time (ms)	Auxiliary output
1	E End point	I Increment	200000	L Linear	100	100	200000	0	1
2	E End point	I Increment	1000000	L Linear	100	100	500000	50	2
3	E End point	I Increment	0	L Linear	100	100	1000	0	0
4	E End point	I Increment	0	L Linear	100	100	1000	0	0

#### **i** Info.

- Even if you use only auxiliary output codes, select either With mode or Delay mode as the auxiliary output mode.
- Auxiliary output codes are stored at the same time as the positioning operation starts, regardless of the auxiliary output mode (With mode or Delay mode).

## 14.3 Auxiliary Output

### 14.3.3 Monitoring Auxiliary Outputs

Auxiliary output contacts can be monitored by input contacts during operation. Auxiliary output codes can also be monitored by reading them from the positioning memory area.

#### ■ Allocation of auxiliary output contacts


Item	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
Auxiliary output contact	X138	X139	X13A	X13B	X13C	X13D	X13E	X13F

#### ■ Monitoring auxiliary output codes

- Auxiliary output codes indicating the current status are stored in address H39 in the each axis information area (bank H01) within the positioning memory. Read auxiliary output codes by using a user program.
- Auxiliary output codes can also be monitored by using the data monitor function of Configurator PM7-RTEX.

#### ■ Sample programs

The following sample program reads the auxiliary output codes for Axis 1 and Axis 2 into DT0 and DT1 of slot number 0.

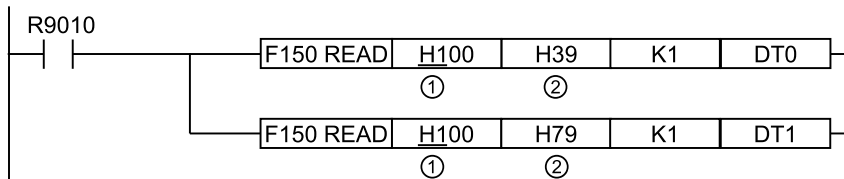

Code	Items specified in the program	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
(1)	Bank	H01							
(2)	Area in which auxiliary output codes are stored	H39	H79	HB9	HF9	H139	H179	H1B9	H1F9

### 14.3.4 Behavior when Movement Amount is Changed during Operation

#### ■ Notes on changing the movement amount during positioning operation

If the delay ratio is set to 1% to 99%, the auxiliary contact will behave as below when the movement amount is changed during positioning operation.

- If a request to change the movement amount is issued before the auxiliary contact turns ON, the auxiliary contact will turn ON according to the delay ratio that exists before the movement amount is changed.

- If the movement amount that causes the auxiliary contact to turn ON is below the post-change target value, the auxiliary contact will turn ON upon completion of table execution.

## 14.4 Home Coordinates

### 14.4 Home Coordinates

"Home coordinates" is a function that enables the coordinates upon completion of home return processing to be set to arbitrary values.

- The coordinates upon completion of home return can be set in the positioning memory by using the "Parameter Settings" dialog box of Configurator PM7-RTEX or a user program.
- Set coordinates become the home coordinates when home return is executed for the target axis.


#### ■ Setting home coordinates

Home coordinates can be set for each axis by using the "Parameter Settings" dialog box of Configurator PM7-RTEX.

	Axis 1	Axis 2	Axis 3
Home return - Return setting code	0: Dog method 1	0: Dog method 1	0: Dog method 1
Home return - Stop-on-contact torque value (%)	100	100	100
Home return - Stop-on-contact judgment time (ms)	100	100	100
Home return - Return direction	0: Limit (-) direction	0: Limit (-) direction	0: Limit (-) direction
Home return - Return acceleration time (ms)	100	100	100
Home return - Return deceleration time (ms)	100	100	100
Home return - Return target speed	1000	1000	1000
Home return - Return creep speed	100	100	100
Home return - Home coordinates	300000	0	0
Jog operation - Acceleration/deceleration method	0: Linear acceleration/deceleration	0: Linear acceleration/deceleration	0: Linear acceleration/deceleration

#### ■ Sample programs

The following sample program reads the unit-converted current value for Axis 1 of slot number 0 and sets it as the home coordinates.

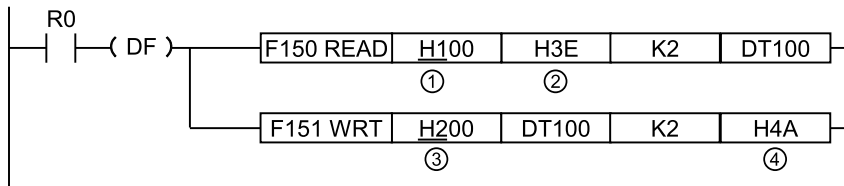

Code	Items specified in the program	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
(1)	Bank	H01							
(2)	Storage area for unit-converted current value	H3E to H3F	H7E to H7F	HBE to HBF	HFE to HFF	H13E to H13F	H17E to H17F	H1BE to H1BF	H1FE to H1FF
(3)	Bank	H02	H0C	H16	H20	H2A	H34	H3E	H48
(4)	Home coordinates setting area	H4A to H4B							

**i Info.**

- For home coordinates, set an integer equivalent to the unit-converted current value.  
Example) When the unit is  $\mu\text{m}$  ( $0.1 \mu\text{m}$ ), set "10000" if the unit-converted current value is  $1,000.0 \mu\text{m}$ .

## 14.5 Current value update


### 14.5 Current value update

“Current value update” is a function that sets the unit-converted current value stored in the positioning memory to an arbitrary value.

- The value to be set as the current value is set in the current value update coordinate area (addresses HC8 to HD7 in bank 00H) in the positioning memory by using a user program.
- The "unit-converted current value" in the each axis information area (addresses H3E to H3F in bank 00H) is changed to the specified current value when the bit corresponding to the target axis in the current value update request flag area (address HC0 in bank 00H) is turned ON.

#### ■ Sample programs

The following sample program uses slot number 0 to preset the arbitrary value "K1000000" in the positioning memory area and update the unit-converted current value for Axis 1. The first line of the program monitors the unit-converted current value for Axis 1 by reading it into data registers DT0 and DT1.

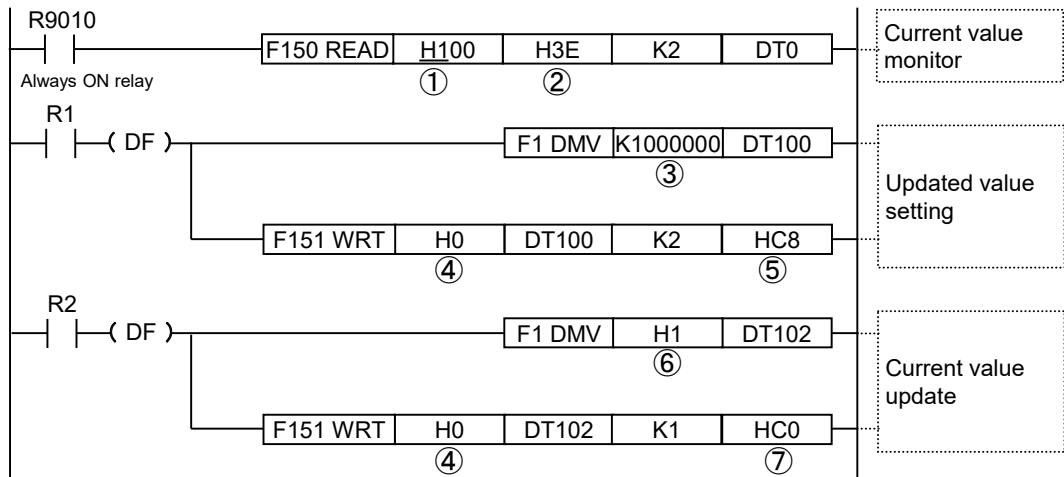

Code	Items specified in the program	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
(1)	Bank	H01							
(2)	Storage area for unit-converted current value	H3E	H7E	HBE	HFE	H13E	H17E	H1BE	H1FE
(3)	Updated value	Arbitrary value							
(4)	Bank, slot No.	H0 (Bank 0, slot No.)							
(5)	Current value update coordinate area	HC8	HCA	HCC	HCE	HD0	HD2	HD4	HD6
(6)	Set value of current value update request flag area	H1	H2	H4	H8	H10	H20	H40	H80
(7)	Current value update request flag area	HC0							

■ Current value update area (bank 00H: common area)

Memory address (Hex)	Name	Description																																	
HC0	Current value update request flag	<p>Only when the bit corresponding to each axis changes from 0 to 1, the unit-converted current value coordinates (each axis offset addresses H3E to H3F) managed by the unit are changed to the values set in the current value update coordinate area (addresses HC8 to HD7).</p> <p>Upon completion of the change, the unit automatically clears the corresponding bit in the current value update request flag area (HC0) to 0.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Current value update request for axis 1</td> <td>0</td> <td rowspan="10">                     0: No change                      1: Change the home coordinates of the corresponding information                      (After execution, the unit automatically clears the corresponding bit to 0.)                 </td> </tr> <tr> <td>1</td> <td>Current value update request for Axis 2</td> <td>0</td> </tr> <tr> <td>2</td> <td>Current value update request for Axis 3</td> <td>0</td> </tr> <tr> <td>3</td> <td>Current value update request for Axis 4</td> <td>0</td> </tr> <tr> <td>4</td> <td>Current value update request for Axis 5</td> <td>0</td> </tr> <tr> <td>5</td> <td>Current value update request for Axis 6</td> <td>0</td> </tr> <tr> <td>6</td> <td>Current value update request for Axis 7 (virtual)</td> <td>0</td> </tr> <tr> <td>7</td> <td>Current value update request for Axis 8 (virtual)</td> <td>0</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Current value update request for axis 1	0	0: No change 1: Change the home coordinates of the corresponding information (After execution, the unit automatically clears the corresponding bit to 0.)	1	Current value update request for Axis 2	0	2	Current value update request for Axis 3	0	3	Current value update request for Axis 4	0	4	Current value update request for Axis 5	0	5	Current value update request for Axis 6	0	6	Current value update request for Axis 7 (virtual)	0	7	Current value update request for Axis 8 (virtual)	0	15 to 8	-	-	-
		Bit	Name	Default	Description																														
		0	Current value update request for axis 1	0	0: No change 1: Change the home coordinates of the corresponding information (After execution, the unit automatically clears the corresponding bit to 0.)																														
		1	Current value update request for Axis 2	0																															
		2	Current value update request for Axis 3	0																															
		3	Current value update request for Axis 4	0																															
		4	Current value update request for Axis 5	0																															
		5	Current value update request for Axis 6	0																															
		6	Current value update request for Axis 7 (virtual)	0																															
		7	Current value update request for Axis 8 (virtual)	0																															
15 to 8	-	-	-																																
HC8- HC9	Current value update coordinates for Axis 1	The coordinate value to be preset is stored as the current value.																																	
HCA-HCB	Current value update coordinates for Axis 2																																		
HCC-HCD	Current value update coordinates for Axis 3																																		
HCE-HCF	Current value update coordinates for Axis 4																																		
HD0- HD1	Current value update coordinates for Axis 5																																		
HD2- HD3	Current value update coordinates for Axis 6																																		
HD4- HD5	Current value update coordinates for Axis 7 (virtual)																																		

## 14.5 Current value update

---

Memory address (Hex)	Name	Description
HD6- HD7	Current value update coordinates for Axis 8 (virtual)	

(Note 1) The current value update request flag is specified as an H constant. When an update request is issued for Axis 1 and Axis 2, H3 will be written.

### Info.

- The values changed by updating the current values are "unit-converted current values".
- Set "unit-converted current values" so that the values do not exceed the upper and lower pulse limits (-2,147,483,648 to +2,147,483,647) when converted to pulse unit current values. If the set values exceed the upper or lower pulse limit, a "current value update error" (error code 4250H) occurs.
  - Use the following formula to calculate pulse unit current values.  
Pulse unit current value = Unit-converted current value × Number of pulses per revolution / Movement amount per revolution



## 14.6 Multi-turn Data Clearing Function

### 14.6.1 Overview of Multi-turn Data Clearing

The multi-turn data clearing function clears the multi-turn data managed by servo amplifiers.

- Execute this function when using an absolute encoder for the servomotor.
- Use this function when installing an absolute encoder or replacing the battery for retaining absolute encoder values.
- If this function is executed when no absolute encoder is used, a multi-turn data clearing failure error (error code 3061H) will occur.

### 14.6.2 Memory Area Used

The multi-turn data clearing function uses the following address in "bank 00H: common area" of the positioning memory.

#### Bank 00H: Common area

Offset address	Name	Default	Description			
HC2	Multi-turn data clearing request flag	H0	Turn ON the bit corresponding to the axis for which the multi-turn data clearing function is to be executed. After multi-turn data clearing is completed, all the bits in this area are turned OFF by the controller.			
			Bit No.	Name	Default	Description
			0	Axis 1	0	0: No request (Execution completed) 1: Use the multi-turn data clearing function
			1	Axis 2	0	
			2	Axis 3	0	
			3	Axis 4	0	
			4	Axis 5	0	
			5	Axis 6	0	
			6	Axis 7	0	
			7	8 axes	0	
15 to 8	Not used	-	-			

### 14.6.3 Setting up the Multi-turn Data Clearing Function

If multi-turn data clearing is executed for Axis 1, the following procedure can be performed by user programs to achieve this processing.

## 14.6 Multi-turn Data Clearing Function

Procedure	Description
1	Perform servo OFF for Axis 1. If necessary, use the braking function or another similar function to prevent the motor from rotating.
2	Turn ON bit 0 of "Multi-turn data clearing request flag".
3	The controller executes multi-turn data clearing processing for Axis 1.
4	The multi-turn data for the servo amplifier is cleared and bit 0 of "Multi-turn data clearing request flag" is turned OFF.
5	If multi-turn data clearing terminates abnormally, a multi-turn data clearing failure error (error code 3061H) will occur on Axis 1 and bit 0 of "Multi-turn data clearing request flag" will be turned OFF.
6	Perform servo ON for Axis 1.

### Note

- The multi-turn data clearing function is subject to the following restrictions due to the specifications of servo amplifiers.

Item	Restriction
Servo status	Be sure to invoke a servo OFF state when executing the multi-turn data clearing function. If necessary, use a braking mechanism to prevent the motor from rotating.
Operation after multi-turn data clearing	After the multi-turn data clearing function is executed, the operation can be continued as it is. However, due to the specifications of the servo amplifier, we recommend that the servo amplifier be restarted.
Battery error	When an error occurs with the battery for retaining absolute encoder values, a servo amplifier error can be cleared only after the multi-turn data clearing function has been executed. Be sure to execute the processing in the following order: Error occurrence → Clearing multi-turn data → Clearing error

## 14.7 Deviation Counter Clearing Function

### 14.7.1 Overview of Deviation Counter Clearing Function

The deviation counter clearing function clears the deviations (differences between each position command value and current position) managed by servo amplifiers.

- Deviation counter clearing is performed by matching the position information (position command value) managed by the positioning unit RTEX with the current position stored in the servo amplifier.
- Clearing the deviation counter in a timely manner enables subsequent positioning operations to be performed accurately.

### 14.7.2 Behavior of Deviation Counter Clearing

Starting a positioning operation for positioning table No.1000 executes the deviation counter clearing function.

- Positioning table No.1000 is provided as a table dedicated to the deviation counter clearing function.
- Positioning parameters are automatically set as shown in the following table.

Item	Setting value
Positioning table No.	1000
Operation pattern	E: End point
Control method	I: Incremental
X-axis movement amount	Stores the difference between the position command value and the current value in the servo amplifier
Acceleration/deceleration method / Acceleration time / Deceleration time	L: Linear / 10 ms / 10 ms
Target speed	Stores the JOG target speed of the target axis


(Note 1) The settings of positioning table No.1000 cannot be changed or monitored.

#### ■ Setting procedure for each contact

Procedure	Description
1	Use the F151 WRT instruction to set the Axis-1 positioning start table No. to K1000.
2	Turn ON the Axis-1 positioning starting request contact.
3	The positioning unit RTEX automatically sets the movement amount and speed and performs a positioning operation. At this time, the servo amplifier does not operate.
4	When the positioning operation (deviation counter clearing) is completed, the operation done flag turns ON.

## 14.7 Deviation Counter Clearing Function

### ■ Behavior diagram

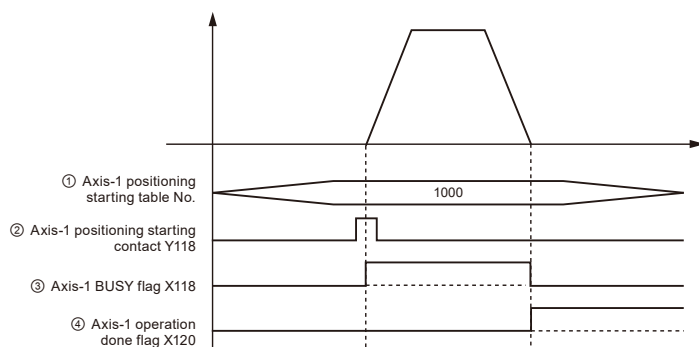


- The deviation counter clearing function cannot be executed during axis operation. Always execute the function while all axes are stopped.
- For deviation counter clearing for interpolation axes, set the JOG target speed for the X-axis as the interpolation speed (composite speed). Deviation counter clearing must be executed for all target axes by performing interpolation operations for which the movement amount for each axis has been calculated automatically.
- When performing deviation counter clearing for synchronized axes, cancel the synchronous state of the synchronized axes (by turning ON the synchronization cancellation request contact).

## 14.8 Target Speed Change Function

### 14.8.1 Overview of Target Speed Change Function

The target speed change function is used to change the target speed on an active positioning table to an arbitrary speed. Even if the speed is changed, the movement amount in the table does not change.

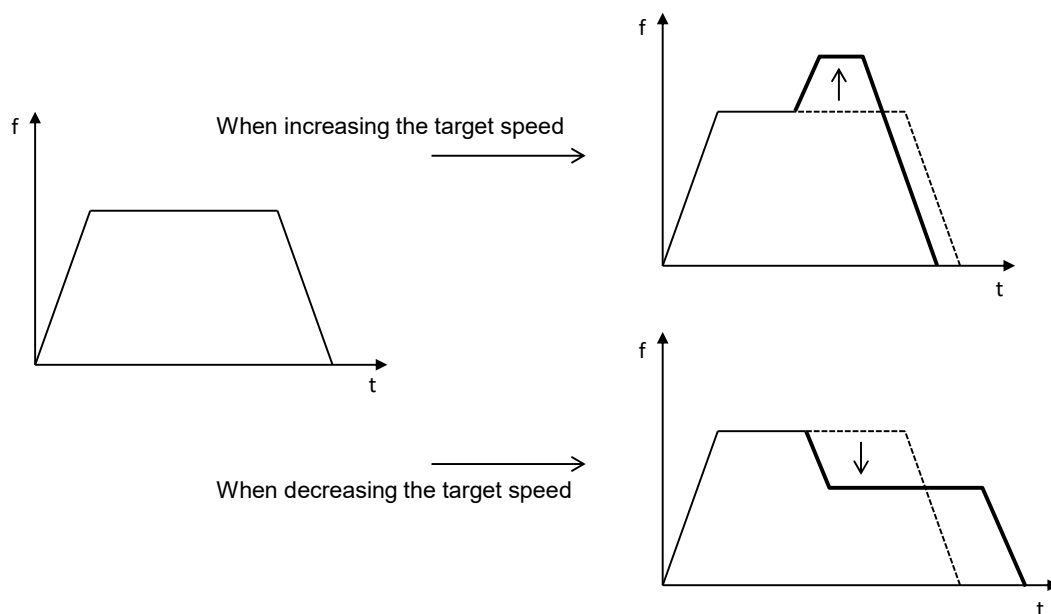

#### ■ Conditions of use

Position control	Control Method	Single axis control	○	<ul style="list-style-type: none"> <li>For synchronous control, the speed can be changed only for the master axis. (Slave axes operate according to the master axis.)</li> </ul>
		Interpolation control	×	
		Synchronous control	○	
	Operation Pattern	E-point	○	<ul style="list-style-type: none"> <li>The speed can be changed more than once in one table.</li> <li>The speed cannot be changed during deceleration accompanying a stop operation.</li> <li>The speed cannot be changed during deceleration in C-point control.</li> <li>The speed cannot be changed during the dwell time in C-point control.</li> <li>For J-point control, use the J-point speed change contact to change the speed.</li> </ul>
		P-point	○	
C-point		○		
J-point		×		
	Repetitive control	○		
JOG operation			×	<ul style="list-style-type: none"> <li>For JOG operation, change "JOG operation target speed" directly to change the speed.</li> </ul>
Stop-on-contact torque value for home return			×	

## 14.8 Target Speed Change Function

### ■ Speed change method

Direct speed specification	This is a method in which a desired speed is specified directly and requested by I/O. The valid range of the function can be selected from two patterns: "Active table only" and "Active table until operation is complete".
ratio specification (Override)	This is a function that changes the set speed by the specified percentage (%). No change request by I/O is required, and the change is reflected when the set value (ratio) is changed. The function is valid for all positioning operations after the setting is specified. The ratio specification remains in effect even if the speed is changed by direct speed specification.

### 14.8.2 Setting Procedure and Behaviors (Direct Speed Specification Method)


#### ■ Setting procedure and behaviors of direct speed specification method

The target speed change function based on the direct speed specification method is activated during positioning operation according to the following procedure.

1. "Change mode selection" and "Change speed" are set in the positioning memory.
2. Turn ON the "positioning speed change request" for each axis.

For details of errors and warnings, refer to ["18.10.2 Positioning Speed Change Setting Area"](#).

After receiving the speed change request, the positioning unit RTEX turns OFF.

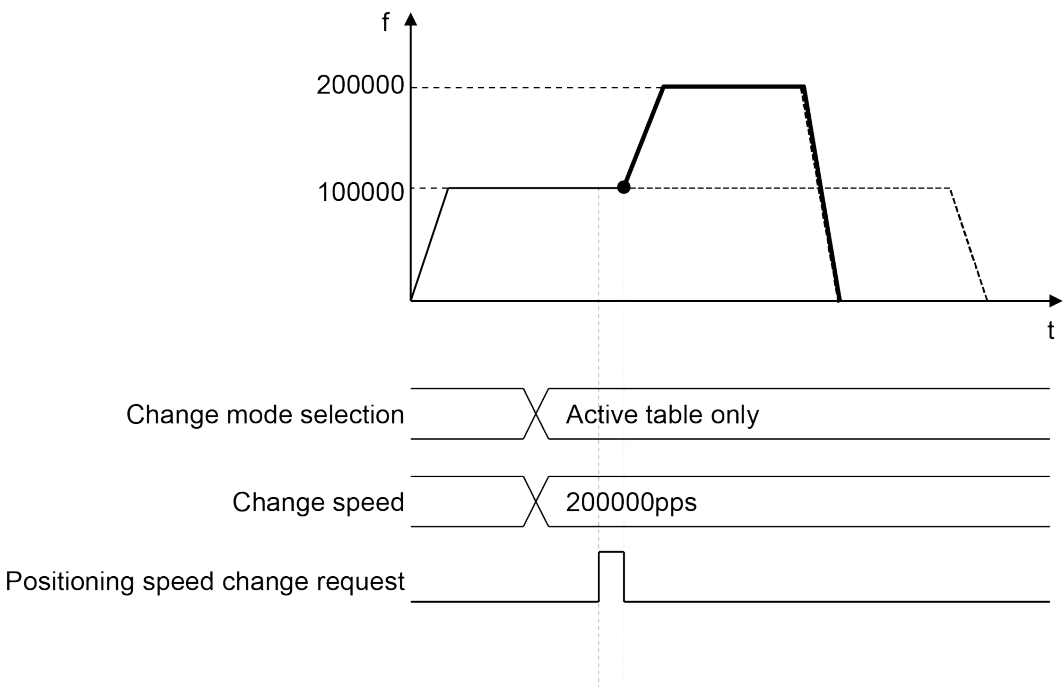

(Note 1) The acceleration time to the changed speed and the deceleration time from the changed speed follow the set values in the active table.

(Note 2) The movement amount does not change even if the speed is changed.

### ■ Positioning parameters to set for the direct speed specification method


The following positioning parameters are used for the target speed change function based on the direct speed specification method.

#### Positioning operation change setting area (bank 5FH)

Offset address	Name	Default	Description
H1	Positioning speed change: mode selection	H0	Area for setting the range of positioning speed change. 0000H: Active table only 0001H: Active table to E-point table (until operation is complete) In the case of other values, the unit operates assuming that 0000H ("Active table only") is set.
H2 to H3	Positioning speed change: Changed speed	K100	Area for setting a changed speed when positioning speed is changed Unit-converted values are set. 1 to 2,147,482,624 (Specified unit system)
H4	Positioning speed change request		When this bit changes from 0 to 1, the target speed during operation is changed to the value specified in "Positioning speed change: Changed speed". After positioning speed change processing is completed, the positioning unit RTEX automatically resets the bit to 0.

### ■ Example of operation (1): Direct speed specification, "Active table only"

Name	Setting value
mode selection	0000H (active table only)
Changed speed	150,000 (pps)

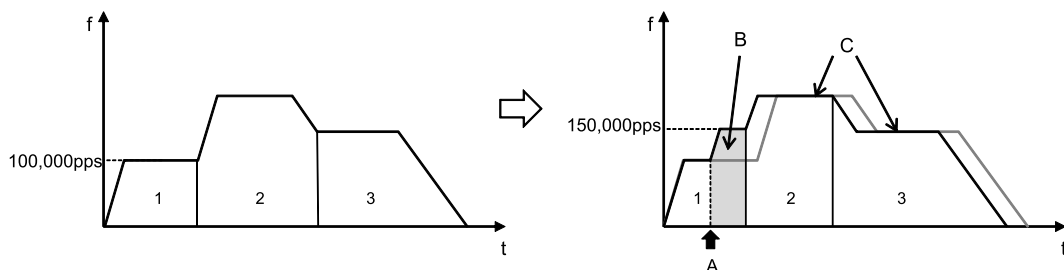


A	Speed change request contact turns ON.
B	Only the speed in Table 1 is changed to 150,000 pps.
C	The speeds in Tables 2 and 3 do not change.

## 14.8 Target Speed Change Function

### ■ Example of operation (2): Direct speed specification, "Active table to E-point table (until operation is complete)"



Name	Setting value
mode selection	0001H (active table to E-point table)
Changed speed	150,000 (pps)

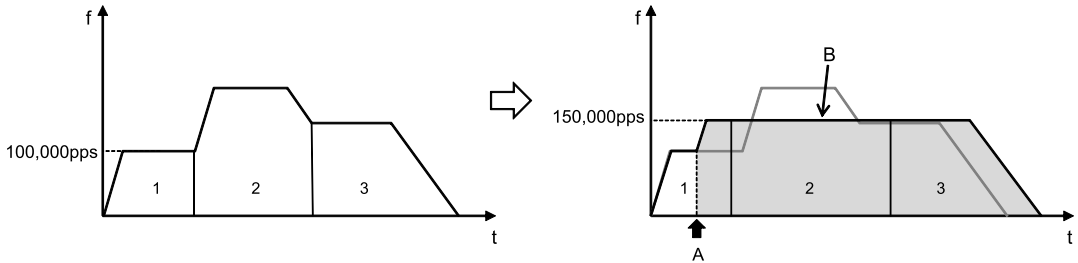

A	Speed change request contact turns ON.
B	The speeds in all consecutive tables are changed to 150,000 pps.

### ■ Example of operation (for repetitive operations)

When speed change (direct speed specification, active table only) is performed during repetitive positioning operations, only the speed in the active table in the active repetition cycle is changed.

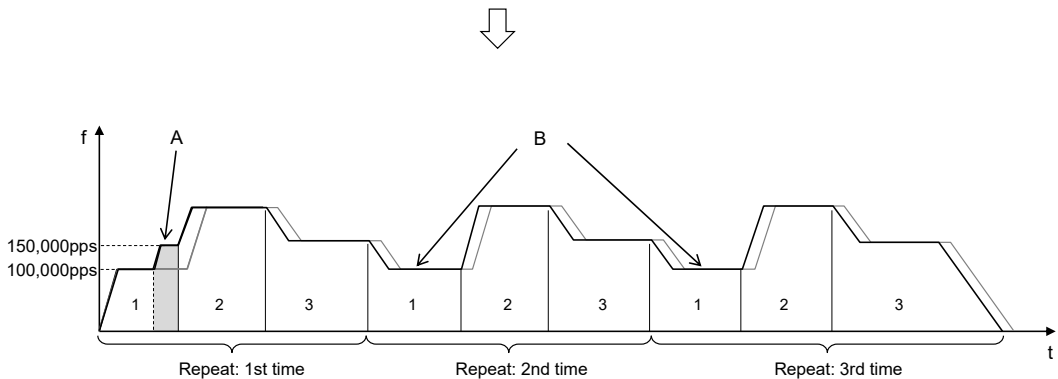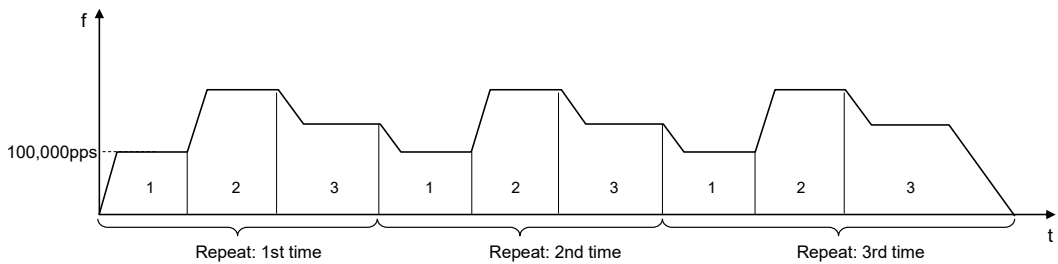


A	Only the speed in Table 1 in the first repetition cycle is changed to 150,000 pps.
B	The speeds in Table 1 in the second and third repetition cycles are not changed.



### 14.8.3 Setting Procedure and Operations (Ratio Specification Method)

#### ■ Setting procedure and operation of ratio specification method (override)

For ratio specification, the command speed is immediately reflected in the specified ratio when the ratio specification in the positioning memory is changed.

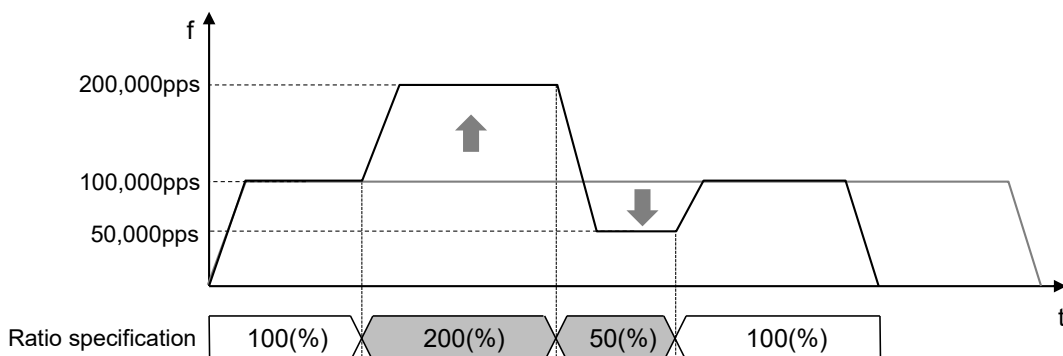

(Note 1) The acceleration time to the changed speed and the deceleration time from the changed speed follow the set values in the active table.

(Note 2) The movement amount does not change even if the speed is changed.

#### ■ Positioning parameters to set for ratio specification method

The following positioning parameters are used for the target speed change function of the ratio specification method.

#### Positioning operation change setting area (bank 5FH)


Offset address	Name	Default	Description
H0	Positioning speed change: ratio specification (Override)	K100	Area for setting the ratio (override) of change relative to the commanded speed when the positioning speed is changed. No speed change request by I/O is required, and the change becomes valid when a value (ratio) is set. 1 to 300(%)

#### ■ Example of operation

#### When the ratio specification is changed from 100% to 150%

Name	Setting value
Ratio specification	100(%) → 150(%)

# 14.8 Target Speed Change Function

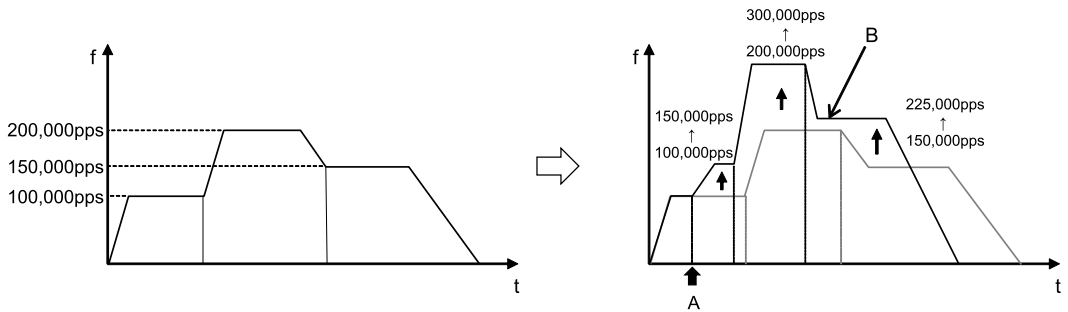


A	The ratio specification is changed from 100 to 150(%).
B	All consecutive tables follow the set ratio.

## 14.9 Movement Amount Change Function

### 14.9.1 Overview of Movement Amount Change Function

- The movement amount change function is used to change the movement amount in the active positioning table to an arbitrary amount.
- Even when the movement amount is changed, the target speed is the same.

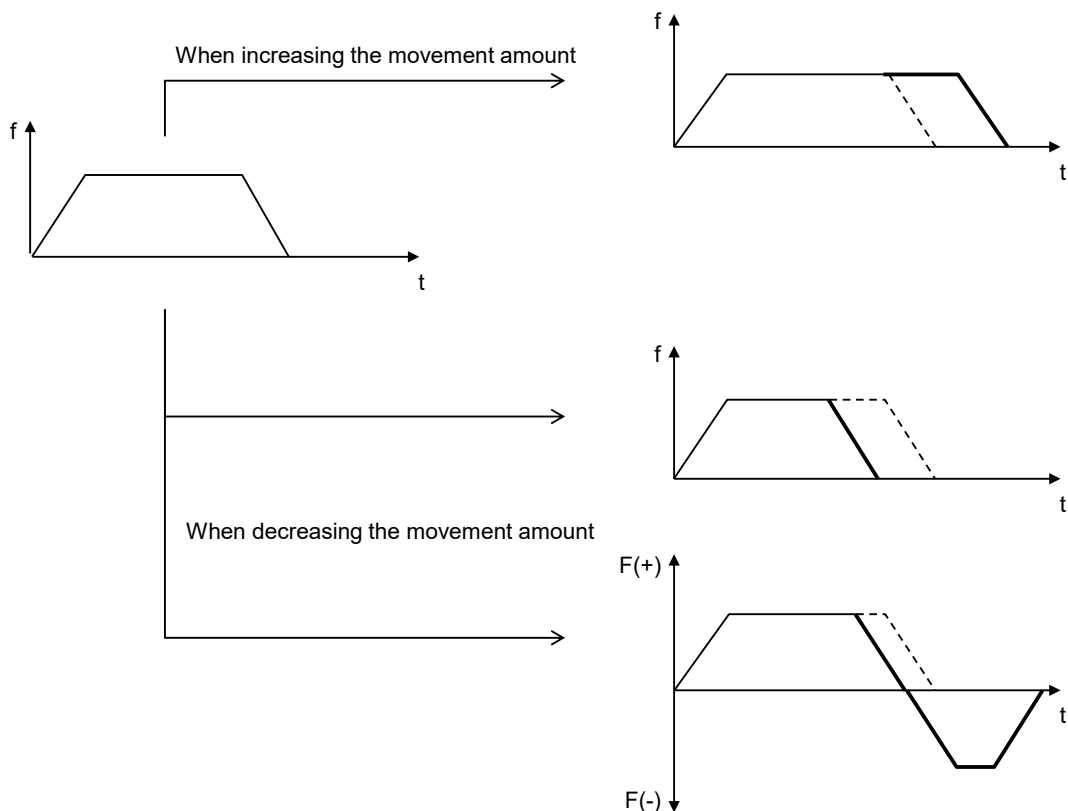

#### ■ Conditions of use

Position control	Control Method	Single axis control	○	<ul style="list-style-type: none"> <li>• For synchronous control, the movement amount can be changed only for the master axis. (Slave axes operate according to the master axis.)</li> </ul>
		Interpolation control	×	
		Synchronous control	○	
	Operation Pattern		E-point	○
P-point			○	
C-point			○	
J-point			×	

## 14.9 Movement Amount Change Function

		Repetitive control	○	• The movement amount cannot be changed during the dwell time in C-point control.
JOG operation			×	
Stop-on-contact torque value for home return			×	


### 14.9.2 Setting Procedure and Behaviors of Movement Amount Change Function

#### ■ Setting procedure and behaviors of movement amount change function

The movement amount change function is activated during positioning operations according to the following procedure.

1. "Change movement amount" in the positioning memory is set.
2. Turn ON the "positioning movement amount change request" for each axis.  
For details of errors and warnings, refer to "[18.10.3 Positioning Movement Amount Change Setting Area](#)".

After receiving the movement amount change request, the RTEK unit turns OFF.

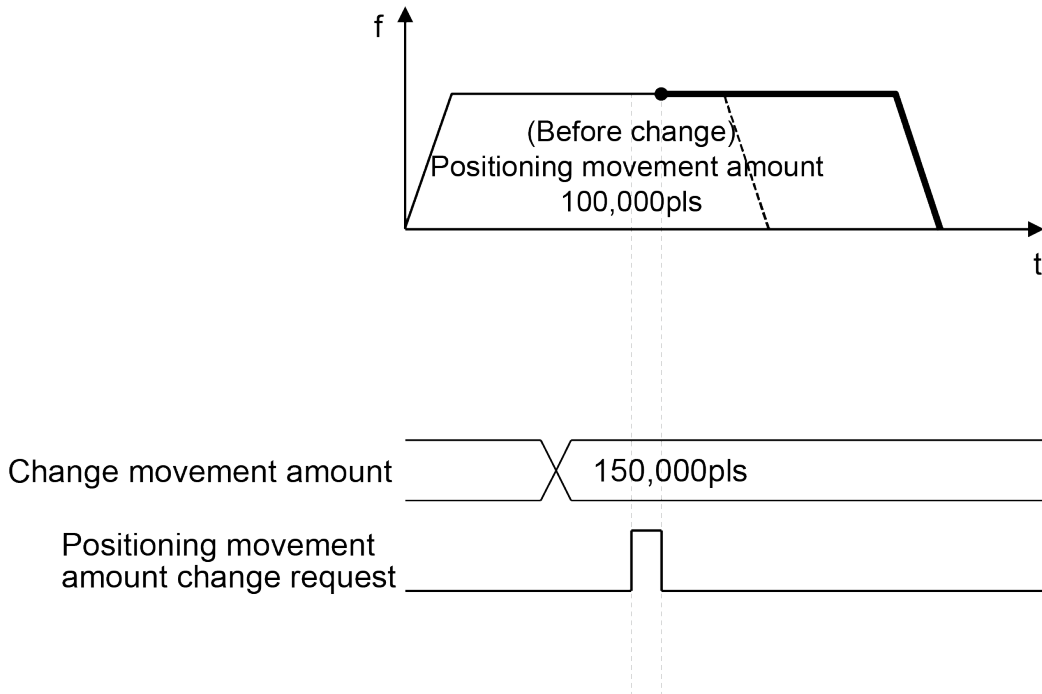

#### ■ Positioning parameters to set


The following positioning parameters are used for the movement amount change function.

## Positioning operation change setting area (bank 5FH)

Offset address	Name	Default	Description
HA to HB	Positioning movement amount change changed amount	K0	Area for setting the changed movement amount when the positioning movement amount is changed. -2,147,482,624 to +2,147,482,624 (specified unit system)

### ■ Example of operation (1): When reducing the movement amount (changed movement amount > current value)


Name	Setting value
Control method	Incremental
Positioning movement amount (before change)	10,000 (pls)
Positioning movement amount (after change)	7,000 (pls)

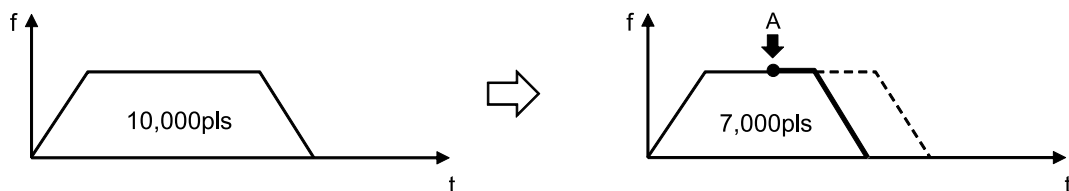

A	Movement amount change request contact ON
---	---

### ■ Example of operation (2): When reducing the movement amount (changed movement amount < current value)

Name	Setting value
Control method	Incremental
Positioning movement amount (Before change)	10,000 (pls)
Positioning movement amount (After change)	1,000 (pls)

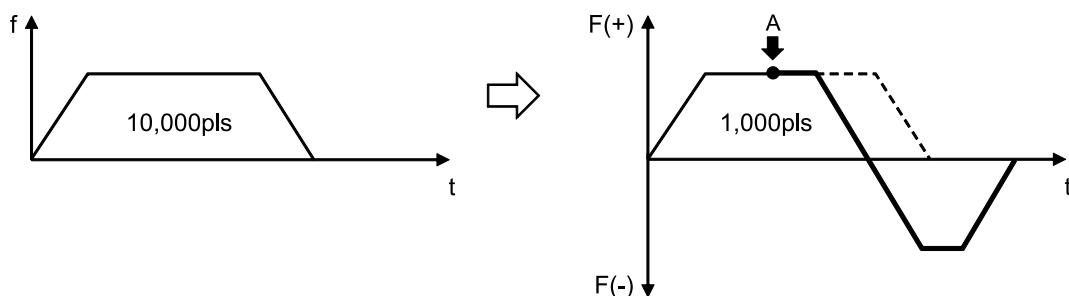


A	Movement amount change request contact ON
---	---

## 14.9 Movement Amount Change Function

### ■ Example of operation (3): When continuous table operation is performed (incremental)


Name	Setting value
Control method	Incremental
Positioning movement amount in Table 1 (before change)	5,000 (pls)
Positioning movement amount in Table 1 (after change)	8,000 (pls)

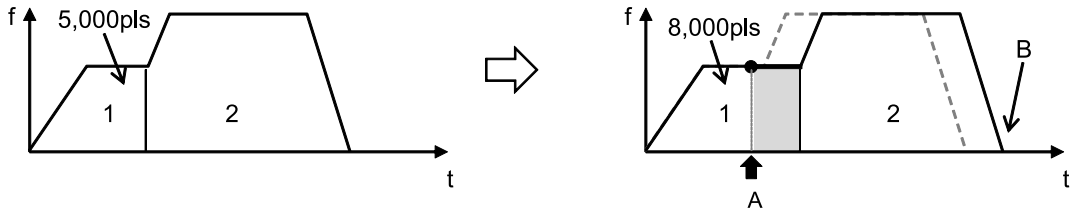

A	Movement amount change request contact ON
B	Because incremental is set, the stopping position in Table 2 also changes.

### ■ Example of operation (4): When continuous table operation is performed (absolute)

Name	Setting value
Control method	Absolute
Positioning movement amount in Table 1 (Before change)	5,000 (pls)
Positioning movement amount in Table 1 (After change)	8,000 (pls)


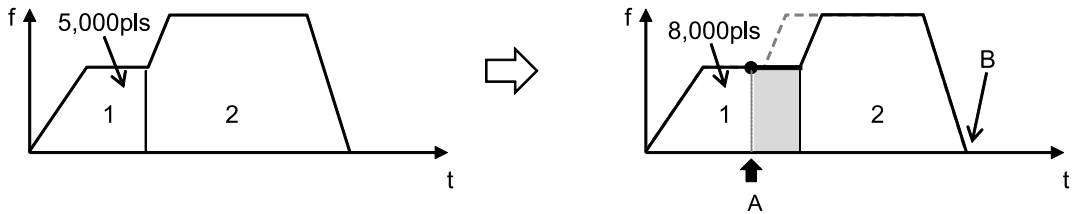


A	Movement amount change request contact ON
B	Because absolute is set, the stopping position in Table 2 does not change.

### ■ Example of behavior (For repetitive operations)

When the movement amount change function is executed during repetitive positioning operations, only the movement amount in the active table in the active repetition cycle is changed.

## 14.9 Movement Amount Change Function

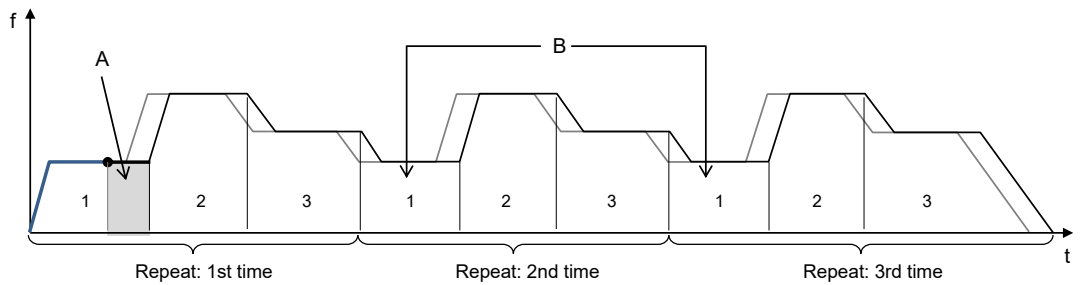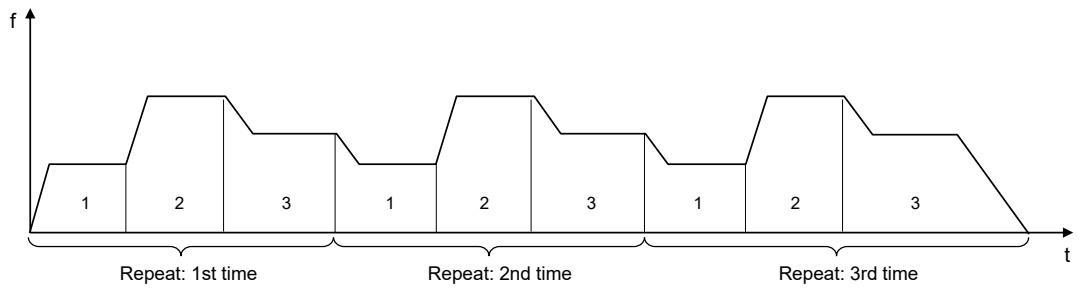

A	Only the movement amount in Table 1 in the first repetition cycle is changed to 8,000 pls.
B	The movement amounts in Table 1 in the second and third repetition cycles are not changed.

### ■ Auxiliary output when movement amounts are changed

When auxiliary output is set to Delay mode, even if the movement amount is changed, the auxiliary contact will turn ON at the position corresponding to the delay ratio relative to the pre-change movement amount. However, if the delay ratio is set to 100%, the auxiliary contact will turn ON upon completion of the operation.

## 14.10 Torque Limit

### 14.10 Torque Limit

The torque limit function enables the maximum output torque of the amplifier to be changed in real time.

- The torque limit function is executed by using a user program to set the “Torque limit enable flag” in the positioning memory and write it to “Torque limit value”. The setting to enable or disable the torque limit function and the torque limit values can be set for each axis.
- The torque limit function can be executed during position control, synchronous control, or JOG operation. It cannot be executed during home return operation.
- The torque limit function cannot be executed when amplifier parameter R/W processing or amplifier monitoring is performed.

#### ■ Torque limit setting area (bank 00H)

Offset address	Name	Default	Description			
H0D8	Torque limit enable flag	H0	Axis-based torque limit execution request flag Executes the torque limit function when the bit corresponding to each axis turns ON.			
			<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
			0	Torque limit for Axis 1	0	0: Disable torque limit (Default) 1: Enable torque limit
			1	Torque limit for Axis 2	0	
			2	Torque limit for Axis 3	0	
			3	Torque limit for Axis 4	0	
			4	Torque limit for Axis 5	0	
			5	Torque limit for Axis 6	0	
			6	Torque limit for Axis 7	0	
			7	Torque limit for Axis 8	0	
15 to 8	-	-	-			
H0D9 to H0DF	System reserved	—	—			
H0E0	Torque limit value for Axis 1	3000	Set the torque limit values. The unit is (0.1%). If 2000 is written in this area, "2000 × 0.1 = 200(%)" is used as the maximum torque during operation.			
H0E1	Torque limit value for Axis 2	3000				
H0E2	Torque limit value for Axis 3	3000				
H0E3	Torque limit value for Axis 4	3000				




---

Offset address	Name	Default	Description
H0E4	Torque limit value for Axis 5	3000	
H0E5	Torque limit value for Axis 6	3000	
H0E6	Torque limit value for Axis 7	3000	
H0E7	Torque limit value for Axis 8	3000	

■ **Sample programs**

The following sample program uses slot number 0 to apply real-time torque limits during the JOG operation for Axis 1. This sample program uses a user program to set the "Torque limit enable flag" in the positioning memory and write it to the "Torque limit value".

# 14.10 Torque Limit

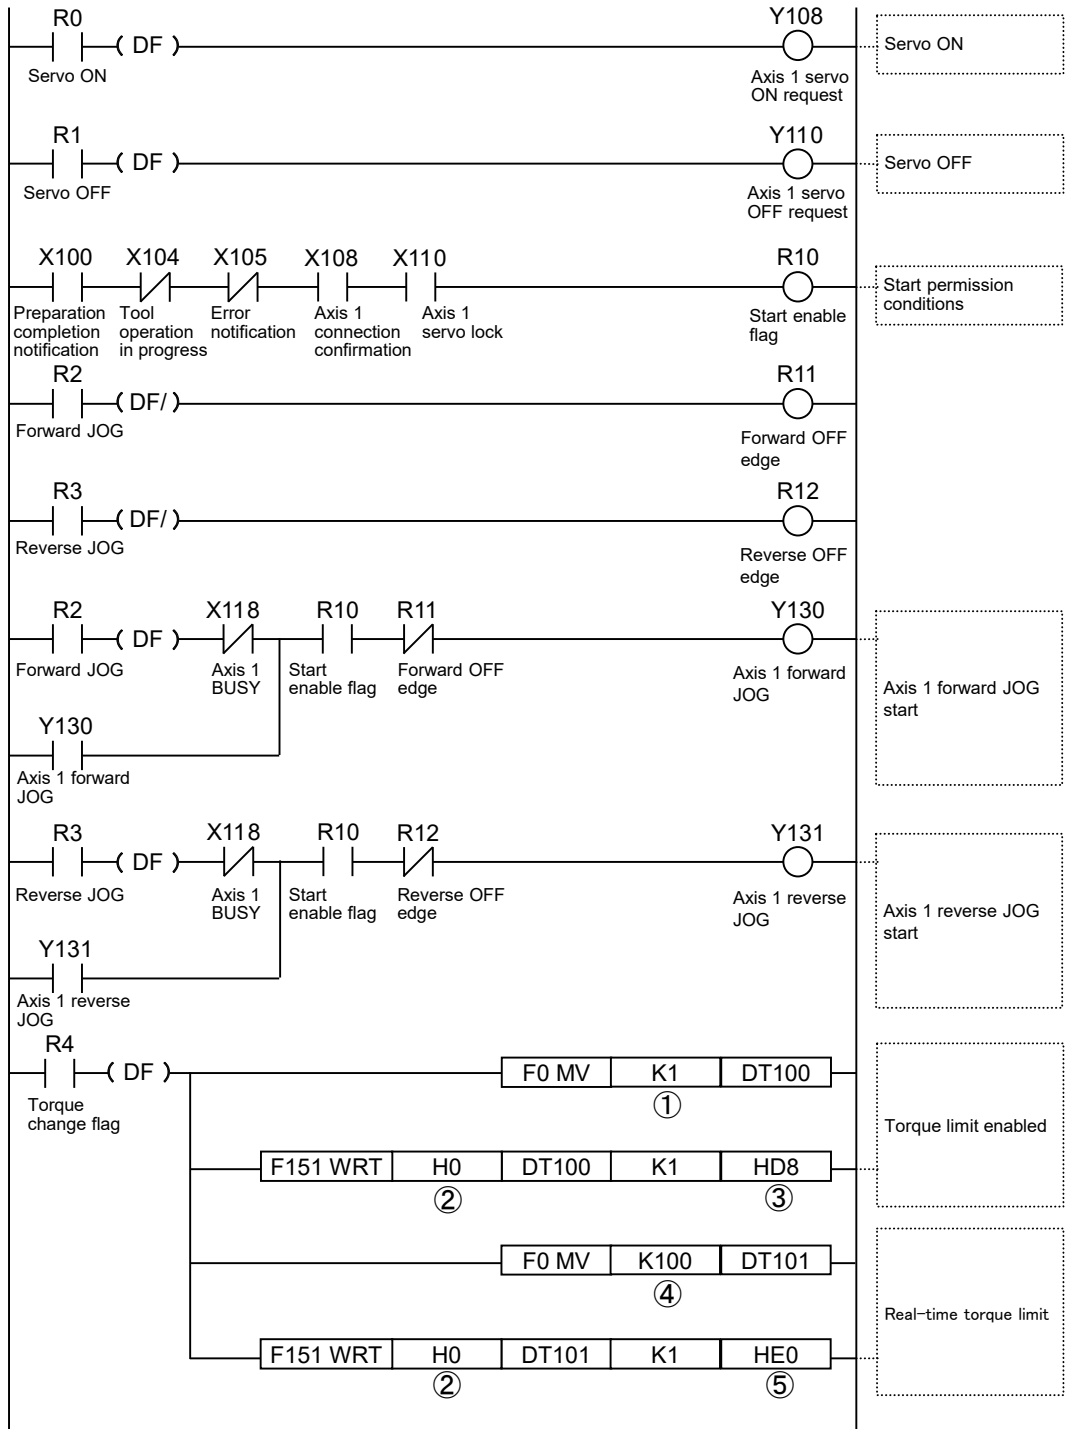

Code	Description	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes
(1)	Torque limit enable flag area	H1	H2	H4	H8	H10	H20	H40	H80

---


Code	Description	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes
	Setting value								
(2)	Bank, slot No.	H0 (Bank 0, slot No.)							
(3)	Torque limit enable flag area	HD8							
(4)	Torque limit value	Arbitrary value							
(5)	Torque limit value area	HE0	HE1	HE2	HE3	HE4	HE5	HE6	HE7

# 14.11 Monitor Error (Torque / Actual Speed Judgement)

## 14.11 Monitor Error (Torque / Actual Speed Judgement)

This function monitors the actual speed and torque of the servo amplifier and generates an error or warning on the positioning unit RTEX side when the specified judgment value is exceeded.

- Monitor errors are set in the "Parameter Settings" dialog box of Configurator PM7-RTEX. Judgement values can be set separately for torque and actual speed for each axis.
- When an error occurs, the operation stops in "error stop deceleration time" and operation processing cannot be executed until the error is cleared. When a warning occurs, only the occurrence is informed and the operation continues.

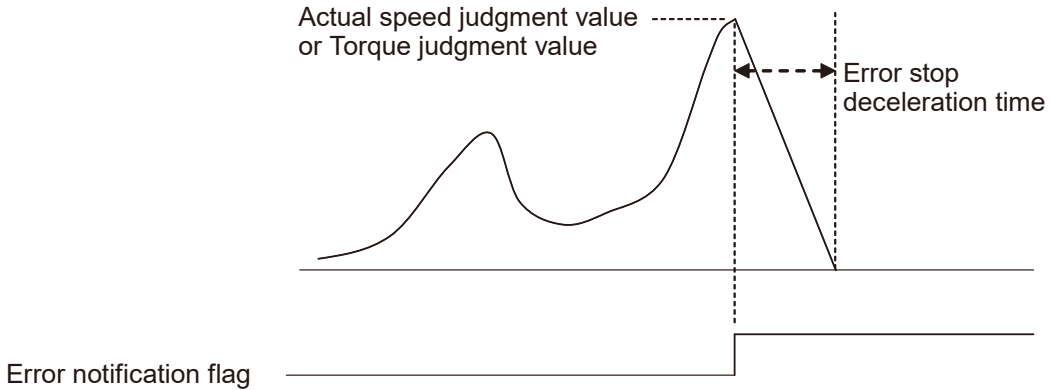

(Note 1) The above figure is an operational diagram that shows error occurrence.

### ■ Parameter settings in Configurator PM7-RTEX

Parameter settings				
	Axis 1	Axis 2	Axis 3	
Monitor error - Torque judgment	E: Enabled (error)	N: Disabled	N: Disabled	
Monitor error - Torque judgment value (%)	500.0	500.0	500.0	
Monitor error - Actual speed judgment	N: Disabled	N: Disabled	N: Disabled	
Monitor error - Actual speed judgment value (rpm)	5000	5000	5000	
Home return - Return setting code	0: Dog method 1	0: Dog method 1	0: Dog method 1	

Name	Default	Description
Monitor error - Torque judgment	N: Disabled	Select the operation of the positioning unit RTEX that is performed when the torque value of the amplifier exceeds the judgment value. "N: Disabled", "E: Enabled (Error)", "W: Enabled (Warning)"
Monitor error - Torque judgment value (%)	500.0	Sets a torque judgement value. Range: 0 to 500.0 (%)
Monitor error - Actual speed judgment	N: Disabled	Select the operation of the positioning unit RTEX that is performed when the actual speed of the amplifier exceeds the judgment value. "N: Disabled", "E: Enabled (Error)", "W: Enabled (Warning)"
Monitor error - Actual speed judgment value (rpm)	5000	Sets an actual speed judgement value. Range: 0 to 10000 rpm

 **Info.**

- For details of errors and warnings, refer to "[15 Error/Warning Notification Function](#)".

## 14.12 Operation Complete Signal

### 14.12 Operation Complete Signal

#### 14.12.1 Operation Done Flag and In-position Flag

The flags that notify the completion of operation are the "operation done flag" controlled by the positioning unit RTEX and the "in-position flag" controlled by the servo amplifier.

##### ■ Operation done flag

- The operation done flag is a signal to confirm "operation complete" on the positioning unit RTEX side.
- The operation done flag turns OFF when each operation starts, and turns ON when the operation is completed. The completion of operation differs according to the operation.

Operation mode	Timing regarded as the completion of operation
Positioning operation	The operation command specifying the movement amount is completed.
JOG operation	The JOG request signal turns OFF and deceleration stop is completed.
Stop-on-contact torque value for home return	The home return operation is completed (the axis stops at the home position).

- When any stop operation such as deceleration stop, emergency stop, or error stop is executed during operation, the operation done flag also turns ON when the stop operation is completed.
- The range of "completion width" regarded as operation complete is specified in the positioning unit RTEX by using Configurator PM7-RTEX or a user program. The completion width can be set for each axis.
- The set completion width is transferred to the servo amplifier and set in the positioning parameter "positioning completion range" (Pr4.31) of the servo amplifier.

##### ■ In-position flag

- The in-position (INP) flag is a signal to confirm the completion of positioning operation on the servo amplifier side.
- The condition and output settings for "in-position" state are specified in the servo amplifier using PANATERM.
- The in-position flag can be monitored on the positioning unit RTEX side via the positioning memory.


## 14.13 Simplified Position Deviation Monitor

"Simplified position deviation monitor" is a function that monitors the difference between the current position controlled within the positioning unit RTEX and the current position fed back from the amplifier.

- Deviations can be read from the each axis information area in the positioning memory by using a user program.
- Deviations can also be monitored with the "data monitor" function of Configurator PM7-RTEX.

### ■ Monitoring by using positioning unit RTEX

The following sample program monitors the position deviation values for Axis 1 in slot number 0 by reading them into DT0 and DT1.

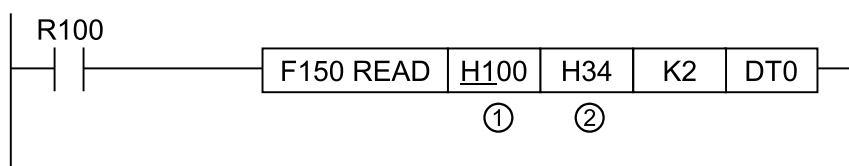

Code	Items specified in the program	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
(1)	Bank	H01							
(2)	Storage area for unit-converted current value	H34 to H35	H74 to H75	HB4 to HB5	HF4 to HF5	H134 to H135	H174 to H175	H1B4 to H1B5	H1F4 to H1F5

### **i** Info.

- As the deviations read with the simplified position deviation monitor function are calculated within the positioning unit RTEX, they may differ from the deviation counter values within the amplifier.
- The display of the position deviation monitor is refreshed every 10 ms.

## 14.14 Amplifier Parameter R/W Function

### 14.14 Amplifier Parameter R/W Function

#### 14.14.1 Overview of Amplifier Parameter R/W Function

The positioning unit RTEX can execute the following operations on the amplifier connected to the network. Any of these operations can be controlled by a user program through the amplifier parameter control area (addresses H0 to H27 in bank 52H) in the positioning memory of the positioning unit RTEX.

■ **Operation types (●: executable; No mark: non-executable)**

Operation	Description	Status of target axis for operation	
		Stopped	Running
Reading amplifier parameters	Parameters are read from the amplifier and stored in the positioning memory (amplifier parameter control area) of the positioning unit RTEX.	●	● (Note 1)
Writing amplifier parameters	The values stored in the positioning memory (amplifier parameter control area) of the positioning unit RTEX are written to the amplifier.	●	
Saving Amplifier Parameters (Writing to EEPROM)	The parameters set in the amplifier are written to the amplifier's built-in EEPROM.	●	
Amplifier reset (restart)	The amplifier is reset.	● (Note 2)	

(Note 1) Parameters cannot be read during home return operation.

(Note 2) Reset the amplifier only when all axes are stopped.

#### Note

- When executing the amplifier reset function, perform servo OFF for all the axes connected to the network. When the amplifier reset function is executed, the network will be disconnected, causing an error to occur on all the axes connected to the network, resulting in a servo OFF state.
- When a network disconnection error occurs, this function cannot be executed because communication is not available.

#### 14.14.2 Reading Parameters from the Amplifier

Parameters can be read from the amplifier by using a user program according to the following procedure.

Procedure	Description
1	Check that the target axis exists on the network (for Axis 1: X108 = ON).
2	Set the following items in the amplifier parameter control area (address H0/H3/H24 in bank 52H). (AMP ID No., parameter category, parameter number)




## 14.14 Amplifier Parameter R/W Function


Procedure	Description
	Set the control flag in the amplifier parameter control area (address H1 in bank 52H) to "H2" (read request). The positioning unit RTEX issues a parameter read request to the amplifier.
3	When processing is complete, "H0" (no request) is stored in the control flag in the amplifier parameter control area (address H1 in bank 52H).
4	Check that the status of the amplifier parameter control area (address H2 in bank 52H) is H2 (normal termination). If an error occurs, H4 to H6 will be stored.
5	Read the parameter values from the amplifier parameter control area (addresses H26 and H27 in bank 52H) into an arbitrary area.

### ■ Sample programs

The following sample program reads the amplifier parameter Pr0.08 for Axis 1 of Slot number 0.

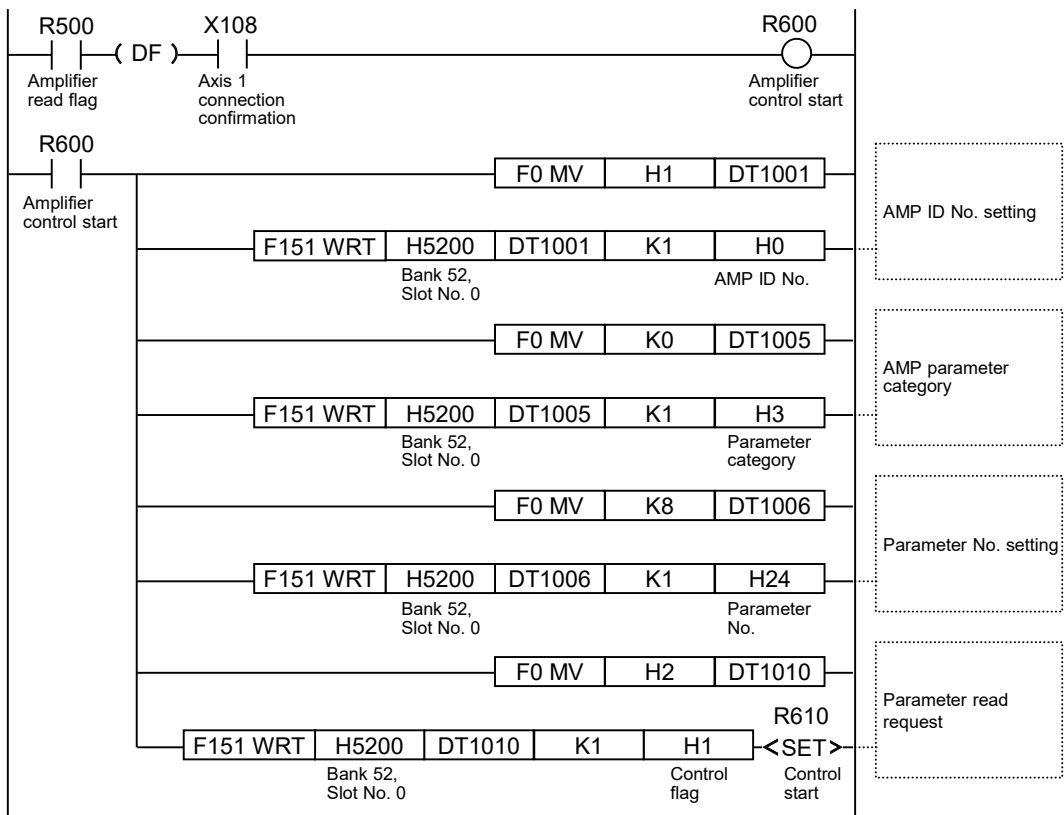

## 14.14 Amplifier Parameter R/W Function

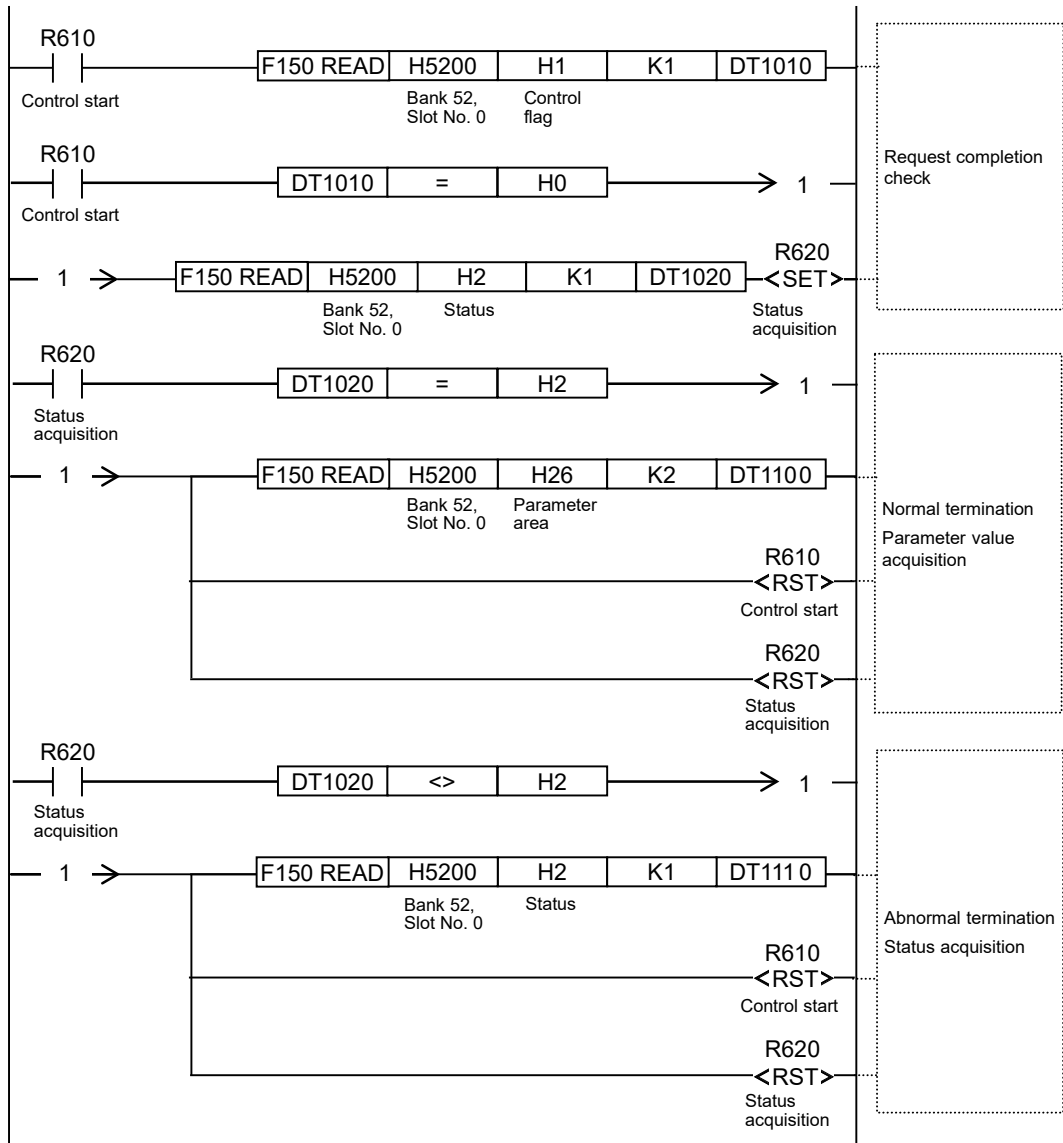

### 14.14.3 Writing Parameters to the Amplifier

Parameters can be written to the amplifier by using a user program according to the following procedure.


Procedure	Description
1	Check that the target axis exists on the network (for Axis 1: X108 = ON) and that the axis is not operating (for Axis 1: X118 = OFF).

## 14.14 Amplifier Parameter R/W Function


Procedure	Description
2	Set the following items in the amplifier parameter control area (Address H0/H3/H24/H26 in Bank 52H). [AMP ID No., parameter category, parameter number, parameter data (2 words)]
	Set the control flag in the amplifier parameter control area (address H1 in bank 52H) to "H4" (write request). The positioning unit RTEX issues a parameter write request to the amplifier.
3	When processing is complete, "H0" (no request) is stored in the control flag in the amplifier parameter control area (Address H1 in Bank 52H).
4	Check that the status of the amplifier parameter control area (Address H2 in Bank 52H) is H2 (normal termination). If an error occurs, H4 to H6 will be stored.

### ■ Sample programs

The following sample program writes the amplifier parameter Pr0.08 for Axis 1 of slot number 0.

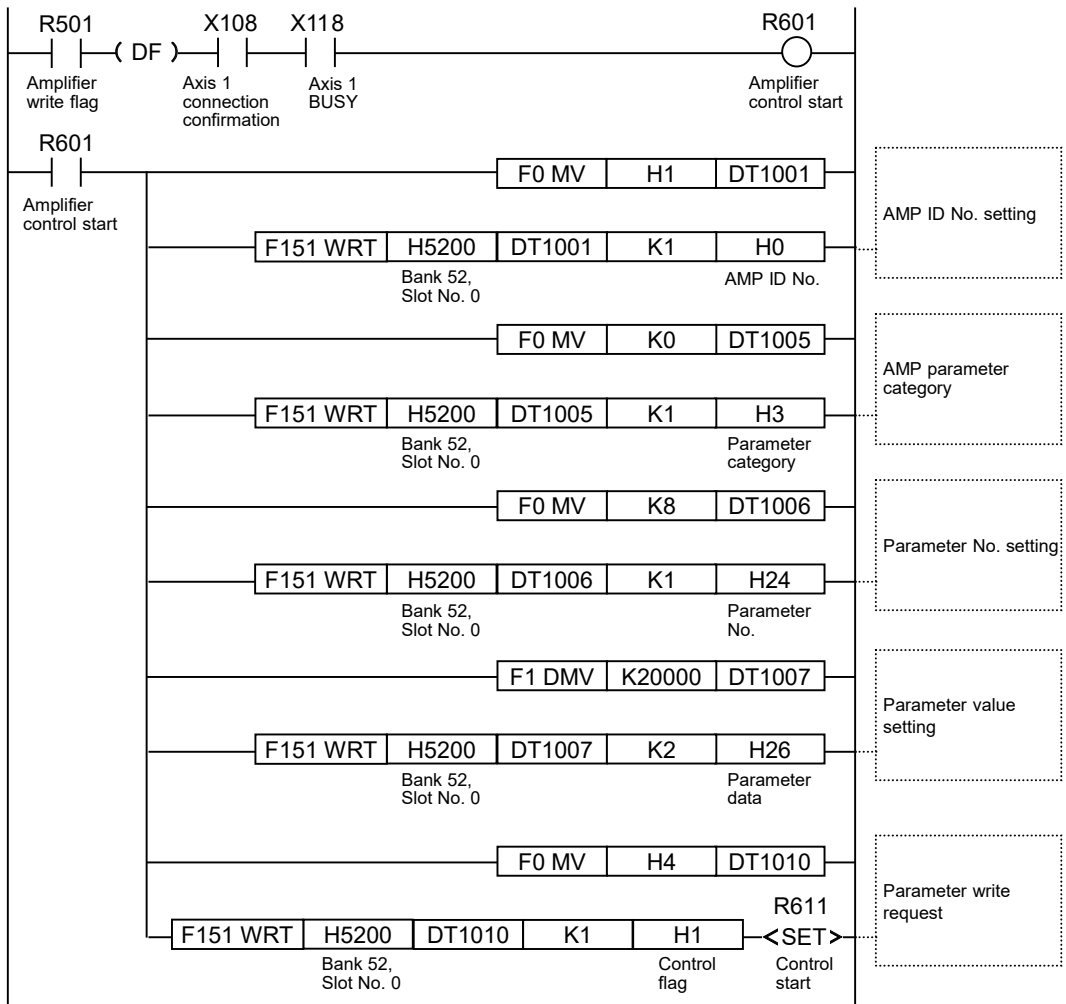

## 14.14 Amplifier Parameter R/W Function

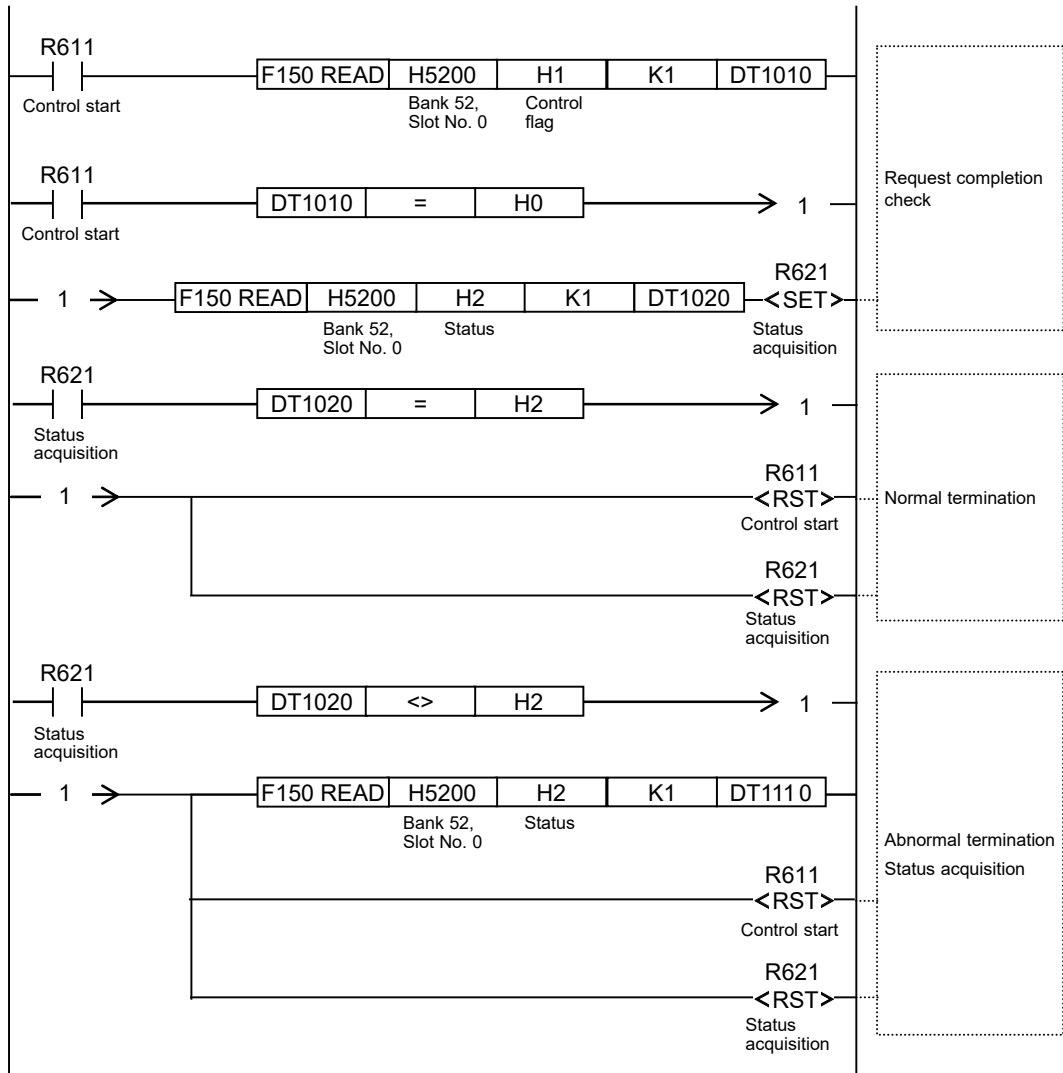

### 14.14.4 Saving Amplifier Parameters (Writing to EEPROM)


Amplifier parameters can be written into EEPROM by using a user program according to the following procedure.

Procedure	Description
1	Check that the target axis exists on the network (for Axis 1: X108=ON) and that the axis is not operating (for Axis 1: X118=OFF).
2	Set the control flag in the amplifier parameter control area (address H1 in bank 52H) to "H5" (EEPROM request). The positioning unit RTEX issues an EEPROM write request to the amplifier.
3	When processing is complete, "H0" (no request) is stored in the control flag in the amplifier parameter control area (Address H1 in Bank 52H).


Procedure	Description
4	Check that the status of the amplifier parameter control area (Address H2 in Bank 52H) is H2 (normal termination). If an error occurs, H4 or H6 will be stored.

## ■ Sample programs

The following sample program saves the amplifier parameter for Axis 1 of slot number 0.

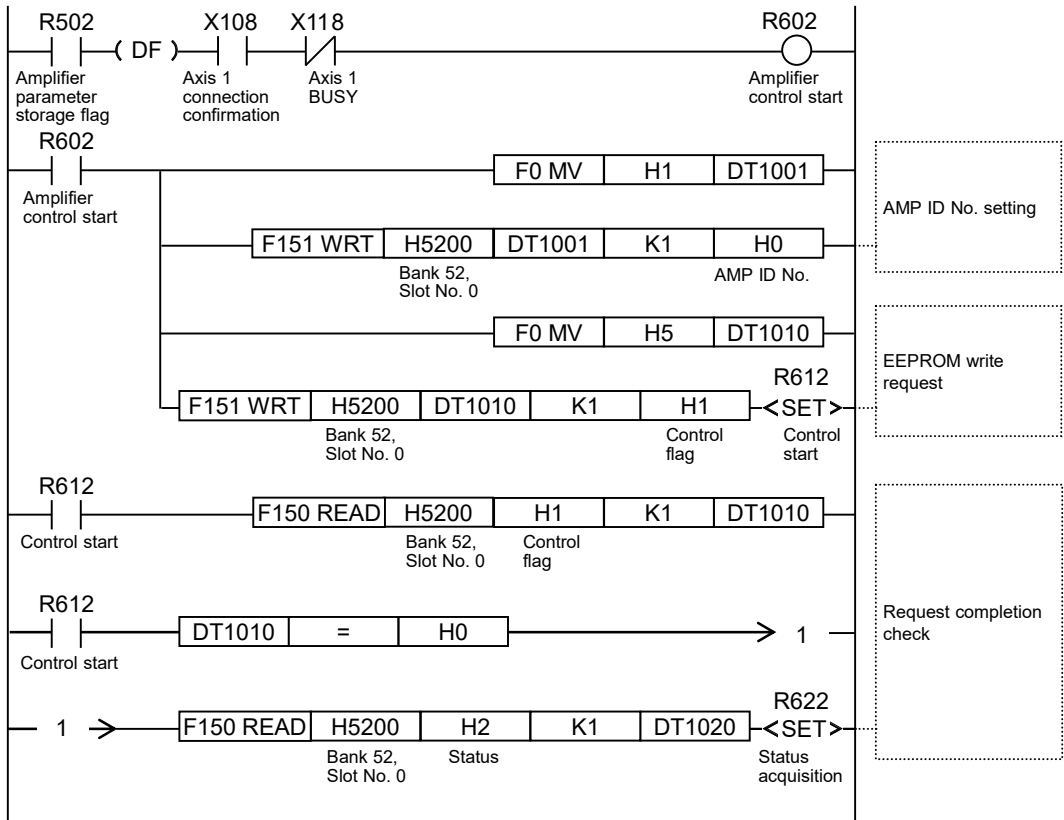

## 14.14 Amplifier Parameter R/W Function

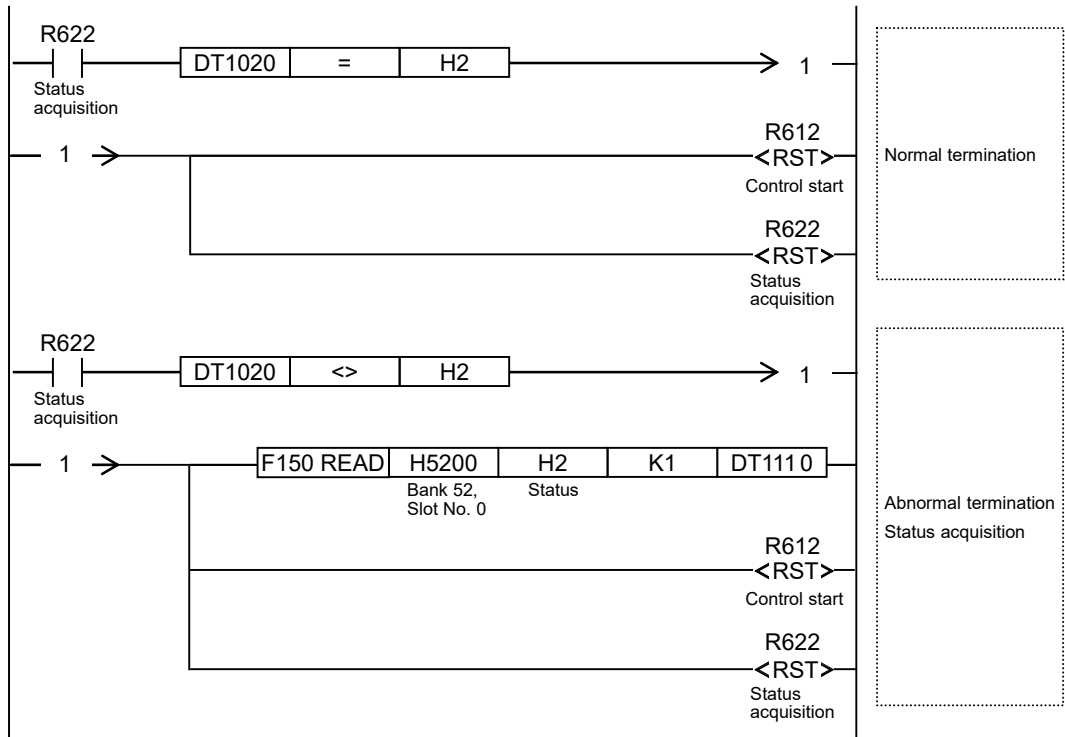

### 14.14.5 Resetting the Amplifier (Restart)


The amplifier can be reset by using user programs according to the following procedure.

Procedure	Description
1	Check that the target axis exists on the network (for Axis 1: X108=ON) and that the axis is not operating (for Axis 1: X118=OFF).
2	Set the control flag in the amplifier parameter control area (address H1 in bank 52H) to "H6" (amplifier reset request). The positioning unit RTEX issues an amplifier reset request to the amplifier.
3	When processing is complete, "H0" (no request) is stored in the control flag in the amplifier parameter control area (Address H1 in Bank 52H).
4	Check that the status of the amplifier parameter control area (Address H2 in Bank 52H) is H2 (normal termination). If an error occurs, H4 or H6 will be stored.


#### ■ Sample programs

The following sample program resets the amplifier for Axis 1 (ID) of slot number 0.

# 14.14 Amplifier Parameter R/W Function

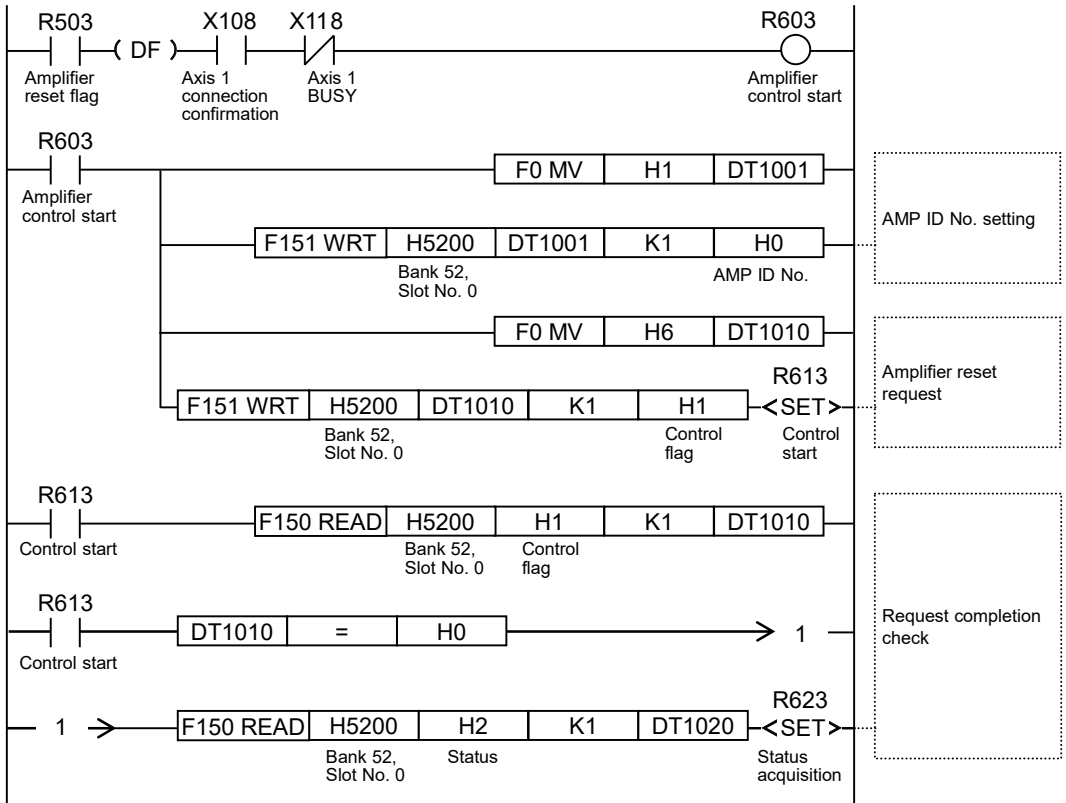

# 14.14 Amplifier Parameter R/W Function

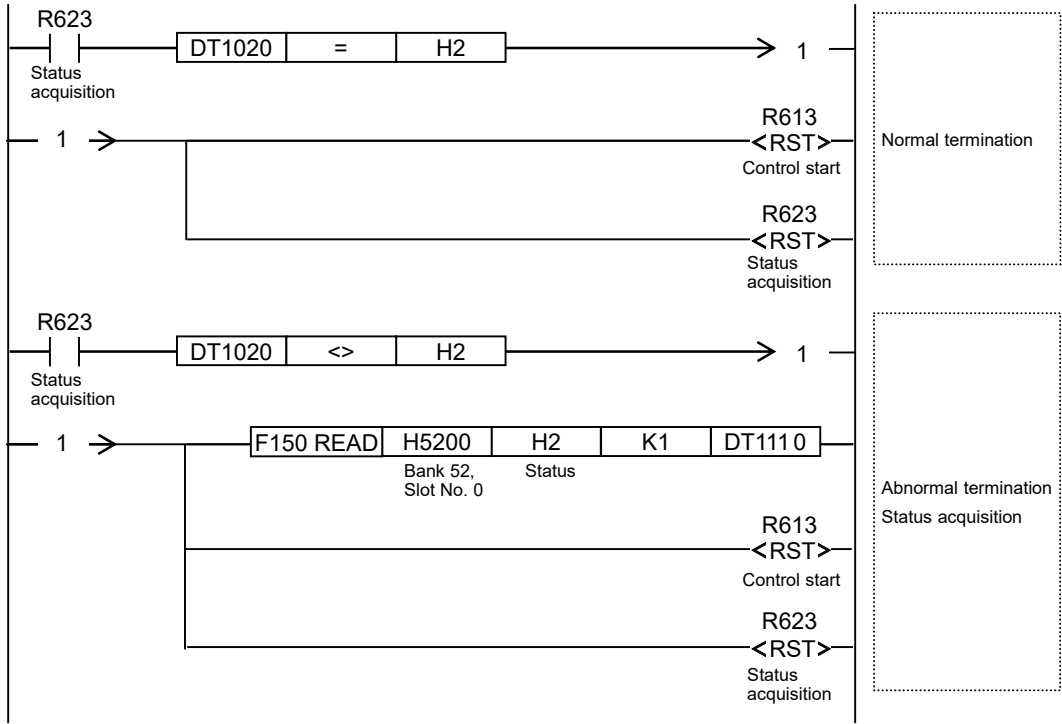

**Note**

- When using the amplifier reset function, perform servo OFF for all the axes connected to the network.
- When the amplifier is reset, the network will be disconnected, causing an error to occur on all the axes connected to the network, resulting in a servo OFF state.



## 14.15 Amplifier Monitor Function

### 14.15.1 Overview of the Amplifier Monitoring Function

This function enables the positioning unit RTEX to monitor the status information of the servo amplifier by using RTEX monitor commands.

- Information can be read from the amplifier monitoring and control area (addresses H390 to H395 in bank 00H) in the positioning memory of the positioning unit RTEX by controlling the area by using a user program.
- The amplifier monitoring function can be used even during axis operation. Note, however, that monitoring cannot be performed during home return operation.
- When a network disconnection error occurs, this function cannot be executed because communication is not available.

### 14.15.2 Monitoring Items

The following table shows the type codes that can be read by the positioning unit RTEX, as well as the names of these type codes.

Type code (HEX)	Name	Type code (HEX)	Name
01	Position deviation	31	Inertia ratio
02	Encoder resolution	32	Automatic motor recognition enabled state
04	Internal command position (after filtering)	33	Cause of no rotation
05	Actual speed	34	Warning flags
06	Torque command	41	Mechanical angle (Single-turn data)
07	Actual position	42	Electrical angle
08	Internal command position (before filtering)	43	Multi-turn data
09	Latch position 1	61	Power-ON cumulative time
0A	Latch position 2	62	Servo amplifier temperature
0C	Command speed (after filtering)	63	Encoder temperature
11	Regenerative load factor	64	Number of inrush resistor relay changes
12	Overload factor	65	Number of dynamic brake relay changes
21	Logical input signal	66	Fan operating time
22	Logical output signal	67	Fan life expectancy integrated value
23	Logical input signal (expansion portion)	68	Capacitor life expectancy integrated value
24	Logical output signal (expansion portion)	69	Voltage across a p-n junction

## 14.15 Amplifier Monitor Function

---

Type code (HEX)	Name	Type code (HEX)	Name
25	Physical input signal	71	Cumulative number of RTEX communication errors
26	Physical output signal	81	Cumulative number of encoder communication errors

(Note 1) Refer to the latest instruction manual and technical reference for the servo amplifier.

### 14.15.3 Monitoring Procedure


Monitoring can be performed with user programs according to the following procedure.

Procedure	Description
1	Check that the target axis exists on the network (for Axis 1: X108=ON).
2	Amplifier monitor & control area In AMP ID No., set the axis number (AMP ID No.) to be read. Set the type code to be monitored in the control flag.
3	The positioning unit RTEX sets H1 (processing in progress) as the status and stores the monitor data.
4	Check that the status in the amplifier monitor and control area is H2 (normal termination).
5	Copy the monitoring data to any desired area.


#### ■ Sample programs

The following sample program monitors the encoder temperature (type code 63) for Axis 1 of slot number 0.

# 14.15 Amplifier Monitor Function

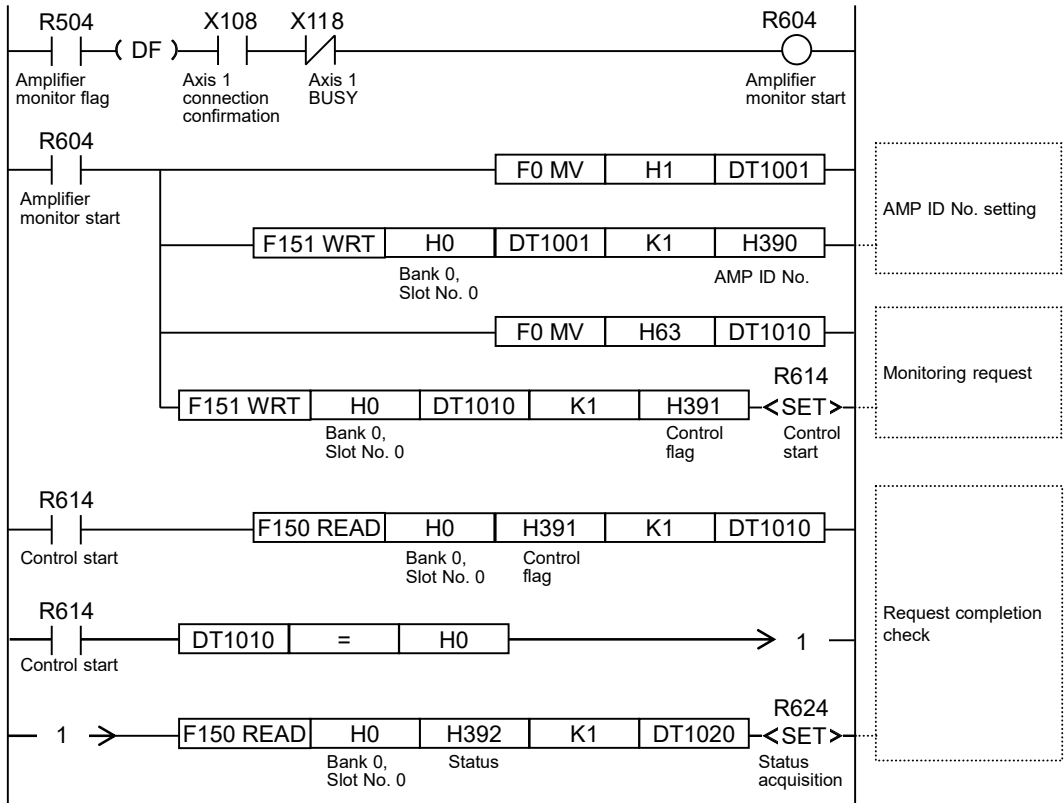

# 14.15 Amplifier Monitor Function

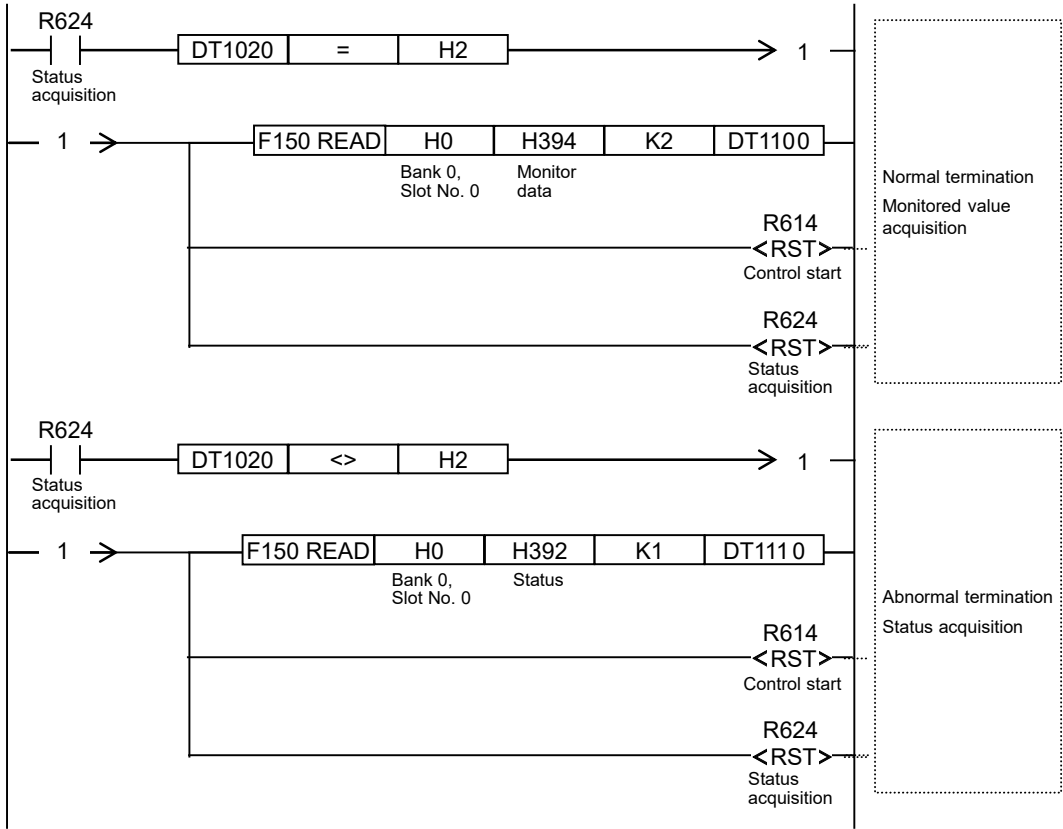

## 14.16 Latch Correction J-point Control Function

### 14.16.1 Overview of Latch Correction J-point Control Function


This function uses the latch function of MINAS A5N and A6N servo amplifiers to perform positioning after a JOG positioning operation.

### 14.16.2 Overview and Applications of Latch Correction J-point Control Function

The latch function detects latch inputs from the servo amplifier and obtains the current value at the time of detection from the servo amplifier.

The JOG positioning function is the controller's own function. When operations are started, the function performs the operations at the target speed until the J-point positioning start contact turns ON and then starts the next positioning control when the J-point positioning start contact turns ON.

The latch correction J-point control function executes positioning operations after J-point control, by using latch inputs from the servo amplifier as the "J-point positioning start contact" signals during the J-point operation mentioned above. When sensor inputs or other inputs are used as triggers for JOG positioning, this function enables the next position control to be started with minimal effect on the controller program. This function can also obtain the current value at the time of latch input, making it possible to perform position adjustment for next position control.

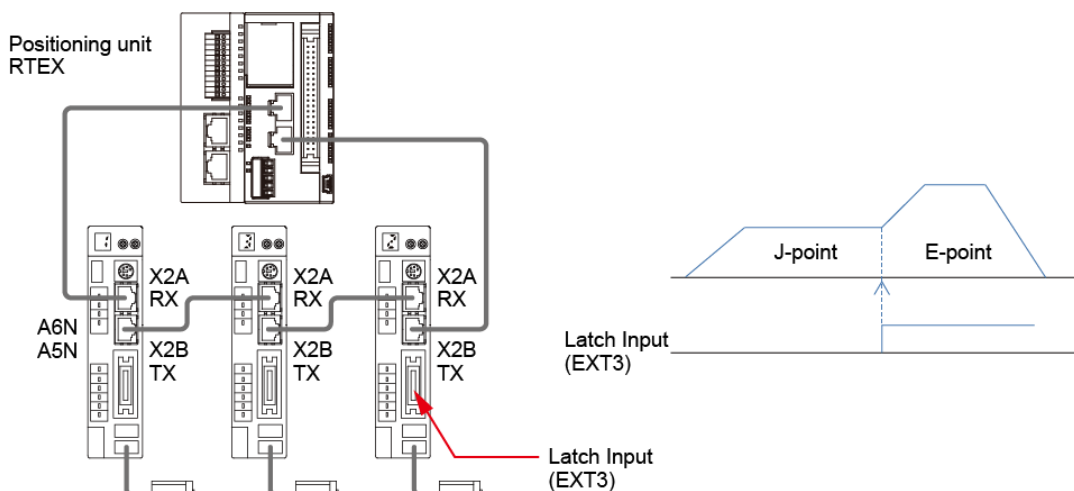

This function is dedicated to J-point operation and cannot be used for other operations.

### 14.16.3 Settings and Operations of Latch Correction J-Point


The example below is the case where the latch correction J-point control function is executed on Axis 1 by using slot No. 0. The unit is the number of pulses.

## 14.16 Latch Correction J-point Control Function

### ■ Settings

Item	Setting example		
	Table 1	J-point axis positioning parameter settings	Table 2
Operation pattern	J: Speed point	-	E: End point
Control method	I: Incremental	-	I: Incremental
X-axis movement amount	5,000 pulses	-	10,000 pulses
Acceleration/ deceleration method	L: Linear	-	L: Linear
Acceleration time (ms)	100 ms	-	200 ms
Deceleration time (ms)	10 ms	-	20 ms
Target speed	10,000 pps	-	20000 pps
J-point operation setting mode	-	Linear acceleration / deceleration	-
J-point acceleration time (ms)	-	10 ms	-
J-point deceleration time (ms)	-	10 ms	-
J-point target speed	-	30000 pps	-

### ■ Behavior diagram

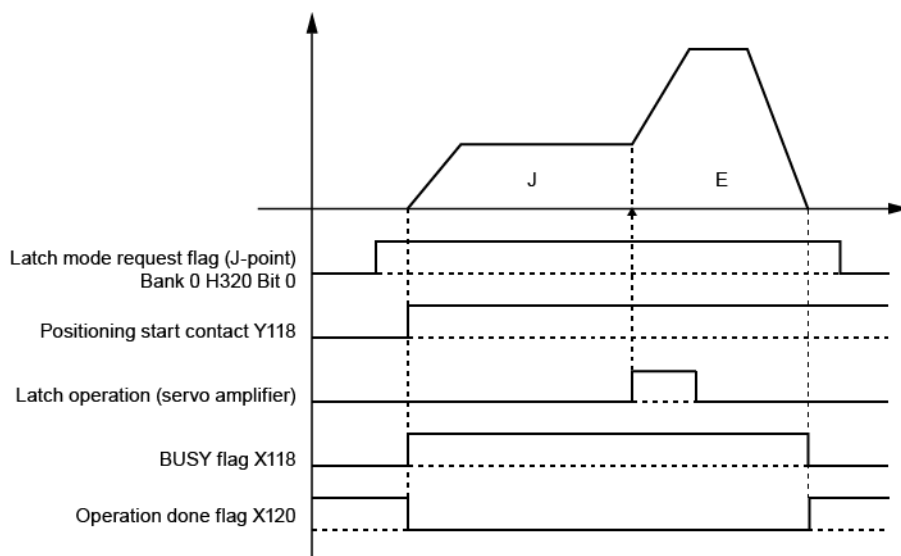

### ■ Behaviors of each contact

- Before starting operation, turn ON the latch mode request flag (J-point).
- The controller is ready to run this function and enters the latch input wait state.
- Start the positioning operation.


## 14.16 Latch Correction J-point Control Function

- When latch input turns ON while the J-point positioning table is active, the servo amplifier notifies the controller of the latch input and latch position. The controller detects the latch input and activates the next positioning table (E-point). J-point positioning start contacts are ignored while this function is operating.
- After the positioning operation is complete, check that the BUSY flag is OFF (the operation done flag is ON) and then turn OFF the latch mode request flag (J-point).

### 14.16.4 Restrictions on Latch Correction J-Point Control Function

The following are restrictions on using the latch correction J-point control function.

- This function can only be used for J-point operations. Therefore, use only single axes with this function.
- For the movement amount in the J-point positioning table, specify a value that is equal to or greater than the movement speed multiplied by the acceleration time.
- This function can minimize time delays within the controller, but there is a time delay of 1 ms from when latch is detected until the positioning operation following J-point control is started.

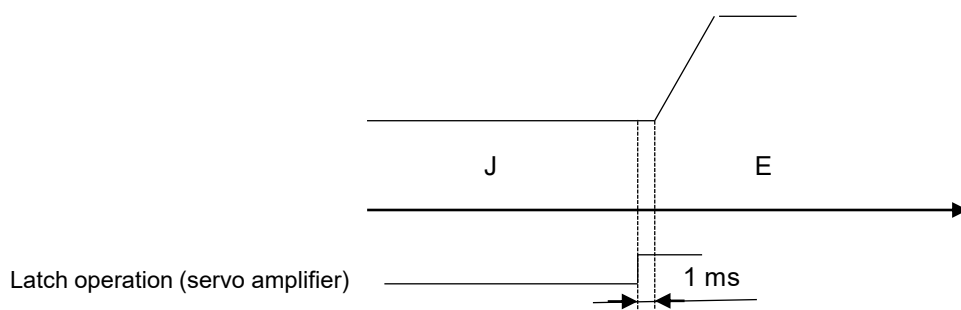

- This function can only be used a single time between operation start and operation complete. If it is used two times, "correction latch used multiple times" (error code 3070H) is output and error stop is performed.
- When the latch correction J-point function is enabled while the J-point positioning table is active, the "Actual speed" and "Torque command" in the monitor area cannot be monitored.

### REFERENCE

[18.6.2 Each Axis Information & Monitor Area](#)

## 14.17 Latch Stop Function


### 14.17 Latch Stop Function

#### 14.17.1 Overview of Latch Stop Function

This function is for using the "latch mode with a stop function" for MINAS A6N servo amplifiers.

#### 14.17.2 Overview and Applications of Latch Stop Function

The latch stop function uses latch inputs from the servo amplifier as triggers to cause the servo amplifier to stop the motor at a latching position.

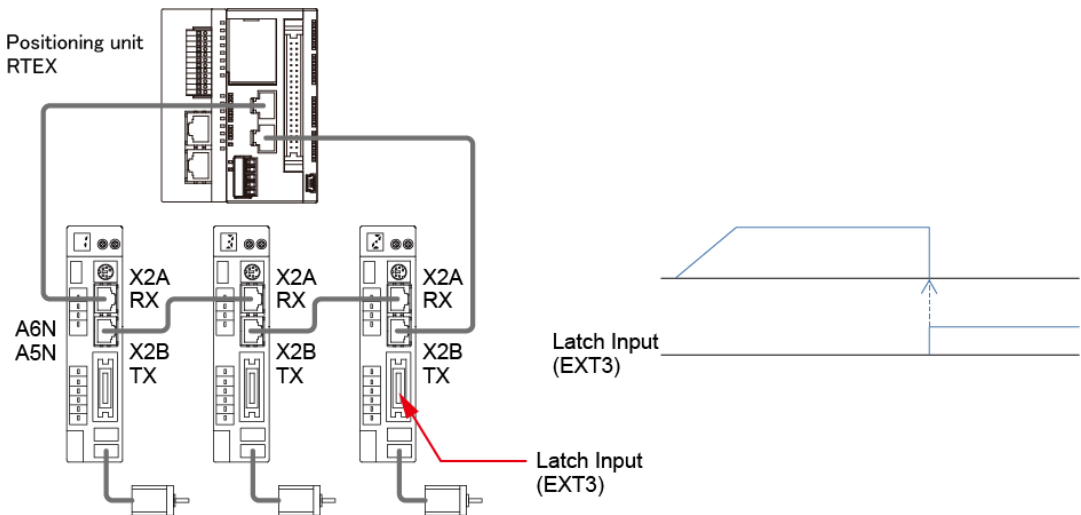

Using the latch stop function enables the motor to be stopped in minimum time in response to stop requests from external devices. Therefore, by turning ON the latch input when torque values from the servo amplifier exceed a certain value, operations such as press fit or screw tightening can be stopped without delays.

The latch stop function is only designed to stop the motor at a latching position and so cannot be used for any purpose other than stoppage.

#### 14.17.3 Settings and Operations of the Latch Stop Function

##### ■ Operating procedure

The example below is the case where the latch stop function is executed on Axis 1 by using slot number 0. The unit is the number of pulses.


##### ● Settings

Item	Setting example
JOG acceleration/deceleration pattern	0: Linear acceleration/deceleration
JOG acceleration time (ms)	100 ms



Item	Setting example
JOG deceleration time (ms)	100 ms
JOG target speed	10,000 pps
Axis on which latch mode with a stop function runs	Axis 1
Latch trigger signal input for Axis 1	K3 (rising edge of EXT3)

### • Operation diagram

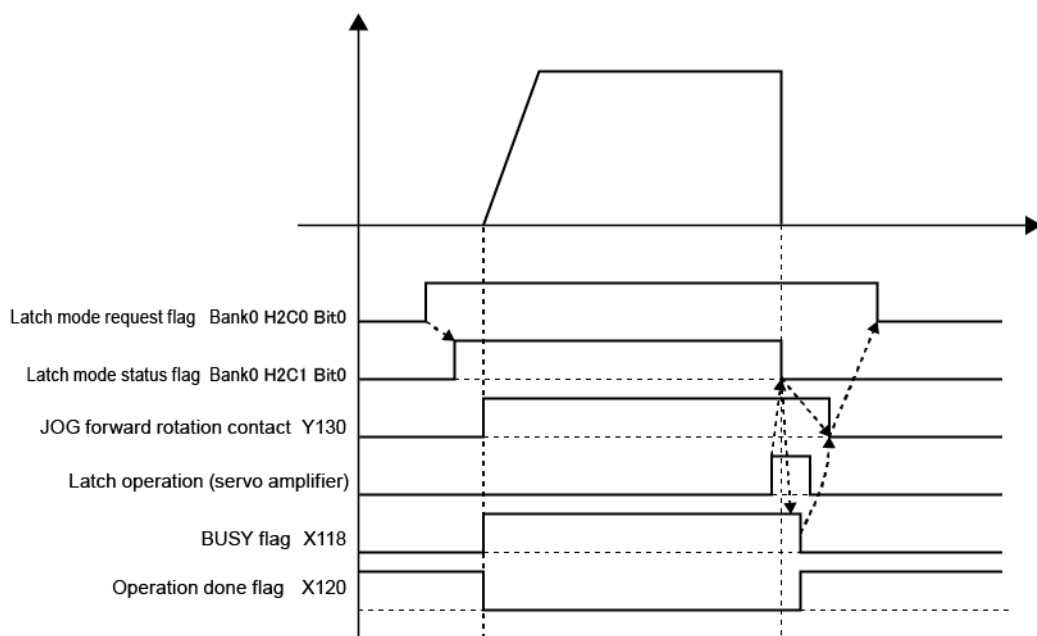


### • Operations of each contact

- Before starting operation, turn ON the latch mode request flag. The latch mode request flag can also be turned ON during JOG operation.
- When the positioning unit RTEX is ready to run the latch stop function and enters the latch input wait state, the latch status flag turns ON.
- Start the JOG operation.
- When latch input turns ON, the servo amplifier stops the motor at the latch position. The positioning unit RTEX detects the latch input and turns OFF the latch mode status flag. After verifying that the motor has stopped, the positioning unit RTEX determines that the JOG operation is completed, turns OFF the BUSY flag, and then turns ON the operation done flag.
- Check that the latch mode status flag is OFF and the BUSY flag is OFF, and then turn OFF the JOG Forward/Reverse signal.
- Turn OFF the latch mode request flag.  
Note that unless the latch mode request flag is turned ON again after it was turned OFF, this function cannot be subsequently operated.

## 14.17 Latch Stop Function

### ■ Operation discontinuation procedure

The following is the procedure for operation discontinuation (such as deceleration stop or emergency stop) before latch input after the latch stop function is executed.

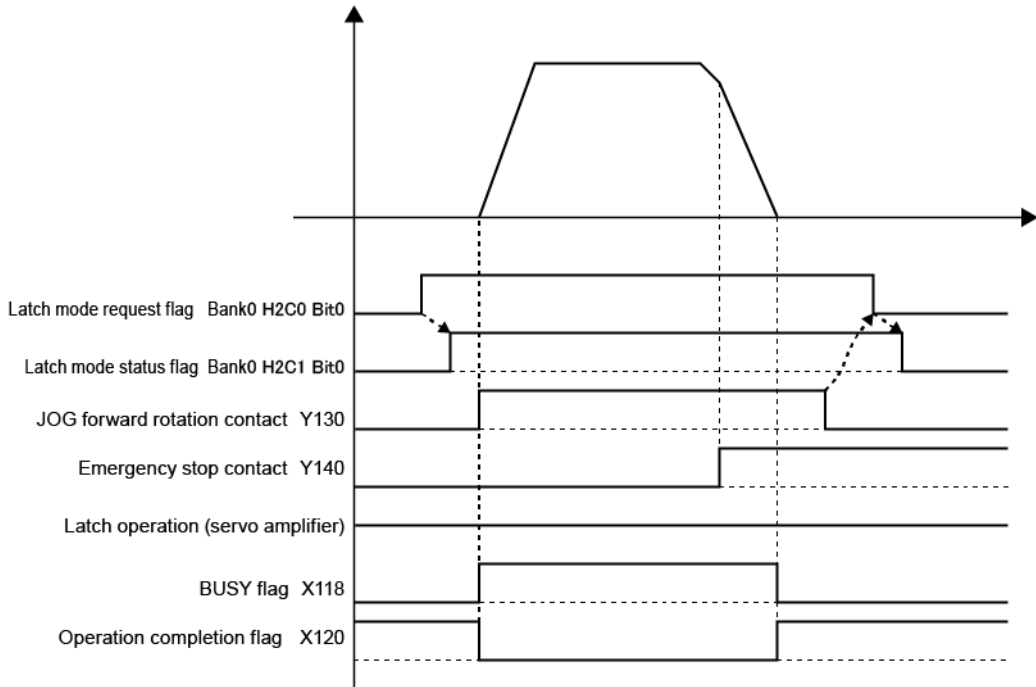

#### ● Operations of each contact

- Before starting operation, turn ON the latch mode request flag.
- When the positioning unit RTEX is ready to run the latch stop function and enters the latch input wait state, the latch status flag turns ON.
- Start the JOG operation.
- Before latch input turns ON, an emergency stop is performed. Emergency stop processing causes the positioning unit RTEX to stop the axis, turn OFF the BUSY flag, and then turn ON the operation done flag.
- After confirming that the axis has stopped, turn OFF the JOG Forward/Reverse signal.
- Turn OFF the latch mode request flag. When the latch mode request flag is turned OFF, the positioning unit RTEX interrupts the latch stop function and turns OFF the latch mode status flag.

### 14.17.4 Restrictions on the Latch Stop Function

#### ● Restrictions during operation

- While the latch stop function is running, only JOG operations can be performed. Note that other operations (such as positioning) cannot be performed.
- The latch stop function can only be executed on single axes. It cannot be used for axes targeted for synchronous operation.

When using this function for axes targeted for synchronous operation, change the synchronous group settings and exclude the target axes from the synchronous group beforehand. When doing this, turn OFF the latch mode request flag.

- Before executing the latch stop function, check that the latch request signal is OFF.
- To confirm that the operation of the latch stop function is complete, check that the following flags are as follows:

Latch status flag = OFF

Busy flag = OFF

- To turn OFF the request signal after the operation is complete, perform the following procedure.
  1. Turn OFF the JOG request signal.
  2. Turn OFF the latch mode request flag.

Steps 1 and 2 above can also be executed at the same time.

- When the latch stop function is executed, the "Actual speed" and "Torque command" in the monitor area cannot be monitored.

- **Restrictions on servo amplifiers**

- For servo amplifiers, use MINAS A6N Ver. 1.22 or later.

If any other model or version is used, an axis error will occur.

- If the latch stop function is used for any axes for which command positions in command units wrap around (such as shafts that rotate limitlessly in one direction), set an integer multiple of the electronic gear ratio of the servo amplifier.

If the set value is not an integer multiple of the electronic gear ratio, the latch position may differ from the intended position (operations are not performed normally).

(For wraparound, refer to the specifications of the servo amplifier.)

---

### REFERENCE

[18.6.2 Each Axis Information & Monitor Area](#)

---

## 14.18 Counter Positioning Function

### 14.18 Counter Positioning Function


#### 14.18.1 Overview of Counter Positioning Function

The positioning unit RTEX performs various positioning operations, but because positioning is started by a program, response delays may occur.

The counter positioning function counts the number of input pulses and executes positioning operations when the number of pulses exceeds the threshold value. The following two methods are provided as triggers for starting counting pulses in order to achieve quick positioning operations.

Method	Overview
PLC judgment method	Use this method to start counting by internal processing of the PLC.
Amplifier input method	Use this method to use input signals from the servo amplifier as triggers for counting pulses.

Using the counter positioning function enables positioning operations to be performed quickly in response to pulses input from external devices or sensors.

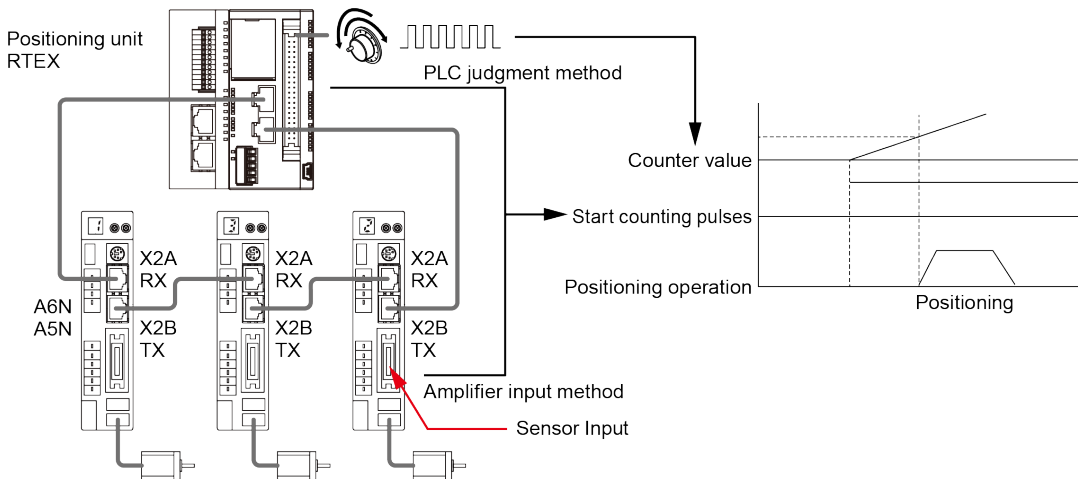

#### 14.18.2 Settings and Operations of Counter Positioning Function

##### PLC judgment method

Use the PLC judgment method to perform positioning operations for Axis 1. Settings are shown in the following table.

- Settings for counter positioning function


Item	Setting example
Counter positioning mode for Axis 1	H1: PLC judgment method

Item	Setting example
Pulse counting channel for Axis 1	H0: Pulse input ch1
Pulse count threshold for Axis 1	100,000 pulses
(Number of pulses at the start of counter positioning)	50,000 pulses

### • Positioning settings

Item	Setting example
Positioning table No.	100
Operation pattern	E: End point
Control method	I: Incremental
X-axis movement amount	10,000 pulses
Acceleration/deceleration method / Acceleration time / Deceleration time	L: Linear / 100 ms / 100 ms
Target speed	10,000 pps

### • Behavior diagram

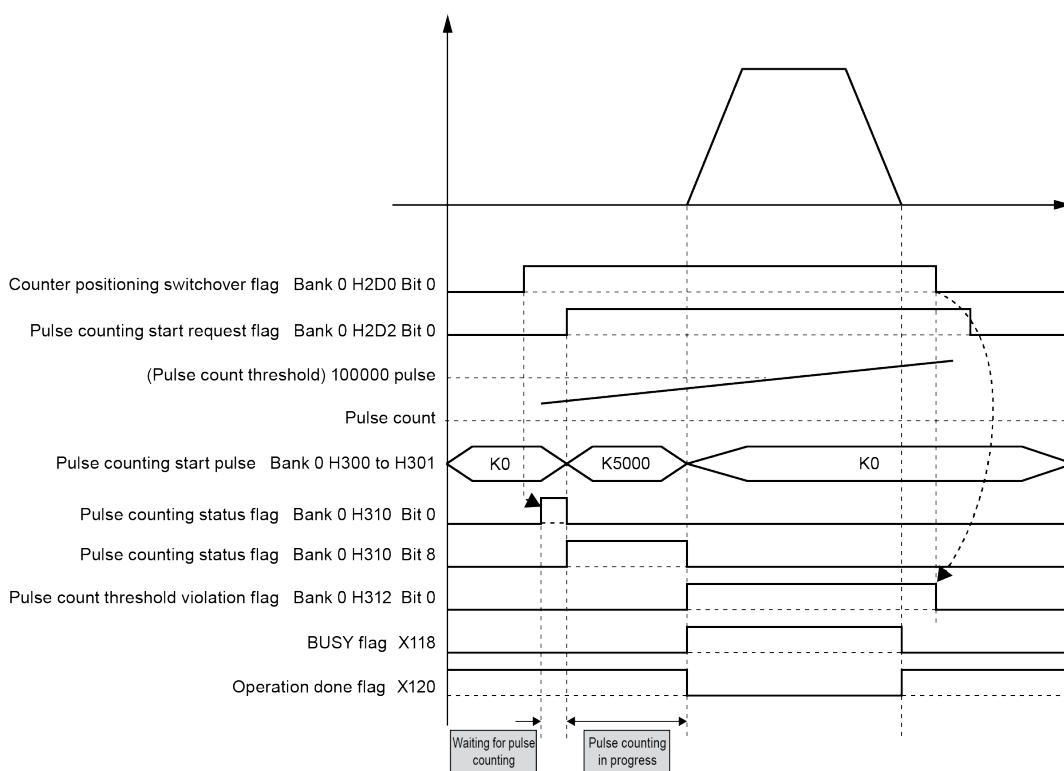

### • Procedure and operations of each contact

## 14.18 Counter Positioning Function

---

### **12** Procedure

1. Set the pulse count channel for Axis 1 to 0 (ch1).
2. Set the pulse count threshold for Axis 1 to K100000.
3. Set the position control start table number (address H100 in bank 00H) for Axis 1 in the positioning control start table number setting area to 100.
4. Set the counter positioning mode for Axis 1 to 1 (PLC judgment method).
5. Turn ON bit 0 (pulse count positioning operation for Axis 1) of the counter positioning switchover flag.
  1. Bit 0 of the pulse counting status flag turns ON and the positioning unit RTEX enters the pulse count wait state. The positioning unit RTEX also internally starts preliminary calculations for positioning based on positioning table No. 100.
6. Turn ON bit 0 of the pulse counting start flag. (Counting the number of input pulses will start.)
  1. Bit 0 of the pulse count status flag turns OFF and bit 8 turns ON (pulse counting in progress). The pulse count value at the start of pulse counting is stored in "Pulses at the start of pulse counting".
  2. The positioning unit RTEX compares the pulse count threshold for Axis 1 with the current pulse count value.  
When the pulse count value exceeds the threshold, operations based on positioning table No. 100 start.
  3. When positioning operations start, the positioning unit RTEX performs the following operations:
    - The BUSY flag for Axis 1 turns ON and the operation done flag turns OFF.
    - Bit 0 of the pulse count threshold violation flag turns ON.
    - Bit 8 of the pulse count status flag turns OFF.
    - "Pulses at the start of pulse counting" is reset to 0.
  4. After the positioning operations are complete, the BUSY flag for Axis 1 turns OFF and the operation done flag turns ON.
7. Check that the positioning operation for Axis 1 is complete and then turn OFF bit 0 of the counter positioning switchover flag.
  1. Bit 0 of the pulse count threshold violation flag turns OFF.
8. Turn OFF bit 0 of the pulse counting start flag.

### Amplifier input method

---

Use the counter positioning function (amplifier input method) to perform positioning operations for Axis 1. Settings are shown in the following table.

#### • Settings for counter positioning function


Item	Setting example
Counter positioning mode for Axis 1	H0: Amplifier input method
Pulse count start input signal for Axis 1	K2: Rising edge of EXT3

Item	Setting example
Pulse count channel for Axis 1	H0: Pulse input ch1
Pulse count threshold for Axis 1	100,000 pulses
(Number of pulses at the start of counter positioning)	50,000 pulses

### • Positioning settings

Item	Setting example
Positioning table No.	100
Operation pattern	E: End point
Control method	I: Incremental
X-axis movement amount	10,000 pulses
Acceleration/deceleration method	L: Linear
Acceleration time (ms)/Deceleration time (ms)	100 ms
Target speed	10,000 pps

### • Behavior diagram

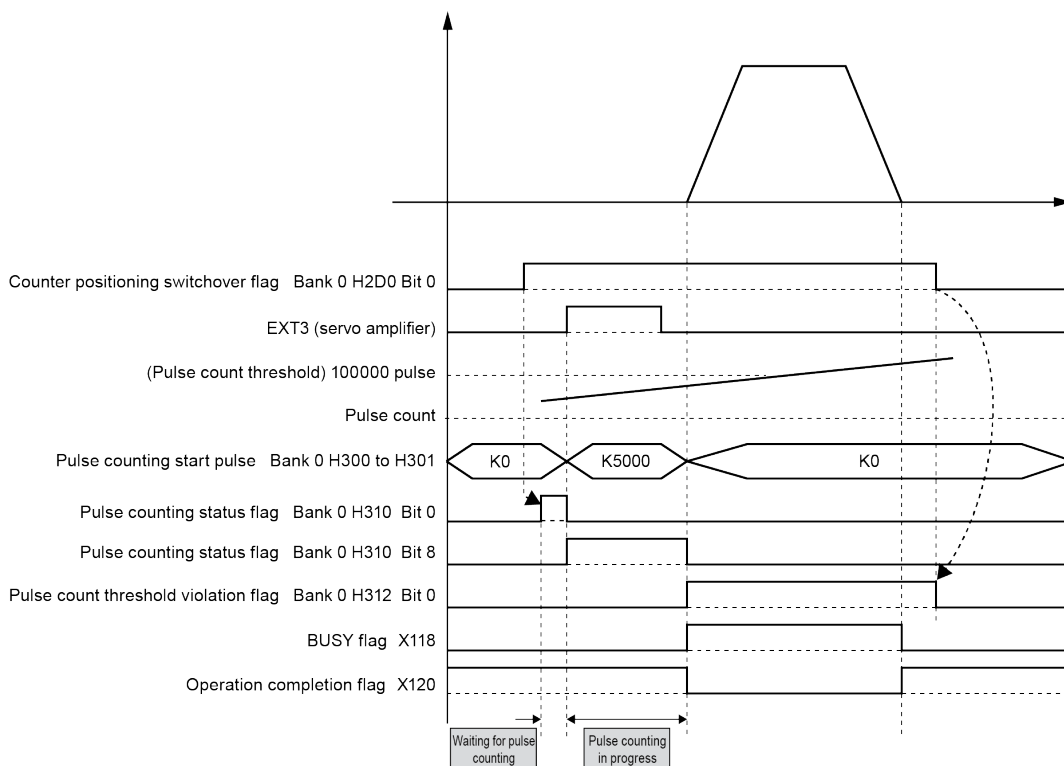

### • Procedure and operations of each contact

## 14.18 Counter Positioning Function

---

### **1 2** Procedure

1. Set the pulse count channel for Axis 1 to 0 (ch1).
2. Set the pulse count threshold for Axis 1 to K100000.
3. Set the pulse count start input signal for Axis 1 to K2 (rising edge of EXT3).
4. Set the position control start table number (address H100 in bank 00H) for Axis 1 in the positioning control start table number setting area to 100.
5. Set the counter positioning mode for Axis 1 to 0 (amplifier input method).
6. Turn ON bit 0 (pulse count positioning operation for Axis 1) of the counter positioning switchover flag.
  1. Bit 0 of the pulse counting status flag turns ON and the positioning unit RTEX enters the pulse count wait state.

The positioning unit RTEX also internally starts preliminary calculations for positioning based on positioning table number 100.
  2. When input signal EXT3 for the amplifier turns ON, the positioning unit RTEX starts counting the number of input pulses.
  3. Bit 0 of the pulse count status flag turns OFF and bit 8 turns ON (pulse counting in progress).

The pulse count value at the start of pulse counting is stored in "Pulses at the start of pulse counting".
  4. The positioning unit RTEX compares the pulse count threshold for Axis 1 with the current pulse count value.

If the pulse count value exceeds the threshold, operations based on positioning table number 100 start.
  5. When positioning operations start, the positioning unit RTEX performs the following operations:
    - The BUSY flag for Axis 1 turns ON and the operation done flag turns OFF.
    - Bit 0 of the pulse count threshold violation flag turns ON.
    - Bit 8 of the pulse count status flag turns OFF.
    - "Pulses at the start of pulse counting" is reset to 0.
  6. After the positioning operations are complete, the BUSY flag for Axis 1 turns OFF and the operation done flag turns ON.
7. Check that the positioning operation for Axis 1 is complete and then turn OFF bit 0 of the counter positioning switchover flag.

Bit 0 of the pulse count threshold violation flag turns OFF.

The next counter positioning operation cannot be performed until after the counter positioning switchover flag turns OFF and the amplifier input contact turns OFF.

### 14.18.3 Operating Time of Counter Positioning


#### **i** Info.

- The counter positioning function enables positioning operations to be performed quickly by using input pulse values (PLC judgment method) or input signals (amplifier input method). For the positioning times based on these methods, use the following information as a guide.



### ■ Preliminary calculation for positioning operation

Positioning operations are started after preliminary calculations are executed. To shorten the positioning operation startup time, the counter positioning function starts preliminary calculations when the pulse counting start flag turns ON.

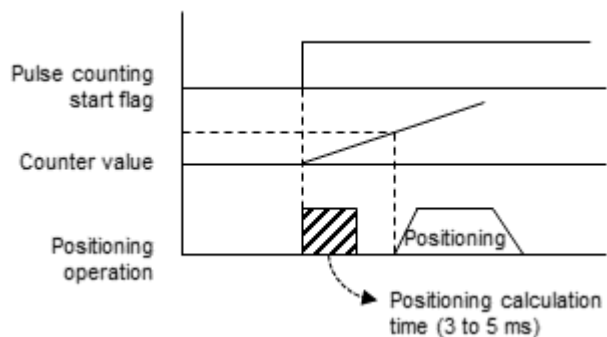

Therefore, positioning operations cannot be performed within at least 3 ms after the pulse counting start flag turns ON.

If an attempt is made to perform positioning before the above time, positioning operations will be performed after preliminary calculations have been performed.


### ■ Response time until pulse counting starts

Time delays and response time variations until startup of pulse counting differ between each method, as below.

The actual time required until startup of pulse counting (counting delay time) is the sum of these times (time delay plus response time variation).

Method	Time delay	Response time variation
PLC judgment method	1ms	Scan time
Amplifier input method	2ms	1ms

The maximum time delay in the execution of a positioning operation after checking the counter threshold value (positioning delay time) is 1 ms.

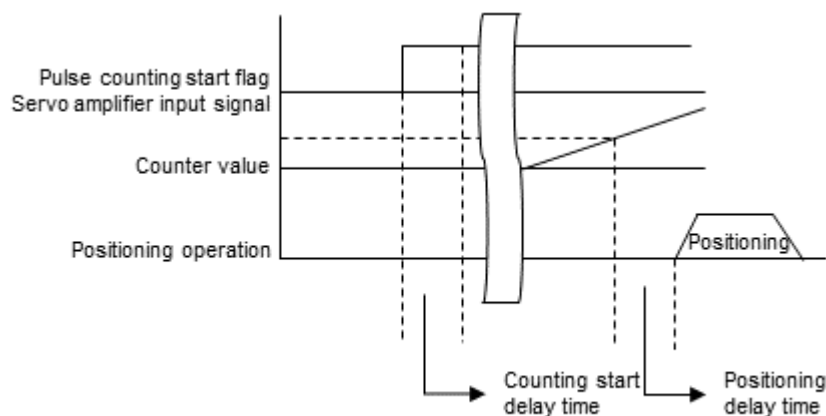

## 14.18 Counter Positioning Function

---

### 14.18.4 Restrictions on Counter Positioning Function

The following are restrictions on using the counter positioning function.

- When the counter positioning function is used, positioning operations for target axes are only performed by counter positioning.

Note that conventional positioning is not performed even if the conventional positioning start request flag is turned ON.

- Allocate at least 3 ms to the time from when counting is started until the conditions for positioning are satisfied.

Time delays in this operation must also be taken into consideration.

## 14.19 Positioning speed hold mode


### 14.19.1 Overview and Applications of Positioning Speed Hold Mode

The positioning unit RTEX is controlled at 1-ms cycles by connecting it to a servo amplifier via the motion network Realtime Express (RTEX).

Positioning operations must be completed using the specified movement amount. Therefore, to control the positioning unit RTEX at the communication cycle (1 ms), there were cases where the target speed was changed by combining the positioning parameters.

In positioning speed hold mode, positioning operations can be executed while the movement amount and speed are being held by changing the acceleration and deceleration operations.

The following figure shows the conventional positioning operation and the positioning operation in positioning speed hold mode.

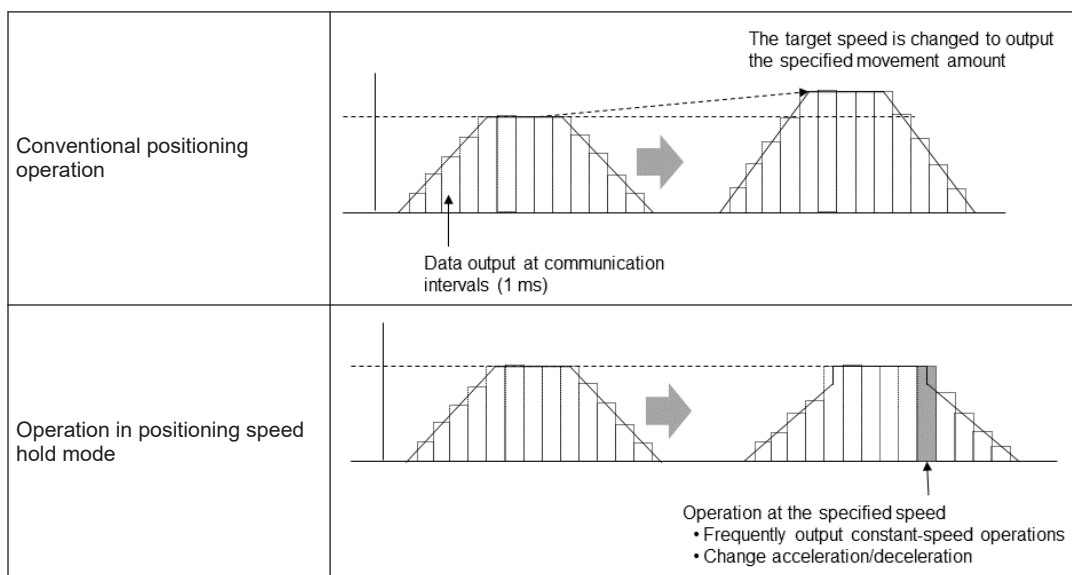

For general positioning operations, the target speed does not change even for conventional positioning operations. For fast positioning operations with small movement amounts and minute sections, however, the target speed may change. In such cases, positioning operations may be improved by using positioning speed hold mode.

### 14.19.2 Unit Memory

#### ■ Bank 00H: Common area

Offset address	Name	Default	Description
38BH	Positioning operation code	0H	Turn ON the bit corresponding to the axis for which the latch correction J-point control function is used. This area is used by the controller to determine the positioning operation when positioning is started. The set value cannot be changed during positioning operation.

## 14.19 Positioning speed hold mode

Offset address	Name	Default	Description	
			Setting value	Positioning operation mode
			0H	Conventional positioning operation
			1H	Positioning speed hold mode
			Other	Operates as if H0 is set.


### 14.19.3 Operation in Positioning Speed Hold Mode

The example below is the case where positioning speed hold mode is used for Axis 1.

#### ■ Positioning settings

Item	Setting example
Positioning table No.	100
Operation pattern	E: End point
Control method	I: Incremental
X-axis movement amount	45000 pulse
Acceleration/deceleration method / Acceleration time / Deceleration time	L: Linear / 6 ms / 6 ms
Target speed	5000000 pps

#### ■ Behavior diagram

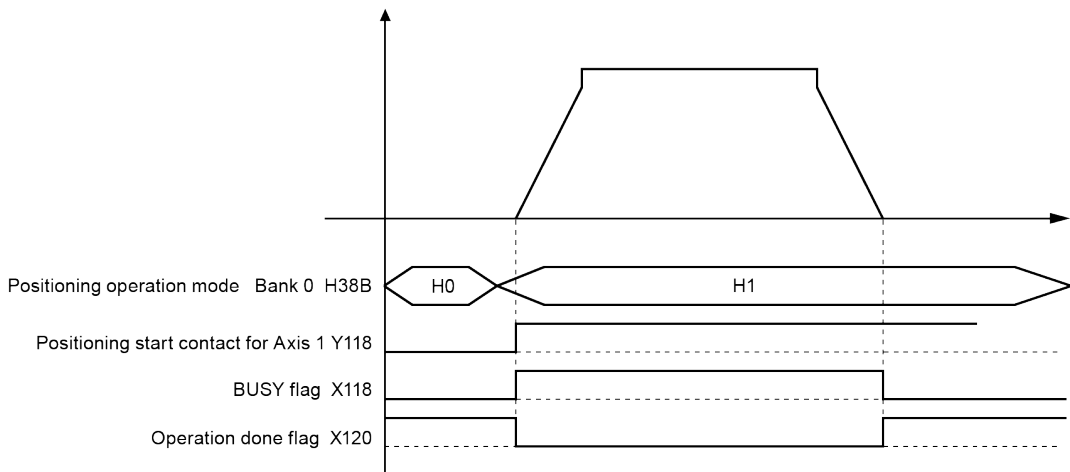

#### ■ Behaviors of each contact


- Before starting operation, set the positioning operation mode to 1H (positioning speed hold mode).
- The controller is ready to run in positioning speed hold mode.

- Start the positioning operation.
- The BUSY flag turns ON, the operation done flag turns OFF, and operation in positioning speed hold mode starts.
- After positioning is complete, check that the BUSY flag is OFF (the operation done flag is ON) and set the positioning operation mode to 0H (conventional positioning operation).

#### 14.19.4 Restrictions on Positioning Speed Hold Mode


The following are restrictions on using positioning speed hold mode.

1. Positioning speed hold mode is only valid for positioning operations on single axes.  
(During interpolation operations on Axis 2 and Axis 3 such as linear interpolation, conventional positioning operations are performed even if positioning speed hold mode is specified.)
2. If the specified movement amount is too small for the target speed, deceleration may be performed before the target speed is reached.

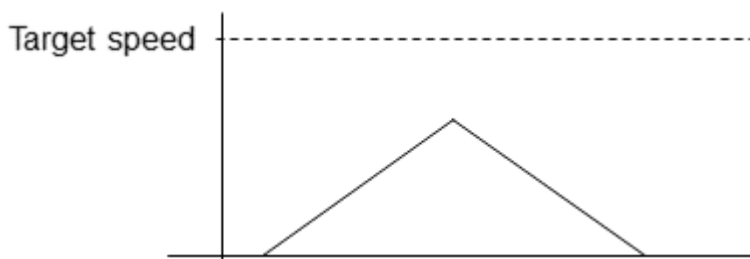


In such a case, conventional positioning operations are performed even if positioning speed hold mode is specified.

3. The "target speed change function" and "movement amount change function" positioning operations cannot be used.  
The above operations are ignored while positioning speed hold mode is running.
4. If the target speed remains the same when a P-point operation is performed, the speed may become slower during one communication cycle (1 ms) when the current table shifts to the next table. We recommend that conventional positioning be used when a P-point operation is performed.

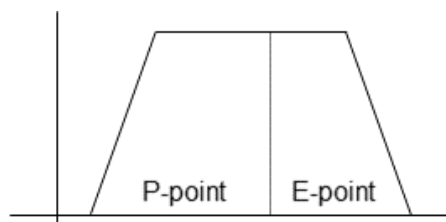

Conventional positioning operation

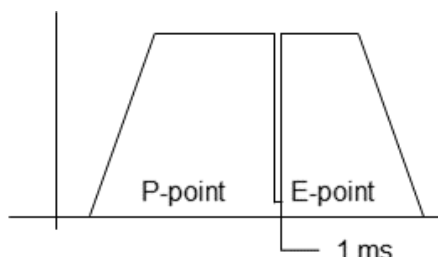

Positioning speed hold mode

(MEMO)

# 15 Error/Warning Notification Function

---

15.1	Errors and Warnings .....	15-2
15.1.1	Overview of Errors and Warnings .....	15-2
15.1.2	Checking and Clearing Errors and Warnings on Configurator PM7-RTEX.....	15-2
15.1.3	Error and Warning Logs .....	15-3
15.1.4	Clearing Errors and Warnings by Using a User Program .....	15-5
15.2	Error Return Processing .....	15-6
15.2.1	Overview of Error Recovery Processing .....	15-6
15.3	Error Code List.....	15-7
15.3.1	Amplifier Errors (From 0001H).....	15-7
15.3.2	System Errors (From 1000H).....	15-13
15.3.3	Amplifier Communication Errors (From 2000H).....	15-14
15.3.4	Axis Operation Errors (From 3000H) .....	15-15
15.3.5	Set Value Errors (From 4000H).....	15-19
15.3.6	Synchronization Parameter Setting Errors (From 5000H) .....	15-27
15.4	Warning Code List .....	15-33
15.4.1	Amplifier Warnings (From A000H) .....	15-33
15.4.2	Unit Warnings (From B000H).....	15-33

### 15.1 Errors and Warnings

#### 15.1.1 Overview of Errors and Warnings

##### ■ Significances of Errors and Warnings

- If some sort of operational inconsistency occurs in the positioning unit RTEX, an error or warning will occur.
- When errors or warnings occur, the following operations are performed.

Error	An error occurs in any abnormal situation. When a motor is operating, the operation will stop if an error occurs. The motor that stopped due to an error cannot be restarted until the error is cleared.
Warning	A warning occurs when there is a behavior inconsistency rather than an abnormality. The operation can continue even after a warning occurs. When a motor is operating, the operation will continue even if a warning occurs.

- Errors and warnings can be checked in the data monitor and status monitor screens of Configurator PM7-RTEX.
- Errors and warnings occur in the positioning unit RTEX and amplifier.
- The location and details of each error or warning can be identified with their error or warning code.

#### 15.1.2 Checking and Clearing Errors and Warnings on Configurator PM7-RTEX

Errors and warnings can be checked and cleared for each axis by selecting **Online>Data Monitor** in the Configurator PM7-RTEX programming tool.



Axis [Group]	V-Axis1	Axis 1	Axis 2	Axis 3
Synchronous master axis	-----	-----	-----	-----
Synchronized output	-----	-----	-----	-----
Synchronous state	Asynchronous	Asynchronous	Asynchronous	Asynchronous
Table number executing	0	1	0	0
Auxiliary output code	0	0	0	0
Amp current value (Pulse)	0	22723	-4	0
Unit conversion current value	0 pulse	22723 pulse	-4 pulse	0 pulse
Torque command(%)	-----	3.5	0.0	0.0
Actual speed (rpm)	-----	3	0	0
Deviation	-----	27	0	0
Axis state	Stopped	Warning	Error	Stopped
Error code	-----	-----	00000-E3000	-----
	Clear errors	Clear errors	Clear errors	Clear errors
Warning code	-----	00000-EB010	-----	-----
	Clear warning	Clear warning	Clear warning	Clear warning

Help Close

### 15.1.3 Error and Warning Logs

The unit is equipped with log areas that store error and warning codes when errors and warnings occur.

Error log	Up to seven error codes can be stored for each axis.
Warning log	Up to seven warning codes can be stored for each axis.

- When an error or warning occurs, the corresponding error or warning code is stored in the log area of the axis where the error or warning occurred.
- Only the latest error and warning codes for each axis can be checked on the positioning setting menu of the programming tool.
- When viewing the error and warning logs for each axis, read them from the error and warning log areas in positioning memory bank 00H where the error and warning logs are stored.

# 15.1 Errors and Warnings

Error log

H128 to H137	Axis 1 error log area	H128	—
H138 to H147	Axis 2 error log area	H129	Number of errors occurrences
H148 to H157	Axis 3 error log area	H12A to H12B	Error code notification buffer 1
H158 to H167	Axis 4 error log area	H12C to H12D	Error code notification buffer 2
H168 to H177	Axis 5 error log area	H12E to H12F	Error code notification buffer 3
H178 to H187	Axis 6 error log area	H130 to H131	Error code notification buffer 4
H188 to H197	Axis 7 (virtual) error log area	H132 to H133	Error code notification buffer 5
H198 to H1A7	Axis 8 (virtual) error log area	H134 to H135	Error code notification buffer 6
		H136 to H137	Error code notification buffer 7


Warning log area

H1C0 to H1CF	Axis 1 warning log area	H1C0	—
H1D0 to H1DF	Axis 2 warning log area	H1C1	Number of warning occurrences
H1E0 to H1EF	Axis 3 warning log area	H1C2 to H1C3	Warning code notification buffers 1
H1F0 to H1FF	Axis 4 warning log area	H1C4 to H1C5	Warning code notification buffers 2
H200 to H20F	Axis 5 warning log area	H1C6 to H1C7	Warning code notification buffers 3
H210 to H21F	Axis 6 warning log area	H1C8 to H1C9	Warning code notification buffers 4
H220 to H22F	Axis 7 (virtual) warning log area	H1CA to H1CB	Warning code notification buffers 5
H230 to H23F	Axis 8 (virtual) warning log area	H1CC to H1CD	Warning code notification buffers 6
		H1CE to H1CF	Warning code notification buffers 7

Number of errors/warning occurrences	Stores the number of occurrences of errors and warnings.
Error/warning notification buffers	Stores error and warning codes. Buffer 1 is always the latest and is stored in the order that errors/warnings occur: Buffer 1 ⇒ buffer 2...

### Sample programs

- The following sample program reads the number of error occurrences on Axis 1 in slot number 0 into DT100 and the error codes stored in error notification buffers 1 to 7 into DT101 to DT114 (14 words in total).
- Similarly, the sample program reads the number of warning occurrences on Axis 1 in slot number 0 into DT200 and the warning codes stored in warning notification buffers 1 to 7 into DT201 to DT214 (14 words in total).
- Each error code or warning code is loaded as 2-word data.

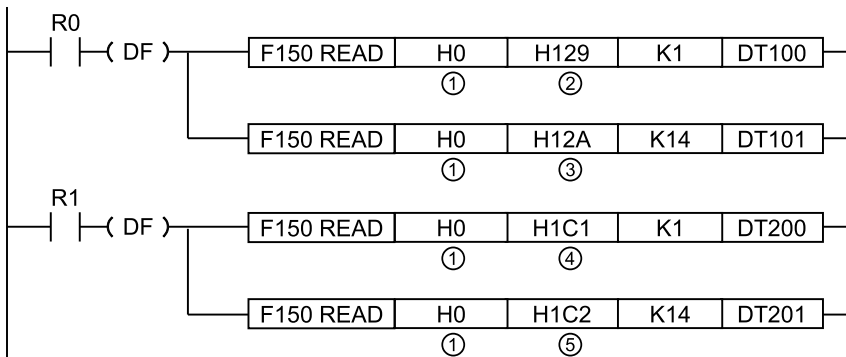


Code	Items specified in the program	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
(1)	Bank, slot No.	H0 (Bank 0, slot No.)							
(2)	Number of errors occurrences	H129	H139	H149	H159	H169	H179	H189	H199
(3)	Starting address of error code notification buffer	H12A	H13A	H14A	H15A	H16A	H17A	H18A	H19A
(4)	Number of warning occurrences	H1C1	H1D1	H1E1	H1F1	H201	H211	H221	H231

Code	Items specified in the program	Values specified in the program							
		Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7 (virtual)	8 axes (virtual)
(5)	Starting address of warning notification buffer	H1C2	H1D2	H1E2	H1F2	H202	H212	H222	H232

### 15.1.4 Clearing Errors and Warnings by Using a User Program

■ **Clearing errors and warnings for all axes by using I/O signals**

- Errors and warnings can be cleared for all axes by turning ON the error/warning clearing request flags allocated to the I/O area. The following program is used for clearing errors.

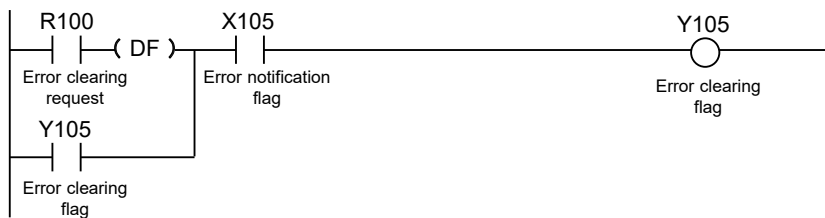

■ **Allocation of I/O signals**

Signal name	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Warning clearing for Axis 7 (virtual)	Axis 8 (virtual)
Error notification	X105							
Warning notification	X106							
Error clearing request	Y105							
Warning clearing request	Y106							

## 15.2 Error Return Processing

---

### 15.2 Error Return Processing

#### 15.2.1 Overview of Error Recovery Processing

The method for recovering from errors differs according to the state at the time of error occurrence.

State at the time of error occurrence	Description
Recoverable state (○)	<ul style="list-style-type: none"><li>• After an error occurs, the operating axis stops.</li><li>• After an error occurs, the positioning unit RTEX can perform error return at any time.</li></ul>
Unrecoverable state (×)	<ul style="list-style-type: none"><li>• This type of error is a serious abnormality that occurs in the positioning unit RTEX system.</li><li>• When a non-recoverable error occurs, the power must be turned OFF and then ON.</li></ul>

## 15.3 Error Code List

### 15.3.1 Amplifier Errors (From 0001H)

- Alarms and errors occurring on the amplifier side are output as error codes on the positioning unit RTEX side.
- Amplifier errors differ according to the type of amplifier. For details on the handling of amplifier errors, refer to the manual of the servo amplifier.
- When an amplifier error occurs, the system automatically enters the servo-free status. After clearing the error, reissue a servo ON request.

#### ■ How to read amplifier error codes

- An amplifier error is divided into a main code and sub-code.
- Error codes stored in the error notification area of the positioning unit RTEX are hexadecimal 4-digit codes.
- To check error codes on the amplifier side, convert the hexadecimal number codes to decimal numbers, as shown below.

Example: When encoder communication error protection occurs

Error code on the unit: 01 15 H

↓

Main code: 15 H, Sub-code: 01 H

↓

Convert each hexadecimal number to a decimal number

Error code on the amplifier side

Main code: 21, Sub-code: 1

#### ■ Amplifier error code table [for A6N]

- Refer to the latest instruction manual and technical reference for the servo amplifier.

Error code	A6N error number		Description
	Main code	Sub-code	
000BH	11	0	Control power supply undervoltage protection
000CH	12	0	Overvoltage protection
000DH	13	0	Main power supply undervoltage protection (insufficient voltage across PN)
010DH	13	1	Main power supply undervoltage protection (AC cutoff detection)
000EH	14	0	Overcurrent protection
010EH	14	1	IPM error protection
000FH	15	0	Overheat protection
010FH	15	1	Encoder overheat error protection
0010H	16	0	Overload protection
0110H	16	1	Torque saturation error protection
0012H	18	0	Regenerative overload protection

## 15.3 Error Code List

Error code	A6N error number		Description
	Main code	Sub-code	
0112H	18	1	Regenerative transistor error protection
0015H	21	0	Encoder communication disconnection fault protection
0115H	21	1	Encoder communication error protection
0017H	23	0	Encoder communication data error protection
0018H	24	0	Position deviation excess protection
0118H	24	1	Speed deviation excess protection
0019H	25	0	Hybrid deviation excess protection
001AH	26	0	Overspeed protection
011AH	26	1	2nd overspeed protection
011BH	27	1	Absolute clearing protection
041BH	27	4	Command error protection 1
051BH	27	5	Command generation error protection
061BH	27	6	Operation command contention protection
071BH	27	7	Position information initialization error protection
001CH	28	0	Pulse regeneration limit protection
011DH	29	1	Counter overflow protection 1
021DH	29	2	Counter overflow protection 2
001FH	31	0	Safety function error protection 1
021FH	31	2	Safety function error protection 2
0021H	33	0	Interface input duplicated allocation error-1 protection
0121H	33	1	Interface input duplicated allocation error-2 protection
0221H	33	2	Interface input function number error-1 protection
0321H	33	3	Interface input function number error-2 protection
0421H	33	4	Interface output function number error-1 protection
0521H	33	5	Interface output function number error-2 protection
0821H	33	8	Latch input allocation error protection
0022H	34	0	Motor operable range setting error protection
0024H	36	0	EEPROM parameter error protection
0124H	36	1	EEPROM parameter error protection
0025H	37	0	EEPROM check code error protection
0125H	37	1	EEPROM check code error protection
0225H	37	2	EEPROM check code error protection
0026H	38	0	Over-travel inhibit input setup protection 1
0126H	38	1	Over-travel inhibit input setup protection 2
0226H	38	2	Over-travel inhibit input setup protection 3
0028H	40	0	Absolute system failure protection

## 15.3 Error Code List

Error code	A6N error number		Description
	Main code	Sub-code	
0029H	41	0	Absolute counter limit excess protection
002BH	43	0	Encoder initialization error protection
002CH	44	0	Single-turn counter error protection
002DH	45	0	Multi-turn counter error protection
0030H	48	0	Encoder Z-phase error protection
0031H	49	0	Encoder CS-phase error protection
0032H	50	0	External scale wiring error protection
0132H	50	1	External scale communication data error protection
0033H	51	0	External scale ST error protection 0
0133H	51	1	External scale ST error protection 1
0233H	51	2	External scale ST error protection 2
0333H	51	3	External scale ST error protection 3
0433H	51	4	External scale ST error protection 4
0533H	51	5	External scale ST error protection 5
0037H	55	0	A-phase wiring error protection
0137H	55	1	B-phase wiring error protection
0237H	55	2	Z-phase wiring error protection
0052H	82	0	RTEX node address setting error protection
0053H	83	0	RTEX continuous communication error protection 1
0153H	83	1	RTEX continuous communication error protection 2
0054H	84	0	RTEX timeout error protection
0354H	84	3	RTEX synchronization establishment initialization error protection
0554H	84	5	RTEX communication cycle error protection
0056H	86	0	RTEX cyclic data error protection 1
0156H	86	1	RTEX cyclic data error protection 2
0256H	86	2	RTEX update counter error protection
0057H	87	0	Forced alarm input protection
025AH	90	2	RTEX multi-axis synchronization establishment error protection
015BH	91	1	RTEX command error protection
005CH	92	0	Encoder data restoration error protection
015CH	92	1	External scale data restoration error protection
035CH	92	3	Multi-turn data upper-limit value mismatch error protection
005DH	93	0	Parameter setting error protection 1
025DH	93	2	Parameter setting error protection 2
035DH	93	3	External scale connection error protection

## 15.3 Error Code List

Error code	A6N error number		Description
	Main code	Sub-code	
055DH	93	5	Parameter setting error protection 4
085DH	93	8	Parameter setting error protection 6
025EH	94	2	Home return error protection
035EH	94	3	Home return error protection 2
005FH	95	0	Motor automatic recognition error protection
015FH	95	1	Motor automatic recognition error protection
025FH	95	2	Motor automatic recognition error protection
035FH	95	3	Motor automatic recognition error protection
045FH	95	4	Motor automatic recognition error protection
0260H	96	2	Control unit error protection 1
0360H	96	3	Control unit error protection 2
0460H	96	4	Control unit error protection 3
0560H	96	5	Control unit error protection 4
0660H	96	6	Control unit error protection 5
0760H	96	7	Control unit error protection 6
0162H	98	1	RTEX hardware error protection 1
0262H	98	2	RTEX hardware error protection 2
0362H	98	3	RTEX hardware error protection 3
-	Other numbers		Other error protections

### ■ Amplifier error code table [for A5N]

- Refer to the latest instruction manual and technical reference for the servo amplifier.

Error code	A5N error number		Description
	Main code	Sub-code	
000BH	11	0	Control power supply undervoltage protection
000CH	12	0	Overvoltage protection
000DH	13	0	Main power supply undervoltage protection (Insufficient voltage across a p-n junction)
010DH	13	1	Main power supply undervoltage protection (AC interception detection)
000EH	14	0	Overcurrent protection
010EH	14	1	IPM error protection
000FH	15	0	Overheat protection
0010H	16	0	Overload protection
0110H	16	1	Torque saturation error protection
0012H	18	0	Regenerative overload protection
0112H	18	1	Regenerative transistor error protection



## 15.3 Error Code List

Error code	A5N error number		Description
	Main code	Sub-code	
0015H	21	0	Encoder communication line breakage fault protection
0115H	21	1	Encoder communication error protection
0017H	23	0	Encoder communication data error protection
0018H	24	0	Position deviation excess protection
0118H	24	1	Speed deviation excess protection
0019H	25	0	Hybrid deviation excess protection
001AH	26	0	Overspeed protection
011AH	26	1	2nd overspeed protection
011BH	27	1	Absolute clearing protection
041BH	27	4	Command error protection 1
051BH	27	5	Command generation error protection
061BH	27	6	Operation command contention protection
071BH	27	7	Position information initialization error protection
001CH	28	0	Pulse regeneration limit protection
011DH	29	1	Counter overflow protection 1
021DH	29	2	Counter overflow protection 2
001EH	30	0	Safety input protection [Only for special products]
0021H	33	0	Interface input duplicated allocation error-1 protection
0121H	33	1	Interface input duplicated allocation error-2 protection
0221H	33	2	Interface input function number error-1 protection
0321H	33	3	Interface input function number error-2 protection
0421H	33	4	Interface output function number error-1 protection
0521H	33	5	Interface output function number error-2 protection
0821H	33	8	Latch input allocation error protection
0022H	34	0	Motor operable range setting error protection
0024H	36	0	EEPROM parameter error protection
0124H	36	1	EEPROM parameter error protection
0224H	36	2	EEPROM parameter error protection
0025H	37	0	EEPROM check code error protection
0125H	37	1	EEPROM check code error protection
0225H	37	2	EEPROM check code error protection
0026H	38	0	Over-travel inhibit input protection 1
0126H	38	1	Over-travel inhibit input setup protection 2
0226H	38	2	Over-travel inhibit input setup protection 3
0028H	40	0	Absolute system failure protection
0029H	41	0	Absolute counter limit excess protection

## 15.3 Error Code List

Error code	A5N error number		Description
	Main code	Sub-code	
002AH	42	0	Absolute overspeed protection
002BH	43	0	Incremental encoder initialization error protection
002CH	44	0	<ul style="list-style-type: none"> <li>For absolute encoders: Absolute single-turn counter error protection</li> <li>For incremental encoders: Incremental single-turn counter error protection</li> </ul>
002DH	45	0	<ul style="list-style-type: none"> <li>For absolute encoders: Absolute multi-turn counter error protection</li> <li>For incremental encoders: Incremental count error protection</li> </ul>
002FH	47	0	Absolute status error protection
0030H	48	0	Incremental encoder Z-phase error protection
0031H	49	0	Incremental encoder CS-phase error protection
0032H	50	0	External scale wiring error protection
0132H	50	1	External scale communication data error protection
0033H	51	0	External scale ST error protection 0
0133H	51	1	External scale ST error protection 1
0233H	51	2	External scale ST error protection 2
0333H	51	3	External scale ST error protection 3
0433H	51	4	External scale ST error protection 4
0533H	51	5	External scale ST error protection 5
0037H	55	0	Phase-A wiring error protection
0137H	55	1	Phase-B wiring error protection
0237H	55	2	Phase-Z wiring error protection
0052H	82	0	RTEX node address setting error protection
0053H	83	0	RTEX continuous communication error protection 1
0153H	83	1	RTEX continuous communication error protection 2
0054H	84	0	RTEX timeout error protection
0354H	84	3	RTEX synchronization establishment initialization error protection
0554H	84	5	RTEX communication cycle error protection
0056H	86	0	RTEX cyclic data error protection 1
0156H	86	1	RTEX cyclic data error protection 2
0256H	86	2	RTEX update counter error protection
0057H	87	0	Forced alarm input protection
025AH	90	2	RTEX multi-axis synchronization establishment error protection
015BH	91	1	RTEX command error protection
005CH	92	0	Encoder data restoration error protection

Error code	A5N error number		Description
	Main code	Sub-code	
015CH	92	1	External scale data restoration error protection
005DH	93	0	Parameter setting error protection 1
025DH	93	2	Parameter setting error protection 2
035DH	93	3	External scale connection error protection
055DH	93	5	Parameter setting error protection 4
025EH	94	2	Home return error protection
005FH	95	0	Motor automatic recognition error protection
015FH	95	1	Motor automatic recognition error protection
025FH	95	2	Motor automatic recognition error protection
035FH	95	3	Motor automatic recognition error protection
045FH	95	4	Motor automatic recognition error protection
0162H	98	1	RTEX hardware error protection 1
0262H	98	2	RTEX hardware error protection 2
0362H	98	3	RTEX hardware error protection 3
-	Other numbers		Other error protections

### 15.3.2 System Errors (From 1000H)

System errors occur due to an abnormality within the unit. System errors are defined as fatal errors for the system. Except for some errors, the power must be turned OFF and then ON to recover from these errors.

Code	Name	Description	Processing	Recovery	Countermeasures
1000H	System out of control	The system is running out of control.	All axes	×	Turn the power off and then on. If the error occurs repeatedly, please contact our sales office.
1001H	Hardware error	An error occurred in hardware testing when the power was turned ON.	All axes	×	
1002H	Unit error	Some sort of error occurred in internal processing.	All axes	×	
1003H	System processing error	An error occurred in system processing for some reason.	All axes	○	Check the settings. If the error occurs repeatedly when the set values are all correct, please contact our sales office.
1010H	FROM write error	An error occurred while writing the positioning settings to the FROM in the unit. <ul style="list-style-type: none"> <li>● Error item <ul style="list-style-type: none"> <li>• Write error</li> </ul> </li> </ul>	All axes	○	Perform the FROM write again. If the error occurs repeatedly, please contact our sales office.

## 15.3 Error Code List

Code	Name	Description	Processing	Recovery	Countermeasures
		<ul style="list-style-type: none"> <li>• Verify error</li> <li>• Erase error</li> </ul>			
1020H	Tool Operation Abnormal termination	An error occurred in communication with the PC when tool operation was performed using the positioning setting menu of the programming tool.	All axes	○	Check the connection of the cable connecting the PC and PLC. Restart the PC.
1021H	Download data error	Downloading the cam point method cam data failed.	All axes	○	Perform the download again. If the error occurs repeatedly, please contact our sales office.
1030H	FP0H control unit error	An alarm occurred in the FP0H control unit.	All axes	×	Check the status of the FP0H control unit. Turn the power off and then on.
1031H	FP0H Control Unit Operation mode error	The operation was stopped because the FP0H control unit was switched to PROG. mode while the positioning unit RTEX was performing positioning operations.	All axes	○	Check the status of the positioning unit RTEX. Set the FP0H control unit to RUN mode.

### 15.3.3 Amplifier Communication Errors (From 2000H)

These errors occur in network communication between the positioning unit RTEX and the amplifier.

Code	Name	Description	Processing	Recovery	Countermeasures
2000H	Amplifier communication error	After communication was established, a communication error occurred for some reason.	All axes	×	<ul style="list-style-type: none"> <li>• Check that the amplifier is ON.</li> <li>• Check the communication path. In particular, carefully check the communication cables for any connector faults or broken wires.</li> </ul> <p>Also, check if excessive noise is generated in the operating environment.</p> <ul style="list-style-type: none"> <li>• If the error occurs repeatedly, please contact our sales office.</li> </ul>
2001H	Amplifier data acquisition error	Data acquisition from each amplifier failed.	Gear ratio change time for each axis	○	<ul style="list-style-type: none"> <li>• Check the status of the amplifier where the error occurred.</li> <li>• Check the communication path. In particular, carefully check the communication cables for any connector faults or broken wires.</li> </ul>
2002H	Amplifier parameter error	The parameters used by communication with each amplifier are incorrect.	Gear ratio change	○	<p>Also, check if excessive noise is generated in the operating environment.</p>

Code	Name	Description	Processing	Recovery	Countermeasures	
		The parameter is invalid.	ge time for each axis		<ul style="list-style-type: none"> <li>If the error occurs repeatedly, please contact our sales office.</li> </ul>	
2003H	Network communication timeout	A timeout occurred in communication between the positioning unit RTEX and the amplifier, and the communication was disconnected.	Gear ratio change time for each axis	○	<p>Check the condition of the amplifier.</p> <p>(As information about the amplifier cannot be obtained while communication is closed, any error with the amplifier may not be obtained.)</p> <p>Check the communication cables.</p>	
2004H	Amplifier parameter control error	A communication error occurred during amplifier parameter processing (read, write, save, or reset).	Gear ratio change time for each axis	○	<ul style="list-style-type: none"> <li>Check the condition of the amplifier.</li> <li>Check that the control mode of the amplifier is correctly set. (Speed control mode and torque control mode cannot be used.)</li> </ul>	
2010H	Too many amplifiers connected	The number of amplifiers connected to the network exceeded the maximum connection limit for the unit (maximum number of axes of the unit).	All axes	×	<ul style="list-style-type: none"> <li>After checking the connections and settings of the amplifiers, turn the power OFF and then ON.</li> <li>If the error occurs repeatedly, please contact our sales office.</li> <li>When using one virtual axis set the amp station numbers as follows: When using one virtual axis 1: 1 to 7 When using one virtual axis 2: 1 to 6</li> </ul>	
2020H	Amplifier node duplication	Amplifiers with the same station number exist in the network.	All axes	×		
2021H	Virtual axis duplication error	Virtual axes are used, but amplifiers with the following station number are connected. When using one virtual axis: Station number 8 When using two virtual axes: Station numbers 7 and 8	All axes	×		
2030H	Amplifier node number setting error	Amplifiers with any station number other than those below exist. 1 to 8	All axes	×		
2040H	Amplifier reset failure	An error occurred in amplifier reset processing and the system stopped.	All axes	×		Turn the system OFF and then ON.
2050H	Amplifier connection error	The connected amplifiers are a mixture of A4N and A6N/A5N.	All axes	×		Check the configuration of connected amplifiers to make sure that A4N and A6N/A5N are not mixed.

#### 15.3.4 Axis Operation Errors (From 3000H)

These errors occur while various operations are being executed.

## 15.3 Error Code List

Code	Name	Description	Processing	Recovery	Countermeasures
3000H	Servo not ready	An attempt was made to start an axis that is not in the servo-locked status.	Gear ratio change time for each axis	○	When operating an axis, check that it is in the servo-locked status.
3001H	Servo OFF detection during operation	The servo turned OFF during operation.	Gear ratio change time for each axis	○	<ul style="list-style-type: none"> <li>• Turn OFF the servo ON input when the BUSY signal for the target axis is not ON.</li> <li>• Check the condition of the amplifier.</li> </ul>
3005H	Main power supply OFF error	A servo ON request was issued when the main power supply of the amplifier was OFF.	Gear ratio change time for each axis	○	<ul style="list-style-type: none"> <li>• Turn the servo ON after the main power supply has been turned ON.</li> <li>• Check the voltage of the main power supply.</li> </ul>
3010H	Limit + signal detection	The input on the plus side of the limit turned ON.	Gear ratio change time for each axis	○	Move the motor into the range of the limit by performing an operation such as a JOG operation.
3011H	Limit - signal detection	The input on the minus side of the limit turned ON.	Gear ratio change time for each axis	○	Check if the limit signals are normal.
3012H	Limit signal error	Inputs on both the plus and minus sides of the limit turned ON.	Gear ratio change time for each axis	○	Check the status of the limit signal.
3020H	Soft limits: (Plus side) detection	The movement amount of the motor exceeded the upper limit value of the soft limit.	Gear ratio change time for each axis	○	<p>Move the motor into the range of the soft limit by performing an operation such as a JOG operation.</p> <p>Check the set values of the soft limit.</p>

Code	Name	Description	Processing	Recovery	Countermeasures
3021H	Soft limits: (Minus side) detection	The movement amount of the motor exceeded the lower limit value of the soft limit.	Gear ratio change time for each axis	○	
3025H	Command speed calculation error 1	In the internal calculation process of the command speed, the calculation failed due to an overflow.	Gear ratio change time for each axis	○	Lower the set speed. Check the specified number of pulses per revolution and the specified movement amount per revolution.
3026H	Command speed calculation error 2		Gear ratio change time for each axis	○	
3027H	Command speed calculation error 3		Gear ratio change time for each axis	○	
3030H	Axis operation error	An error occurred in the operation processing of each axis.	Gear ratio change time for each axis	○	Check the set values and parameters of positioning data. Furthermore, this error may be notified when an AMP warning occurs. Therefore, refer also to the warning history. If an error occurs repeatedly when the set values are all correct and there is no error in the AMP, please contact our sales office.
3031H	Operation abnormal termination	An error occurred in the operation processing of each axis.	Gear ratio change time for each axis All axes	○	If the error occurs repeatedly, please contact our sales office.
3032H	Axis group operation error	The settings of the axis group were changed during operation or while a stop request was being issued.	Gear ratio change	○	Change the axis group while the axes are stopped. Do not issue a stop request.

## 15.3 Error Code List

Code	Name	Description	Processing	Recovery	Countermeasures
		The settings of the axis group are out of range.	time for each axis		Check the axis group settings.
3033H	Interpolation operation error	The operation stopped as an error occurred on another interpolation axis during interpolation operation.	Gear ratio change time for each axis	○	<p>Check the set values of positioning data for interpolation operations.</p> <p>○ If the error occurs repeatedly when the set values are all correct, please contact our sales office.</p>
3034H	Axis group not settable (During pulser operation)	The axis group settings were changed during pulser operation.	Gear ratio change time for each axis	○	Change the axis group when the pulser operation enabled signal is OFF.
3035H	Positioning movement amount error	The positioning movement amount has exceeded the upper or lower limit value.	Gear ratio change time for each axis	○	Check the set values.
3043H	Synchronous operation error	The operation was stopped as an error occurred on another axis during synchronous operation.	Gear ratio change time for each axis	○	<p>Check the unit settings of the stopped axis.</p> <p>○ If the error occurs repeatedly when the set values are all correct, please contact our sales office.</p>
3046H	Synchronous operation not settable	Synchronous setting was executed with the pulse input as master when the slave axes were servo OFF.	Gear ratio change time for each axis	○	Synchronous setting with the pulse input as master should be executed with all slave axes in the servo ON status.
3050H	Torque judgment value error	<p>The torque value exceeded the specified upper or lower limit value.</p> <p>This error occurs when bit 0 and bit 1 of the monitored value error setting are set to 1 (enable torque judgment values) and 0 (report an error when enabled), respectively.</p>	Gear ratio change time for each axis	○	<ul style="list-style-type: none"> <li>• Design the system so that the torque of the motor does not exceed the judgment value.</li> <li>• Check the torque judgment value.</li> </ul>
3051H	Actual speed judgment value error	The actual speed exceeded the specified upper or lower limit value.	Gear ratio change	○	<ul style="list-style-type: none"> <li>• Design the system so that the actual speed of the motor does not exceed the judgment value.</li> </ul>



Code	Name	Description	Processing	Recovery	Countermeasures
		This error occurs when bit 2 and bit 3 of the monitored value error setting are set to 1 (enable actual speed judgment values) and 0 (report an error when enabled), respectively.	time for each axis		<ul style="list-style-type: none"> <li>Check the actual speed judgment value.</li> </ul>
3060H	Home return non-executable error	Home return could not be executed as the amplifier parameter settings or signal inputs were not appropriate. This error occurs when A6N/A5N is used as the amplifier.	Gear ratio change time for each axis	○	Check the amplifier parameters and signal inputs.
3061H	Multi-turn data clearing not possible	This error occurs when multi-turn data clearing is judged to be impossible. <ul style="list-style-type: none"> <li>Servo is ON</li> <li>Servo is in incremental mode</li> <li>Absolute single-turn function is enabled for servo</li> <li>Servo is in fully closed control mode</li> </ul>	Gear ratio change time for each axis	○	Check the set values of the servo motor.
3070H	Correction latch used multiple times	The correction latch was used two or more times in the period until the positioning operation was complete.	Gear ratio change time for each axis	○	When using the correction latch as the J-point trigger, do not use it two or more times in the period until the positioning operation is complete.

### 15.3.5 Set Value Errors (From 4000H)

These errors occur with various settings specified using the positioning setting menu of the programming tool or a ladder program.

Code	Name	Description	Processing	Recovery	Countermeasures
4000H	Axis group setting error	The settings of axis groups are incorrect. When virtual axes are used, they are not registered in the independent axis area of the axis group.	Gear ratio change time for each axis	○	<p>Check for the following problems with the settings of the axis group and independent axis.</p> <ul style="list-style-type: none"> <li>The same axis number is registered in more than one group.</li> <li>Four or more axes are set in one group.</li> <li>The axis group is composed of one axis only.</li> </ul>

## 15.3 Error Code List

Code	Name	Description	Processing	Recovery	Countermeasures
					<ul style="list-style-type: none"> <li>No virtual axes are registered in the independent axis area of the axis group.</li> </ul>
4001H	Virtual axis setting error	The virtual axis usage setting (number of virtual axes) is incorrect.	All axes	○	Check the settings.
4002H	Unit setting error	The set unit is out of range.	Gear ratio change time for each axis	○	Check if the unit is one of the following: pulses, μm, inches, degrees
4004H	Invalid number of pulses per revolution	The number of pulses is out of range.	Gear ratio change time for each axis	○	Check the set values. If the setting value is out of range, reduce the fraction with the following expression. (Number of pulses per revolution) / (Movement amount per revolution)
4005H	Invalid movement amount per revolution	The movement amount is out of range.	Gear ratio change time for each axis	○	
4010H	Soft limit setting error	The upper or lower limit value of the soft limit is out of range.	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set values are all correct, please contact our sales office.
4020H	Limit stop deceleration time error	The limit stop deceleration time is out of range.	Gear ratio change time for each axis	○	
4021H	Error stop deceleration time error	The error stop deceleration time is out of range.	Gear ratio change time for each axis	○	

## 15.3 Error Code List

Code	Name	Description	Processing	Recovery	Countermeasures
4022H	Emergency stop deceleration time error	The emergency stop deceleration time is out of range.	Gear ratio change time for each axis	○	
4028H	Auxiliary output setting error	The auxiliary output settings are invalid. A mode other than With mode or Delay mode has been set. The auxiliary output delay ratio of Delay mode is not in the range of 0 to 100 (%).	Gear ratio change time for each axis	○	
4042H	Pulser setting Error	The pulser input mode is incorrect. The pulser operation method is incorrect. The maximum pulser operation speed is incorrect.	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set value is correct, please contact our sales office.
4043H	Use pulser inoperable error	The pulse input application of the axis to which pulses are permitted to be input from the pulser is not set to Pulser.	Gear ratio change time for each axis	○	Check the pulse input application. When using a pulser, set the input application to "Pulser".
4044H	Speed rate error	The setting of the speed rate is out of range.	Gear ratio change time for each axis	○	
4080H	JOG positioning Acceleration/ deceleration method error	The acceleration/deceleration method for JOG positioning is out of range.	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set values are all correct, please contact our sales office.
4081H	JOG positioning Acceleration time error	The acceleration time of JOG positioning is out of range.	Gear ratio change time for each axis	○	

## 15.3 Error Code List

Code	Name	Description	Processing	Recovery	Countermeasures
4082H	JOG positioning Deceleration time error	The deceleration time of JOG positioning is out of range.	Gear ratio change time for each axis	○	
4083H	JOG positioning Target speed error	The target speed of JOG positioning is out of range.	Gear ratio change time for each axis	○	
4102H	Stop-on-contact torque value for home return Target speed error	The target speed of home return is out of range.	Gear ratio change time for each axis	○	
4105H	Stop-on-contact torque value for home return Acceleration time error	The acceleration time of home return is out of range.	Gear ratio change time for each axis	○	
4106H	Stop-on-contact torque value for home return Deceleration time error	The deceleration time of home return is out of range.	Gear ratio change time for each axis	○	
4107H	Stop-on-contact torque value for home return Setting code error	The home return setting code is invalid.	Gear ratio change time for each axis	○	
4110H	Stop-on-contact torque value for home return Creep rate error	The return creep speed of home return is out of range.	Gear ratio change time for each axis	○	

Code	Name	Description	Processing	Recovery	Countermeasures
4111H	Stop-on-contact torque value for home return return direction error	The movement direction of home return is invalid.	Gear ratio change time for each axis	○	
4112H	Stop-on-contact torque value for home return Limit error	The limit switch is disabled. (This error occurs when the home return method is set to limit method 1 or 2.)	Gear ratio change time for each axis	○	
4115H	Stop-on-contact torque value for home return Stop-on-contact torque value error	The home return stop-on-contact torque value is out of range. (This error occurs when the home return method is set to stop-on-contact method 1 or 2.)	Gear ratio change time for each axis	○	
4116H	Stop-on-contact torque value for home return Stop-on-contact judgment time error	The home return stop-on-contact judgment time is out of range. (This error occurs when the home return method is set to stop-on-contact method 1 or 2.)	Gear ratio change time for each axis	○	
4120H	Home coordinates error	The specified home coordinates are out of range.	Gear ratio change time for each axis	○	Use the following formula to convert the set values to pulse unit current values, and check that the values do not exceed the upper and lower pulse limits (-2,147,483,648 to +2,147,483,647). Pulse unit current value = Unit-converted current value × Number of pulses per revolution / Movement amount per revolution
4201H	JOG operation Target speed error	The target speed of JOG operation is out of range.	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set values are all correct, please contact our sales office.
4203H	JOG operation Acceleration/ deceleration method error	The acceleration/deceleration method for JOG operation is invalid.	Gear ratio change time for	○	

## 15.3 Error Code List

Code	Name	Description	Processing	Recovery	Countermeasures
			each axis		
4204H	JOG operation Acceleration time error	The acceleration time of JOG operation is out of range.	Gear ratio change time for each axis	○	
4205H	JOG operation Deceleration time error	The deceleration time of JOG operation is out of range.	Gear ratio change time for each axis	○	
4250H	Current value update error	The set value of current value updating is out of range.	Gear ratio change time for each axis	○	Use the following formula to convert the set values to pulse unit current values, and check that the values do not exceed the upper and lower pulse limits (-2,147,483,648 to +2,147,483,647). Pulse unit current value = Unit-converted current value × Number of pulses per revolution / Movement amount per revolution
4251H	Real-time torque limit value error	The specified real-time torque value is out of range.	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set values are all correct, please contact our sales office.
4301H	Absolute/ incremental specification error	A value other than "Absolute" or "Incremental" is set for the control method.	Gear ratio change time for each axis	○	
4302H	Dwell time error	The set value of the dwell time is out of range.	Gear ratio change time for each axis	○	
4303H	Positioning start Table No.	The specified table number is 0 or	Gear ratio	○	

Code	Name	Description	Processing	Recovery	Countermeasures
	error	greater than the maximum table number.	change time for each axis		
4304H	Table settings error	The last table of the positioning setting tables is not a table specifying E-point.	Gear ratio change time for each axis	○	
4400H	Positioning movement amount setting error	The movement amount of the positioning operation is out of range.	Gear ratio change time for each axis	○	
4401H	positioning Acceleration/ deceleration method error	The acceleration/deceleration method of the positioning operation is invalid.	Gear ratio change time for each axis	○	
4402H	positioning Acceleration time error	The acceleration time of the positioning operation is out of range.	Gear ratio change time for each axis	○	
4403H	positioning Deceleration time error	The deceleration time of the positioning operation is out of range.	Gear ratio change time for each axis	○	
4404H	positioning Target speed error	The target speed of the positioning operation is out of range.	Gear ratio change time for each axis	○	
4500H	Interpolation type error	The specified interpolation type is invalid.	Gear ratio chan	○	

## 15.3 Error Code List

Code	Name	Description	Processing	Recovery	Countermeasures
			ge time for each axis		
4504H	Circular interpolation execution not possible	The circular interpolation parameters (such as center point or pass point) are invalid.	Gear ratio change time for each axis	○	
4505H	Spiral interpolation execution not possible	As the set value is invalid, an error occurred during spiral interpolation execution.	Gear ratio change time for each axis	○	
4510H	Positioning speed change speed error	The positioning speed change speed is out of range.	Gear ratio change time for each axis	○	
4520H	Positioning movement amount change movement amount error	The positioning movement amount change movement amount is out of range.	Gear ratio change time for each axis	○	
4600H	Pulse input setting error	The specified pulse input mode is invalid.	Gear ratio change time for each axis	○	Check the set values. Check the combination of input mode, input multiplication, and input application.
4605H	Pulse count change value setting error	The specified pulse count change value is out of range.	Gear ratio change time for each axis	○	Check the set values.



### 15.3.6 Synchronization Parameter Setting Errors (From 5000H)

#### ■ Synchronization parameters: Common errors (from 5000H)

Code	Name	Description	Processing	Recovery	Countermeasures
5000H	Synchronous master set value invalid	The settings for the synchronous master axis are invalid. ⇒ Setting error (invalid value) → Local axis setting	Gear ratio change time for each axis	○	
5002H	Synchronization setting inoperable error	A synchronization setting request was issued in the following axis states. <ul style="list-style-type: none"> <li>• The local axis (slave axis) is set as the master axis for another axis.</li> <li>• The master axis is set as a slave axis for another axis.</li> <li>• The local axis (slave axis) belongs to an interpolation group.</li> </ul>	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set value is correct, please contact our sales office.
5006H	Synchronous slave single deceleration stop Deceleration time error	The setting for the synchronous slave single deceleration stop time is invalid.	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set value is correct, please contact our sales office.

#### ■ Synchronization parameters: Electronic gear related errors (from 5100H)

Code	Name	Description	Processing	Recovery	Countermeasures
5100H	Electronic gear Gear ratio numerator setting error	The setting for the electronic gear ratio numerator is invalid.	Gear ratio change time for each axis	○	
5101H	Electronic gear Gear ratio denominator setting error	The setting for the electronic gear ratio denominator is invalid.	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set value is correct, please contact our sales office.

## 15.3 Error Code List

Code	Name	Description	Processing	Recovery	Countermeasures
5102H	Electronic gear Gear ratio change time setting error	The setting for electronic gear ratio change time is invalid.	Gear ratio change time for each axis	○	

### ■ Synchronization parameters: Electronic clutch related errors (from 5200H)

Code	Name	Description	Processing	Recovery	Countermeasures
5200H	Electronic clutch Clutch ON trigger type setting error	The setting for the electronic clutch ON trigger type is invalid.	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set value is correct, please contact our sales office.
5201H	Electronic clutch Clutch ON edge selection setting error	The setting for electronic clutch ON edge selection is invalid.	Gear ratio change time for each axis	○	
5203H	Electronic clutch Clutch OFF trigger type setting error	The setting for the electronic clutch OFF trigger type is invalid.	Gear ratio change time for each axis	○	
5204H	Electronic clutch Clutch OFF edge selection setting error	The setting for electronic clutch OFF edge selection is invalid.	Gear ratio change time for each axis	○	
5207H	Electronic clutch Clutch ON method setting error	The setting for the electronic clutch ON method is invalid.	Gear ratio change time for each axis	○	
5208H	Electronic clutch	The setting for the electronic clutch ON slip method is invalid.	Gear ratio	○	

Code	Name	Description	Processing	Recovery	Countermeasures
	Clutch ON slip method setting error		change time for each axis		
5209H	Electronic clutch Clutch ON slip time setting error	The setting for the electronic clutch ON slip time is invalid.	Gear ratio change time for each axis	○	
5210H	Electronic clutch Clutch ON slip curve selection setting error	The setting for electronic clutch ON slip curves is invalid.	Gear ratio change time for each axis	○	
5211H	Electronic clutch Clutch OFF method setting error	The setting for the electronic clutch OFF method is invalid.	Gear ratio change time for each axis	○	
5212H	Electronic clutch Clutch OFF slip method setting error	The setting for the electronic clutch OFF slip method is invalid.	Gear ratio change time for each axis	○	
5213H	Electronic clutch Clutch OFF slip time setting error	The setting for the electronic clutch OFF slip time is invalid.	Gear ratio change time for each axis	○	
5214H	Electronic clutch Clutch OFF slip curve selection setting error	The setting for electronic clutch OFF slip curves is invalid.	Gear ratio change time for each axis	○	

## 15.3 Error Code List

### ■ Synchronization parameters: Electronic cam related errors (from 5300H)

Code	Name	Description	Processing	Recovery	Countermeasures
5300H	Electronic cam Cam control synchronous master axis cycle setting error	The setting for the electronic cam control synchronous master axis cycle is invalid.	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set value is correct, please contact our sales office.
5301H	Electronic cam Used cam pattern number setting error	The electronic cam pattern number to be used is out of range. The cam pattern number to be used is unregistered.	Gear ratio change time for each axis	○	
5302H	Electronic cam Cam stroke amount setting error	The setting for electronic cam stroke amount is invalid.	Gear ratio change time for each axis	○	

### ■ Cam pattern related errors (from 5400H)

Code	Name	Description	Processing	Recovery	Countermeasures
5400H	Cam pattern resolution setting error	The setting for the electronic cam pattern resolution is out of range.	Gear ratio change time for each axis	○	Check the set values. If the error occurs repeatedly when the set value is correct, please contact our sales office.
5401H	Cam pattern count setting error	The specified number of electronic cam patterns is out of range.	Gear ratio change time for each axis	○	
5402H	Cam pattern set section number setting error	The set number of electronic cam pattern sections is out of range.	Gear ratio change time for each axis	○	

Code	Name	Description	Processing	Recovery	Countermeasures
5403H	Cam pattern control starting position setting error	The setting for the electronic cam pattern control starting position (shift) is out of range.	Gear ratio change time for each axis	○	
5404H	Cam pattern start phase setting error	The start phase setting for each section of electronic cam patterns is out of range.	Gear ratio change time for each axis	○	
5405H	Cam pattern displacement setting error	The displacement for each section of electronic cam patterns is out of range.	Gear ratio change time for each axis	○	
5406H	Cam pattern cam curve number setting error	The curve number for each section of electronic cam patterns is out of range.	Gear ratio change time for each axis	○	
5410H	Adjustment data total count setting error	The total number of electronic cam pattern adjustment data items is out of range.	Gear ratio change time for each axis	○	
5411H	Adjustment data count setting error	The number of electronic cam pattern adjustment data items is out of range (for each cam pattern).	Gear ratio change time for each axis	○	
5413H	Adjustment data control point setting error	The control point of electronic cam pattern adjustment data is out of range.	Gear ratio change time for each axis	○	

### 15.3 Error Code List

---

Code	Name	Description	Processing	Recovery	Countermeasures
5414H	Adjustment data out-of-range setting error	The adjustment value of electronic cam pattern adjustment data is out of range.	Gear ratio change time for each axis	○	

## 15.4 Warning Code List

### 15.4.1 Amplifier Warnings (From A000H)

- Warnings occurring on the amplifier side are output as warning codes on the positioning unit RTEX side.
- The warning codes output from the positioning unit RTEX are hexadecimal numbers and the warning numbers output from amplifiers (A6N/A5N) are also hexadecimal numbers.
- Amplifier warnings differ according to the type of amplifier. For details on treatments for amplifier warnings, refer to the manual of the servo amplifier.

#### ■ How to read amplifier warning codes [For A6N/A5N]

The warning numbers on the amplifier side are obtained by subtracting A000H from the warning codes of this unit.

Example: When an overload warning occurs

Warning code for this unit: A0A0 H

↓

Subtract A000H from warning code: 00A0 H

↓

Warning number on the amplifier side: A0 H

### 15.4.2 Unit Warnings (From B000H)

These warning codes are issued when warnings occur in the unit.

Code	Name	Description	Processing	Recovery	Countermeasures
B004H	Real-time torque limit protection	The real-time torque limit function was not executed as amplifier parameter processing or amplifier monitor processing was in progress.	Gear ratio change time for each axis	○	Execute the real-time torque limit function when amplifier parameter processing or amplifier monitor processing is not used.
B010H	Duplicate startup	When the operation of an axis has not finished yet, an attempt was made to operate the same axis.	Gear ratio change time for each axis	○	An operation request cannot be issued to any axis that is currently operating. However, the following requests can be issued even when the target axis is operating. <ul style="list-style-type: none"> <li>• Deceleration stop request flag (for each axis)</li> <li>• Emergency stop request flag (for each axis)</li> <li>• System stop request flag (for all axes)</li> </ul>

## 15.4 Warning Code List

Code	Name	Description	Processing	Recovery	Countermeasures
B020H	Non-existent axis started	A positioning operation request was executed on a non-existent axis.	Gear ratio change time for each axis	○	<ul style="list-style-type: none"> <li>Check the axis settings.</li> <li>Check the positioning start process.</li> </ul>
B030H	J-point simultaneous startup warning	<p>A J-point speed change request (in bank 00H or 062H) and J-point positioning start contact turned ON simultaneously during a JOG positioning operation.</p> <p>A J-point speed change request (in bank 00H or 062H) turned ON during acceleration or deceleration.</p>	Gear ratio change time for each axis	○	<p>When both contacts turn ON simultaneously, "J-point positioning start contact" is given priority and "J-point speed change contact (in bank 00H or 062H)" is ignored.</p> <p>Configure settings so that the J-point speed change request (in bank 00H or 062H) turns ON during constant-speed operation.</p>
B031H	J-point speed change request warning	A J-point speed change request (in bank 00H or 062H) turned ON while J-point control was inactive.	Gear ratio change time for each axis	○	<ul style="list-style-type: none"> <li>Check when the J-point speed change request (in bank 00H or 062H) turns ON.</li> </ul>
B032H	J-point positioning start request warning	The J-point positioning start contact turned ON while J-point control was inactive.	Gear ratio change time for each axis	○	<ul style="list-style-type: none"> <li>Check the timing of the J-point positioning start contact turning ON.</li> </ul>
B050H	Torque judgment value warning	<p>The monitored torque value exceeded the specified upper/lower limit value.</p> <p>This warning occurs when bit 0 and bit 1 of monitored value error judgment are set to 1 (enable torque judgment value) and 1 (issue a warning when enabled), respectively.</p>	Gear ratio change time for each axis	○	<p>Design the system so that the torque value of the motor does not exceed the judgment value.</p> <p>Check the set value of "Torque judgment".</p>
B051H	Actual speed judgment value warning	<p>The monitored actual speed exceeded the specified upper/lower limit value.</p> <p>This warning occurs when bit 2 and bit 3 of monitored value error judgment are set to 1 (enable actual speed judgment value) and 1 (issue a warning when enabled), respectively.</p>	Gear ratio change time for each axis	○	<p>Design the system so that the actual speed of the motor does not exceed the judgment value.</p> <p>Check the set value of "Actual speed judgement".</p>
B055H	Pulse input setting warning	The pulse input setting is out of range.	All axes	○	<ul style="list-style-type: none"> <li>Check the set values.</li> </ul>



## 15.4 Warning Code List

Code	Name	Description	Processing	Recovery	Countermeasures
					Check the combination of input mode, input multiplication, and input application.
B056H	Pulse count changed value setting warning	The specified pulse count changed value is out of range.	All axes	○	Check the set values.
B060H	Positioning speed change rejection warning (except for positioning)	The positioning speed change request turned ON while positioning operation was not being performed.	Gear ratio change time for each axis	○	Check when the speed change request turns ON.
B062H	Positioning speed change rejection warning (during J-point operation)	The positioning speed change request turned ON during J-point operation.	Gear ratio change time for each axis	○	
B063H	Positioning speed change rejection warning (for synchronous slave axes)	The positioning speed change request for synchronous slave axes turned ON.	Gear ratio change time for each axis	○	
B064H	Positioning speed change rejection warning (upon completion of positioning output)	The positioning speed change request turned ON when positioning output was completed.	Gear ratio change time for each axis	○	
B065H	Positioning speed change rejection warning (during positioning stop processing)	The positioning speed change request turned ON during each positioning stop processing.	Gear ratio change time for each axis	○	
B066H	Positioning speed change rejection warning (during dwell time processing)	The positioning speed change request turned ON during positioning dwell time processing.	Gear ratio change time for each axis	○	
B070H	Positioning movement	The positioning movement amount change request turned	Gear ratio	○	

## 15.4 Warning Code List

Code	Name	Description	Processing	Recovery	Countermeasures
	amount change rejection warning (except positioning)	ON while a positioning operation was not being performed.	change time for each axis		
B071H	Positioning movement amount change rejection warning (during interpolation operation)	The positioning movement amount change request turned ON during an interpolation operation.	Gear ratio change time for each axis	○	
B072H	Positioning movement amount change rejection warning (during J-point operation)	The positioning movement amount change request turned ON during a J-point operation.	Gear ratio change time for each axis	○	
B073H	Positioning movement amount change rejection warning (for synchronous slave axes)	The positioning movement amount change request for synchronous slave axes turned ON.	Gear ratio change time for each axis	○	
B074H	Positioning movement amount change rejection warning (upon completion of positioning output)	The positioning movement amount change request turned ON after positioning output was completed.	Gear ratio change time for each axis	○	
B075H	Positioning movement amount change rejection warning (during positioning stop processing)	The positioning movement amount change request turned ON during the processing of a positioning stop.	Gear ratio change time for each axis	○	
B076H	Positioning movement amount change rejection warning (during dwell time processing)	The positioning movement amount change request turned ON during positioning dwell time processing.	Gear ratio change time for each axis	○	
B110H	Cam pattern table	Processing in response to a cam pattern table reading request terminated abnormally because	All axes	○	<ul style="list-style-type: none"> <li>Check the set values of the parameters required for reading cam patterns.</li> </ul>

## 15.4 Warning Code List

Code	Name	Description	Processing	Recovery	Countermeasures
	Read failure warning	the set values were invalid or the execution conditions were not satisfied.			<ul style="list-style-type: none"> <li>Check whether there are any synchronized axes. If so, cancel the synchronization before reading the cam pattern tables.</li> </ul> <p>* The detailed cause of the occurrence of this warning is stored in the "cam pattern read result" area of the positioning memory.</p>
B111H	Cam pattern table rewrite failure warning	Processing in response to a cam pattern table rewrite request terminated abnormally because the set values were invalid or the execution conditions were not satisfied.	All axes	○	<ul style="list-style-type: none"> <li>Check the set values of the parameters required for rewriting cam patterns.</li> <li>Check whether there are any synchronized axes. If so, cancel the synchronization before rewriting the cam pattern tables.</li> </ul> <p>* The detailed cause of the occurrence of this warning is stored in the "cam pattern rewrite result" area of the positioning memory.</p>
B304H	Recalculation failure warning	An error occurred when recalculation processing was executed.	Gear ratio change time for each axis	○	<ul style="list-style-type: none"> <li>Check the parameter and interpolation group settings for each axis.</li> </ul>

(MEMO)

# 16 Troubleshooting


---

16.1 What to Do If an Error Occurs.....	16-2
16.1.1 The Unit Cannot Communicate with the Amplifier .....	16-2
16.1.2 The Motor Does Not Rotate or Operate .....	16-2

**16.1 What to Do If an Error Occurs**

**16.1.1 The Unit Cannot Communicate with the Amplifier**


■ **Action**

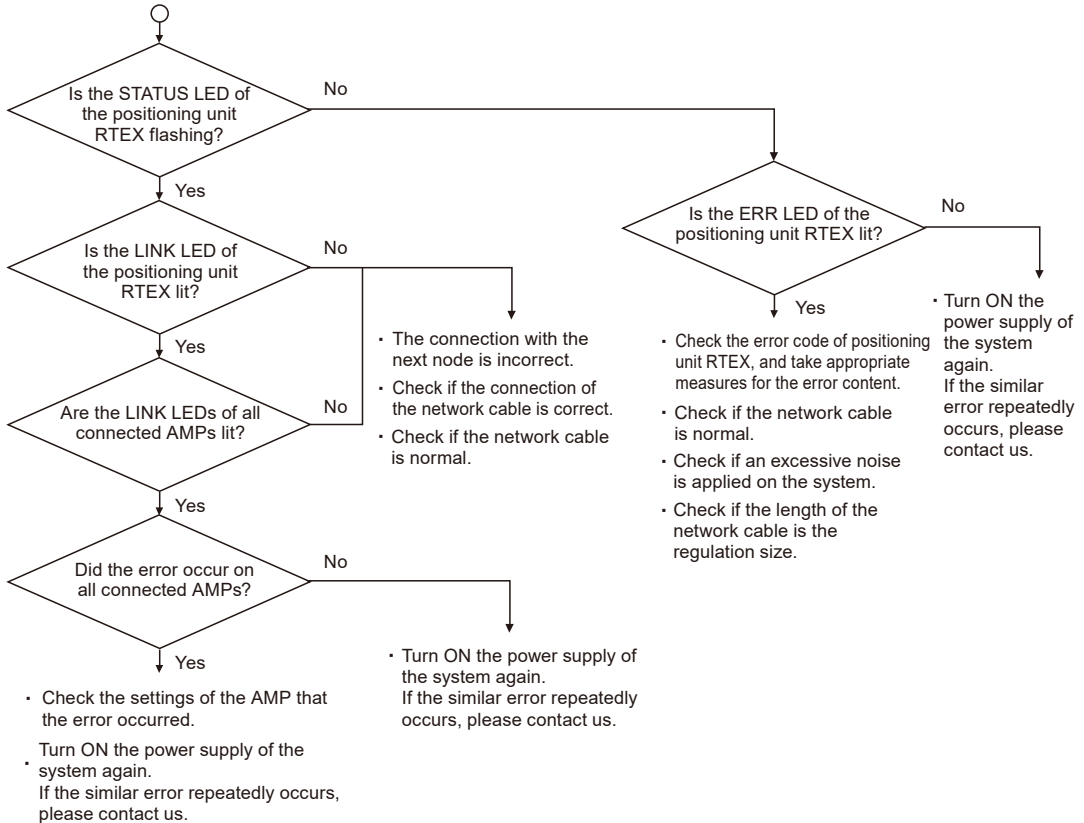

**16.1.2 The Motor Does Not Rotate or Operate**

■ **Action method 1**

Check whether the servo ON request is ON and the amplifier is in a servo lock state. If an attempt is made to start an axis that is not in the servo-locked status, a Servo Not Ready error (3000H) will occur.



■ **Action method 2**

Review the program.

### **Points to check**

1. Check whether the I/O numbers are correct.
2. Check whether the starting contact has been rewritten in the program.
3. Check the input logic of the over limit switch. (In this case, the ERR. LED is lit.)

(MEMO)



# 17 Maintenance and Inspection

---

17.1 Inspection.....17-2

## 17.1 Inspection

---

### 17.1 Inspection

To always use the unit in optimal condition, carry out routine or periodic inspections.

#### ■ Inspection item

Inspection item	Inspection details	Criterion	Related page
Installation status	Attachment to and tightness of DIN rail Unit tightness and rattling	The unit must have been installed properly.	"P.3-2"
Connection status	Connector looseness	The connectors must not be loose.	"P.3-3"
Usage conditions	Ambient temperature, temperature inside panel Ambient humidity, humidity inside panel Atmosphere	0 to +55°C 10 to 95% RH Free of dust and corrosive gases	"P.18-3"

# 18 Specifications

---

18.1 List of Specifications .....	18-3
18.1.1 General Specifications .....	18-3
18.1.2 Network Specifications.....	18-3
18.1.3 Performance Specifications of the Unit.....	18-4
18.1.4 Common Specifications .....	18-4
18.2 List of I/O Memories.....	18-8
18.3 Whole Configuration of Shared Memory Areas .....	18-18
18.4 Details of I/O Control Area in Shared Memory.....	18-22
18.4.1 Configuration of I/O Control Area.....	18-22
18.4.2 Request Area for Each Function [Output Signal (Y)] .....	18-23
18.4.3 Notification Area for Each Function [Input Signal (X)].....	18-26
18.5 Details of Common Area in Shared Memory .....	18-30
18.5.1 Configuration of Common Area .....	18-30
18.5.2 Setting Parameter Control Area .....	18-31
18.5.3 Operating Speed Rate Area.....	18-32
18.5.4 Axis Group Setting Area .....	18-32
18.5.5 Current Value Update Data Area .....	18-34
18.5.6 Torque Limit Area.....	18-36
18.5.7 Positioning control starting table number setting area .....	18-37
18.5.8 Positioning Control Area .....	18-38
18.5.9 Error Notification & Clearing Area .....	18-38
18.5.10 Warning Notification & Clearing Area.....	18-44
18.5.11 Synchronous control monitor area .....	18-50
18.5.12 Latch stop function area.....	18-52
18.5.13 Counter Positioning Function Area .....	18-54
18.5.14 Latch Correction J-Point Control Function Area .....	18-59
18.5.15 Absolute Data Setting Function Area .....	18-60
18.5.16 System Operation Setting Area .....	18-61
18.5.17 Amplifier Monitor & Control Area .....	18-62
18.5.18 Pulse Input Setting Area .....	18-62
18.5.19 Pulse Count Control Area .....	18-64
18.5.20 Pulse Input Monitor Area .....	18-65
18.6 Details of Each Axis information Area in Shared Memory .....	18-66
18.6.1 Configuration of Each Axis Information Area .....	18-66
18.6.2 Each Axis Information & Monitor Area .....	18-67
18.7 Details of Each Axis Setting Area in Shared Memory.....	18-81
18.7.1 Configuration of Each Axis Setting Area.....	18-81
18.7.2 Positioning parameter setting area .....	18-81

18.7.3 Positioning Data Setting Area .....	18-93
18.8 Amplifier Parameter Control Area in Shared Memory.....	18-116
18.8.1 Configuration of Amplifier Parameter Control Area.....	18-116
18.8.2 Amplifier Parameter Control Area .....	18-117
18.9 Synchronous Control Setting Area in Shared Memory .....	18-119
18.9.1 Configuration of Synchronous Control Setting Area .....	18-119
18.9.2 Synchronous Control Setting Area.....	18-119
18.9.3 Details of Synchronous Control Setting Area.....	18-120
18.10 Positioning Operation Change Setting Area in Shared Memory.....	18-137
18.10.1 Configuration of Positioning Operation Change Setting Area.....	18-137
18.10.2 Positioning Speed Change Setting Area.....	18-138
18.10.3 Positioning Movement Amount Change Setting Area.....	18-140
18.11 Cam Pattern Editing Area in Shared Memory .....	18-142
18.11.1 Configuration of Cam Pattern Editing Area .....	18-142
18.11.2 Cam Pattern Setting Area .....	18-143
18.11.3 Cam Pattern Editing Execution Confirmation Area .....	18-146
18.12 Details of Positioning Extension Table Setting Area in Shared Memory .....	18-150
18.12.1 Configuration of Positioning Extended Table Setting Area .....	18-150
18.12.2 Positioning Data Setting Area .....	18-151
18.13 Dimensions .....	18-157
18.13.1 Dimensions .....	18-157

## 18.1 List of Specifications

### 18.1.1 General Specifications

Item	Specifications
Operating ambient temperature	0 to +55°C
Storage ambient temperature	-40 to +70°C
Operating ambient humidity	10 to 95% RH (at +25°C, non-condensing and non-freezing)
Storage ambient humidity	10 to 95% RH (at +25°C, non-condensing and non-freezing)
Dielectric strength (Leakage current: 10 mA)	All of pulse input terminals and RTEX connectors - All of control unit power supply terminals 500 VAC for 1 minute
Insulation resistance	All of pulse input terminals and RTEX connectors - All of control unit power supply terminals 100 MΩ or more (Test voltage: 500 VDC)
Vibration resistance	5 to 8.4 Hz, 3.5-mm single amplitude 8.4 to 150 Hz, acceleration of 9.8 m/s <sup>2</sup> 10 sweeps each in X, Y, and Z directions (1 octave/min.)
Shock resistance	147 m/s <sup>2</sup> , 4 times in the X, Y, Z directions
Noise resistance	1000 V [p-p] with pulse widths of 1 μs and 50 ns (using a noise simulator)
Atmosphere	Free of corrosive gases and excessive dust
Weight	Approx. 80 g

### 18.1.2 Network Specifications

Item	Specifications
Baud rate	100 Mbps
Physical layer	100BASE-TX full duplex mode
Cable	Shielded twisted-pair cable (Category 5e or higher)
Topology	Ring
Insulation	Pulse transformer (with built-in common mode choke)
Connector	8-pin RJ45
Maximum cable length	Between nodes: 60 m, total length: 200 m
Communication cycle	0.5 ms (position command update: 1 ms)
Maximum number of axes	8 axes

## 18.1 List of Specifications

Item	Specifications
Operation command	Position command

### 18.1.3 Performance Specifications of the Unit

Item	Specifications	
	4-axis type	8-axis type
Product number	AFPOHM4N	AFPOHM8N
Number of axes controlled	4 axes per system	8 axes per system
Number of occupied I/O points	128 input points, 128 output points	
Installation limit	Up to two units can be connected as additional units on the left side of the control unit, regardless of the number of axes.	

### 18.1.4 Common Specifications

Item		Specifications	
		4-axis type	8-axis type
Number of axes controlled		Axis 4	8 axes
Interpolation control		2-axis linear interpolation, 2-axis circular interpolation 3-axis linear interpolation, 3-axis spiral interpolation	
Number of occupied inputs/outputs		128 input points, 128 output points	
Automatic operation	Position control	Position specification mode	Absolute (absolute position specification), incremental (relative position specification)
		Units of position specification	Pulses μm (Minimum unit of specification: 0.1 μm or 1 μm) Inches (Minimum unit of specification: 0.00001 inch or 0.0001 inch) Degrees (Minimum unit of specification: 0.1 degree or 1 degree)
		Position command range	Pulses: -2,147,482,624 to +2,147,482,624 pulses μm (0.1 μm): -214,748,262.4 to 214,748,262.4 μm μm (1 μm): -2,147,482,624 to 2,147,482,624 μm Inches (0.00001 inch): -21,474.82624 to 21,474.82624 inches Inches (0.0001 inch): -214,748.2624 to 214,748.2624 inch Degree (0.1 degree): -214,748,262.4 to 214,748,262.4 degrees Degree (1 degree): -2,147,482,624 to 2,147,482,624 degrees
		Speed command range	Pulses: 0 to 2,147,482,624 pps μm: 1 to 2,147,482,624 μm/s Inches: 0.001 to 2,147,482.624 inches/s Degrees: 0.001 to 2,147,482.624 rev/s
		Acceleration/deceleration method	Linear acceleration / deceleration, S-shaped acceleration / deceleration

## 18.1 List of Specifications

Item			Specifications			
			4-axis type	8-axis type		
		Acceleration time	0 to 10,000 ms (Settable by 1 ms)			
		deceleration time	0 to 10,000 ms (Settable by 1 ms)			
		Number of positioning tables	For each axis: 600 tables in standard area and 89 tables in extended area			
Automatic operation	Position control	Control method	Single axis	PTP control (E-point control, C-point control), CP control (P-point control), speed control (J-point control)		
			2-axis interpolation	Linear interpolation	E-point, P-point, and C-point control: Composite speed or long axis speed specification	
				Circular interpolation	E-point, P-point, and C-point control: Center point or pass point specification	
			3-axis interpolation	Linear interpolation	E-point, P-point, and C-point control: Composite speed or long axis speed specification	
		Spiral interpolation		E-point, P-point, and C-point control: Center point or pass point specification		
		Startup time	Standard area: 3 ms or less, extended area: 5 ms or less			
		Others Function	Dwell time	0 to 32,767 ms (settable in 1 ms units)		
Manual operation	JOG operation	Speed command range	Pulses: 0 to 2,147,482,624 pps μm: 1 to 2,147,482,624 μm/s Inches: 0.001 to 2,147,482.624 inches/s Degrees: 0.001 to 2,147,482.624 rev/s			
		Acceleration/deceleration method	Linear acceleration / deceleration, S-shaped acceleration / deceleration			
		Acceleration time	0 to 10,000 ms (Settable by 1 ms)			
		deceleration time	0 to 10,000 ms (Settable by 1 ms)			
	Stop-on-contact torque value for home return	Speed command range	Pulses: 0 to 2,147,482,624 pps μm: 1 to 2,147,482,624 μm/s Inches: 0.001 to 2,147,482.624 inches/s Degrees: 0.001 to 2,147,482.624 rev/s			
		Acceleration/deceleration method	Linear acceleration / deceleration			
		Acceleration time	0 to 10,000 ms (Settable by 1 ms)			
		deceleration time	0 to 10,000 ms (Settable by 1 ms)			
		Return method	DOG method (3 types), limit method (2 types), data set method, Z-phase method, and stop-on-contact method (2 types)			
	Pulser Operation	Speed command range	Operation synchronized with inputs from pulser			

## 18.1 List of Specifications

Item			Specifications	
			4-axis type	8-axis type
Stop Functions	Deceleration stop	deceleration time	Deceleration time of activated operation	
	Emergency stop		0 to 10,000 ms (Settable by 1 ms)	
	Limit stop		0 to 10,000 ms (Settable by 1 ms)	
	Error stop		0 to 10,000 ms (Settable by 1 ms)	
	System stop		Immediate stop (0 ms)	
Synchronization functions	Corresponding functions		Electronic gear, electronic clutch, electronic cam	
	Number of axes	Synchronous group number	4 groups	
		Master axis	Selectable from "Real axes", "Virtual axes", and "Pulse inputs"	
		Slave axis	Max. 8 axes per master axis	
	Electronic gear	Operation setting	Gear ratio setting	
		Operation method	Direct method, linear acceleration / deceleration method	
	Electronic clutch	trigger type	Clutch ON trigger: Contact type Clutch OFF trigger: Contact input, contact input + phase specification Contact method is selectable from edge or level	
		Connection method	Direct method, linear slip method	
	Electronic cam	Cam curve	Selectable from 20 types. Multiple curves can be specified within a phase (0 to 100%).	
		Resolution	1024, 2048, 4096, 8192, 16384, 32768	
No. of cam patterns		4 to 6 (according to resolution)		
Cam pattern setting method		Cam curve method, cam point method (Set up from Configurator PM7-RTEX)		
Other specifications	Soft limit function	Setting range	Pulses: -2,147,482,624 to +2,147,482,624 pulses μm (0.1 μm): -214,748,262.4 to 214,748,262.4 μm μm (1 μm): -2,147,482,624 to 2,147,482,624 μm Inches (0.00001 inch): -21,474.82624 to 21,474.82624 inches Inches (0.0001 inch): -214,748.2624 to 214,748.2624 inch Degree (0.1 degree): -214,748,262.4 to 214,748,262.4 degrees Degree (1 degree): -2,147,482,624 to 2,147,482,624 degrees	
	Monitor judgment	Torque judgement	Selectable from torque judgment disabled, torque judgment enabled (error), and torque judgment enabled (warning) 0.0 to ± 500.0% (settable in 0.1% units)	
		Actual speed judgement	Selectable from actual speed judgment disabled, actual speed judgment enabled (error), and actual speed judgment enabled (warning) 0.0 to ± 10000 rpm (settable in 1 rpm units)	
	Backup		Positioning parameters and positioning data are saved in flash memory. (Batteryless)	
			<ul style="list-style-type: none"> <li>Limit input CWL, CCWL monitor, proximity (DOG) monitor</li> <li>General-purpose input 2 points, general-purpose output 2 points (I/O from amplifier)</li> </ul>	



Item	Specifications	
	4-axis type	8-axis type
	<ul style="list-style-type: none"><li>• Auxiliary output contact, auxiliary output code</li><li>• Torque limit function</li></ul>	

## 18.2 List of I/O Memories

### 18.2 List of I/O Memories

The contacts are indicated as allocated I/O when the positioning unit RTEX is installed in slot number 0.

#### WX10 (slot number 0: WX10, 1: WX18, 2: WX26, 3: WX34)

Allocation of each contact	Target axis	Name	Description
X100	All axes	Link establishment notification	Indicates that a network link was established and notifies that the system started running.
X101	All axes	System restart notification	When this contact is ON, the changed settings will not be reflected unless the power supply is restarted.
X102	-	-	-
X103	All axes	Writing to FROM in progress	Writing to FROM in progress
X104	All axes	Tool operation in progress	Contact that indicates that the tool operation from Configurator PM7-RTEX is in progress.
X105	All axes	Error notification	Turns ON when an error occurs on any axis. Error details can be checked in the error notification & clearing area (addresses H110 to H1A7 in bank 00H).
X106	All axes	Warning notification	Turns ON when a warning occurs in any axis. Warning details can be checked in the warning notification & clearing area (addresses H1A8 to H23F in bank 00H).
X107	All axes	Recalculation completion	If the recalculation request contact (Y107) turns ON, re-creation of the positioning data in the shared memory (standard area) will be started. This contact will turn ON after the re-creation is complete. If the recalculation request contact (Y107) turns ON again, this contact will be turned OFF once. (Note 1): This contact is used only when positioning data has been rewritten using ladder programs.
X108	Axis 1	Each axis connection confirmation	Turns ON when the corresponding axis exists.
X109	Axis 2		
X10A	Axis 3		
X10B	Axis 4		
X10C	Axis 5		
X10D	Axis 6		
X10E	Warning clearing for Axis 7 (virtual)		
X10F	Axis 8 (virtual)		

**WX11 (Slot No. 0: WX11, 1: WX19, 2: WX27, 3: WX35)**

Allocati on of each contact	Target axis	Name	Description
X110	Axis 1	Servo lock	Turns ON when the corresponding axis is in a servo lock state.
X111	Axis 2		
X112	Axis 3		
X113	Axis 4		
X114	Axis 5		
X115	Axis 6		
X116	Warning clearing for Axis 7 (virtual)		
X117	Axis 8 (virtual)	BUSY	Turns ON when the corresponding axis is operating.
X118	Axis 1		
X119	Axis 2		
X11A	Axis 3		
X11B	Axis 4		
X11C	Axis 5		
X11D	Axis 6		
X11E	Warning clearing for Axis 7 (virtual)	X11F	Axis 8 (virtual)
X11F	Axis 8 (virtual)		

**WX12 (Slot No. 0: WX12, 1: WX20, 2: WX28, 3: WX36)**

Allocati on of each contact	Target axis	Name	Description
X120	Axis 1	Operation completion	Turns ON when the operation command for the corresponding axis is completed and the position deviation falls within the specified completion width. Turns ON when execution of all tables is completed for P-point control and C-point control of automatic operation. After this contact turns ON, the ON state continues until the next control is started.
X121	Axis 2		
X122	Axis 3		
X123	Axis 4		
X124	Axis 5		
X125	Axis 6		
X126	Warning clearing for Axis 7 (virtual)		

## 18.2 List of I/O Memories

Allocation of each contact	Target axis	Name	Description
X127	Axis 8 (virtual)		
X128	Axis 1	Home return completion	Turns ON when the home return operation for the corresponding axis is completed. After this contact turns ON, the ON state continues until the next control is started.
X129	Axis 2		
X12A	Axis 3		
X12B	Axis 4		
X12C	Axis 5		
X12D	Axis 6		
X12E	Warning clearing for Axis 7 (virtual)		
X12F	Axis 8 (virtual)		

### WX13 (Slot No. 0: WX13, 1: WX21, 2: WX29, 3: WX37)

Allocation of each contact	Target axis	Name	Description
X130	Axis 1	Near home	Contact for monitoring the near home input connected to the corresponding amplifier
X131	Axis 2		
X132	Axis 3		
X133	Axis 4		
X134	Axis 5		
X135	Axis 6		
X136	Warning clearing for Axis 7 (virtual)		
X137	Axis 8 (virtual)		
X138	Axis 1	Auxiliary contact	Turns ON when the corresponding positioning table of the corresponding axis is executed. To configure the setting to enable and disable the auxiliary contact, use Configurator PM7-RTEX or directly write to the shared memory.
X139	Axis 2		
X13A	Axis 3		
X13B	Axis 4		
X13C	Axis 5		
X13D	Axis 6		
X13E	Warning clearing for Axis 7 (virtual)		

Allocation of each contact	Target axis	Name	Description
X13F	Axis 8 (virtual)		

**WX14 (Slot No. 0: WX14, 1: WX22, 2: WX30, 3: WX38)**

Allocation of each contact	Target axis	Name	Description
X140	Axis 1	Limit +	<p>Contact for monitoring the limit + and limit - inputs connected to the corresponding amplifier.</p> <p>During positioning operation, JOG operation, or pulser operation, deceleration stop is performed when a limit input that is located further in the operating direction turns ON.</p> <p>The deceleration stop time during limit input can be changed in the shared memory or Configurator PM7-RTEX.</p> <p>This is used as a contact that reverses the motor automatically when home return is performed.</p>
X141		Limit -	
X142	Axis 2	Limit +	
X143		Limit -	
X144	Axis 3	Limit +	
X145		Limit -	
X146	Axis 4	Limit +	
X147		Limit -	
X148	Axis 5	Limit +	
X149		Limit -	
X14A	Axis 6	Limit +	
X14B		Limit -	
X14C	Warning clearing for Axis 7 (virtual)	Limit +	
X14D		Limit -	
X14E	Axis 8 (virtual)	Limit +	
X14F		Limit -	

**WX15 (Slot No. 0: WX15, 1: WX23, 2: WX31, 3: WX39)**

Allocation of each contact	Target axis	Name	Description
X150	Axis 1	Synchronization setting completion	<p>After the settings of synchronous control are changed with the program, synchronization settings in the unit are changed when the synchronization setting request contact (Y150 to Y157) is turned ON. The contact turns ON upon completion of the setting changes. This contact turns OFF when the synchronization setting request contact (Y150 to Y157) is turned OFF.</p>
X151	Axis 2		
X152	Axis 3		
X153	Axis 4		
X154	Axis 5		
X155	Axis 6		
X156	Warning clearing for Axis 7 (virtual)		

## 18.2 List of I/O Memories

Allocation of each contact	Target axis	Name	Description
X157	Axis 8 (virtual)		
X158	Axis 1	Synchronization cancellation in-progress notification	Turns ON when synchronous operation is canceled by turning ON the synchronization contact cancellation contact (Y158 to Y15F). Synchronous operation cannot be executed on the axes for which this contact is turned ON.
X159	Axis 2		
X15A	Axis 3		
X15B	Axis 4		
X15C	Axis 5		
X15D	Axis 6		
X15E	Warning clearing for Axis 7 (virtual)		
X15F	Axis 8 (virtual)		

### WX16 (Slot No. 0: WX16, 1: WX24, 2: WX32, 3: WX40)

Allocation of each contact	Target axis	Name	Description
X160	Axis 1	Slave axis clutch operation notification	The clutch starts operating when the slave axis clutch ON request contact (Y160 to Y167) or clutch OFF request contact (Y168 to Y16F) turns ON. After the clutch operation is completed, the contact for the corresponding axis turns ON.
X161	Axis 2		
X162	Axis 3		
X163	Axis 4		
X164	Axis 5		
X165	Axis 6		
X166	Warning clearing for Axis 7 (virtual)		
X167	Axis 8 (virtual)		
X168	-	-	-
X169	-	-	-
X16A	-	-	-
X16B	-	-	-
X16C	-	-	-
X16D	-	-	-
X16E	-	-	-
X16F	-	-	-

**WY10 (Slot No. 0: WY10, 1: WY18, 2: WY26, 3: WY34)**

Allocation of each contact	Target axis	Name	Description
Y100	All axes	System stop	Contact for requesting system stoppage. When it turns ON, all axes stop at zero deceleration time.
Y101	-	-	-
Y102	-	-	-
Y103	-	-	-
Y104	-	-	-
Y105	All axes	Error clearing request	Requests clearing of errors with all the connected amplifiers. When this signal turns ON, error recovery processing is performed and error logs are cleared. (Note 1): Recovery from unrecoverable errors is not possible even if this signal turns ON.
Y106	All axes	Warning clearing request	Requests clearing of warnings with all the connected amplifiers. The warning logs are cleared by turning ON this signal.
Y107	All axes	Recalculation request	Turn ON this signal when each piece of positioning data (in the standard area) in the shared memory is changed. By turning ON this signal, positioning data after the recalculation start table number stored in the shared memory can be re-created and made executable. When re-creation of positioning data is complete, the recalculation completion contact (X107) turns ON. (Note 1): This contact is used only when positioning data has been rewritten using ladder programs.
Y108	Axis 1	Servo ON request	Requests servo lock for the corresponding amplifier. Servo lock state processing is requested by the ON edge of this contact. When RUN mode is switched to PROG mode while the axis is in a servo lock state, a servo free state does not occur automatically. To cause a servo free state, turn ON the servo OFF request contact. (The operation is the edge type.)
Y109	Axis 2		
Y10A	Axis 3		
Y10B	Axis 4		
Y10C	Axis 5		
Y10D	Axis 6		
Y10E	Warning clearing for Axis 7 (virtual)		
Y10F	Axis 8 (virtual)		

**WY11 (Slot No. 0: WY11, 1: WY19, 2: WY27, 3: WY35)**

Allocation of each contact	Target axis	Name	Description
Y110	Axis 1	Servo OFF request	Requests a servo free state for the corresponding amplifier. Servo free state processing is requested by the ON edge of this contact.
Y111	Axis 2		

## 18.2 List of I/O Memories

Allocation of each contact	Target axis	Name	Description
Y112	Axis 3		(The operation is the edge type.)
Y113	Axis 4		
Y114	Axis 5		
Y115	Axis 6		
Y116	Warning clearing for Axis 7 (virtual)		
Y117	Axis 8 (virtual)		
Y118	Axis 1		
Y119	Axis 2		
Y11A	Axis 3		
Y11B	Axis 4		
Y11C	Axis 5		
Y11D	Axis 6		
Y11E	Warning clearing for Axis 7 (virtual)		
Y11F	Axis 8 (virtual)		

### WY12 (Slot No. 0: WY12, 1: WY20, 2: WY28, 3: WY36)

Allocation of each contact	Target axis	Name	Description
Y120	Axis 1	Home return startup	Requests home return for the corresponding amplifier. The direction, pattern, and other items of home return are set in the home return operation setting area in the shared memory or by Configurator PM7-RTEX. (The operation is the edge type.)
Y121	Axis 2		
Y122	Axis 3		
Y123	Axis 4		
Y124	Axis 5		
Y125	Axis 6		
Y126	Warning clearing for Axis 7 (virtual)		
Y127	Axis 8 (virtual)		
Y128	Axis 1	J-point positioning start contact	Turning ON this signal during the J-point operation for the corresponding axis terminates the J-point operation and shifts to the processing for the next table.
Y129	Axis 2		



Allocation of each contact	Target axis	Name	Description
Y12A	Axis 3		(The operation is the edge type.)
Y12B	Axis 4		
Y12C	Axis 5		
Y12D	Axis 6		
Y12E	Warning clearing for Axis 7 (virtual)		
Y12F	Axis 8 (virtual)		

**WY13 (Slot No. 0: WY13, 1: WY21, 2: WY29, 3: WY37)**

Allocation of each contact	Target axis	Name	Description
Y130	Axis 1	Forward JOG	Requests JOG operation for the corresponding amplifier. Acceleration time and other settings are specified in the JOG operation settings in the shared memory or by Configurator PM7-RTEX. (The operation is the level type.)
Y131		Reverse JOG	
Y132	Axis 2	Forward JOG	
Y133		Reverse JOG	
Y134	Axis 3	Forward JOG	
Y135		Reverse JOG	
Y136	Axis 4	Forward JOG	
Y137		Reverse JOG	
Y138	Axis 5	Forward JOG	
Y139		Reverse JOG	
Y13A	Axis 6	Forward JOG	
Y13B		Reverse JOG	
Y13C	Warning clearing for Axis 7 (virtual)	Forward JOG	
Y13D		Reverse JOG	
Y13E	Axis 8 (virtual)	Forward JOG	
Y13F		Reverse JOG	

**WY14 (Slot No. 0: WY14, 1: WY22, 2: WY30, 3: WY38)**

Allocation of each contact	Target axis	Name	Description
Y140	Axis 1	Emergency stop	Requests emergency stop for the corresponding amplifier.
Y141	Axis 2		

## 18.2 List of I/O Memories

Allocation of each contact	Target axis	Name	Description
Y142	Axis 3		The deceleration time during emergency stop is specified using Configurator PM7-RTEX or the emergency stop settings in the shared memory. (The operation is the level type.) (Note 1): The deviation counter cannot be cleared.
Y143	Axis 4		
Y144	Axis 5		
Y145	Axis 6		
Y146	Warning clearing for Axis 7 (virtual)		
Y147	Axis 8 (virtual)		
Y148	Axis 1	Deceleration stop	Requests deceleration stop for the corresponding amplifier. The deceleration time during deceleration stop is specified using Configurator PM7-RTEX or the deceleration stop settings in the shared memory. (The operation is the level type.) (Note 1): The deviation counter cannot be cleared.
Y149	Axis 2		
Y14A	Axis 3		
Y14B	Axis 4		
Y14C	Axis 5		
Y14D	Axis 6		
Y14E	Warning clearing for Axis 7 (virtual)		
Y14F	Axis 8 (virtual)		

### WY15 (Slot No. 0: WY15, 1: WY23, 2: WY31, 3: WY39)

Allocation of each contact	Target axis	Name	Description
Y150	Axis 1	Synchronization setting request	Turn ON this contact after changing the synchronous operation settings. Turn ON this contact when reflecting the setting changes in the synchronous control common area of the share memory. This flag is an edge trigger flag.
Y151	Axis 2		
Y152	Axis 3		
Y153	Axis 4		
Y154	Axis 5		
Y155	Axis 6		
Y156	Warning clearing for Axis 7 (virtual)		
Y157	Axis 8 (virtual)	Synchronization cancellation request	Turns ON the contact for the axis for which synchronous operation is to be canceled.
Y158	Axis 1		
Y159	Axis 2		

Allocation of each contact	Target axis	Name	Description
Y15A	Axis 3		<p>The unit does not perform synchronous operation on the axis for which this contact is turned ON.</p> <p>Turn ON this contact to cancel the synchronous state temporarily during synchronous control. To set a synchronous state, turn OFF this contact.</p>
Y15B	Axis 4		
Y15C	Axis 5		
Y15D	Axis 6		
Y15E	Warning clearing for Axis 7 (virtual)		
Y15F	Axis 8 (virtual)		

**WY16 (Slot No. 0: WY16, 1: WY24, 2: WY32, 3: WY40)**

Allocation of each contact	Target axis	Name	Description
Y160	Axis 1	Slave axis clutch ON request	<p>Clutch ON operation is started by turning ON the contact for the corresponding axis during synchronous operation.</p> <p>Only axes that use a clutch are started.</p> <p>(Set the operation to level type, rising edge, or falling edge.)</p>
Y161	Axis 2		
Y162	Axis 3		
Y163	Axis 4		
Y164	Axis 5		
Y165	Axis 6		
Y166	Warning clearing for Axis 7 (virtual)		
Y167	Axis 8 (virtual)	Slave axis clutch OFF request	<p>Clutch OFF operation is started by turning ON the contact for the corresponding axis during synchronous operation.</p> <p>Only axes that use a clutch are started.</p> <p>(Set the operation to rising edge or falling edge.)</p> <p>These signals will be disabled while the slave axis clutch ON request signal is set to level type.</p>
Y168	Axis 1		
Y169	Axis 2		
Y16A	Axis 3		
Y16B	Axis 4		
Y16C	Axis 5		
Y16D	Axis 6		
Y16E	Warning clearing for Axis 7 (virtual)	Slave axis clutch OFF request	
Y16F	Axis 8 (virtual)		

## 18.3 Whole Configuration of Shared Memory Areas

### 18.3 Whole Configuration of Shared Memory Areas

The positioning unit RTEX uses the shared memory to manage the set values of positioning parameters and positioning data.

All set values are set using programming tool software or user programs.

The following table shows the contents of the shared memory.

Name of each area	Shared memory Bank	End of offset address	Individual name of each area	
I/O control area	H00	H060 to H073	Request area for each function [Output signal (Y)]	
		H074 to H07F	Notification area for each function [Input signal (X)]	
H080 to H087		Setting/positioning parameter control area		
H088		Operating Speed Rate Area		
H0B0 to H0BF		Axis Group Setting Area		
H0C0 to H0D7		Current Value Update Data Area		
H0D8 to H0EF		Torque Limit Area		
H100 to H107		Positioning control starting table number setting area		
H108 to H10F		Positioning Control Area		
H110 to H1A7		Error Notification & Clearing Area		
H1A8 to H23F		Warning Notification & Clearing Area		
H2B0 to H2BF		Synchronous control monitor area		
H2C0 to H2CF		Latch stop function area		
H2D0 to H31F		Counter Positioning Function Area		
H320 to H32F		Latch Correction J-Point Control Function Area		
H330 to H33F		Absolute Data Setting Function Area		
H340 to H34F		Virtual Full-Close Mode Function Area		
H389		System Operation Setting Area		
H390 to H395		Amplifier Monitor & Control Area		
H3A0 to H3A7		Pulse Input Setting Area		
H3A8 to H3BF	Pulse Count Control Area			
H3C0 to H3CF	Pulse Input Monitor Area			
Each axis information monitor area	H01	H000 to H03F	Axis 1	Each Axis Information & Monitor Area
		H040 to H07F	Axis 2	Each Axis Information & Monitor Area
		H080 to H0BF	Axis 3	Each Axis Information & Monitor Area
		H0C0 to H0FF	Axis 4	Each Axis Information & Monitor Area
		H100 to H13F	Axis 5	Each Axis Information & Monitor Area
		H140 to H17F	Axis 6	Each Axis Information & Monitor Area
		H180 to H1BF	Warning clearing for Axis 7 (virtual)	Each Axis Information & Monitor Area

## 18.3 Whole Configuration of Shared Memory Areas

Name of each area	Shared memory Bank	End of offset address	Individual name of each area		
		H1C0 to H1FF	Axis 8 (virtual)	Each Axis Information & Monitor Area	
Each axis setting area	H02 to H0B	H000 to H04F	Axis 1	Positioning parameter setting area	
		H050 to H3FF H000 to H3FF		Positioning Data Setting Area (600 tables in the standard area and 25 tables in the extended area)	
	H0C to H15	H000 to H04F	Axis 2	Positioning parameter setting area	
		H050 to H3FF H000 to H3FF		Positioning Data Setting Area (600 tables in the standard area and 25 tables in the extended area)	
	H16 to H1F	H000 to H04F	Axis 3	Positioning parameter setting area	
		H050 to H3FF H000 to H3FF		Positioning Data Setting Area (600 tables in the standard area and 25 tables in the extended area)	
	H20 to H29	H000 to H04F	Axis 4	Positioning parameter setting area	
		H050 to H3FF H000 to H3FF		Positioning Data Setting Area (600 tables in the standard area and 25 tables in the extended area)	
	H2A to H33	H000 to H04F	Axis 5	Positioning parameter setting area	
		H050 to H3FF H000 to H3FF		Positioning Data Setting Area (600 tables in the standard area and 25 tables in the extended area)	
	H34 to H3D	H000 to H04F	Axis 6	Positioning parameter setting area	
		H050 to H3FF H000 to H3FF		Positioning Data Setting Area (600 tables in the standard area and 25 tables in the extended area)	
	H3E to H47	H000 to H04F	Warning clearing for Axis 7 (virtual)	Positioning parameter setting area	
		H050 to H3FF H000 to H3FF		Positioning Data Setting Area (600 tables in the standard area and 25 tables in the extended area)	
	H48 to H51	H000 to H04F	Axis 8 (virtual)	Positioning parameter setting area	
		H050 to H3FF H000 to H3FF		Positioning Data Setting Area (600 tables in the standard area and 25 tables in the extended area)	
	AMP parameter control area	H52	H000 to H02F	Amplifier parameter setting area	
	Synchronous Control Setting Area	H58	H000 to H00F	Axis 1	Synchronous control common setting area
H010 to H01F			Electronic gear setting area		
H020 to H04F			Clutch setting area		
H050 to H06F			Electronic cam setting area		
H070 to H07F			Axis 2	Synchronous control common setting area	
H080 to H08F				Electronic gear setting area	

## 18.3 Whole Configuration of Shared Memory Areas

Name of each area	Shared memory Bank	End of offset address	Individual name of each area	
		H090 to H0BF		Clutch setting area
		H0C0 to H0DF		Electronic cam setting area
		H0E0 to H0EF	Axis 3	Synchronous control common setting area
		H0F0 to H0FF		Electronic gear setting area
		H100 to H12F		Clutch setting area
		H130 to H14F		Electronic cam setting area
		H150 to H15F	Axis 4	Synchronous control common setting area
		H160 to H16F		Electronic gear setting area
		H170 to H19F		Clutch setting area
		H1A0 to H1BF		Electronic cam setting area
		H1C0 to H1CF	Axis 5	Synchronous control common setting area
		H1D0 to H1DF		Electronic gear setting area
		H1E0 to H20F		Clutch setting area
		H210 to H22F		Electronic cam setting area
		H230 to H23F	Axis 6	Synchronous control common setting area
		H240 to H24F		Electronic gear setting area
		H250 to H27F		Clutch setting area
		H280 to H29F		Electronic cam setting area
		H2A0 to H2AF	Warning clearing for Axis 7 (virtual)	Synchronous control common setting area
		H2B0 to H2BF		Electronic gear setting area
		H2C0 to H2EF		Clutch setting area
		H2F0 to H30F		Electronic cam setting area
		H310 to H31F	Axis 8 (virtual)	Synchronous control common setting area
		H320 to H32F		Electronic gear setting area
H330 to H35F	Clutch setting area			
H360 to H37F	Electronic cam setting area			
Positioning operation change setting area	H5F	H000 to H00F	Axis 1	Speed change setting area Movement amount change setting area
		H010 to H01F	Axis 2	Speed change setting area Movement amount change setting area
		H020 to H02F	Axis 3	Speed change setting area Movement amount change setting area
		H030 to H03F	Axis 4	Speed change setting area Movement amount change setting area
		H040 to H04F	Axis 5	Speed change setting area Movement amount change setting area
		H050 to H05F	Axis 6	Speed change setting area

## 18.3 Whole Configuration of Shared Memory Areas

Name of each area	Shared memory Bank	End of offset address	Individual name of each area	
				Movement amount change setting area
		H060 to H06F	Warning clearing for Axis 7 (virtual)	Speed change setting area Movement amount change setting area
		H070 to H07F	Axis 8 (virtual)	Speed change setting area Movement amount change setting area
Cam pattern editing Area	H60	H000 to H05F	Cam Pattern Setting Area Cam Pattern Editing Execution Confirmation Area	
positioning Extended table settings Area	H61	H000 to H3FF	Axis 1	Positioning extension table setting area (For 64 extension tables)
	H62	H000 to H3FF	Axis 2	Positioning extension table setting area (For 64 extension tables)
	H63	H000 to H3FF	Axis 3	Positioning extension table setting area (For 64 extension tables)
	H64	H000 to H3FF	Axis 4	Positioning extension table setting area (For 64 extension tables)
	H65	H000 to H3FF	Axis 5	Positioning extension table setting area (For 64 extension tables)
	H66	H000 to H3FF	Axis 6	Positioning extension table setting area (For 64 extension tables)
	H67	H000 to H3FF	Warning clearing for Axis 7 (virtual)	Positioning extension table setting area (For 64 extension tables)
	H68	H000 to H3FF	Axis 8 (virtual)	Positioning extension table setting area (For 64 extension tables)

## 18.4 Details of I/O Control Area in Shared Memory

### 18.4 Details of I/O Control Area in Shared Memory

#### 18.4.1 Configuration of I/O Control Area

Whole map of shared memory			
00H_000H		96 words	
00H_060H	I/O control area	32 words	00H_060H Request area for each function [Output signal (Y)] 20 words
00H_07FH			00H_074H Request area for each function [Output signal (X)] 12 words
00H_080H	Common area		
		896 words	
00H_3CFH			
01H_000H	Each axis information area		
		512 words	
01H_1FFH			
02H_000H	Each axis setting area		
		81,920 words	
51H_3FFH			
52H_000H	Amplifier parameter control area	48 words	
52H_02FH			
53H_000H	System area		
		5,120 words	
58H_000H	Synchronous control setting area		
		896 words	
58H_37FH			
59H_000H	System area		
		7,168 words	
5FH_000H	Positioning operation change setting area		
		128 words	
5FH_07FH			
60H_000H	Cam pattern editing area		
		96 words	
60H_05FH			
61H_000H	Positioning extension table setting area		
		8,192 words	
68H_3FFH			



**18.4.2 Request Area for Each Function [Output Signal (Y)]**

Bank	Offset address	Name	Default	Description																																																					
00H	060H	General-purpose output 1/2	0000H	<p>The ON/OFF states of RTEX operation outputs (EX-OUT1/EX-OUT2), which are external output signals connected to the amplifier, are output as control signals.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td rowspan="2">Axis 1</td> <td>General-purpose output 1</td> <td>0</td> </tr> <tr> <td>1</td> <td>General-purpose output 2</td> <td>0</td> </tr> <tr> <td>2</td> <td rowspan="2">Axis 2</td> <td>General-purpose output 1</td> <td>0</td> </tr> <tr> <td>3</td> <td>General-purpose output 2</td> <td>0</td> </tr> <tr> <td>4</td> <td rowspan="2">Axis 3</td> <td>General-purpose output 1</td> <td>0</td> </tr> <tr> <td>5</td> <td>General-purpose output 2</td> <td>0</td> </tr> <tr> <td>6</td> <td rowspan="2">Axis 4</td> <td>General-purpose output 1</td> <td>0</td> </tr> <tr> <td>7</td> <td>General-purpose output 2</td> <td>0</td> </tr> <tr> <td>8</td> <td rowspan="2">Axis 5</td> <td>General-purpose output 1</td> <td>0</td> </tr> <tr> <td>9</td> <td>General-purpose output 2</td> <td>0</td> </tr> <tr> <td>10</td> <td rowspan="2">Axis 6</td> <td>General-purpose output 1</td> <td>0</td> </tr> <tr> <td>11</td> <td>General-purpose output 2</td> <td>0</td> </tr> <tr> <td>12</td> <td rowspan="2">Axis 7</td> <td>General-purpose output 1</td> <td>0</td> </tr> <tr> <td>13</td> <td>General-purpose output 2</td> <td>0</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Axis 1	General-purpose output 1	0	1	General-purpose output 2	0	2	Axis 2	General-purpose output 1	0	3	General-purpose output 2	0	4	Axis 3	General-purpose output 1	0	5	General-purpose output 2	0	6	Axis 4	General-purpose output 1	0	7	General-purpose output 2	0	8	Axis 5	General-purpose output 1	0	9	General-purpose output 2	0	10	Axis 6	General-purpose output 1	0	11	General-purpose output 2	0	12	Axis 7	General-purpose output 1	0	13	General-purpose output 2	0
				Bit	Name	Default	Description																																																		
				0	Axis 1	General-purpose output 1	0																																																		
				1		General-purpose output 2	0																																																		
				2	Axis 2	General-purpose output 1	0																																																		
				3		General-purpose output 2	0																																																		
				4	Axis 3	General-purpose output 1	0																																																		
				5		General-purpose output 2	0																																																		
				6	Axis 4	General-purpose output 1	0																																																		
				7		General-purpose output 2	0																																																		
				8	Axis 5	General-purpose output 1	0																																																		
				9		General-purpose output 2	0																																																		
				10	Axis 6	General-purpose output 1	0																																																		
				11		General-purpose output 2	0																																																		
12	Axis 7	General-purpose output 1	0																																																						
13		General-purpose output 2	0																																																						

0: OFF  
1: ON

## 18.4 Details of I/O Control Area in Shared Memory

Bank	Offset address	Name	Default	Description																							
				<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>14</td> <td rowspan="2">8 axes</td> <td>General-purpose output 1</td> <td>0</td> </tr> <tr> <td>15</td> <td>General-purpose output 2</td> <td>0</td> </tr> </tbody> </table> <p>General-purpose output 1: EX-OUT1/General-purpose output 2: EX-OUT2</p>	Bit	Name	Default	Description	14	8 axes	General-purpose output 1	0	15	General-purpose output 2	0												
Bit	Name	Default	Description																								
14	8 axes	General-purpose output 1	0																								
15		General-purpose output 2	0																								
	061H	Axis group setting change request/ Complete	0000H	<p>After the axis group settings are changed, this bit is set to "1".</p> <p>After axis group change processing is completed, the positioning unit RTEX automatically resets the bit to 0.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Axis group setting change request</td> <td>0</td> <td>0: No change 1: Axis group setting change request</td> </tr> <tr> <td>15 to 1</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Axis group setting change request	0	0: No change 1: Axis group setting change request	15 to 1	-	-	-											
Bit	Name	Default	Description																								
0	Axis group setting change request	0	0: No change 1: Axis group setting change request																								
15 to 1	-	-	-																								
00H	062H	J-point speed change request	0000H	<p>The speed changes to the target speed in the specified acceleration/deceleration time or pattern only when this bit changes from 0 to 1 while the axis corresponding to each bit is performing a positioning (J-point) operation.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Axis 1 J-point speed change request</td> <td>0</td> <td rowspan="6">0: No speed change 1: Target axis J-point speed change request</td> </tr> <tr> <td>1</td> <td>Axis 2 J-point speed change request</td> <td>0</td> </tr> <tr> <td>2</td> <td>Axis 3 J-point speed change request</td> <td>0</td> </tr> <tr> <td>3</td> <td>Axis 4 J-point speed change request</td> <td>0</td> </tr> <tr> <td>4</td> <td>Axis 5 J-point speed change request</td> <td>0</td> </tr> <tr> <td>5</td> <td>Axis 6 J-point speed change request</td> <td>0</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Axis 1 J-point speed change request	0	0: No speed change 1: Target axis J-point speed change request	1	Axis 2 J-point speed change request	0	2	Axis 3 J-point speed change request	0	3	Axis 4 J-point speed change request	0	4	Axis 5 J-point speed change request	0	5	Axis 6 J-point speed change request	0
Bit	Name	Default	Description																								
0	Axis 1 J-point speed change request	0	0: No speed change 1: Target axis J-point speed change request																								
1	Axis 2 J-point speed change request	0																									
2	Axis 3 J-point speed change request	0																									
3	Axis 4 J-point speed change request	0																									
4	Axis 5 J-point speed change request	0																									
5	Axis 6 J-point speed change request	0																									

## 18.4 Details of I/O Control Area in Shared Memory

Bank	Offset address	Name	Default	Description			
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
				6	Warning clearing for Axis 7 (virtual) J-point speed change request	0	
7	Axis 8 (virtual) J-point speed change request	0					
15 to 8	-	-	-				
063H	063H	Pulser operation enabled	0000H	When the bit corresponding to each axis is set to "1", a request to permit pulser operation is issued.			
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
				0	Axis 1 Pulser operation enabled	0	0: Pulser operation disabled 1: Pulser operation enable request
				1	Axis 2 Pulser operation enabled	0	
				2	Axis 3 Pulser operation enabled	0	
				3	Axis 4 Pulser operation enabled	0	
				4	Axis 5 Pulser operation enabled	0	
				5	Axis 6 Pulser operation enabled	0	
				6	Warning clearing for Axis 7 (virtual) Pulser operation enabled	0	
				7	Axis 8 (virtual) Pulser operation enabled	0	
				15 to 8	-	-	
00H	064H	Slave axis gear ratio change request	0000H	The gear ratio is changed to the specified ratio only when this bit for the axis corresponding to each bit changes from 0 to 1 during synchronous operation.			

## 18.4 Details of I/O Control Area in Shared Memory

Bank	Offset address	Name	Default	Description			
				Bit	Name	Default	Description
				0	Gear ratio change notification for Axis-1 slave axis	0	0: No change to gear ratio 1: Slave axis gear ratio change request
				1	Gear ratio change notification for Axis-2 slave axis	0	
				2	Gear ratio change notification for Axis-3 slave axis	0	
				3	Gear ratio change notification for Axis-4 slave axis	0	
				4	Gear ratio change notification for Axis-5 slave axis	0	
				5	Gear ratio change notification for Axis-6 slave axis	0	
				6	Gear ratio change notification for Axis-7 slave axis (virtual)	0	
				7	Gear ratio change notification for Axis-8 slave axis (virtual)	0	
				15 to 8	-	-	
	065H to 073H	-	-	-			

### 18.4.3 Notification Area for Each Function [Input Signal (X)]

Bank	Offset address	Name	Default	Description
00H	074H	General-purpose output 1/2	0000H	This area stores information for general-purpose monitor inputs (SI-MON1/SI-MON2), which are the external input signals connected to the amplifier.

## 18.4 Details of I/O Control Area in Shared Memory

Bank	Offset address	Name	Default	Description				
				Bit	Name	Default	Description	
				0	Axis 1	General-purpose input 1	0	0: OFF 1: ON
				1		General-purpose input 2	0	
				2	Axis 2	General-purpose input 1	0	
				3		General-purpose input 2	0	
				4	Axis 3	General-purpose input 1	0	
				5		General-purpose input 2	0	
				6	Axis 4	General-purpose input 1	0	
				7		General-purpose input 2	0	
				8	Axis 5	General-purpose input 1	0	
				9		General-purpose input 2	0	
				10	Axis 6	General-purpose input 1	0	
				11		General-purpose input 2	0	
				12	Axis 7	General-purpose input 1	0	
				13		General-purpose input 2	0	
				14	8 axes	General-purpose input 1	0	
				15		General-purpose input 2	0	

## 18.4 Details of I/O Control Area in Shared Memory

Bank	Offset address	Name	Default	Description																																	
				General-purpose input 1: SI-MON1/General-purpose input 2: SI-MON2																																	
	075H	In-position	0000H	<p>Turns ON when the position deviation of the corresponding axis is within the in-position range specified in the amplifier.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Axis 1 in-position</td> <td>0</td> <td rowspan="8">0: Deviation counter is outside the in-position range. 1: Deviation counter is within the in-position range.</td> </tr> <tr> <td>1</td> <td>Axis 2 in-position</td> <td>0</td> </tr> <tr> <td>2</td> <td>Axis 3 in-position</td> <td>0</td> </tr> <tr> <td>3</td> <td>Axis 4 in-position</td> <td>0</td> </tr> <tr> <td>4</td> <td>Axis 5 in-position</td> <td>0</td> </tr> <tr> <td>5</td> <td>Axis 6 in-position</td> <td>0</td> </tr> <tr> <td>6</td> <td>Axis 7 in-position</td> <td>0</td> </tr> <tr> <td>7</td> <td>Axis 8 in-position</td> <td>0</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Axis 1 in-position	0	0: Deviation counter is outside the in-position range. 1: Deviation counter is within the in-position range.	1	Axis 2 in-position	0	2	Axis 3 in-position	0	3	Axis 4 in-position	0	4	Axis 5 in-position	0	5	Axis 6 in-position	0	6	Axis 7 in-position	0	7	Axis 8 in-position	0	15 to 8	-	-	-
Bit	Name	Default	Description																																		
0	Axis 1 in-position	0	0: Deviation counter is outside the in-position range. 1: Deviation counter is within the in-position range.																																		
1	Axis 2 in-position	0																																			
2	Axis 3 in-position	0																																			
3	Axis 4 in-position	0																																			
4	Axis 5 in-position	0																																			
5	Axis 6 in-position	0																																			
6	Axis 7 in-position	0																																			
7	Axis 8 in-position	0																																			
15 to 8	-	-	-																																		
00H	076H	Slave axis gear ratio change status notification	0000H	<p>Changes the gear ratio according to the slave axis change request (offset address 064H in bank 00H). After the gear ratio is changed, the bit corresponding to the axis is set to 1.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Gear ratio change notification for Axis-1 slave axis</td> <td>0</td> <td rowspan="6">0: No change to gear ratio 1: Slave axis gear ratio change complete</td> </tr> <tr> <td>1</td> <td>Gear ratio change notification for Axis-2 slave axis</td> <td>0</td> </tr> <tr> <td>2</td> <td>Gear ratio change notification for Axis-3 slave axis</td> <td>0</td> </tr> <tr> <td>3</td> <td>Gear ratio change notification for Axis-4 slave axis</td> <td>0</td> </tr> <tr> <td>4</td> <td>Gear ratio change notification for Axis-5 slave axis</td> <td>0</td> </tr> <tr> <td>5</td> <td>Gear ratio change notification</td> <td>0</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Gear ratio change notification for Axis-1 slave axis	0	0: No change to gear ratio 1: Slave axis gear ratio change complete	1	Gear ratio change notification for Axis-2 slave axis	0	2	Gear ratio change notification for Axis-3 slave axis	0	3	Gear ratio change notification for Axis-4 slave axis	0	4	Gear ratio change notification for Axis-5 slave axis	0	5	Gear ratio change notification	0										
Bit	Name	Default	Description																																		
0	Gear ratio change notification for Axis-1 slave axis	0	0: No change to gear ratio 1: Slave axis gear ratio change complete																																		
1	Gear ratio change notification for Axis-2 slave axis	0																																			
2	Gear ratio change notification for Axis-3 slave axis	0																																			
3	Gear ratio change notification for Axis-4 slave axis	0																																			
4	Gear ratio change notification for Axis-5 slave axis	0																																			
5	Gear ratio change notification	0																																			

## 18.4 Details of I/O Control Area in Shared Memory

Bank	Offset address	Name	Default	Description			
				Bit	Name	Default	Description
					for Axis-6 slave axis		
				6	Gear ratio change notification for Axis-7 slave axis (virtual)	0	
				7	Gear ratio change notification for Axis-8 slave axis (virtual)	0	
				15 to 8	-	-	
	077H~07FH	-	-	-			

## 18.5 Details of Common Area in Shared Memory

### 18.5 Details of Common Area in Shared Memory

#### 18.5.1 Configuration of Common Area

The shared memory is composed of banks. The common area is allocated to bank 00H in the shared memory and is used to configure common settings for each axis.

Whole map of shared memory				
00H_000H	96 words	080H	Setting/positioning parameter control area 8 words	
00H_060H	I/O control area 32 words	088H	Operating speed rate area 1 words	
00H_07FH		0B0H	Axis group setting area 16 words	
00H_080H		0C0H	Current value update data area 24 words	
00H_3CFH	896 words	0D8H	Torque limit area 24 words	
01H_000H	Each axis information area	100H	Positioning control starting table number setting area 8 words	
01H_1FFH	512 words	108H	Positioning control area 8 words	
02H_000H	Each axis setting area	110H	Error notification & clearing area 152 words	
51H_3FFH		81,920 words	1A8H	Warning notification & clearing area 152 words
52H_000H		Amplifier parameter control area 48 words	2B0H	Synchronous control monitor area 16 words
52H_02FH			2C0H	Latch stop function area 16 words
53H_000H	System area 5,120 words	2D0H	Counter positioning function area 80 words	
58H_000H		Synchronous control setting area	320H	Latch correction J-point control function area 16 words
58H_37FH		896 words	330H	Absolute data setting function area 16 words
59H_000H	System area 7,168 words	340H	Virtual full-close mode function area 16 words	
5FH_000H		Positioning operation change setting area	380H	System operation setting area 16 words
5FH_07FH	128 words	390H	Amplifier monitor & control area 16 words	
60H_000H	Cam pattern editing area	3A0H	Pulse input setting error 8 words	
60H_05FH	96 words	3A8H	Pulse count control area 24 words	
61H_000H	Positioning extension table setting area	3C0H	Pulse input monitor area 16 words	
68H_3FFH		8,192 words		



### 18.5.2 Setting Parameter Control Area

This area is used for performing control when shared memory positioning parameters or positioning data setting values are written to FROM, or when executing recalculation of positioning data.

The number of FROM writes from positioning unit RTEX to the FP0H control unit is reported and writes of shared memory positioning parameters and positioning data to FROM are requested via this area. This area is also used to set a recalculation start table number in order to recalculate the positioning data in the standard area.

Bank	Offset address	Name	Default	Description					
00H	080H	Notification of number of writes to FROM	0	Reports the number of writes of shared memory positioning parameters and positioning data to FROM.					
	082H	FROM write request	0000H	<p>When FROM is written to using Configurator PM7-RTEX, the following procedure is performed automatically.</p> <p>The method of writing from a ladder program requires that the following Configurator PM7-RTEX operation is implemented by the ladder program.</p> <ol style="list-style-type: none"> <li>1. The ladder program writes 1111H to this area.</li> <li>2. The positioning unit RTEX confirms the 1111H and rewrites 2222H to the same area.</li> <li>3. The ladder program confirms the 2222H and rewrites 5555H.</li> <li>4. The positioning unit RTEX confirms the 5555H and rewrites 6666H to the same area.</li> <li>5. The ladder program confirms the 6666H and rewrites AAAAH to the same area.</li> <li>6. The positioning unit RTEX copies the content of the shared memory to FROM.</li> <li>7. The positioning unit RTEX confirms the write. If OK: The positioning unit RTEX sets 0000H. If error: The positioning unit RTEX sets FFFFH.</li> <li>8. If the ladder program confirms 0000H, it has terminated successfully, and if it confirms FFFFH, it has terminated in an error. If there is an error, 0000H is rewritten to the same area.</li> </ol>					
	085H	Recalculation starting Table number	K1	<p>When the turning ON of the recalculation request signal (Y107) has been detected, the positioning unit RTEX recalculates the positioning data for all the axes from this table number to number 600.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Recalculation starting Table number</td> <td>K1</td> <td>Setting range: 1 to 600</td> </tr> </tbody> </table>	Name	Default	Description	Recalculation starting Table number	K1
Name	Default	Description							
Recalculation starting Table number	K1	Setting range: 1 to 600							

## 18.5 Details of Common Area in Shared Memory

### 18.5.3 Operating Speed Rate Area

This area is used to control all operations related to axis operations by using the specified rate of the operating speed.

Bank	Offset address	Name	Default	Description		
00H	088H	Operating speed rate	K100	All operations relating to axis operations (positioning, JOG operation, and home return) can be performed at the specified rate of the operating speed.		
				<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Operating speed rate</td> <td>K100</td> <td>Setting range: 1 to 100 Unit: %</td> </tr> </tbody> </table>	Name	Default
Name	Default	Description				
Operating speed rate	K100	Setting range: 1 to 100 Unit: %				
				The unit is % and values can be entered in a range of 1 to 100 (%).		

### 18.5.4 Axis Group Setting Area

The interpolation groups for each axis are set in this area. For the axis to be connected to the network, set the bit corresponding to the axis to 1 by using one of the settings shown below.

Bank	Offset address	Name	Default	Description				
00H	0B0H	Group A axis settings	0000H	Use this area to set either independent or interpolation operation for each axis. For interpolation operation, each axis belongs to one of Groups A to D. For example, if Axes 1, 2, and 3 belong to Group A and three-axis interpolation is performed, set the corresponding three bits to 1 in the interpolation axis settings of Group A. For single-axis independent operation settings, such axes do not belong to any groups, so turn ON the corresponding bits in the independent axis settings described later. The maximum number of interpolation axes per group is three. The same axis cannot be set in more than one group.				
	0B1H	Group B axis settings						
	0B2H	Group C axis settings						
	0B3H	Group D axis settings			Bit	Name	Default	Description
					0	Group attribute of Axis 1	0	0: Does not belong to any interpolation group
					1	Group attribute of Axis 2	0	
					2	Group attribute of Axis 3	0	1: Belongs to an interpolation group
3	Group attribute of Axis 4	0	An error occurs if 4 or more bits are set to 1 in a group, or the same axis is set to 1 in another group.					
4	Group attribute of Axis 5	0						
5	Group attribute of Axis 6	0						

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description			
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
				6	Group attribute of Axis 7 (virtual)	0	
7	Group attribute of Axis 8 (virtual)	0					
15 to 8	-	-	-				
	0B4H	Independent axis settings	0000H	For axes that do not belong to any interpolation relationships, set the corresponding bits in this area to 1.			
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
0	Group attribute of Axis 1	0	0: Belongs to an interpolation group. Alternately, not set on the used axis. 1: Independent axis (Does not belong to any interpolation group.) If the same axis is set to 1 in the interpolation group settings, an error will occur.				
1	Group attribute of Axis 2	0					
2	Group attribute of Axis 3	0					
3	Group attribute of Axis 4	0					
4	Group attribute of Axis 5	0					
5	Group attribute of Axis 6	0					
6	Group attribute of Axis 7 (virtual)	0					
7	Group attribute of Axis 8 (virtual)	0					
15 to 8	-	-		-			
00H	0B5H to 0BEH	-	-	-			
	0BFH	Number of virtual axes	0H	Sets the number of virtual axes to be used.			
				<b>Bit</b>	<b>Name</b>	<b>Description</b>	
15 to 0	Number of virtual axes	0H: Use no virtual axis 1H: Use one virtual axis 2H: Use two virtual axes Any other settings will result in an error.					

## 18.5 Details of Common Area in Shared Memory

### 18.5.5 Current Value Update Data Area

When changing the current value of each axis controlled by the positioning unit RTEX, store the changed coordinates in this area and turn ON the current value update request flag.

Bank	Offset address	Name	Default	Description																																	
00H	0C0H	Current value update request flag	0H	The current value controlled by the positioning unit RTEX is changed to the new value only when the bit corresponding to each axis changes from 0 to 1. After the current value is changed, the positioning unit RTEX automatically clears the corresponding bit to 0.																																	
				<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Current value update request for Axis 1</td> <td>0</td> <td rowspan="9">0: No change 1: Update the current value of the target axis.</td> </tr> <tr> <td>1</td> <td>Current value update request for Axis 2</td> <td>0</td> </tr> <tr> <td>2</td> <td>Current value update request for Axis 3</td> <td>0</td> </tr> <tr> <td>3</td> <td>Current value update request for Axis 4</td> <td>0</td> </tr> <tr> <td>4</td> <td>Current value update request for Axis 5</td> <td>0</td> </tr> <tr> <td>5</td> <td>Current value update request for Axis 6</td> <td>0</td> </tr> <tr> <td>6</td> <td>Current value update request for Axis 7 (virtual)</td> <td>0</td> </tr> <tr> <td>7</td> <td>Current value update request for Axis 8 (virtual)</td> <td>0</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Current value update request for Axis 1	0	0: No change 1: Update the current value of the target axis.	1	Current value update request for Axis 2	0	2	Current value update request for Axis 3	0	3	Current value update request for Axis 4	0	4	Current value update request for Axis 5	0	5	Current value update request for Axis 6	0	6	Current value update request for Axis 7 (virtual)	0	7	Current value update request for Axis 8 (virtual)	0	15 to 8	-	-	-
				Bit	Name	Default	Description																														
				0	Current value update request for Axis 1	0	0: No change 1: Update the current value of the target axis.																														
				1	Current value update request for Axis 2	0																															
				2	Current value update request for Axis 3	0																															
				3	Current value update request for Axis 4	0																															
				4	Current value update request for Axis 5	0																															
				5	Current value update request for Axis 6	0																															
				6	Current value update request for Axis 7 (virtual)	0																															
7	Current value update request for Axis 8 (virtual)	0																																			
15 to 8	-	-	-																																		
0C1H	-	-	-																																		
0C2H	Multi-turn data clear request flag	0H	When the bit corresponding to each axis changes from 0 to 1, the multi-turn data clearing command is issued to clear the multi-turn data.																																		
			<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Multi-turn data clearing request for Axis 1</td> <td>0</td> <td>0: No change 1: Multi-turn data clearing request</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Multi-turn data clearing request for Axis 1	0	0: No change 1: Multi-turn data clearing request																										
Bit	Name	Default	Description																																		
0	Multi-turn data clearing request for Axis 1	0	0: No change 1: Multi-turn data clearing request																																		

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description			
				Bit	Name	Default	Description
				1	Multi-turn data clearing request for Axis 2	0	
				2	Multi-turn data clearing request for Axis 3	0	
				3	Multi-turn data clearing request for Axis 4	0	
				4	Multi-turn data clearing request for Axis 5	0	
				5	Multi-turn data clearing request for Axis 6	0	
				6	Multi-turn data clearing request for Axis 7 (virtual)	0	
				7	Multi-turn data clearing request for Axis 8 (virtual)	0	
				15 to 8	-	-	
00H	0C3H to 0C7H	-	-	-			
	0C8H	Axis 1	K0	Stores the coordinate value (the current value for each axis) to be preset by the current value update function.			
	0C9H	Current value update coordinate					
	0CAH	Axis 2	K0				
	0CBH	Current value update coordinate					
	0CCH	Axis 3	K0				
	0CDH	Current value update coordinate					
	0CEH	Axis 4	K0				
	0CFH	Current value update coordinate					
	0D0H	Axis 5	K0				
	0D1H	Current value update coordinate					
	0D2H	Axis 6	K0				
0D3H	Current value update coordinate						
0D4H	Warning clearing for Axis 7 (virtual)	K0					
				<b>Name</b>	<b>Default</b>	<b>Description</b>	
				Current value update coordinate	K0	Setting range: -2147482624 to +2147482624	

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	0D5H	Current value update coordinate		
	0D6H	Axis 8 (virtual)	K0	
	0D7H	Current value update coordinate		

### 18.5.6 Torque Limit Area

The output torque from the amplifier to the motor can be changed. The setting range is 1 to 5000, which is equivalent to 0.1% to 500.0%.

The torque limit function can be executed during position control, synchronous control, or JOG operation. It cannot be executed during the home return operation.

Bank	Offset address	Name	Default	Description																																	
00H	0D8H	Torque limit enable flag	0H	Set whether to enable or disable execution of the torque limit function for each axis. To enable the torque limit function, set the corresponding bit to 1.																																	
				<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Torque limit for Axis 1</td> <td>0</td> <td rowspan="8">0: Disable Default 1: Enable</td> </tr> <tr> <td>1</td> <td>Torque limit for Axis 2</td> <td>0</td> </tr> <tr> <td>2</td> <td>Torque limit for Axis 3</td> <td>0</td> </tr> <tr> <td>3</td> <td>Torque limit for Axis 4</td> <td>0</td> </tr> <tr> <td>4</td> <td>Torque limit for Axis 5</td> <td>0</td> </tr> <tr> <td>5</td> <td>Torque limit for Axis 6</td> <td>0</td> </tr> <tr> <td>6</td> <td>Torque limit for Axis 7</td> <td>0</td> </tr> <tr> <td>7</td> <td>Torque limit for Axis 8</td> <td>0</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Torque limit for Axis 1	0	0: Disable Default 1: Enable	1	Torque limit for Axis 2	0	2	Torque limit for Axis 3	0	3	Torque limit for Axis 4	0	4	Torque limit for Axis 5	0	5	Torque limit for Axis 6	0	6	Torque limit for Axis 7	0	7	Torque limit for Axis 8	0	15 to 8	-	-	-
				Bit	Name	Default	Description																														
				0	Torque limit for Axis 1	0	0: Disable Default 1: Enable																														
1	Torque limit for Axis 2	0																																			
2	Torque limit for Axis 3	0																																			
3	Torque limit for Axis 4	0																																			
4	Torque limit for Axis 5	0																																			
5	Torque limit for Axis 6	0																																			
6	Torque limit for Axis 7	0																																			
7	Torque limit for Axis 8	0																																			
15 to 8	-	-	-																																		
0D9H to 0DFH	-	-	-																																		
0E0H	Torque limit value for Axis 1	3000 [ 300.0%]	Set a torque limit value for each axis.																																		
0E1H	Torque limit value for Axis 2	3000 [ 300.0%]	<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Torque limit value</td> <td>3000</td> <td>Setting range: 1 to 5,000 Unit: 0.1%</td> </tr> </tbody> </table>	Name	Default	Description	Torque limit value	3000	Setting range: 1 to 5,000 Unit: 0.1%																												
Name	Default	Description																																			
Torque limit value	3000	Setting range: 1 to 5,000 Unit: 0.1%																																			

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	0E2H	Torque limit value for Axis 3	3000 [ 300.0%]	
	0E3H	Torque limit value for Axis 4	3000 [ 300.0%]	
	0E4H	Torque limit value for Axis 5	3000 [ 300.0%]	
	0E5H	Torque limit value for Axis 6	3000 [ 300.0%]	
	0E6H	Torque limit value for Axis 7	3000 [ 300.0%]	
	0E7H	Torque limit value for Axis 8	3000 [ 300.0%]	
	0E8H to 0EFH			

### 18.5.7 Positioning control starting table number setting area

This area is used to specify the starting table number of positioning data for each axis when starting positioning control.

The setting ranges are 1 to 600 in the standard area, and 10001 to 10089 in the extended area.

Bank	Offset address	Name	Default	Description						
00H	100H	Positioning control starting table number for Axis 1	K1	Sets a positioning control starting table number.						
	101H	Position control start table number for Axis 2	K1							
	102H	Position control start table number for Axis 3	K1							
	103H	Position control start table number for Axis 4	K1							
	104H	Position control start table number for Axis 5	K1							
	105H	Position control start table number for Axis 6	K1							
	106H	Position control start table number for Axis 7	K1							
				<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Positioning control start Table number</td> <td>K1</td> <td>Setting range: 1 to 600, 10001 to 10089</td> </tr> </tbody> </table>	Name	Default	Description	Positioning control start Table number	K1	Setting range: 1 to 600, 10001 to 10089
Name	Default	Description								
Positioning control start Table number	K1	Setting range: 1 to 600, 10001 to 10089								

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	107H	Position control start table number for Axis 8	K1	

### 18.5.8 Positioning Control Area

This area is used to specify the number of repetitions of positioning control for each axis. After positioning control is repeated the specified number of times, the operation is complete. The number of repetitions is also changed to 0 (default value) at the beginning of the operation.

Bank	Offset address	Name	Default	Description						
00H	108H	Axis 1 positioning Repetition count	K0	Sets the number of repetitions of the operation from the positioning start table number through to the table set for E-point control.  <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>positioning Repetition count</td> <td>K0</td> <td>Setting range: 0 to 255 Unit: Number of times</td> </tr> </tbody> </table> If 255 is set, positioning control will be repeated unlimitedly until it is stopped.	Name	Default	Description	positioning Repetition count	K0	Setting range: 0 to 255 Unit: Number of times
	Name	Default	Description							
	positioning Repetition count	K0	Setting range: 0 to 255 Unit: Number of times							
	109H	Axis 2 positioning Repetition count	K0							
	10AH	Axis 3 positioning Repetition count	K0							
	10BH	Axis 4 positioning Repetition count	K0							
	10CH	Axis 5 positioning Repetition count	K0							
	10DH	Axis 6 positioning Repetition count	K0							
10EH	Axis 7 (virtual) positioning Repetition count	K0								
10FH	Axis 8 (virtual) positioning Repetition count	K0								

### 18.5.9 Error Notification & Clearing Area

This area stores the number of error occurrences and error codes of errors (accompanying stoppages) for each axis. If error clearing is executed, the number of error occurrences and error codes will be cleared once, but if the error conditions continue, error judgments and resulting errors will occur even after the error clearing. If global errors such as network faults occur, they will be stored in the error notification buffer for all axes. Up to seven error logs are stored.

Error clearing can be executed by using not only this area but also the error clearing contact (for all axes).



## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description																																	
00H	110H	Error occurrence notification for each axis	0H	<p>When a warning occurs on an axis, the corresponding bit is set to 1.</p> <p>When a warning targeting all axes occurs, the bits of all axes are set to 1.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Error notification for Axis 1</td> <td>0</td> <td rowspan="9">0: No error 1: Error occurrence</td> </tr> <tr> <td>1</td> <td>Error notification for Axis 2</td> <td>0</td> </tr> <tr> <td>2</td> <td>Error notification for Axis 3</td> <td>0</td> </tr> <tr> <td>3</td> <td>Error notification for Axis 4</td> <td>0</td> </tr> <tr> <td>4</td> <td>Error notification for Axis 5</td> <td>0</td> </tr> <tr> <td>5</td> <td>Error notification for Axis 6</td> <td>0</td> </tr> <tr> <td>6</td> <td>Error notification for Axis 7 (virtual)</td> <td>0</td> </tr> <tr> <td>7</td> <td>Error notification for Axis 8 (virtual)</td> <td>0</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Error notification for Axis 1	0	0: No error 1: Error occurrence	1	Error notification for Axis 2	0	2	Error notification for Axis 3	0	3	Error notification for Axis 4	0	4	Error notification for Axis 5	0	5	Error notification for Axis 6	0	6	Error notification for Axis 7 (virtual)	0	7	Error notification for Axis 8 (virtual)	0	15 to 8	-	-	-
	Bit	Name	Default	Description																																	
0	Error notification for Axis 1	0	0: No error 1: Error occurrence																																		
1	Error notification for Axis 2	0																																			
2	Error notification for Axis 3	0																																			
3	Error notification for Axis 4	0																																			
4	Error notification for Axis 5	0																																			
5	Error notification for Axis 6	0																																			
6	Error notification for Axis 7 (virtual)	0																																			
7	Error notification for Axis 8 (virtual)	0																																			
15 to 8	-	-		-																																	
	111H	Error clear for individual axis Specification	0H	<p>Executes error clearing for each axis.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Error clearing for Axis 1</td> <td>0</td> <td rowspan="8">0: No error clearing 1: Execute error clearing (After warning clearing is executed, the positioning unit RTEX automatically resets the bit to 0.)</td> </tr> <tr> <td>1</td> <td>Error clearing for Axis 2</td> <td>0</td> </tr> <tr> <td>2</td> <td>Error clearing for Axis 3</td> <td>0</td> </tr> <tr> <td>3</td> <td>Error clearing for Axis 4</td> <td>0</td> </tr> <tr> <td>4</td> <td>Error clearing for Axis 5</td> <td>0</td> </tr> <tr> <td>5</td> <td>Error clearing for Axis 6</td> <td>0</td> </tr> <tr> <td>6</td> <td>Error clearing for Axis 7 (virtual)</td> <td>0</td> </tr> <tr> <td>7</td> <td>Error clearing for Axis 8 (virtual)</td> <td>0</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Error clearing for Axis 1	0	0: No error clearing 1: Execute error clearing (After warning clearing is executed, the positioning unit RTEX automatically resets the bit to 0.)	1	Error clearing for Axis 2	0	2	Error clearing for Axis 3	0	3	Error clearing for Axis 4	0	4	Error clearing for Axis 5	0	5	Error clearing for Axis 6	0	6	Error clearing for Axis 7 (virtual)	0	7	Error clearing for Axis 8 (virtual)	0				
Bit	Name	Default	Description																																		
0	Error clearing for Axis 1	0	0: No error clearing 1: Execute error clearing (After warning clearing is executed, the positioning unit RTEX automatically resets the bit to 0.)																																		
1	Error clearing for Axis 2	0																																			
2	Error clearing for Axis 3	0																																			
3	Error clearing for Axis 4	0																																			
4	Error clearing for Axis 5	0																																			
5	Error clearing for Axis 6	0																																			
6	Error clearing for Axis 7 (virtual)	0																																			
7	Error clearing for Axis 8 (virtual)	0																																			

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description			
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
				15 to 8	-	-	-
	112H to 128H	-	-	-			
00H	129H	Number of error occurrences on Axis 1	K0	Notifies the number of error occurrences on Axis 1.			
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
				15 to 0	Number of error occurrences on Axis 1	K0	Notifies the number of errors currently occurring on Axis 1 Range of warning occurrences: 0 to 65,535
	12AH	Error code notification buffer 1 for Axis 1	0H	Stores the latest error codes in order from buffer 1.			
	12BH	Error code notification buffer 2 for Axis 1	0H				
	12CH	Error code notification buffer 3 for Axis 1	0H				
	12DH	Error code notification buffer 4 for Axis 1	0H				
	12EH	Error code notification buffer 5 for Axis 1	0H				
	12FH	Error code notification buffer 6 for Axis 1	0H				
	130H	Error code notification buffer 7 for Axis 1	0H				
	131H	Error code notification buffer 8 for Axis 1	0H	<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
	132H	Error code notification buffer 9 for Axis 1	0H	31 to 0	Error code notification for Axis 1 Buffer n	0H	Reports the error code.
	133H	Error code notification buffer 10 for Axis 1	0H				
	134H	Error code notification buffer 11 for Axis 1	0H				
	135H	Error code notification buffer 12 for Axis 1	0H				
	136H	Error code notification buffer 13 for Axis 1	0H				
	137H	Error code notification buffer 14 for Axis 1	0H				
	138H	-	-	-			
	139H	Number of error occurrences on Axis 2	K0	Reports the number of error occurrences on Axis 2.			
	13AH	Error code notification buffer 1 for Axis 2	0H	Stores the latest error codes in order from buffer 1.			
13BH	Error code notification buffer 2 for Axis 2	0H					
13CH	Error code notification buffer 3 for Axis 2	0H					
13DH	Error code notification buffer 4 for Axis 2	0H					

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	13EH	Error code notification buffer 3 for Axis 2	0H	
	13FH			
	140H	Error code notification buffer 4 for Axis 2	0H	
	141H			
	142H	Error code notification buffer 5 for Axis 2	0H	
	143H			
	144H	Error code notification buffer 6 for Axis 2	0H	
	145H			
	146H	Error code notification buffer 7 for Axis 2	0H	
147H				
00H	148H	-	-	-
	149H	Number of error occurrences on Axis 3	K0	Reports the number of error occurrences on Axis 3.
	14AH	Error code notification buffer 1 for Axis 3	0H	Stores the latest error codes in order from buffer 1.
	14BH			
	14CH	Error code notification buffer 2 for Axis 3	0H	
	14DH			
	14EH	Error code notification buffer 3 for Axis 3	0H	
	14FH			
	150H	Error code notification buffer 4 for Axis 3	0H	
	151H			
	152H	Error code notification buffer 5 for Axis 3	0H	
	153H			
	154H	Error code notification buffer 6 for Axis 3	0H	
	155H			
	156H	Error code notification buffer 7 for Axis 3	0H	
	157H			
	158H	-	-	-
	159H	Number of error occurrences on Axis 4	K0	Reports the number of error occurrences on Axis 4.
	15AH	Error code notification buffer 1 for Axis 4	0H	Stores the latest error codes in order from buffer 1.
15BH				
15CH	Error code notification buffer 2 for Axis 4	0H		
15DH				

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	15EH	Error code notification buffer 3 for Axis 4	0H	
	15FH			
	160H	Error code notification buffer 4 for Axis 4	0H	
	161H			
	162H	Error code notification buffer 5 for Axis 4	0H	
	163H			
	164H	Error code notification buffer 6 for Axis 4	0H	
	165H			
	166H	Error code notification buffer 7 for Axis 4	0H	
167H				
00H	168H	-	-	-
	169H	Number of error occurrences on Axis 5	K0	Reports the number of error occurrences on Axis 5.
	16AH	Error code notification buffer 1 for Axis 5	0H	Stores the latest error codes in order from buffer 1.
	16BH			
	16CH	Error code notification buffer 2 for Axis 5	0H	
	16DH			
	16EH	Error code notification buffer 3 for Axis 5	0H	
	16FH			
	170H	Error code notification buffer 4 for Axis 5	0H	
	171H			
	172H	Error code notification buffer 5 for Axis 5	0H	
	173H			
	174H	Error code notification buffer 6 for Axis 5	0H	
	175H			
	176H	Error code notification buffer 7 for Axis 5	0H	
	177H			
	178H	-	-	-
	179H	Number of error occurrences on Axis 6	K0	Reports the number of error occurrences on Axis 6.
	17AH	Error code notification buffer 1 for Axis 6	0H	Stores the latest error codes in order from buffer 1.
	17BH			
17CH	Error code notification buffer 2 for Axis 6	0H		
17DH				

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	17EH	Error code notification buffer 3 for Axis 6	0H	
	17FH			
	180H	Error code notification buffer 4 for Axis 6	0H	
	181H			
	182H	Error code notification buffer 5 for Axis 6	0H	
	183H			
	184H	Error code notification buffer 6 for Axis 6	0H	
	185H			
	186H	Error code notification buffer 7 for Axis 6	0H	
187H				
00H	188H	-	-	-
	189H	Number of error occurrences on Axis 7 (virtual)	K0	Notifies the number of error occurrences on Axis 7 (virtual).
	18AH	Error code notification buffer 1 for Axis 7 (virtual)	0H	Stores the latest error codes in order from buffer 1.
	18BH			
	18CH	Error code notification buffer 2 for Axis 7 (virtual)	0H	
	18DH			
	18EH	Error code notification buffer 3 for Axis 7 (virtual)	0H	
	18FH			
	190H	Error code notification buffer 4 for Axis 7 (virtual)	0H	
	191H			
	192H	Error code notification buffer 5 for Axis 7 (virtual)	0H	
	193H			
	194H	Error code notification buffer 6 for Axis 7 (virtual)	0H	
	195H			
	196H	Error code notification buffer 7 for Axis 7 (virtual)	0H	
	197H			
	198H	-	-	-
	199H	Number of error occurrences on Axis 8 (virtual)	K0	Reports the number of error occurrences on Axis 8 (virtual).
	19AH	Error code notification buffer 1 for Axis 8 (virtual)	0H	Stores the latest error codes in order from buffer 1.
19BH				
19CH	Error code notification buffer 2 for Axis 8 (virtual)	0H		
19DH				

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	19EH	Error code notification buffer 3 for Axis 8 (virtual)	0H	
	19FH			
	1A0H	Error code notification buffer 4 for Axis 8 (virtual)	0H	
	1A1H			
	1A2H	Error code notification buffer 5 for Axis 8 (virtual)	0H	
	1A3H			
	1A4H	Error code notification buffer 6 for Axis 8 (virtual)	0H	
	1A5H			
	1A6H	Error code notification buffer 7 for Axis 8 (virtual)	0H	
	1A7H			

### 18.5.10 Warning Notification & Clearing Area

This area stores the number of warning occurrences and warning codes of warning (not accompanying stoppages) for each axis. If warning clearing is executed, the number of warning occurrences and warning codes will be cleared once, but if the warning conditions continue, warning judgments and resulting warnings will occur even after the warning clearing. Up to seven warning logs are stored.

Warning clearing can be executed by using not only this area but also the warning clearing contact (for all axes).

Bank	Offset address	Name	Default	Description			
00H	1A8H	Individual warning occurrence Axis notification	0H	When a warning occurs on an axis, the corresponding bit is set to 1. When a warning targeting all axes occurs, the bits of all axes are set to 1.			
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
				0	Warning notification for Axis 1	0	0: No warning 1: Warning occurred
				1	Warning notification for Axis 2	0	
				2	Warning notification for Axis 3	0	
3	Warning notification for Axis 4	0					

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description			
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
				4	Warning notification for Axis 5	0	
				5	Warning notification for Axis 6	0	
				6	Warning notification for Axis 7 (virtual)	0	
				7	Warning notification for Axis 8 (virtual)	0	
				15 to 8	-	-	
	1A9H	Warning clearing specification for each axis	0H	Clears warnings for each axis.			
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
				0	Warning clearing for Axis 1	0	0: No warning clearing 1: Executes warning clearing (After warning clearing is executed, the positioning unit RTEX automatically resets the bit to 0.)
				1	Warning clearing for Axis 2	0	
2				Warning clearing for Axis 3	0		
3				Warning clearing for Axis 4	0		
4				Warning clearing for Axis 5	0		
5				Warning clearing for Axis 6	0		
6				Warning clearing for Axis 7 (virtual)	0		
7				Warning clearing for Axis 8 (virtual)	0		
15 to 8	-	-	-				
1AAH to 1C0H	-	-	-				
00H	1C1H	Number of warning occurrences on Axis 1	K0	Notifies the number of warning occurrences on Axis 1.			
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
15 to 0	Number of warning	0	Notifies the number of warnings				

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description							
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>				
					occurrences on Axis 1		currently occurring on Axis 1 Range of warning occurrences: 0 to 65,535				
	1C2H	Warning code notification buffer 1 for Axis 1	0H	Stores the latest warning codes in order from buffer number 1.							
	1C3H										
	1C4H	Warning code notification buffer 2 for Axis 1	0H								
	1C5H										
	1C6H	Warning code notification buffer 3 for Axis 1	0H								
	1C7H										
	1C8H	Warning code notification buffer 4 for Axis 1	0H					<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>
	1C9H										
	1CAH	Warning code notification buffer 5 for Axis 1	0H					31 to 0	Warning code for Axis 1 Notification buffer n	0H	Reports warning codes.
	1CBH										
	1CCH	Warning code notification buffer 6 for Axis 1	0H								
	1CDH										
	1CEH	Warning code notification buffer 7 for Axis 1	0H								
	1CFH										
	1D0H	-	-	-	-	-	-				
	1D1H	Number of warning occurrences on Axis 2	K0	Reports the number of warning occurrences on Axis 2.							
	1D2H	Warning code notification buffer 1 for Axis 2	0H	Stores the latest warning codes in order from buffer number 1.							
	1D3H										
	1D4H	Warning code notification buffer 2 for Axis 2	0H								
	1D5H										
	1D6H	Warning code notification buffer 3 for Axis 2	0H								
	1D7H										
	1D8H	Warning code notification buffer 4 for Axis 2	0H								
	1D9H										
	1DAH	Warning code notification buffer 5 for Axis 2	0H								
	1DBH										



## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	1DCH	Warning code notification buffer 6 for Axis 2	0H	
	1DDH			
	1DEH	Warning code notification buffer 7 for Axis 2	0H	
	1DFH			
00H	1E0H	-	-	-
	1E1H	Number of warning occurrences on Axis 3	K0	Reports the number of warning occurrences on Axis 3.
	1E2H	Warning code notification buffer 1 for Axis 3	0H	Stores the latest warning codes in order from buffer number 1.
	1E3H			
	1E4H	Warning code notification buffer 2 for Axis 3	0H	
	1E5H			
	1E6H	Warning code notification buffer 3 for Axis 3	0H	
	1E7H			
	1E8H	Warning code notification buffer 4 for Axis 3	0H	
	1E9H			
	1EAH	Warning code notification buffer 5 for Axis 3	0H	
	1EBH			
	1ECH	Warning code notification buffer 6 for Axis 3	0H	
	1EDH			
	1EEH	Warning code notification buffer 7 for Axis 3	0H	
	1EFH			
	1F0H	-	-	-
	1F1H	Number of warning occurrences on Axis 4	K0	Reports the number of warning occurrences on Axis 4.
	1F2H	Warning code notification buffer 1 for Axis 4	0H	Stores the latest warning codes in order from buffer number 1.
	1F3H			
1F4H	Warning code notification buffer 2 for Axis 4	0H		
1F5H				
1F6H	Warning code notification buffer 3 for Axis 4	0H		
1F7H				
1F8H	Warning code notification buffer 4 for Axis 4	0H		
1F9H				
1FAH	Warning code notification buffer 5 for Axis 4	0H		
1FBH				

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	1FCH	Warning code notification buffer 6 for Axis 4	0H	
	1FDH			
	1FEH	Warning code notification buffer 7 for Axis 4	0H	
	1FFH			
00H	200H	-	-	-
	201H	Number of warning occurrences on Axis 5	K0	Reports the number of warning occurrences on Axis 5.
	202H	Warning code notification buffer 1 for Axis 5	0H	Stores the latest warning codes in order from buffer number 1.
	203H			
	204H	Warning code notification buffer 2 for Axis 5	0H	
	205H			
	206H	Warning code notification buffer 3 for Axis 5	0H	
	207H			
	208H	Warning code notification buffer 4 for Axis 5	0H	
	209H			
	20AH	Warning code notification buffer 5 for Axis 5	0H	
	20BH			
	20CH	Warning code notification buffer 6 for Axis 5	0H	
	20DH			
	20EH	Warning code notification buffer 7 for Axis 5	0H	
	20FH			
	210H	-	-	-
	211H	Number of warning occurrences on Axis 6	K0	Reports the number of warning occurrences on Axis 6.
	212H	Warning code notification buffer 1 for Axis 6	0H	Stores the latest warning codes in order from buffer number 1.
	213H			
214H	Warning code notification buffer 2 for Axis 6	0H		
215H				
216H	Warning code notification buffer 3 for Axis 6	0H		
217H				
218H	Warning code notification buffer 4 for Axis 6	0H		
219H				
21AH	Warning code notification buffer 5 for Axis 6	0H		
21BH				

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	21CH	Warning code notification buffer 6 for Axis 6	0H	
	21DH			
	21EH	Warning code notification buffer 7 for Axis 6	0H	
	21FH			
00H	220H	-	-	-
	221H	Number of warning occurrences on Axis 7 (virtual)	K0	Notifies the number of warning occurrences on Axis 7 (virtual).
	222H	Warning code notification buffer 1 for Axis 7 (virtual)	0H	Stores the latest warning codes in order from buffer number 1.
	223H			
	224H	Warning code notification buffer 2 for Axis 7 (virtual)	0H	
	225H			
	226H	Warning code notification buffer 3 for Axis 7 (virtual)	0H	
	227H			
	228H	Warning code notification buffer 4 for Axis 7 (virtual)	0H	
	229H			
	22AH	Warning code notification buffer 5 for Axis 7 (virtual)	0H	
	22BH			
	22CH	Warning code notification buffer 6 for Axis 7 (virtual)	0H	
	22DH			
	22EH	Warning code notification buffer 7 for Axis 7 (virtual)	0H	
	22FH			
	230H	-	-	-
	231H	Number of warning occurrences on Axis 8 (virtual)	K0	Reports the number of warning occurrences on Axis 8 (virtual).
	232H	Warning code notification buffer 1 for Axis 8 (virtual)	0H	Stores the latest warning codes in order from buffer number 1.
	233H			
	234H	Warning code notification buffer 2 for Axis 8 (virtual)	0H	
	235H			
236H	Warning code notification buffer 3 for Axis 8 (virtual)	0H		
237H				
238H	Warning code notification buffer 4 for Axis 8 (virtual)	0H		
239H				
23AH	Warning code notification buffer 5 for Axis 8 (virtual)	0H		
23BH				

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	23CH	Warning code notification buffer 6 for Axis 8 (virtual)	0H	
	23DH			
	23EH	Warning code notification buffer 7 for Axis 8 (virtual)	0H	
	23FH			

### 18.5.11 Synchronous control monitor area

This area is used to monitor the setting status of synchronous control.

Bank	Offset address	Name	Default	Description		
00H	2B0H	Axis 1 synchronous master axis Information monitor	FFFFH	Stores the setting status of the master axis under synchronous control.		
				<b>Stored value</b>		<b>Master axis</b>
				<b>Under synchronous control</b>	<b>Synchronization cancellation in progress</b>	
				FFFFH	FFFFH	No synchronous setting
				0000H	8000H	The target axis for monitoring is the master axis.
				0001H	8001H	Axis 1
				0002H	8002H	Axis 2
				0003H	8003H	Axis 3
				0004H	8004H	Axis 4
				0005H	8005H	Axis 5
				0006H	8006H	Axis 6
				0007H	8007H	Axis 7
				0008H	8008H	8 axes
				0010H	8010H	Virtual axis 1
				0011H	8011H	Virtual axis 2
				0021H	8021H	Pulse input 1
	0022H	8022H	Pulse input 2			
0023H	8023H	Pulse input 3				
	2B1H	Axis 1 synchronous output function selection status monitor	0H	Stores the status of the synchronous operation function set for the axes.		

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description			
				Bit	Name	Default	Description
				0	Electronic gear operation setting	0	0: Do not use 1: Use
				1	Clutch operation setting	0	
				2	Electronic cam operation setting	0	
3	Advance angle correction synchronization setting	0					
	15 to 4	-	-	-	-	-	
	2B2H	Axis 2 synchronous master axis Information monitor	FFFFH	Refer to the same item corresponding to Axis 1.			
	2B3H	Axis 2 synchronous output function selection status monitor	0H	Refer to the same item corresponding to Axis 1.			
00H	2B4H	Axis 3 synchronous master axis Information monitor	FFFFH	Refer to the same item corresponding to Axis 1.			
	2B5H	Axis 3 synchronous output function selection status monitor	0H	Refer to the same item corresponding to Axis 1.			
	2B6H	Axis 4 synchronous master axis Information monitor	FFFFH	Refer to the same item corresponding to Axis 1.			
	2B7H	Axis 4 synchronous output function selection status monitor	0H	Refer to the same item corresponding to Axis 1.			
	2B8H	Axis 5 synchronous master axis Information monitor	FFFFH	Refer to the same item corresponding to Axis 1.			
	2B9H	Axis 5 synchronous output function selection status monitor	0H	Refer to the same item corresponding to Axis 1.			
	2BAH	Axis 6 synchronous master axis Information monitor	FFFFH	Refer to the same item corresponding to Axis 1.			
	2BBH	Axis 6 synchronous output function	0H	Refer to the same item corresponding to Axis 1.			

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
		selection status monitor		
	2BCH	Synchronous master axis information monitoring for Axis 7 (virtual)	FFFFH	Refer to the same item corresponding to Axis 1.
	2BDH	Axis 7 (virtual) synchronous output function selection status monitoring for Axis 8 (virtual)	0H	Refer to the same item corresponding to Axis 1.
	2BEH	Synchronous master axis information monitoring for Axis 8 (virtual)	FFFFH	Refer to the same item corresponding to Axis 1.
	2BFH	Synchronous output function selection status monitoring for Axis 8 (virtual)	0H	Refer to the same item corresponding to Axis 1.

### 18.5.12 Latch stop function area

This area is used to configure settings when using the "latch mode with a stop function" for MINAS servo amplifiers (A6N). Latch mode with a stop function is a function that stops the motor at a latch position by using the latch input of the servo amplifier as a trigger.

- This function works with MINAS A6N Ver.1.22 or later.

Bank	Offset address	Name	Default	Description																																	
00H	2C0H	Latch mode request flag	0H	<p>Turn ON the bit corresponding to the axis for which latch mode with a stop function is used.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Axis 1</td> <td>0</td> <td rowspan="8">                     0: Conventional operation                      1: Input of external latch                      External latch Input enabled                 </td> </tr> <tr> <td>1</td> <td>Axis 2</td> <td>0</td> </tr> <tr> <td>2</td> <td>Axis 3</td> <td>0</td> </tr> <tr> <td>3</td> <td>Axis 4</td> <td>0</td> </tr> <tr> <td>4</td> <td>Axis 5</td> <td>0</td> </tr> <tr> <td>5</td> <td>Axis 6</td> <td>0</td> </tr> <tr> <td>6</td> <td>Warning clearing for Axis 7 (virtual)</td> <td>0</td> </tr> <tr> <td>7</td> <td>Axis 8 (virtual)</td> <td>0</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Axis 1	0	0: Conventional operation 1: Input of external latch External latch Input enabled	1	Axis 2	0	2	Axis 3	0	3	Axis 4	0	4	Axis 5	0	5	Axis 6	0	6	Warning clearing for Axis 7 (virtual)	0	7	Axis 8 (virtual)	0	15 to 8	-	-	-
Bit	Name	Default	Description																																		
0	Axis 1	0	0: Conventional operation 1: Input of external latch External latch Input enabled																																		
1	Axis 2	0																																			
2	Axis 3	0																																			
3	Axis 4	0																																			
4	Axis 5	0																																			
5	Axis 6	0																																			
6	Warning clearing for Axis 7 (virtual)	0																																			
7	Axis 8 (virtual)	0																																			
15 to 8	-	-	-																																		

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description																																	
	2C1H	Latch mode status notification	0H	<p>The bit corresponding to the relevant axis turns ON while latch mode with a stop function is running. When this flag is ON, it indicates that latch mode with a stop function is running and the servo amplifier is waiting for the motor to stop.</p> <p>After stoppage is completed by latch mode with a stop function, this flag turns OFF.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Axis 1</td> <td>0</td> <td rowspan="8">0: Non-operating state 1: With stop function Latch mode During operation (Waiting for latching)</td> </tr> <tr> <td>1</td> <td>Axis 2</td> <td>0</td> </tr> <tr> <td>2</td> <td>Axis 3</td> <td>0</td> </tr> <tr> <td>3</td> <td>Axis 4</td> <td>0</td> </tr> <tr> <td>4</td> <td>Axis 5</td> <td>0</td> </tr> <tr> <td>5</td> <td>Axis 6</td> <td>0</td> </tr> <tr> <td>6</td> <td>Warning clearing for Axis 7 (virtual)</td> <td>0</td> </tr> <tr> <td>7</td> <td>Axis 8 (virtual)</td> <td>0</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Axis 1	0	0: Non-operating state 1: With stop function Latch mode During operation (Waiting for latching)	1	Axis 2	0	2	Axis 3	0	3	Axis 4	0	4	Axis 5	0	5	Axis 6	0	6	Warning clearing for Axis 7 (virtual)	0	7	Axis 8 (virtual)	0	15 to 8	-	-	-
Bit	Name	Default	Description																																		
0	Axis 1	0	0: Non-operating state 1: With stop function Latch mode During operation (Waiting for latching)																																		
1	Axis 2	0																																			
2	Axis 3	0																																			
3	Axis 4	0																																			
4	Axis 5	0																																			
5	Axis 6	0																																			
6	Warning clearing for Axis 7 (virtual)	0																																			
7	Axis 8 (virtual)	0																																			
15 to 8	-	-	-																																		
	2C2H to 2C7H	-	-	-																																	
00H	2C8H	Latch trigger signal input selection for Axis 1	3H	<p>Sets external latch input 1, external latch input 2, and external latch input 3, which are input from the amplifier I/O connectors used for latch mode requests.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>3 to 0</td> <td>                     1H: Rising edge of EXT1                      2H: Rising edge of EXT2                      3H: Rising edge of EXT3                      7H: Rising edge of Pr7.111-specified logical output signal                      9H: Falling edge of EXT1                      AH: Falling edge of EXT2                      BH: Falling edge of EXT3                      FH: Falling edge of Pr7.111-specified logical output signal                      If any setting other than the above is specified, "Rising edge of EXT3" will be assumed.                 </td> </tr> <tr> <td>15 to 8</td> <td>-</td> </tr> </tbody> </table> <p>For home return operations, do not use POT/NOT for the DOG or limit methods.</p>	Bit	Description	3 to 0	1H: Rising edge of EXT1 2H: Rising edge of EXT2 3H: Rising edge of EXT3 7H: Rising edge of Pr7.111-specified logical output signal 9H: Falling edge of EXT1 AH: Falling edge of EXT2 BH: Falling edge of EXT3 FH: Falling edge of Pr7.111-specified logical output signal If any setting other than the above is specified, "Rising edge of EXT3" will be assumed.	15 to 8	-																											
Bit	Description																																				
3 to 0	1H: Rising edge of EXT1 2H: Rising edge of EXT2 3H: Rising edge of EXT3 7H: Rising edge of Pr7.111-specified logical output signal 9H: Falling edge of EXT1 AH: Falling edge of EXT2 BH: Falling edge of EXT3 FH: Falling edge of Pr7.111-specified logical output signal If any setting other than the above is specified, "Rising edge of EXT3" will be assumed.																																				
15 to 8	-																																				
	2C9H	Latch trigger signal input selection for Axis 2	3H	Refer to the same item corresponding to Axis 1.																																	

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	2CAH	Latch trigger signal input selection for Axis 3	3H	Refer to the same item corresponding to Axis 1.
	2CBH	Latch trigger signal input selection for Axis 4	3H	Refer to the same item corresponding to Axis 1.
	2CCH	Latch trigger signal input selection for Axis 5	3H	Refer to the same item corresponding to Axis 1.
	2CDH	Latch trigger signal input selection for Axis 6	3H	Refer to the same item corresponding to Axis 1.
	2CEH	Axis 7 (virtual) latch Trigger signal input selection	3H	Refer to the same item corresponding to Axis 1.
	2CFH	Axis 8 (virtual) latch Trigger signal input selection	3H	Refer to the same item corresponding to Axis 1.

### 18.5.13 Counter Positioning Function Area

#### Counter positioning setting area

Bank	Offset address	Name	Default	Description																																	
00H	2D0H	Counter positioning switchover flag	0H	Turn ON the bit corresponding to the axis for which the counter positioning function is used.																																	
				<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Axis 1</td> <td>0</td> <td rowspan="8">0: Conventional behavior 1: Use the pulse count positioning function</td> </tr> <tr> <td>1</td> <td>Axis 2</td> <td>0</td> </tr> <tr> <td>2</td> <td>Axis 3</td> <td>0</td> </tr> <tr> <td>3</td> <td>Axis 4</td> <td>0</td> </tr> <tr> <td>4</td> <td>Axis 5</td> <td>0</td> </tr> <tr> <td>5</td> <td>Axis 6</td> <td>0</td> </tr> <tr> <td>6</td> <td>Warning clearing for Axis 7 (virtual)</td> <td>0</td> </tr> <tr> <td>7</td> <td>Axis 8 (virtual)</td> <td>0</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Axis 1	0	0: Conventional behavior 1: Use the pulse count positioning function	1	Axis 2	0	2	Axis 3	0	3	Axis 4	0	4	Axis 5	0	5	Axis 6	0	6	Warning clearing for Axis 7 (virtual)	0	7	Axis 8 (virtual)	0	15 to 8	-	-	-
				Bit	Name	Default	Description																														
				0	Axis 1	0	0: Conventional behavior 1: Use the pulse count positioning function																														
				1	Axis 2	0																															
				2	Axis 3	0																															
				3	Axis 4	0																															
				4	Axis 5	0																															
				5	Axis 6	0																															
				6	Warning clearing for Axis 7 (virtual)	0																															
7	Axis 8 (virtual)	0																																			
15 to 8	-	-	-																																		
2D1H	-	-	-																																		
2D2H	Pulse count start request flag	0H	Turn ON the flag when starting counting pulses. After positioning operations are complete, the positioning unit RTEX turns OFF the applicable bit.																																		



## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description						
				<b>Bit</b>	<b>Name</b>	<b>Default</b>	<b>Description</b>			
				0	Axis 1	0	0: No pulse count request 1: Pulse count request			
				1	Axis 2	0				
				2	Axis 3	0				
				3	Axis 4	0				
				4	Axis 5	0				
				5	Axis 6	0				
				6	Warning clearing for Axis 7 (virtual)	0				
				7	Axis 8 (virtual)	0				
	15 to 8	-	-	-	-	-	-			
	2D3H to 2D7H	-	-	-						
00H	2D8H	Counter positioning mode for Axis 1	0H	Sets the counter positioning operation method.						
	2D9H	Counter positioning mode for Axis 2	0H							
	2DAH	Counter positioning mode for Axis 3	0H							
	2DBH	Counter positioning mode for Axis 4	0H							
	2DCH	Counter positioning mode for Axis 5	0H							
	2DDH	Counter positioning mode for Axis 6	0H							
	2DEH	Counter positioning mode for Axis 7	0H							
	2DFH	Counter positioning mode for Axis 8	0H							
	2E0H	Pulse counting channel for Axis 1	0H	Set the motion part pulse input channel to be used for pulse counting.						
	2E1H	Pulse count channel for Axis 2	0H							
	2E2H	Pulse count channel for Axis 3	0H							
	2E3H	Pulse count channel for Axis 4	0H							
	2E4H	Pulse count channel for Axis 5	0H							
	2E5H	Pulse count channel for Axis 6	0H							
									<b>Setting value</b>	<b>Counter positioning mode</b>
									0H	Amplifier input method
				1H	PLC judgment method					
				Other	Operates as if H0 (amplifier input method) is set.					
				<b>Setting value</b>	<b>Pulse count channel</b>					
				0H	Pulse input ch1					
				1H	Pulse input ch2					
				3H	Pulse input ch3					
				Other	Operates as if H0 (pulse input ch1) is set.					

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
00H	2E6H	Pulse count channel for Axis 7	0H	Specify the threshold value (two words) that is used to trigger the start of the positioning operation. 0 to 2,147,483,647 pulses (default value = K1000) Note: If "0" is set, positioning will start immediately.
	2E7H	Pulse count channel for Axis 8	0H	
	2E8H to 2E9H	Pulse count threshold for Axis 1	K1000	
	2EAH to 2EBH	Pulse count threshold for Axis 2	K1000	
	2ECH to 2EDH	Pulse count threshold for Axis 3	K1000	
	2EEH to 2EFH	Pulse count threshold for Axis 4	K1000	
	2F0H to 2F1H	Pulse count threshold for Axis 5	K1000	
	2F2H to 2F3H	Pulse count threshold for Axis 6	K1000	
	2F4H to 2F5H	Pulse count threshold for Axis 7	K1000	
	2F6H to 2F7H	Pulse count threshold for Axis 8	K1000	

### Counter positioning setting area (amplifier input method)

Bank	Offset address	Name	Default	Description
00H	2F8H	Pulse count start input signal for Axis 1	K2	Use this area when the counter positioning mode is set to "Amplifier input method". Set the servo amplifier input type to be used as the pulse count start signal.
	2F9H	Pulse count start input signal for Axis 2	K2	
	2FAH	Pulse count start input signal for Axis 3	K2	
	2FBH	Pulse count start input signal for Axis 4	K2	
	2FCH	Pulse count start input signal for Axis 5	K2	
	2FDH	Pulse count start input signal for Axis 6	K2	
	2FEH	Pulse count start input signal for Axis 7	K2	
	2FFH	Pulse count start input signal for Axis 8	K2	

Setting value	Pulse count start input signal
K0	Rising edge of EXT1
K1	Rising edge of EXT2
K2	Rising edge of EXT3
K3	SI-MON1 (level type)
K4	SI-MON4 (level type)
K5	SI-MON5 (level type)
Other	Operates as if K2 (rising edge of EXT3) is set.

**Counter positioning information monitor area**

Bank	Offset address	Name	Default	Description																							
00H	300H to 301H	Pulses at the start of pulse counting for Axis 1	0H	Stores the number of pulses at the start of the pulse count positioning operation. (2 words) 0 to 2,147,483,647 pulses																							
	302H to 303H	Pulses at the start of pulse counting for Axis 2	0H																								
	304H to 305H	Pulses at the start of pulse counting for Axis 3	0H																								
	306H to 307H	Pulses at the start of pulse counting for Axis 4	0H																								
	308H to 309H	Pulses at the start of pulse counting for Axis 5	0H																								
	30AH to 30BH	Pulses at the start of pulse counting for Axis 6	0H																								
	30CH to 30DH	Pulses at the start of pulse counting for Axis 7	0H																								
	30EH to 30FH	Pulses at the start of pulse counting for Axis 8	0H																								
00H	310H	Pulse count status flag	0H	<p>Used to check whether pulses are being counted while the counter positioning function is active. After positioning operations are complete, the applicable bit is turned OFF from the motion side.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Waiting for pulse count start for Axis 1</td> <td>0</td> <td rowspan="6">0: No pulse counting request 1: Pulse counting request</td> </tr> <tr> <td>1</td> <td>Waiting for pulse count start for Axis 2</td> <td>0</td> </tr> <tr> <td>2</td> <td>Waiting for pulse count start for Axis 3</td> <td>0</td> </tr> <tr> <td>3</td> <td>Waiting for pulse count start for Axis 4</td> <td>0</td> </tr> <tr> <td>4</td> <td>Waiting for pulse count start for Axis 5</td> <td>0</td> </tr> <tr> <td>5</td> <td>Waiting for pulse count start for Axis 6</td> <td>0</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Waiting for pulse count start for Axis 1	0	0: No pulse counting request 1: Pulse counting request	1	Waiting for pulse count start for Axis 2	0	2	Waiting for pulse count start for Axis 3	0	3	Waiting for pulse count start for Axis 4	0	4	Waiting for pulse count start for Axis 5	0	5	Waiting for pulse count start for Axis 6	0
Bit	Name	Default	Description																								
0	Waiting for pulse count start for Axis 1	0	0: No pulse counting request 1: Pulse counting request																								
1	Waiting for pulse count start for Axis 2	0																									
2	Waiting for pulse count start for Axis 3	0																									
3	Waiting for pulse count start for Axis 4	0																									
4	Waiting for pulse count start for Axis 5	0																									
5	Waiting for pulse count start for Axis 6	0																									

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description							
				Bit	Name	Default	Description				
				6	Waiting for pulse count start for Axis 7	0	0: Waiting for pulse count 1: Currently counting pulses				
				7	Waiting for pulse count start for Axis 8	0					
				8	Currently counting pulses for Axis 1	0					
				9	Currently counting pulses for Axis 2	0					
				10	Currently counting pulses for Axis 3	0					
				11	Currently counting pulses for Axis 4	0					
				12	Currently counting pulses for Axis 5	0					
				13	Currently counting pulses for Axis 6	0					
				14	Currently counting pulses for Axis 7	0					
				15	Currently counting pulses for Axis 8	0					
				311H	-	-		-	-	-	-
				00H	312H	Pulse count threshold violation flag		0H	When the number of counted pulses exceeds the threshold, the bit corresponding to the axis turns ON. After positioning operations are complete, this flag is turned OFF by turning OFF the counter positioning switchover flag.		
0	Axis 1	0	0: Threshold not reached 1: Counted pulses exceeded the threshold								
1	Axis 2	0									
2	Axis 3	0									
3	Axis 4	0									
4	Axis 5	0									
5	Axis 6	0									
6	Warning clearing for Axis 7 (virtual)	0									
7	Axis 8 (virtual)	0									
15 to 8	-	-					-				

**18.5.14 Latch Correction J-Point Control Function Area**

External latch inputs can be used by using the latch correction J-point control function as the contact for starting next position control when J-point control (speed control) is performed during positioning operations.

Bank	Offset address	Name	Default	Description																																				
00H	320H	Latch mode request flag	0H	<p>Turn ON the bit corresponding to the axis for which the latch correction J-point control function is used.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Axis 1</td> <td>0</td> <td rowspan="6">0: J-point positioning start contact used (Conventional operation) 1: J-point positioning external latch input used</td> </tr> <tr> <td>1</td> <td>Axis 2</td> <td>0</td> </tr> <tr> <td>2</td> <td>Axis 3</td> <td>0</td> </tr> <tr> <td>3</td> <td>Axis 4</td> <td>0</td> </tr> <tr> <td>4</td> <td>Axis 5</td> <td>0</td> </tr> <tr> <td>5</td> <td>Axis 6</td> <td>0</td> </tr> <tr> <td>6</td> <td>Warning clearing for Axis 7 (virtual)</td> <td>0</td> <td></td> </tr> <tr> <td>7</td> <td>Axis 8 (virtual)</td> <td>0</td> <td></td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> <td>-</td> <td></td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Axis 1	0	0: J-point positioning start contact used (Conventional operation) 1: J-point positioning external latch input used	1	Axis 2	0	2	Axis 3	0	3	Axis 4	0	4	Axis 5	0	5	Axis 6	0	6	Warning clearing for Axis 7 (virtual)	0		7	Axis 8 (virtual)	0		15 to 8	-	-	-	
	Bit	Name	Default	Description																																				
	0	Axis 1	0	0: J-point positioning start contact used (Conventional operation) 1: J-point positioning external latch input used																																				
	1	Axis 2	0																																					
2	Axis 3	0																																						
3	Axis 4	0																																						
4	Axis 5	0																																						
5	Axis 6	0																																						
6	Warning clearing for Axis 7 (virtual)	0																																						
7	Axis 8 (virtual)	0																																						
15 to 8	-	-	-																																					
321H to 327H	-	-	-	-																																				
328H	Latch input signal selection for Axis 1	3H	<p>Sets external latch input 1, external latch input 2, and external latch input 3, which are input from the amplifier I/O connectors used for latch mode requests.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td rowspan="10">3 to 0</td> <td>1H: Rising edge of EXT1</td> </tr> <tr> <td>2H: Rising edge of EXT2</td> </tr> <tr> <td>3H: Rising edge of EXT3</td> </tr> <tr> <td>7H: Rising edge of Pr7.111-specified logical output signal</td> </tr> <tr> <td>9H: Falling edge of EXT1</td> </tr> <tr> <td>AH: Falling edge of EXT2</td> </tr> <tr> <td>BH: Falling edge of EXT3</td> </tr> <tr> <td>FH: Falling edge of Pr7.111-specified logical output signal</td> </tr> <tr> <td colspan="2">If any setting other than the above is specified, "Rising edge of EXT3" will be assumed.</td> </tr> <tr> <td>15 to 8</td> <td>-</td> </tr> </tbody> </table>	Bit	Description	3 to 0	1H: Rising edge of EXT1	2H: Rising edge of EXT2	3H: Rising edge of EXT3	7H: Rising edge of Pr7.111-specified logical output signal	9H: Falling edge of EXT1	AH: Falling edge of EXT2	BH: Falling edge of EXT3	FH: Falling edge of Pr7.111-specified logical output signal	If any setting other than the above is specified, "Rising edge of EXT3" will be assumed.		15 to 8	-																						
Bit	Description																																							
3 to 0	1H: Rising edge of EXT1																																							
	2H: Rising edge of EXT2																																							
	3H: Rising edge of EXT3																																							
	7H: Rising edge of Pr7.111-specified logical output signal																																							
	9H: Falling edge of EXT1																																							
	AH: Falling edge of EXT2																																							
	BH: Falling edge of EXT3																																							
	FH: Falling edge of Pr7.111-specified logical output signal																																							
	If any setting other than the above is specified, "Rising edge of EXT3" will be assumed.																																							
	15 to 8	-																																						
329H	Latch input signal selection for Axis 2	3H	Refer to the same item corresponding to Axis 1.																																					

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	32AH	Latch input signal selection for Axis 3	3H	Refer to the same item corresponding to Axis 1.
00H	32BH	Latch input signal selection for Axis 4	3H	Refer to the same item corresponding to Axis 1.
	32CH	Latch input signal selection for Axis 5	3H	Refer to the same item corresponding to Axis 1.
	32DH	Latch input signal selection for Axis 6	3H	Refer to the same item corresponding to Axis 1.
	32EH	Latch input signal selection for Axis 7	3H	Refer to the same item corresponding to Axis 1.
	32FH	Latch input signal selection for Axis 8	3H	Refer to the same item corresponding to Axis 1.

### 18.5.15 Absolute Data Setting Function Area

This function achieves home return (data setting) operations virtually by setting the current value coordinate to 0 in the positioning unit RTEX without changing the position information held by the servo amplifier if, for example, home return cannot be performed when an absolute motor is used.

Bank	Offset address	Name	Default	Description
00H	330H	1-axis data setting offset value	K0	The area bank stores the current value of the amplifier that is obtained when home return is executed by the absolute data setting method. This data is used as the offset value for absolute data setting.
	331H			
	332H	Axis 2 data set offset value	K0	
	333H			
	334H	Axis 3 data set offset value	K0	
	335H			
	336H	Axis 4 data set offset value	K0	
	337H			
	338H	Axis 5 data set offset value	K0	
	339H			
	33AH	Axis 6 data set offset value	K0	
	33BH			
	33CH	Axis 7 data set offset value	K0	
33DH				

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description
	33EH	Axis 8 data set offset value	K0	
	33FH			

### 18.5.16 System Operation Setting Area

This area is used to switch the operation of the positioning unit.

Bank	Offset address	Name	Default	Description							
00H	389H	Deceleration stop operation	K0	<p>Specify the operation when setting the deceleration stop request signal to "Active" (from OFF to ON).</p> <p>0: Deceleration stop</p> <p>During repetitive operation, the axis stops after operations are performed up to the end point of the repetitive operation.</p> <p>1: Pause</p> <ul style="list-style-type: none"> <li>Performs a deceleration stop, and restarts the positioning operation when the deceleration stop request signal is canceled (changed from ON to OFF).</li> <li>Also, the same operation as deceleration stop is performed during any operation other than positioning operation.</li> <li>During repetitive operation, the axis stops after operations are performed up to the E-point of the repetitive operation and the positioning operation is restarted when the deceleration stop request signal is canceled (changed from ON to OFF).</li> <li>If a system stop or emergency stop is executed while the positioning unit is paused, the pause state will be canceled and the operation will not restart even if the deceleration stop request signal is canceled (changed from ON to OFF).</li> </ul>							
	38BH	Positioning operation code	0H	<p>Turn ON the bit corresponding to the axis for which the latch correction J-point control function is used.</p> <p>This area is used by the controller to determine the positioning operation when positioning is started.</p> <p>The set value cannot be changed during positioning operation.</p> <table border="1"> <thead> <tr> <th>Setting value</th> <th>Positioning operation mode</th> </tr> </thead> <tbody> <tr> <td>0H</td> <td>Conventional positioning operation</td> </tr> <tr> <td>1H</td> <td>Positioning speed hold mode</td> </tr> <tr> <td>Other</td> <td>"0H" is assumed.</td> </tr> </tbody> </table>	Setting value	Positioning operation mode	0H	Conventional positioning operation	1H	Positioning speed hold mode	Other
Setting value	Positioning operation mode										
0H	Conventional positioning operation										
1H	Positioning speed hold mode										
Other	"0H" is assumed.										

## 18.5 Details of Common Area in Shared Memory

### 18.5.17 Amplifier Monitor & Control Area

This area is used to read, write, save, and reset parameters and perform other operations on the amplifier connected to the network.

Bank	Offset address	Name	Default	Description						
00H	390H	AMP ID No.	K0	Specify the target axis number (AMP ID No.) for which amplifier parameters are to be monitored.						
	391H	Control flag	0H	Specify the type code of the item to be monitored. After detecting the change of this flag from H0 to Hxx, the positioning unit RTEX executes the monitoring processing requested by the flag and then changes the flag to H0 (no request) at the same time as processing completes.						
	392H	Status	0H	Stores the processing status of amplifier monitoring. The positioning unit RTEX changes this area to H1 at the same time as processing starts. It then stores the processing result and sets the control flag to H0. <table border="1" data-bbox="706 782 1214 1178"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Status</td> <td>0H: No processing 1H: Processing in progress 2H: Normal termination 3H: Abnormal termination 4H: ID error (AMP ID No. not connected) 5H: Inoperable state (Network disconnected, etc.)</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Status	0H: No processing 1H: Processing in progress 2H: Normal termination 3H: Abnormal termination 4H: ID error (AMP ID No. not connected) 5H: Inoperable state (Network disconnected, etc.)
	Bit	Name	Description							
	15 to 0	Status	0H: No processing 1H: Processing in progress 2H: Normal termination 3H: Abnormal termination 4H: ID error (AMP ID No. not connected) 5H: Inoperable state (Network disconnected, etc.)							
	393H	-	-	-						
	394H	Monitor data	-	-	Stores the monitoring result of the requested monitoring item.					
395H										
396H to 39FH	-	-	-	-						

### 18.5.18 Pulse Input Setting Area

Bank	Offset address	Name	Default	Description
00H	3A0H	Pulse input mode for ch1	0020H	Sets up the pulse input signal. Set up the signal according to the application of pulse input.



## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description		
				<b>Bit</b>	<b>Name</b>	<b>Description</b>
				0	Rotation direction	Sets the rotation direction of pulse input. 0: Forward 1: Reverse
				1	-	-
				3 to 2	Pulse Input Method	Sets the input method of pulse input. Bit3 Bit2 0 0: 2-phase input 0 1: Direction identification input 1 0: Individual input 1 1: System reserved
				5 to 4	Input multiplication	Sets the multiple of pulse count when the pulse input method (Bit 3 and Bit 2) is set to "2-phase input". Bit5 Bit4 0 0: ×1 (Multiply by 1) 0 1: ×2 (Multiply by 2) 1 0: ×4 (Multiply by 4) 1 1: System reserved
				7 to 6	Pulse Input application	Specifies "Pulser/High-speed counter" as the pulse input application for each axis. Pulser: Connects a manual pulser to the pulse input. High-speed counter: Bit7 Bit6 0 0: Pulser 0 1: System reserved 1 0: High-speed counter 1 1: System reserved
00H	3A0H	Pulse input mode for ch1	0020H	<b>Bit</b>	<b>Name</b>	<b>Description</b>
				10 to 8	Pulse Input time constant	Sets the time constant for each pulse input signal. Pulse inputs A and B of the same axis are set to the same input time constant. Bit10 Bit9 Bit8 0 0 0: No input time constant 0 0 1: 0.1 us 0 1 0: 0.5us

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description									
				<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td>0 1 1: 1.0us 1 0 0: 2.0us 1 0 1: 10.0 us 1 1 0: No input time constant 1 1 1: No input time constant</td> </tr> <tr> <td>15 to 11</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description			0 1 1: 1.0us 1 0 0: 2.0us 1 0 1: 10.0 us 1 1 0: No input time constant 1 1 1: No input time constant	15 to 11	-	-
Bit	Name	Description											
		0 1 1: 1.0us 1 0 0: 2.0us 1 0 1: 10.0 us 1 1 0: No input time constant 1 1 1: No input time constant											
15 to 11	-	-											
	3A1H	Pulse input mode for ch2	0020H	Refer to "Pulse input mode for ch1".									
	3A2H	Pulse input mode for ch3	0020H	Refer to "Pulse input mode for ch1".									
	3A3H to 3A7H	-	-	-									

### 18.5.19 Pulse Count Control Area

This area is used to control pulse input when the selected pulse input application is "High-speed counter".

Bank	Offset address	Name	Default	Description													
00H	3A8H	Pulse count enable flag	0H	<p>When the bit corresponding to each channel is set to 0, pulse inputs are counted.</p> <p>This flag is enabled only when the pulse input application is set to "High-speed counter".</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Enable pulse count for ch1</td> <td rowspan="3">0: Count pulse inputs. 1: Do not count pulse inputs.</td> </tr> <tr> <td>1</td> <td>Enable pulse count for ch2</td> </tr> <tr> <td>2</td> <td>Enable pulse count for ch3</td> </tr> <tr> <td>15 to 3</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	0	Enable pulse count for ch1	0: Count pulse inputs. 1: Do not count pulse inputs.	1	Enable pulse count for ch2	2	Enable pulse count for ch3	15 to 3	-	-
Bit	Name	Description															
0	Enable pulse count for ch1	0: Count pulse inputs. 1: Do not count pulse inputs.															
1	Enable pulse count for ch2																
2	Enable pulse count for ch3																
15 to 3	-	-															
	3A9H	Pulse count value change request flag	0H	<p>When the bit corresponding to each channel changes from 0 to 1, the pulse count value is changed to the post-change pulse count value that has been set.</p> <p>This flag is an edge trigger flag. When changing the pulse count value, always change this flag from 0 to 1.</p>													

## 18.5 Details of Common Area in Shared Memory

Bank	Offset address	Name	Default	Description		
				<b>Bit</b>	<b>Name</b>	<b>Description</b>
				0	Change pulse count for ch1	0: Do not change pulse count value. 1: Change pulse count value.
				1	Change pulse count for ch2	
				2	Change pulse count for ch3	
	15 to 3			-	-	-
	3AAH to 3AFH	-	-	-		
	3B0H	Pulse count change value for ch1	K0	Set the pulse count value to be changed for each channel.		
	3B1H					
	3B2H	Pulse count change value for ch2	K0	<b>Name</b>	<b>Default</b>	<b>Description</b>
	3B3H			Pulse count change value	K0	Setting range: -2,147,483,648 to +2,147,483,647
	3B4H	Pulse count change value for ch3	K0			
	3B5H					
	3B6H to 3CFH	-	-	-		

### 18.5.20 Pulse Input Monitor Area

This area stores pulse inputs according to the selected pulse input application (“Pulser” or “High-speed counter”).

Bank	Offset address	Name	Default	Description					
00H	3C0H	Pulse count value for ch1	K0	Pulse input values are stored according to the pulse input application (“Pulser” or “High-speed counter”). Pulse input values are cumulatively stored until the pulse input application is changed or all pulse inputs are cleared.					
	3C1H								
	3C2H	Pulse count value for ch2	K0						
	3C3H								
	3C4H	Pulse count value for ch3	K0				<b>Name</b>	<b>Default</b>	<b>Description</b>
	3C5H						Pulse count value	K0	Setting range: -2,147,483,648 to +2,147,483,647 Unit: Pulses
	3C6H to 3CFH	-	-	-					

## 18.6 Details of Each Axis information Area in Shared Memory

### 18.6 Details of Each Axis information Area in Shared Memory

#### 18.6.1 Configuration of Each Axis Information Area

The shared memory is composed of banks. The each axis information area is allocated to bank 01H in the shared memory to enable the user to check information for each axis.

Whole map of shared memory	
00H_000H	96 words
00H_060H	I/O control area
00H_07FH	32 words
00H_080H	Common area
00H_3CFH	896 words
01H_000H	Each axis information area
01H_1FFH	512 words
02H_000H	Each axis setting area
51H_3FFH	81,920 words
52H_000H	Amplifier parameter control area
52H_02FH	48 words
53H_000H	System area
	5,120 words
58H_000H	Synchronous control setting area
58H_37FH	896 words
59H_000H	System area
	7,168 words
5FH_000H	Positioning operation change setting area
5FH_07FH	128 words
60H_000H	Cam pattern editing area
60H_05FH	96 words
61H_000H	Positioning extension table setting area
68H_3FFH	8,192 words

000H	Information area for axis 1	64 words
040H	Information area for axis 2	64 words
080H	Information area for axis 3	64 words
0C0H	Information area for axis 4	64 words
100H	Information area for axis 5	64 words
140H	Information area for axis 6	64 words
180H	Information area for axis 7 (virtual)	64 words
1C0H	Information area for axis 8 (virtual)	64 words
200H	Not used	512 words

## 18.6 Details of Each Axis information Area in Shared Memory

### 18.6.2 Each Axis Information & Monitor Area

This area is used to monitor the amplifier system information and operating status for each axis.

#### ■ Information for Axis 1

Bank	Offset address	Name	Default	Description						
01H	000H to 007H	System ID of Axis 1 (Brand name or vendor name)	-	Stores the brand name or vendor name. This is stored as an ASCII code of up to 16 bytes (16 characters).						
	008H to 00FH	System ID of Axis 1 (Amplifier model code)	-	Stores the model code of the amplifier. This is stored as up to 16 bytes (16 characters) of ASCII code .						
	010H to 017H	System ID of Axis 1 (Firmware version)	-	Stores the firmware version of the amplifier. This is stored as up to 16 bytes (16 characters) of ASCII code .						
	018H to 01FH	System ID of Axis 1 (Motor model code)	-	Stores the model code of the motor. This is stored as up to 16 bytes (16 characters) of ASCII code .						
	020H	Phase of Axis-1 slave axis	K0	Stores the phase of the slave axis after clutch control. Information is stored in this area when the target axis is set as a slave axis and the electronic cam function is used.  The unit system of the master axis is used. If phase information is used in percent (%), perform the following calculation: Phase (%) = (Phase after clutch control)/ (Synchronous master axis cycle) x 100  The phase of the slave axis is cleared at the following timing: <ul style="list-style-type: none"> <li>• When the unit starts</li> <li>• When the slave axis settings are canceled</li> <li>• When synchronization is canceled</li> </ul>						
	021H									
	022H to 023H	-	-	-						
	024H	Advance angle correction amount for Axis 1	K0	Stores the advance angle correction amount. This area stores the values converted to the unit (pulses, μm, inches, or degrees) selected for the master axis.						
	025H									
	0026 to 002B	-	-	-						
	002C	Axis 1 pulse command value	0	Stores the pulse command value sent from the positioning unit RTEX. When home return is completed, the value is reset to "0".						
002D										
				<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Pulse command value</td> <td>-</td> <td>Setting range: -2,147,483,648 to +2,147,483,647 Unit: Pulses</td> </tr> </tbody> </table>	Name	Default	Description	Pulse command value	-	Setting range: -2,147,483,648 to +2,147,483,647 Unit: Pulses
Name	Default	Description								
Pulse command value	-	Setting range: -2,147,483,648 to +2,147,483,647 Unit: Pulses								

## 18.6 Details of Each Axis information Area in Shared Memory

Bank	Offset address	Name	Default	Description																														
	002E	Unit-converted command value for Axis 1	0	Stores the command value based on the pulse command value sent from the positioning unit RTEX. This value is converted to the unit (pulses, $\mu\text{m}$ , inches, or degrees) selected in the setting area for each axis. When home return is completed, the value set for the home coordinates is stored. If "0" is set for the home coordinates, the value will be reset to "0".																														
	002F																																	
				<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Unit-converted command value</td> <td>-</td> <td>Setting range: -2,147,483,648 to +2,147,483,647 Unit: pulses, <math>\mu\text{m}</math>, inches, degrees</td> </tr> </tbody> </table>	Name	Default	Description	Unit-converted command value	-	Setting range: -2,147,483,648 to +2,147,483,647 Unit: pulses, $\mu\text{m}$ , inches, degrees																								
Name	Default	Description																																
Unit-converted command value	-	Setting range: -2,147,483,648 to +2,147,483,647 Unit: pulses, $\mu\text{m}$ , inches, degrees																																
01H	030H	Status display for Axis 1	0H	Stores the displayed status of the amplifier.																														
				<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>In-position</td> <td>0: Deviation counter is outside the in-position range. 1: Deviation counter is within the in-position range.</td> </tr> <tr> <td>1</td> <td>Internal operating status</td> <td>0: Internal position command is running. 1: Internal position command is stopped.</td> </tr> <tr> <td>2</td> <td>Home return completion</td> <td>0: Home return is not complete. 1: Home return is complete.</td> </tr> <tr> <td>3</td> <td>Torque limit</td> <td>0: Normal 1: Contact detection (torque limit)</td> </tr> <tr> <td>4</td> <td>Warning</td> <td>0: Normal 1: Warning occurred</td> </tr> <tr> <td>5</td> <td>Alarm</td> <td>0: Normal 1: Alarm occurred.</td> </tr> <tr> <td>6</td> <td>Servo ready</td> <td>0: Cannot shift to servo ON state. 1: Servo ready state</td> </tr> <tr> <td>7</td> <td>Servo active</td> <td>0: Servo OFF 1: Servo ON</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	0	In-position	0: Deviation counter is outside the in-position range. 1: Deviation counter is within the in-position range.	1	Internal operating status	0: Internal position command is running. 1: Internal position command is stopped.	2	Home return completion	0: Home return is not complete. 1: Home return is complete.	3	Torque limit	0: Normal 1: Contact detection (torque limit)	4	Warning	0: Normal 1: Warning occurred	5	Alarm	0: Normal 1: Alarm occurred.	6	Servo ready	0: Cannot shift to servo ON state. 1: Servo ready state	7	Servo active	0: Servo OFF 1: Servo ON	15 to 8	-	-
				Bit	Name	Description																												
				0	In-position	0: Deviation counter is outside the in-position range. 1: Deviation counter is within the in-position range.																												
				1	Internal operating status	0: Internal position command is running. 1: Internal position command is stopped.																												
				2	Home return completion	0: Home return is not complete. 1: Home return is complete.																												
				3	Torque limit	0: Normal 1: Contact detection (torque limit)																												
				4	Warning	0: Normal 1: Warning occurred																												
				5	Alarm	0: Normal 1: Alarm occurred.																												
	6	Servo ready	0: Cannot shift to servo ON state. 1: Servo ready state																															
7	Servo active	0: Servo OFF 1: Servo ON																																
15 to 8	-	-																																
				Stores information for the I/O connected to the amplifier.																														
				<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>CWL</td> <td>0: Inactive</td> </tr> </tbody> </table>	Bit	Name	Description	0	CWL	0: Inactive																								
Bit	Name	Description																																
0	CWL	0: Inactive																																
	031H	External terminal input monitoring for Axis 1 Monitor	0H																															

## 18.6 Details of Each Axis information Area in Shared Memory

Bank	Offset address	Name	Default	Description																					
				<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>CCWL</td> <td rowspan="7">1: Active</td> </tr> <tr> <td>2</td> <td>HOME (proximity)</td> </tr> <tr> <td>3</td> <td>EX-IN1</td> </tr> <tr> <td>4</td> <td>EX-IN2</td> </tr> <tr> <td>5</td> <td>EX-IN3</td> </tr> <tr> <td>6</td> <td>EX-SON/ EX-IN4</td> </tr> <tr> <td>7</td> <td>EMG-STP</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	1	CCWL	1: Active	2	HOME (proximity)	3	EX-IN1	4	EX-IN2	5	EX-IN3	6	EX-SON/ EX-IN4	7	EMG-STP	15 to 8	-	-
Bit	Name	Description																							
1	CCWL	1: Active																							
2	HOME (proximity)																								
3	EX-IN1																								
4	EX-IN2																								
5	EX-IN3																								
6	EX-SON/ EX-IN4																								
7	EMG-STP																								
15 to 8	-	-																							
	032H	Torque command for Axis 1	-	<p>Stores the torque monitor values.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Torque command</td> <td>-</td> <td>Display range: 0 to 32,766 Unit: 0.1%</td> </tr> </tbody> </table>	Name	Default	Description	Torque command	-	Display range: 0 to 32,766 Unit: 0.1%															
Name	Default	Description																							
Torque command	-	Display range: 0 to 32,766 Unit: 0.1%																							
	033H	Actual speed for Axis 1	-	<p>Stores the actual speed monitor values.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Actual speed</td> <td>-</td> <td>Setting range: 0 to 10,000 Unit: rpm</td> </tr> </tbody> </table>	Name	Default	Description	Actual speed	-	Setting range: 0 to 10,000 Unit: rpm															
Name	Default	Description																							
Actual speed	-	Setting range: 0 to 10,000 Unit: rpm																							
	034H	Deviation for Axis 1	-	<p>Stores the difference (deviation) between the current position managed within the unit and the current position fed back from the amplifier.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Deviation</td> <td>-</td> <td>Setting range: -2,147,483,648 to +2,147,483,647 Unit: Pulses</td> </tr> </tbody> </table> <p>For virtual axes, the deviation is always 0.</p>	Name	Default	Description	Deviation	-	Setting range: -2,147,483,648 to +2,147,483,647 Unit: Pulses															
Name	Default				Description																				
Deviation	-	Setting range: -2,147,483,648 to +2,147,483,647 Unit: Pulses																							
	035H																								
	036H to 037H	-	-	-																					
	038H	Active table or completed table for Axis 1	K0	<p>Stores the number of an active or completed positioning table.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Active or completed table</td> <td>0</td> <td>Setting range: 1 to 600, 10001 to 10089</td> </tr> </tbody> </table>	Name	Default	Description	Active or completed table	0	Setting range: 1 to 600, 10001 to 10089															
Name	Default	Description																							
Active or completed table	0	Setting range: 1 to 600, 10001 to 10089																							
	039H	Auxiliary output code for Axis 1	K0	Stores the auxiliary output code.																					

## 18.6 Details of Each Axis information Area in Shared Memory

Bank	Offset address	Name	Default	Description						
				<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Auxiliary output code</td> <td>K0</td> <td>Setting range: 0 to 65,535</td> </tr> </tbody> </table>	Name	Default	Description	Auxiliary output code	K0	Setting range: 0 to 65,535
Name	Default	Description								
Auxiliary output code	K0	Setting range: 0 to 65,535								
	03AH	Repetition count for axis 1 Setting value	K0	<p>Stores the specified number of positioning operation repetitions. If positioning operations are not repeated, 1 is stored.</p> <p>If positioning operations are repeated unlimitedly, 255 is stored.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Repetition count Setting value</td> <td>-</td> <td>Setting range: 0 to 255 Unit: Number of times</td> </tr> </tbody> </table>	Name	Default	Description	Repetition count Setting value	-	Setting range: 0 to 255 Unit: Number of times
Name	Default	Description								
Repetition count Setting value	-	Setting range: 0 to 255 Unit: Number of times								
	03BH	Repetition count for axis 1 Current value	K0	<p>Stores the current number of repetitions during the operation. If operations are not repeated, 1 is stored.</p> <p>When the current number of repetitions exceeds the upper limit, this number returns to "0".</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Repetition count Setting value</td> <td>-</td> <td>Setting range: 0 to 65,535 Unit: Number of times</td> </tr> </tbody> </table>	Name	Default	Description	Repetition count Setting value	-	Setting range: 0 to 65,535 Unit: Number of times
Name	Default	Description								
Repetition count Setting value	-	Setting range: 0 to 65,535 Unit: Number of times								
	03CH			<p>Stores the current value based on the machine home position as the number of pulses.</p> <p>When home return is completed, this value is reset to "0".</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Current value</td> <td>-</td> <td>Setting range: -2,147,483,648 to +2,147,483,647 Unit: Pulses</td> </tr> </tbody> </table> <p>This value is not updated when the current value update function is executed.</p>	Name	Default	Description	Current value	-	Setting range: -2,147,483,648 to +2,147,483,647 Unit: Pulses
Name	Default	Description								
Current value	-	Setting range: -2,147,483,648 to +2,147,483,647 Unit: Pulses								
	03DH	Current value of Axis 1	K0							
01H	03EH			<p>Stores the current value based on the electrical home position (the value set for the home coordinates). This value is converted to the unit (pulses, <math>\mu\text{m}</math>, inches, or degrees) selected in the setting area for each axis.</p> <p>When home return is completed, the value set in "Home coordinates" is stored. If "0" is set in "Home coordinates", the value will be reset to "0".</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Current value</td> <td>-</td> <td>Setting range: -2,147,483,648 to +2,147,483,647 Unit: pulses, <math>\mu\text{m}</math>, inches, degrees</td> </tr> </tbody> </table> <p>This area is also updated when the current value update coordinate function is used.</p>	Name	Default	Description	Current value	-	Setting range: -2,147,483,648 to +2,147,483,647 Unit: pulses, $\mu\text{m}$ , inches, degrees
Name	Default	Description								
Current value	-	Setting range: -2,147,483,648 to +2,147,483,647 Unit: pulses, $\mu\text{m}$ , inches, degrees								
	03FH	Unit-converted current value for Axis 1 Current value	K0							



## 18.6 Details of Each Axis information Area in Shared Memory

### ■ Information for Axis 2

Bank	Offset address	Name	Default	Description
01H	040H to 047H	System ID of Axis 2 (Brand name or vendor name)	-	Refer to the same item corresponding to Axis 1.
	048H to 04FH	System ID of Axis 2 (Amplifier model code)	-	Refer to the same item corresponding to Axis 1.
	050H to 057H	System ID of Axis 2 (Firmware version)	-	Refer to the same item corresponding to Axis 1.
	058H to 05FH	System ID of Axis 2 (Motor model code)	-	Refer to the same item corresponding to Axis 1.
	060H	Phase of Axis-2 slave axis	K0	Refer to the same item corresponding to Axis 1.
	061H			
	062H to 063H	-	-	-
	064H	Advance angle correction amount for Axis 2	K0	Refer to the same item corresponding to Axis 1.
	065H			
	066H to 06BH	-	-	-
	06CH	Axis 2 pulse command value	0	Refer to the same item corresponding to Axis 1.
	06DH			
	06EH	Unit-converted command value for Axis 2	0	Refer to the same item corresponding to Axis 1.
	06FH			
	070H	Status display for Axis 2	0H	Refer to the same item corresponding to Axis 1.
	071H	External terminal input monitoring for Axis 2 Monitor	0H	Refer to the same item corresponding to Axis 1.
	072H	Torque command for Axis 2	-	Refer to the same item corresponding to Axis 1.
	073H	Actual speed for Axis 2	-	Refer to the same item corresponding to Axis 1.
	074H	Deviation for Axis 2	-	Refer to the same item corresponding to Axis 1.
	075H			
076H	-	-	-	
077H	-	-	-	
078H	Active table or completed table for Axis 2	K0	Refer to the same item corresponding to Axis 1.	

## 18.6 Details of Each Axis information Area in Shared Memory

Bank	Offset address	Name	Default	Description
	079H	Auxiliary output code for Axis 2	K0	Refer to the same item corresponding to Axis 1.
	07AH	Axis 2 repetition count Setting value	K0	Refer to the same item corresponding to Axis 1.
	07BH	Axis 2 repetition count Current value	K0	Refer to the same item corresponding to Axis 1.
	07CH	Current value of Axis 2	K0	Refer to the same item corresponding to Axis 1.
	07DH			
	07EH	Unit-converted current value for Axis 2 Current value	K0	Refer to the same item corresponding to Axis 1.
	07FH			

### ■ Information for Axis 3

Bank	Offset address	Name	Default	Description
01H	080H to 087H	System ID of Axis 3 (Brand name or vendor name)	-	Refer to the same item corresponding to Axis 1.
	088H to 08FH	System ID of Axis 3 (Amplifier model code)	-	Refer to the same item corresponding to Axis 1.
	090H to 097H	System ID of Axis 3 (Firmware version)	-	Refer to the same item corresponding to Axis 1.
	098H to 09FH	System ID of Axis 3 (Motor model code)	-	Refer to the same item corresponding to Axis 1.
	0A0H	Phase of Axis-3 slave axis	K0	Refer to the same item corresponding to Axis 1.
	0A1H			
	0A2H to 0A3H	-	-	-
	0A4H	Advance angle correction amount for Axis 3	K0	Refer to the same item corresponding to Axis 1.
	0A5H			
	0A6H to 0ABH	-	-	-
	0ACH	Axis 3 pulse command value	0	Refer to the same item corresponding to Axis 1.
	0ADH			
	0AEH	Unit-converted command value for Axis 3	0	Refer to the same item corresponding to Axis 1.
	0AFH			
0B0H	Status display for Axis 3	0H	Refer to the same item corresponding to Axis 1.	

## 18.6 Details of Each Axis information Area in Shared Memory

Bank	Offset address	Name	Default	Description
	0B1H	External terminal input monitoring for Axis 3 Monitor	0H	Refer to the same item corresponding to Axis 1.
	0B2H	Torque command for Axis 3	-	Refer to the same item corresponding to Axis 1.
	0B3H	Actual speed for Axis 3	-	Refer to the same item corresponding to Axis 1.
	0B4H	Deviation for Axis 3	-	Refer to the same item corresponding to Axis 1.
	0B5H			
	0B6H	-	-	-
	0B7H	-	-	-
	0B8H	Active table or completed table for Axis 3	K0	Refer to the same item corresponding to Axis 1.
	0B9H	Auxiliary output code for Axis 3	K0	Refer to the same item corresponding to Axis 1.
	0BAH	Axis 3 repetition count Setting value	K0	Refer to the same item corresponding to Axis 1.
	0BBH	Axis 3 repetition count Current value	K0	Refer to the same item corresponding to Axis 1.
	0BCH	Current value of Axis 3	K0	Refer to the same item corresponding to Axis 1.
	0BDH			
	0BEH	Unit-converted current value for Axis 3 Current value	K0	Refer to the same item corresponding to Axis 1.
	0BFH			

### ■ Information for Axis 4

Bank	Offset address	Name	Default	Description
01H	0C0H to 0C7H	System ID of Axis 4 (Brand name or vendor name)	-	Refer to the same item corresponding to Axis 1.
	0C8H to 0CFH	System ID of Axis 4 (Amplifier model code)	-	Refer to the same item corresponding to Axis 1.
	0D0H to 0D7H	System ID of Axis 4 (Firmware version)	-	Refer to the same item corresponding to Axis 1.
	0D8H to 0DFH	System ID of Axis 4 (Motor model code)	-	Refer to the same item corresponding to Axis 1.

## 18.6 Details of Each Axis information Area in Shared Memory

Bank	Offset address	Name	Default	Description
	0E0H	Phase of Axis-4 slave axis	K0	Refer to the same item corresponding to Axis 1.
	0E1H			
	0E2H to 0E3H	-	-	-
	0E4H	Advance angle correction amount for Axis 4	K0	Refer to the same item corresponding to Axis 1.
	0E5H			
	0E6H to 0EBH	-	-	-
	0ECH	Axis 4 pulse command value	0	Refer to the same item corresponding to Axis 1.
	0EDH			
	0EEH	Unit-converted command value for Axis 4	0	Refer to the same item corresponding to Axis 1.
	0EFH			
	0F0H	Status display for Axis 4	0H	Refer to the same item corresponding to Axis 1.
	0F1H	External terminal input monitoring for Axis 4 Monitor	0H	Refer to the same item corresponding to Axis 1.
	0F2H	Torque command for Axis 4	-	Refer to the same item corresponding to Axis 1.
	0F3H	Actual speed for Axis 4	-	Refer to the same item corresponding to Axis 1.
	0F4H	Deviation for Axis 4	-	Refer to the same item corresponding to Axis 1.
	0F5H			
	0F6H	-	-	-
	0F7H	-	-	-
	0F8H	Active table or completed table for Axis 4	K0	Refer to the same item corresponding to Axis 1.
	0F9H	Auxiliary output code for Axis 4	K0	Refer to the same item corresponding to Axis 1.
	0FAH	Axis 4 repetition count Setting value	K0	Refer to the same item corresponding to Axis 1.
	0FBH	Axis 4 repetition count Current value	K0	Refer to the same item corresponding to Axis 1.
	0FCH	Current value of Axis 4	K0	Refer to the same item corresponding to Axis 1.
	0FDH			
	0FEH	Unit-converted current value for Axis 4	K0	Refer to the same item corresponding to Axis 1.
	0FFH			
		Current value		

## 18.6 Details of Each Axis information Area in Shared Memory

### ■ Information for Axis 5

Bank	Offset address	Name	Default	Description
01H	100H to 107H	System ID of Axis 5 (Brand name or vendor name)	-	Refer to the same item corresponding to Axis 1.
	108H to 10FH	System ID of Axis 5 (Amplifier model code)	-	Refer to the same item corresponding to Axis 1.
	110H to 117H	System ID of Axis 5 (Firmware version)	-	Refer to the same item corresponding to Axis 1.
	118H to 11FH	System ID of Axis 5 (Motor model code)	-	Refer to the same item corresponding to Axis 1.
	120H 121H	Phase of Axis-5 slave axis	K0	Refer to the same item corresponding to Axis 1.
	122H to 123H	-	-	-
	124H 125H	Advance angle correction amount for Axis 5	K0	Refer to the same item corresponding to Axis 1.
	126H to 12BH	-	-	-
	12CH 12DH	Axis 5 pulse command value	0	Refer to the same item corresponding to Axis 1.
	12EH 12FH	Unit-converted command value for Axis 5	0	Refer to the same item corresponding to Axis 1.
	130H	Status display for Axis 5	0H	Refer to the same item corresponding to Axis 1.
	131H	External terminal input monitoring for Axis 5 Monitor	0H	Refer to the same item corresponding to Axis 1.
	132H	Torque command for Axis 5	-	Refer to the same item corresponding to Axis 1.
	133H	Actual speed for Axis 5	-	Refer to the same item corresponding to Axis 1.
	134H 135H	Deviation for Axis 5	-	Refer to the same item corresponding to Axis 1.
	136H	-	-	-
	137H	-	-	-
	138H	Active table or completed table for Axis 5	K0	Refer to the same item corresponding to Axis 1.

## 18.6 Details of Each Axis information Area in Shared Memory

Bank	Offset address	Name	Default	Description
	139H	Auxiliary output code for Axis 5	K0	Refer to the same item corresponding to Axis 1.
	13AH	Repetition count for Axis 5 Setting value	K0	Refer to the same item corresponding to Axis 1.
	13BH	Repetition count for axis 5 Current value	K0	Refer to the same item corresponding to Axis 1.
	13CH	Current value of Axis 5	K0	Refer to the same item corresponding to Axis 1.
	13DH			
	13EH	Unit-converted current value for Axis 5 Current value	K0	Refer to the same item corresponding to Axis 1.
	13FH			

### ■ Information for Axis 6

Bank	Offset address	Name	Default	Description
01H	140H to 147H	System ID of Axis 6 (Brand name or vendor name)	-	Refer to the same item corresponding to Axis 1.
	148H to 14FH	System ID of Axis 6 (Amplifier model code)	-	Refer to the same item corresponding to Axis 1.
	150H to 157H	System ID of Axis 6 (Firmware version)	-	Refer to the same item corresponding to Axis 1.
	158H to 15FH	System ID of Axis 6 (Motor model code)	-	Refer to the same item corresponding to Axis 1.
	160H	Phase of Axis-6 slave axis	K0	Refer to the same item corresponding to Axis 1.
	161H			
	162H to 163H	-	-	-
	164H	Advance angle correction amount for Axis 6	K0	Refer to the same item corresponding to Axis 1.
	165H			
	166H to 16BH	-	-	-
	16CH	Axis 6 pulse command value	0	Refer to the same item corresponding to Axis 1.
	16DH			
	16EH	Unit-converted command value for Axis 6	0	Refer to the same item corresponding to Axis 1.
	16FH			
170H	Status display for Axis 6	0H	Refer to the same item corresponding to Axis 1.	

## 18.6 Details of Each Axis information Area in Shared Memory

Bank	Offset address	Name	Default	Description
	171H	External terminal input monitoring for Axis 6 Monitor	0H	Refer to the same item corresponding to Axis 1.
	172H	Torque command for Axis 6	-	Refer to the same item corresponding to Axis 1.
	173H	Actual speed for Axis 6	-	Refer to the same item corresponding to Axis 1.
	174H	Deviation for Axis 6	-	Refer to the same item corresponding to Axis 1.
	175H			
	176H	-	-	-
	177H	-	-	-
	178H	Active table or completed table for Axis 6	K0	Refer to the same item corresponding to Axis 1.
	179H	Auxiliary output code for Axis 6	K0	Refer to the same item corresponding to Axis 1.
	17AH	Axis 6 repetition count Setting value	K0	Refer to the same item corresponding to Axis 1.
	17BH	Axis 6 repetition count Current value	K0	Refer to the same item corresponding to Axis 1.
	17CH	Current value of Axis 6	K0	Refer to the same item corresponding to Axis 1.
	17DH			
	17EH	Unit-converted current value for Axis 6 Current value	K0	Refer to the same item corresponding to Axis 1.
	17FH			

### ■ Information for Axis 7 (virtual)

Bank	Offset address	Name	Default	Description
01H	180H to 187H	System ID of Axis 7 (Brand name or vendor name)	-	Refer to the same item corresponding to Axis 1.
	188H to 18FH	System ID of Axis 7 (Amplifier model code)	-	Refer to the same item corresponding to Axis 1.
	190H to 197H	System ID of Axis 7 (Firmware version)	-	Refer to the same item corresponding to Axis 1.
	198H to 19FH	System ID of Axis 7 (Motor model code)	-	Refer to the same item corresponding to Axis 1.

## 18.6 Details of Each Axis information Area in Shared Memory

Bank	Offset address	Name	Default	Description
	1A0H	Phase of Axis-7 slave axis	K0	Refer to the same item corresponding to Axis 1.
	1A1H			
	1A2H to 1A3H	-	-	-
	1A4H	Advance angle correction amount for Axis 7	K0	Refer to the same item corresponding to Axis 1.
	1A5H			
	1A6H to 1ABH	-	-	-
	1ACH	Axis 7 pulse command value	0	Refer to the same item corresponding to Axis 1.
	1ADH			
	1AEH	Unit-converted command value for Axis 7	0	Refer to the same item corresponding to Axis 1.
	1AFH			
	1B0H	Status display for Axis 7	0H	Refer to the same item corresponding to Axis 1.
	1B1H	External terminal input monitoring for Axis 7 Monitor	0H	Refer to the same item corresponding to Axis 1.
	1B2H	Torque command for Axis 7	-	Refer to the same item corresponding to Axis 1.
	1B3H	Actual speed for Axis 7	-	Refer to the same item corresponding to Axis 1.
	1B4H	Deviation for Axis 7	-	Refer to the same item corresponding to Axis 1.
	1B5H			
	1B6H	-	-	-
	1B7H	-	-	-
	1B8H	Active table or completed table for Axis 7	K0	Refer to the same item corresponding to Axis 1.
	1B9H	Auxiliary output code for Axis 7	K0	Refer to the same item corresponding to Axis 1.
	1BAH	Axis 7 repetition count Setting value	K0	Refer to the same item corresponding to Axis 1.
	1BBH	Axis 7 repetition count Current value	K0	Refer to the same item corresponding to Axis 1.
	1BCH	Current value of Axis 7	K0	Refer to the same item corresponding to Axis 1.
	1BDH			
	1BEH	Unit-converted current value for Axis 7 Current value	K0	Refer to the same item corresponding to Axis 1.
	1BFH			



## 18.6 Details of Each Axis information Area in Shared Memory

### ■ Information for Axis 8 (virtual)

Bank	Offset address	Name	Default	Description
01H	1C0H to 1C7H	System ID of Axis 8 (Brand name or vendor name)	-	Refer to the same item corresponding to Axis 1.
	1C8H to 1CFH	System ID of Axis 8 (Amplifier model code)	-	Refer to the same item corresponding to Axis 1.
	1D0H to 1D7H	System ID of Axis 8 (Firmware version)	-	Refer to the same item corresponding to Axis 1.
	1D8H to 1DFH	System ID of Axis 8 (Motor model code)	-	Refer to the same item corresponding to Axis 1.
	1E0H 1E1H	Phase of Axis-8 slave axis	K0	Refer to the same item corresponding to Axis 1.
	1E2H to 1E3H	-	-	-
	1E4H 1E5H	Advance angle correction amount for Axis 8	K0	Refer to the same item corresponding to Axis 1.
	1E6H to 1EBH	-	-	-
	1ECH 1EDH	Axis 8 pulse command value	0	Refer to the same item corresponding to Axis 1.
	1EEH 1EFH	Unit-converted command value for Axis 8	0	Refer to the same item corresponding to Axis 1.
	1F0H	Status display for Axis 8	0H	Refer to the same item corresponding to Axis 1.
	1F1H	External terminal input monitoring for Axis 8 Monitor	0H	Refer to the same item corresponding to Axis 1.
	1F2H	Torque command for Axis 8	-	Refer to the same item corresponding to Axis 1.
	1F3H	Actual speed for Axis 8	-	Refer to the same item corresponding to Axis 1.
	1F4H 1F5H	Deviation for Axis 8	-	Refer to the same item corresponding to Axis 1.
	1F6H	-	-	-
	1F7H	-	-	-
	1F8H	Active table or completed table for Axis 8	K0	Refer to the same item corresponding to Axis 1.

## 18.6 Details of Each Axis information Area in Shared Memory

---

Bank	Offset address	Name	Default	Description
	1F9H	Auxiliary output code for Axis 8	K0	Refer to the same item corresponding to Axis 1.
	1FAH	Axis 8 repetition count Setting value	K0	Refer to the same item corresponding to Axis 1.
	1FBH	Axis 8 repetition count Current value	K0	Refer to the same item corresponding to Axis 1.
	1FCH	Current value of Axis 8	K0	Refer to the same item corresponding to Axis 1.
	1FDH			
	1FEH	Unit-converted current value for Axis 8	K0	Refer to the same item corresponding to Axis 1.
	1FFH			

## 18.7 Details of Each Axis Setting Area in Shared Memory

### 18.7.1 Configuration of Each Axis Setting Area

The each axis setting area is used to set positioning parameters and positioning data. Positioning data settings for each axis are composed of 600 tables in the standard area and 25 tables (10001 to 10025 tables) in the extended area.

Whole map of shared memory	
00H_000H	96 words
00H_060H 00H_07FH	I/O control area 32 words
00H_080H	Common area
00H_3CFH	896 words
01H_000H	Each axis information area
01H_1FFH	512 words
02H_000H	Each axis setting area
51H_3FFH	81,920 words
52H_000H 52H_02FH	Amplifier parameter control area 48 words
53H_000H	System area
	5,120 words
58H_000H	Synchronous control setting area
58H_37FH 59H_000H	896 words System area
	7,168 words
5FH_000H	Positioning operation change setting area
5FH_07FH	128 words
60H_000H	Cam pattern editing area
60H_05FH	96 words
61H_000H	Positioning extension table setting area
68H_3FFH	8,192 words

02H_000H	Information area for axis 2	10,240 words
0CH_000H	Information area for axis 3	10,240 words
16H_000H	Information area for axis 3	10,240 words
20H_000H	Information area for axis 4	10,240 words
2AH_000H	Information area for axis 5	10,240 words
34H_000H	Information area for axis 6	10,240 words
3EH_000H	Information area for axis 7 (virtual)	10,240 words
48H_000H	Information area for axis 8 (virtual)	10,240 words

02H_000H	Positioning parameter setting area	60 words
02H_050H	Positioning data setting area	
	Standard area: 600 tables (Tables 1 to 600)	
	Extended area: 25 tables (Tables 10001 to 10025)	10,160 words

### 18.7.2 Positioning parameter setting area

Shared memory addresses of positioning parameters are the starting addresses allocated to each axis plus offset addresses.

## 18.7 Details of Each Axis Setting Area in Shared Memory

### ■ Starting addresses of positioning parameters for each axis

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
Bank									
02H	0CH	16H	20H	2AH	34H	3EH	48H	000H	Starting addresses of positioning parameters

### ■ Positioning parameters for each axis

Data in the following format is stored in the memory starting from the starting address of positioning parameters for each axis.

Offset address	Name	Default	Description						
000H	Unit setting	0000H	<p>Sets the unit system for the movement amount for positioning control of each axis. Set the same unit system for all interpolation axes.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Unit setting</td> <td> <p>Sets the unit of movement amounts for positioning control.</p> <p>0000H: Pulses</p> <p>0100H: <math>\mu\text{m}</math> (Minimum position command: 0.1 <math>\mu\text{m}</math>)</p> <p>0101H: <math>\mu\text{m}</math> (Minimum position command: 1 <math>\mu\text{m}</math>)</p> <p>0200H: Inches (Minimum position command: 0.1 inches)</p> <p>0201H: Inches (Minimum position command: 1 inch)</p> <p>0300H: Degrees (Minimum position command: 0.1 degree)</p> <p>0301H: Degrees (Minimum position command: 1 degree)</p> <p>Any other settings will result in an error.</p> </td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Unit setting	<p>Sets the unit of movement amounts for positioning control.</p> <p>0000H: Pulses</p> <p>0100H: <math>\mu\text{m}</math> (Minimum position command: 0.1 <math>\mu\text{m}</math>)</p> <p>0101H: <math>\mu\text{m}</math> (Minimum position command: 1 <math>\mu\text{m}</math>)</p> <p>0200H: Inches (Minimum position command: 0.1 inches)</p> <p>0201H: Inches (Minimum position command: 1 inch)</p> <p>0300H: Degrees (Minimum position command: 0.1 degree)</p> <p>0301H: Degrees (Minimum position command: 1 degree)</p> <p>Any other settings will result in an error.</p>
Bit	Name	Description							
15 to 0	Unit setting	<p>Sets the unit of movement amounts for positioning control.</p> <p>0000H: Pulses</p> <p>0100H: <math>\mu\text{m}</math> (Minimum position command: 0.1 <math>\mu\text{m}</math>)</p> <p>0101H: <math>\mu\text{m}</math> (Minimum position command: 1 <math>\mu\text{m}</math>)</p> <p>0200H: Inches (Minimum position command: 0.1 inches)</p> <p>0201H: Inches (Minimum position command: 1 inch)</p> <p>0300H: Degrees (Minimum position command: 0.1 degree)</p> <p>0301H: Degrees (Minimum position command: 1 degree)</p> <p>Any other settings will result in an error.</p>							
001H	-	-	-						
002H	Number of pulses per revolution	1	<p>Sets the number of pulses per motor revolution. This is required to convert the number of pulses in terms of mm, inches, or degrees.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>31 to 0</td> <td>Number of pulses per revolution</td> <td> <p>Number of pulses per motor revolution</p> <p>Setting range: 1 to 16,777,215</p> <p>Unit: mm, inches, degrees</p> <p>Any other settings will result in an error.</p> </td> </tr> </tbody> </table>	Bit	Name	Description	31 to 0	Number of pulses per revolution	<p>Number of pulses per motor revolution</p> <p>Setting range: 1 to 16,777,215</p> <p>Unit: mm, inches, degrees</p> <p>Any other settings will result in an error.</p>
Bit			Name	Description					
31 to 0	Number of pulses per revolution	<p>Number of pulses per motor revolution</p> <p>Setting range: 1 to 16,777,215</p> <p>Unit: mm, inches, degrees</p> <p>Any other settings will result in an error.</p>							
003H									
004H	Movement amount	K1	Sets the movement amount per motor revolution. This is required to convert the number of pulses in terms of mm,						

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description																	
005H	per revolution		inches, or degrees.																	
			Bit	Name	Description	31 to 0	Movement amount per revolution	Movement amount per motor revolution Setting range: 1 to 16,777,215 Unit: mm; 1 $\mu$ m inch: 1/10,000 inch degree: 1 degree Any other settings will result in an error.												
Bit	Name	Description																		
31 to 0	Movement amount per revolution	Movement amount per motor revolution Setting range: 1 to 16,777,215 Unit: mm; 1 $\mu$ m inch: 1/10,000 inch degree: 1 degree Any other settings will result in an error.																		
006H	-	-	-																	
007H	-	-	-																	
008H	-	-	-																	
009H	-	-	-																	
00AH	-	-	-																	
00BH	Soft limit enable/disable setting	0H	Enables or disables soft limits for each control.																	
			Bit	Name	Description	0	Enable/disable soft limits during positioning control	0: Disables soft limits during positioning control. 1: Enables soft limits during positioning control.	1	Enable/disable soft limits during home return	0: Disables soft limits during home return. 1: Enables soft limits during home return.	2	Enable/disable soft limits during JOG operation	0: Disables soft limits during JOG operation. 1: Enables soft limits during JOG operation.	3	Enable/disable soft limits during pulser operation	0: Disables soft limits during pulser operation. 1: Enables soft limits during pulser operation.	15 to 4	-	-
			Bit	Name	Description															
			0	Enable/disable soft limits during positioning control	0: Disables soft limits during positioning control. 1: Enables soft limits during positioning control.															
			1	Enable/disable soft limits during home return	0: Disables soft limits during home return. 1: Enables soft limits during home return.															
			2	Enable/disable soft limits during JOG operation	0: Disables soft limits during JOG operation. 1: Enables soft limits during JOG operation.															
3	Enable/disable soft limits during pulser operation	0: Disables soft limits during pulser operation. 1: Enables soft limits during pulser operation.																		
15 to 4	-	-																		
00CH	Soft limits: Upper limit value	K +21474826 24	Sets the upper limit value of soft limits for absolute coordinates.																	
00DH			Name	Default	Description	Soft limits: Upper value	K +2147482624	Setting range: -2147482624 to +2147482624 Any other settings will result in an error.												
Name	Default	Description																		
Soft limits: Upper value	K +2147482624	Setting range: -2147482624 to +2147482624 Any other settings will result in an error.																		

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description									
			inch (0.00001 inch): -21,474.82624 to 21,474.82624 inches inch (0.0001 inch): -214,748.2624 to 214,748.2624 inch degree (0.1 degree): -214,748,262.4 to 214,748,262.4 degrees degree (1 degree): -2,147,482,624 to 2,147,482,624 degrees									
00EH			Sets the lower limit value of soft limits for absolute coordinates.									
00FH	Soft limits: Lower limit value	K-2147482624	<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Soft limits: Lower limit value</td> <td>K-2147482624</td> <td>Setting range: -2147482624 to +2147482624 Any other settings will result in an error.</td> </tr> </tbody> </table> <p>Interpretation changes according to the unit settings as below. Pulses: -2,147,482,624 to 2,147,482,624 pulses µm (0.1 µm): -214,748,262.4 to 214,748,262.4 µm µm (1 µm): -2,147,482,624 to 2,147,482,624 µm inch (0.00001 inch): -21,474.82624 to 21,474.82624 inches inch (0.0001 inch): -214,748.2624 to 214,748.2624 inch degree (0.1 degree): -214,748,262.4 to 214,748,262.4 degrees degree (1 degree): -2,147,482,624 to 2,147,482,624 degrees</p>	Name	Default	Description	Soft limits: Lower limit value	K-2147482624	Setting range: -2147482624 to +2147482624 Any other settings will result in an error.			
Name	Default	Description										
Soft limits: Lower limit value	K-2147482624	Setting range: -2147482624 to +2147482624 Any other settings will result in an error.										
010H	-	-	-									
011H	-	-	-									
012H	Auxiliary output mode	0A00H	<p>Sets whether to use the auxiliary output function for auxiliary output contacts and auxiliary output codes. The ON time of the auxiliary output contact is determined by "Auxiliary output ON time" below.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>7 to 0</td> <td>Auxiliary output mode</td> <td>00H: Do not use the auxiliary output function (for auxiliary output contacts and codes) 01H: Use With mode 02H: Use Delay mode Any other settings will result in an error.</td> </tr> <tr> <td>15 to 8</td> <td>Auxiliary output ON time</td> <td>Setting range: 00H (0 ms) to FFH (255 ms)</td> </tr> </tbody> </table>	Bit	Name	Description	7 to 0	Auxiliary output mode	00H: Do not use the auxiliary output function (for auxiliary output contacts and codes) 01H: Use With mode 02H: Use Delay mode Any other settings will result in an error.	15 to 8	Auxiliary output ON time	Setting range: 00H (0 ms) to FFH (255 ms)
Bit	Name	Description										
7 to 0	Auxiliary output mode	00H: Do not use the auxiliary output function (for auxiliary output contacts and codes) 01H: Use With mode 02H: Use Delay mode Any other settings will result in an error.										
15 to 8	Auxiliary output ON time	Setting range: 00H (0 ms) to FFH (255 ms)										
013H	Auxiliary output Delay ratio	K0	<p>When using Delay mode for auxiliary output, specifies the ratio (%) of output. The setting range is 0% to 100%. If the setting is 50%, auxiliary output will be performed when the positioning movement amount exceeds 50%.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Auxiliary output Delay ratio</td> <td>Set the delay ratio. Setting range: 0 to 100 Unit: % Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Auxiliary output Delay ratio	Set the delay ratio. Setting range: 0 to 100 Unit: % Any other settings will result in an error.			
Bit	Name	Description										
15 to 0	Auxiliary output Delay ratio	Set the delay ratio. Setting range: 0 to 100 Unit: % Any other settings will result in an error.										

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description															
014H	Amplifier operation setting	1H	Enables/disables the limit input of amplifiers and sets the movement direction or limit connection method, etc. (Note 1): The settings must be written to EEPROM within the amplifier, so the amplifier must be restarted after the settings are complete.															
			<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Limit enable/disable</td> <td>0: Use the input of the limit signal. 1: Ignore the input of the limit signal.</td> </tr> <tr> <td>1</td> <td>CW/CCW movement direction</td> <td>0: CW+/CCW- 1: CCW+/CW-</td> </tr> <tr> <td>2</td> <td>Limit connection</td> <td>0: Standard connection (Forward: CWL, Reverse: CCWL) 1: Reverse connection (Forward: CCWL, Reverse: CWL)</td> </tr> <tr> <td>15 to 3</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	0	Limit enable/disable	0: Use the input of the limit signal. 1: Ignore the input of the limit signal.	1	CW/CCW movement direction	0: CW+/CCW- 1: CCW+/CW-	2	Limit connection	0: Standard connection (Forward: CWL, Reverse: CCWL) 1: Reverse connection (Forward: CCWL, Reverse: CWL)	15 to 3	-	-
			Bit	Name	Description													
			0	Limit enable/disable	0: Use the input of the limit signal. 1: Ignore the input of the limit signal.													
			1	CW/CCW movement direction	0: CW+/CCW- 1: CCW+/CW-													
2	Limit connection	0: Standard connection (Forward: CWL, Reverse: CCWL) 1: Reverse connection (Forward: CCWL, Reverse: CWL)																
15 to 3	-	-																
015H to 019H	-	-	-															
01AH	Completion width	K10	The complete flag turns ON when the specified movement amount or the current value of the amplifier falls within the completion width during positioning control or JOG operation.															
01BH				<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>31 to 0</td> <td>Completion width</td> <td>Set the completion width. Setting range: 0 to 2,147,482,624 Unit: Pulses Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	31 to 0	Completion width	Set the completion width. Setting range: 0 to 2,147,482,624 Unit: Pulses Any other settings will result in an error.								
Bit	Name	Description																
31 to 0	Completion width	Set the completion width. Setting range: 0 to 2,147,482,624 Unit: Pulses Any other settings will result in an error.																
01CH	Monitored value error setting	0H	The judgment value for the torque monitor value and the actual speed of each axis can be set to issue an error or warning.															
			<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Enable torque judgment value</td> <td>0: Disables torque judgment values. 1: Enables torque judgment values.</td> </tr> <tr> <td>1</td> <td>Torque judgment value error/warning setting</td> <td>0: Issues an error when enabled. 1: Issues a warning when enabled.</td> </tr> <tr> <td>2</td> <td>Enable actual speed judgment value</td> <td>0: Disables actual speed judgment values. 1: Enables actual speed judgment values.</td> </tr> </tbody> </table>	Bit	Name	Description	0	Enable torque judgment value	0: Disables torque judgment values. 1: Enables torque judgment values.	1	Torque judgment value error/warning setting	0: Issues an error when enabled. 1: Issues a warning when enabled.	2	Enable actual speed judgment value	0: Disables actual speed judgment values. 1: Enables actual speed judgment values.			
			Bit	Name	Description													
0	Enable torque judgment value	0: Disables torque judgment values. 1: Enables torque judgment values.																
1	Torque judgment value error/warning setting	0: Issues an error when enabled. 1: Issues a warning when enabled.																
2	Enable actual speed judgment value	0: Disables actual speed judgment values. 1: Enables actual speed judgment values.																

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			3	Actual speed judgment error/warning setting	0: Issues an error when enabled. 1: Issues a warning when enabled.
			15 to 4	-	-
01DH	Torque judgement value	K5000	Sets a limit value for the torque.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Torque judgement value	Sets a torque judgement value. Setting range: 0 to 5,000 Unit: 0.1% Any other settings will result in an error.
01EH	Actual speed judgement value	K5000	Sets a limit value for the actual speed.		
01FH			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			31 to 0	Actual speed judgement value	Sets an actual speed judgement value. Setting range: 0 to 10,000 Unit: rpm Any other settings will result in an error.
020H	Home return setting code	0H	Sets a pattern of home return.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Home return setting code	000H: DOG method 1 001H: DOG method 2 002H: DOG method 3 003H: Limit method 1 004H: Limit method 2 005H: Z-phase method 006H: Stop-on-contact method 1 007H: Stop-on-contact method 2 008H: Data setting 100H: High-speed home return method 101H: Absolute data setting method Any other settings will result in an error.
021H	Home return direction	K0	Sets the moving direction of home return.		



## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Home return direction	0: Direction in which elapsed value decreases (Limit "-" direction) 1: Direction in which elapsed value increases (Limit "+" direction) Any other settings will result in an error.
022H	Home return acceleration time	K100	Sets the acceleration or deceleration time during home return. At the start of home return, acceleration is performed for the specified acceleration time, deceleration is performed for the specified deceleration time after near home input, and then the speed changes to the creep rate.		
023H	Home return deceleration time	K100	<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Home return acceleration time Home return deceleration time	Sets acceleration time or deceleration time. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.
024H	Home return target speed	K1,000	Sets the target speed for home return. If there is no near home input after home return starts, acceleration is performed to shift to the target speed.		
025H			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			31 to 0	Home return target speed	Setting range: 1 to 2,147,482,624 Unit: Dependent upon the specified unlit Any other settings will result in an error. The setting range changes according to the unit settings as below. Pulses: 1 to 2,147,482,624 pps µm: 1 to 2,147,482,624 µm/s inch: 0.001 to 2,147,482.624 inches/s degree: 0.001 to 2,147,482.624 rev/s
026H	Home return creep speed	K100	Sets the speed of searching for the home position after near home input. Set a value lower than the home return target speed.		
027H			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			31 to 0	Home return creep speed	Setting range: 1 to 2,147,482,624 Unit: Dependent upon the specified unlit

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
					Any other settings will result in an error. The setting range changes according to the unit settings as below. Pulses: 1 to 2,147,482,624 pps µm: 1 to 2,147,482,624 µm/s inch: 0.001 to 2,147,482.624 inches/s degree: 0.001 to 2,147,482.624 rev/s
028H	-	-	-		
029H	JOG operation setting code	0H	Sets the mode of JOG operation.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			0	-	-
			1	Acceleration/ deceleration pattern setting	0: Linear acceleration / deceleration 1: S-shaped acceleration / deceleration
15 to 2	-	-			
02AH	JOG operation acceleration time	K100	Sets the acceleration time or deceleration time for JOG operation.		
02BH	JOG operation deceleration time	K100	Acceleration is performed for the specified acceleration time at the beginning of JOG operation and deceleration is performed for the specified deceleration time when the starting contact of JOG operation turns OFF.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	JOG operation acceleration time JOG operation deceleration time	Sets acceleration time or deceleration time. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.
02CH	JOG operation target speed	K1,000	Sets the target speed for JOG operation. After JOG operation is started, acceleration operation is performed to shift to the target speed while the starting contact of JOG operation is ON. After the target speed is reached, operations are performed at the target speed.		
02DH			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			31 to 0	JOG operation target speed	Setting range: 1 to 2,147,482,624 Unit: Dependent upon the specified unit Any other settings will result in an error.

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
					The setting range changes according to the unit settings as below. Pulses: 1 to 2,147,482,624 pps µm: 1 to 2,147,482,624 µm/s inch: 0.001 to 2,147,482.624 inches/s degree: 0.001 to 2,147,482.624 rev/s
02EH to 032H	-	-	-		
033H	Emergency stop deceleration time	K100	This parameter takes effect when an emergency stop is requested by I/O, causing the deceleration operation to be completed in the specified deceleration time.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Emergency stop deceleration time	Sets the deceleration time for stop operation. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.
034H	-	-	-		
035H	Limit stop deceleration time	K100	This parameter takes effect when the limit is input during operation, causing the deceleration operation to be completed in the specified deceleration time.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Limit stop deceleration time	Sets the deceleration time for stop operation. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.
036H	-	-	-		
037H	Error stop deceleration time	K100	This parameter takes effect when an error occurs, causing the deceleration operation to be completed in the specified deceleration time.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Error stop deceleration time	Sets the deceleration time for stop operation. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.
038H	Maximum speed for pulser operation	0H	Selects the channel (1 to 3) to be used in the pulse input circuit when pulser operation is requested by I/O.		

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description		
	setting code		<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Pulser operation setting code	0: Pulse input CH1 1: Pulse input CH2 2: Pulse input CH3 Any other settings will result in an error.
039H	Maximum speed for pulser operation ratio numerator	K1	Sets a multiplier for input pulse trains during pulser operation. Multiply the input pulse train from the pulser by (Pulser operation ratio numerator) / (Pulser operation ratio denominator) to obtain the number of command pulses.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Pulser operation ratio numerator	Setting range: 1 to 32,767 Any other settings will result in an error.
03AH	Maximum speed for pulser operation ratio denominator	K1	Sets a multiplier for input pulse trains during pulser operation. Multiply the input pulse train from the pulser by (Pulser operation ratio numerator) / (Pulser operation ratio denominator) to obtain the number of command pulses.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Pulser operation ratio denominator	Setting range: 1 to 32,767 Any other settings will result in an error.
03BH	Pulser operation method	0H	Sets the pulser operation method.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Pulser operation method	0: Standard operation 1: Speed limit (Pulse retention) 2: Speed limit (Pulse truncation) Any other settings will result in an error.
03CH	-	-	-		
03DH	Stop-on-contact torque value for home return	K100	Use this parameter when stop-on-contact method 1 or 2 is specified for the home return method. It is regarded as a criterion for judging the home return once the torque value of the AMP exceeded this set value by the stop-on-contact.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			15 to 0	Stop-on-contact torque value for home return	Sets the deceleration time for stop operation. Setting range: 0 to 5,000 Unit: %

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description														
			<b>Bit</b>	<b>Name</b>	<b>Description</b>												
					Any other settings will result in an error.												
03EH	Stop-on-contact torque value for home return Stop-on-contact judgment time	K100	<p>Use this parameter when stop-on-contact method 1 or 2 is specified for the home return method.</p> <p>Whether the specified time has elapsed since the torque value of the amplifier exceeded the set value of "Stop-on-contact torque value for home return" due to stop-on-contact is used as the judgment criteria for home return.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Stop-on-contact torque value for home return Stop-on-contact judgment time</td> <td>Sets the deceleration time for stop operation. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.</td> </tr> </tbody> </table>			Bit	Name	Description	15 to 0	Stop-on-contact torque value for home return Stop-on-contact judgment time	Sets the deceleration time for stop operation. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.						
Bit	Name	Description															
15 to 0	Stop-on-contact torque value for home return Stop-on-contact judgment time	Sets the deceleration time for stop operation. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.															
03FH	-	-	-														
040H	-	-	-														
041H	J-point control code	0H	<p>Sets the control code for J-point control.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>-</td> <td>-</td> </tr> <tr> <td>1</td> <td>Acceleration/ deceleration pattern setting</td> <td>0: Linear acceleration / deceleration 1: S-shaped acceleration / deceleration</td> </tr> <tr> <td>15 to 2</td> <td>-</td> <td>-</td> </tr> </tbody> </table>			Bit	Name	Description	0	-	-	1	Acceleration/ deceleration pattern setting	0: Linear acceleration / deceleration 1: S-shaped acceleration / deceleration	15 to 2	-	-
Bit	Name	Description															
0	-	-															
1	Acceleration/ deceleration pattern setting	0: Linear acceleration / deceleration 1: S-shaped acceleration / deceleration															
15 to 2	-	-															
042H	J-point acceleration time	K100	Sets the acceleration/deceleration time for J-point control.														
043H	J-point deceleration time	K100	<b>Bit</b>	<b>Name</b>	<b>Description</b>												
			15 to 0	J-point acceleration time J-point deceleration time	Sets acceleration time or deceleration time. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.												
044H	J-point target speed	K1,000	Sets the target speed for J-point control.														
045H			<b>Bit</b>	<b>Name</b>	<b>Description</b>												
			31 to 0	J-point target speed	Setting range: 1 to 2,147,482,624 Unit: Dependent upon the specified unit Any other settings will result in an error. The setting range changes according to the unit settings as below.												

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
					Pulses: 1 to 2,147,482,624 pps μm: 1 to 2,147,482,624 μm/s inch: 0.001 to 2,147,482.624 inches/s degree: 0.001 to 2,147,482.624 rev/s
046H	-	-	-		
047H	-	-	-		
048H	Maximum speed for pulser operation	K1	Sets the maximum speed when speed limit is selected for the pulser operation method. When the speed calculated by multiplying the pulser input by (Pulser operation ratio numerator) / (Pulser operation ratio denominator) is over the specified maximum speed, the operation is performed at the maximum speed.		
049H			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			31 to 0	Pulser operation maximum speed	Setting range: 1 to 2,147,482,624 Unit: Specified unit × 1000/s Any other settings will result in an error.
			* If this area is set to 0, the minimum speed will be used in the specified unit.		
04AH	Home coordinates	K0	Sets the home coordinates value to be used after a home return operation.		
04BH			<b>Name</b>	<b>Default</b>	<b>Description</b>
			Home coordinates	K0	Setting range: -2147482624 to +2147482624
04CH	-	-	-		
04DH	Input time constant Pulse Input	0H	Sets the time constant for each pulse input signal. Pulse inputs A and B for the same channel are set to the same input time constant.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			2 to 0	Input time constant pulse input	0H: No input time constant 1H: 0.1 us 2H: 0.5 us 3H: 1.0 us 4H: 2.0 us 5H: 10.0 us 6H: No input time constant 7H: No input time constant
			15 to 3	-	-
04EH	-	-	-		

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description
04FH	-	-	-

### 18.7.3 Positioning Data Setting Area

- This area is used to set positioning data. It enables the user to set positioning data independently for eight axes. Positioning data is stored as 689 tables for each axis.
- When executing an automatic operation (position control) with the positioning unit RTEX, the number of a positioning table that has been set up in advance is specified and position control is started. After position control is started, the motor is automatically controlled according to the settings in the table.
- Positioning tables can be created either by using dedicated configuration tool Configurator PM7-RTEX or by writing positioning tables to the specified addresses using a ladder program.
- Positioning tables are stored in the standard area and the extended area. The standard area can store up to 600 positioning tables (tables 1 to 600) and the extended area can store up to 89 positioning tables (tables 10001 to 10089).
- The standard area is used when values are set in positioning tables in advance. Positioning tables can be set up using Configurator PM7-RTEX and rewritten using a ladder program. However, if positioning tables are changed using a ladder program, a re-creation calculation for positioning data will be required before automatic operation is executed. This is required to shorten the positioning startup time by reading 600 positioning data items in advance and preparing for startup within the positioning unit. If positioning data is downloaded with Configurator PM7-RTEX, data will be re-created automatically, so re-creation calculation processing will not be required. However, if positioning data is rewritten using a ladder program, a re-creation calculation will be required after the data is rewritten.
- The procedure for re-creation calculation is as below.

#### Procedure

1. Change the positioning tables in the shared memory.
  2. Turn ON output contact Y107 (recalculation request contact).
  3. Check that input contact X107 (recalculation completion contact) turns ON. (Confirm that the re-creation recalculation processing is complete.)
- If positioning data is not recalculated after positioning tables are rewritten using a ladder program, note that operations will be performed with the pre-rewrite positioning tables.
  - The extended area is used when values cannot be set in positioning tables until immediately before positioning operations are performed.
  - In an alignment application using image processing, for example, the moving distance is determined by the image processing, so positioning tables cannot be determined until immediately before positioning is started. In that case, positioning tables are set up immediately before positioning is started. In the extended area, positioning tables can be rewritten as needed, and recalculation is not required. However, up to only 89 positioning tables can be stored in the extended area and positioning tables cannot be set in the extended area by using Configurator PM7-RTEX. A ladder program must be used to write each positioning table to the specified address in the shared memory. The startup time of positioning tables in the extended area is longer than that of positioning tables in the standard area, so when P-point control or C-point control is performed in the extended area, note that the startup time changes according to the number of tables to be executed consecutively.

## 18.7 Details of Each Axis Setting Area in Shared Memory

The usage and precautions for each area are shown below.

	Usage	Number of tables	Table number	Setup using Configurator PM7-RTEX	Setup using ladder program
Standard area	Area that is used when set values in positioning tables are predetermined	600	1 to 600	Possible	Possible (Re-creation calculation is required)
Extended area	Area that is used when set values in positioning tables cannot be determined until immediately before positioning operations are performed	89	10001 to 10089	Not possible	Possible (Re-creation calculation is not required)

There are two extended areas for positioning tables. We recommend that an extended area with consecutive shared memory address numbers be selected according to the number of tables to be used.

### ■ Positioning tables

Data in the following format is stored in the memory starting from the starting address of positioning tables for each axis.

For details of the starting addresses of each positioning table, refer to the lists in "[Starting addresses of each positioning table \(Standard area: Tables 1 to 600\)](#)" "P.18-97" and subsequent pages.

Offset address	Name	Default	Description												
000H	Control code	0H	Sets the position command mode and acceleration / deceleration pattern for positioning operations.												
			<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Incremental / absolute mode setting</td> <td>0: Incremental mode 1: Absolute mode</td> </tr> <tr> <td>1</td> <td>Acceleration / deceleration pattern setting</td> <td>0: Linear acceleration / deceleration 1: S-shaped acceleration / deceleration</td> </tr> <tr> <td>15 to 2</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	0	Incremental / absolute mode setting	0: Incremental mode 1: Absolute mode	1	Acceleration / deceleration pattern setting	0: Linear acceleration / deceleration 1: S-shaped acceleration / deceleration	15 to 2	-	-
			Bit	Name	Description										
			0	Incremental / absolute mode setting	0: Incremental mode 1: Absolute mode										
1	Acceleration / deceleration pattern setting	0: Linear acceleration / deceleration 1: S-shaped acceleration / deceleration													
15 to 2	-	-													
15 to 2	-	-													
15 to 2	-	-													
001H	Operation pattern	0H	Sets single and interpolation patterns for positioning operations. The interpolation relationship depends on the settings in the axis group setting area in the common area of the shared memory. For interpolation operations, the settings of the axis with the smallest number in an axis group take effect.												
			<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>7 to 0</td> <td>Control pattern</td> <td>00H: E-point control (End point control) 01H: P-point control (Pass point control) 02H: C-point control (Continuance point control)</td> </tr> </tbody> </table>	Bit	Name	Description	7 to 0	Control pattern	00H: E-point control (End point control) 01H: P-point control (Pass point control) 02H: C-point control (Continuance point control)						
			Bit	Name	Description										
7 to 0	Control pattern	00H: E-point control (End point control) 01H: P-point control (Pass point control) 02H: C-point control (Continuance point control)													
7 to 0	Control pattern	00H: E-point control (End point control) 01H: P-point control (Pass point control) 02H: C-point control (Continuance point control)													



## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description		
			Bit	Name	Description
					03H: J-point control (Speed point control) Any other settings will result in an error.
			15 to 8	Interpolation setting	00H: Linear interpolation (Composite speed specification) 01H: Linear interpolation (Long axis speed specification) 10H: Circular interpolation (Center point specification / CW direction) 11H: Circular interpolation (Center point specification / CCW direction) 20H: Circular interpolation (Pass point specification) 50H: Spiral interpolation (Center point specification / CW direction / X-axis feed) 51H: Spiral interpolation (Center point specification / CCW direction / X-axis feed) 52H: Spiral interpolation (Center point specification / CW direction / Y-axis feed) 53H: Spiral interpolation (Center point specification / CCW direction / Y-axis feed) 54H: Spiral interpolation (Center point specification / CW direction / Z-axis feed) 55H: Spiral interpolation (Center point specification / CCW direction / Z-axis feed) 60H: Spiral interpolation (Pass point specification / X-axis feed) 61H: Spiral interpolation (Pass point specification / Y-axis feed) 62H: Spiral interpolation (Pass point specification / Z-axis feed) Any other settings will result in an error.
002H	-	-	-		
003H	-	-	-		

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description						
004H	Positioning acceleration time	K100	Sets acceleration and deceleration times for positioning operations						
005H	Positioning deceleration time	K100	<p>Acceleration time and deceleration time can be set individually. For interpolation operations, the settings of the axis with the smallest number in an axis group take effect.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Positioning acceleration time Positioning deceleration time</td> <td>Sets acceleration time or deceleration time. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Positioning acceleration time Positioning deceleration time	Sets acceleration time or deceleration time. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.
Bit	Name	Description							
15 to 0	Positioning acceleration time Positioning deceleration time	Sets acceleration time or deceleration time. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.							
006H	Positioning target speed (Interpolation speed)	K1,000	<p>For single operations (non-interpolation), the target speed is that of the relevant axis. For interpolation operations, the target speed is that for interpolation.</p> <p>For interpolation operations, the settings of the axis with the smallest number in an axis group take effect.</p>						
007H			<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>31 to 0</td> <td>Positioning target speed (Interpolation speed)</td> <td>                     Setting range: 1 to 2,147,482,624                      Unit: Dependent upon the specified unit                      Any other settings will result in an error.                      The setting range changes according to the unit settings as below.                      Pulses: 1 to 2,147,482,624 pps  <math>\mu\text{m}</math>: 1 to 2,147,482,624 <math>\mu\text{m/s}</math>                      Inches: 0.001 to 2,147,482.624 inches/s                      Degrees: 0.001 to 2,147,482.624 rev/s                 </td> </tr> </tbody> </table>	Bit	Name	Description	31 to 0	Positioning target speed (Interpolation speed)	Setting range: 1 to 2,147,482,624 Unit: Dependent upon the specified unit Any other settings will result in an error. The setting range changes according to the unit settings as below. Pulses: 1 to 2,147,482,624 pps $\mu\text{m}$ : 1 to 2,147,482,624 $\mu\text{m/s}$ Inches: 0.001 to 2,147,482.624 inches/s Degrees: 0.001 to 2,147,482.624 rev/s
Bit	Name	Description							
31 to 0	Positioning target speed (Interpolation speed)	Setting range: 1 to 2,147,482,624 Unit: Dependent upon the specified unit Any other settings will result in an error. The setting range changes according to the unit settings as below. Pulses: 1 to 2,147,482,624 pps $\mu\text{m}$ : 1 to 2,147,482,624 $\mu\text{m/s}$ Inches: 0.001 to 2,147,482.624 inches/s Degrees: 0.001 to 2,147,482.624 rev/s							
008H	Positioning movement amount	K0	<p>Sets the movement amount for positioning operations.</p> <p>Interpretation switches between the incremental movement amount and absolute movement amount according to the control code setting.</p>						
009H			<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Positioning movement amount</td> <td>K0</td> <td>                     Setting range: -2147482624 to +2147482624                      Any other settings will result in an error.                 </td> </tr> </tbody> </table> <p>Interpretation changes according to the unit settings as below.</p> <p>Pulses: -2,147,482,624 to 2,147,482,624 pulses</p> <p><math>\mu\text{m}</math> (0.1 <math>\mu\text{m}</math>) : -214,748,262.4 to 214,748,262.4 <math>\mu\text{m}</math></p> <p><math>\mu\text{m}</math> (1 <math>\mu\text{m}</math>): -2,147,482,624 to 2,147,482,624 <math>\mu\text{m}</math></p> <p>Inches (0.00001 inch): -21,474.82624 to 21,474.82624 inches</p> <p>Inches (0.0001 inch): -214,748.2624 to 214,748.2624 inches</p>	Name	Default	Description	Positioning movement amount	K0	Setting range: -2147482624 to +2147482624 Any other settings will result in an error.
Name	Default	Description							
Positioning movement amount	K0	Setting range: -2147482624 to +2147482624 Any other settings will result in an error.							

## 18.7 Details of Each Axis Setting Area in Shared Memory

Offset address	Name	Default	Description						
			Degrees (0.1 degree): -214,748,262.4 to 214,748,262.4 degrees Degrees (1 degree): -2,147,482,624 to 2,147,482,624 degrees						
00AH	Auxiliary point	K0	Sets auxiliary points (center point and pass point coordinates) for circular interpolation or spiral interpolation control.						
00BH			<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Auxiliary point</td> <td>K0</td> <td>Setting range: -2147483648 to 2147483647 Any other settings will result in an error.</td> </tr> </tbody> </table> <p>Interpretation changes according to the unit settings as below. Pulses: -2,147,482,624 to 2,147,482,624 pulses μm (0.1 μm) : -214,748,262.4 to 214,748,262.4 μm μm (1 μm): -2,147,482,624 to 2,147,482,624 μm Inches (0.00001 inch): -21,474.82624 to 21,474.82624 inches Inches (0.0001 inch): -214,748.2624 to 214,748.2624 inches Degrees (0.1 degree): -214,748,262.4 to 214,748,262.4 degrees Degrees (1 degree): -2,147,482,624 to 2,147,482,624 degrees</p>	Name	Default	Description	Auxiliary point	K0	Setting range: -2147483648 to 2147483647 Any other settings will result in an error.
Name	Default	Description							
Auxiliary point	K0	Setting range: -2147483648 to 2147483647 Any other settings will result in an error.							
00CH	Dwell Time	K0	For "C: Continuance point", when the positioning operation of this table is complete, the motor is stopped for the specified dwell time and then the positioning operation of the next table is started. For "P: Pass point", the dwell time setting is ignored. For "E: End point", the motor enters standby mode for the specified dwell time and then the operation done flag turns ON.						
			<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Dwell Time</td> <td>Setting range: 0 to 32,767 Unit: ms Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Dwell Time	Setting range: 0 to 32,767 Unit: ms Any other settings will result in an error.
Bit	Name	Description							
15 to 0	Dwell Time	Setting range: 0 to 32,767 Unit: ms Any other settings will result in an error.							
00DH	Auxiliary output code	K0	Sets the data to be output to the auxiliary output code in the each axis information & monitor area according to the setting of the auxiliary output mode in the positioning parameter setting area.						
			<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Auxiliary output code</td> <td>Setting range: 0 to 65,535</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Auxiliary output code	Setting range: 0 to 65,535
Bit	Name	Description							
15 to 0	Auxiliary output code	Setting range: 0 to 65,535							
00EH	-	-	-						
00FH	-	-	-						

### ■ Starting addresses of each positioning table (Standard area: Tables 1 to 600)

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
Bank									
02H	0CH	16H	20H	2AH	34H	3EH	48H	050H	Starting address of Table 1

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								060H	Starting address of Table 2
								070H	Starting address of Table 3
								080H	Starting address of Table 4
								090H	Starting address of Table 5
								0A0H	Starting address of Table 6
								0B0H	Starting address of Table 7
								0C0H	Starting address of Table 8
								0D0H	Starting address of Table 9
								0E0H	Starting address of Table 10
								0F0H	Starting address of Table 11
								100H	Starting address of Table 12
								110H	Starting address of Table 13
								120H	Starting address of Table 14
								130H	Starting address of Table 15
								140H	Starting address of Table 16
								150H	Starting address of Table 17
								160H	Starting address of Table 18
								170H	Starting address of Table 19
								180H	Starting address of Table 20
								190H	Starting address of Table 21
								1A0H	Starting address of Table 22
								1B0H	Starting address of Table 23
								1C0H	Starting address of Table 24
								1D0H	Starting address of Table 25
								1E0H	Starting address of Table 26
								1F0H	Starting address of Table 27
								200H	Starting address of Table 28
								210H	Starting address of Table 29
								220H	Starting address of Table 30
								230H	Starting address of Table 31
								240H	Starting address of Table 32
								250H	Starting address of Table 33
								260H	Starting address of Table 34
								270H	Starting address of Table 35
								280H	Starting address of Table 36
02H	0CH	16H	20H	2AH	34H	3EH	48H	290H	Starting address of Table 37

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								2A0H	Starting address of Table 38
								2B0H	Starting address of Table 39
								2C0H	Starting address of Table 40
								2D0H	Starting address of Table 41
								2E0H	Starting address of Table 42
								2F0H	Starting address of Table 43
								300H	Starting address of Table 44
								310H	Starting address of Table 45
								320H	Starting address of Table 46
								330H	Starting address of Table 47
								340H	Starting address of Table 48
								350H	Starting address of Table 49
								360H	Starting address of Table 50
								370H	Starting address of Table 51
								380H	Starting address of Table 52
								390H	Starting address of Table 53
								3A0H	Starting address of Table 54
								3B0H	Starting address of Table 55
								3C0H	Starting address of Table 56
								3D0H	Starting address of Table 57
								3E0H	Starting address of Table 58
								3F0H	Starting address of Table 59
03H	0DH	17H	21H	2BH	35H	3FH	49H	000H	Starting address of Table 60
								010H	Starting address of Table 61
								020H	Starting address of Table 62
								030H	Starting address of Table 63
								040H	Starting address of Table 64
								050H	Starting address of Table 65
								060H	Starting address of Table 66
								070H	Starting address of Table 67
								080H	Starting address of Table 68
								090H	Starting address of Table 69
								0A0H	Starting address of Table 70
								0B0H	Starting address of Table 71
								0C0H	Starting address of Table 72
								0D0H	Starting address of Table 73

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
03H	0DH	17H	21H	2BH	35H	3FH	49H	0E0H	Starting address of Table 74
								0F0H	Starting address of Table 75
								100H	Starting address of Table 76
								110H	Starting address of Table 77
								120H	Starting address of Table 78
								130H	Starting address of Table 79
								140H	Starting address of Table 80
								150H	Starting address of Table 81
								160H	Starting address of Table 82
								170H	Starting address of Table 83
								180H	Starting address of Table 84
								190H	Starting address of Table 85
								1A0H	Starting address of Table 86
								1B0H	Starting address of Table 87
								1C0H	Starting address of Table 88
								1D0H	Starting address of Table 89
								1E0H	Starting address of Table 90
								1F0H	Starting address of Table 91
								200H	Starting address of Table 92
								210H	Starting address of Table 93
								220H	Starting address of Table 94
								230H	Starting address of Table 95
								240H	Starting address of Table 96
								250H	Starting address of Table 97
								260H	Starting address of Table 98
								270H	Starting address of Table 99
								280H	Starting address of Table 100
								290H	Starting address of Table 101
								2A0H	Starting address of Table 102
								2B0H	Starting address of Table 103
								2C0H	Starting address of Table 104
								2D0H	Starting address of Table 105
								2E0H	Starting address of Table 106
								2F0H	Starting address of Table 107
								300H	Starting address of Table 108
								310H	Starting address of Table 109

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								320H	Starting address of Table 110
03H	0DH	17H	21H	2BH	35H	3FH	49H	330H	Starting address of Table 111
								340H	Starting address of Table 112
								350H	Starting address of Table 113
								360H	Starting address of Table 114
								370H	Starting address of Table 115
								380H	Starting address of Table 116
								390H	Starting address of Table 117
								3A0H	Starting address of Table 118
								3B0H	Starting address of Table 119
								3C0H	Starting address of Table 120
								3D0H	Starting address of Table 121
								3E0H	Starting address of Table 122
								3F0H	Starting address of Table 123
04H	0EH	18H	22H	2CH	36H	40H	4AH	000H	Starting address of Table 124
								010H	Starting address of Table 125
								020H	Starting address of Table 126
								030H	Starting address of Table 127
								040H	Starting address of Table 128
								050H	Starting address of Table 129
								060H	Starting address of Table 130
								070H	Starting address of Table 131
								080H	Starting address of Table 132
								090H	Starting address of Table 133
								0A0H	Starting address of Table 134
								0B0H	Starting address of Table 135
								0C0H	Starting address of Table 136
								0D0H	Starting address of Table 137
								0E0H	Starting address of Table 138
								0F0H	Starting address of Table 139
								100H	Starting address of Table 140
110H	Starting address of Table 141								
120H	Starting address of Table 142								
130H	Starting address of Table 143								
140H	Starting address of Table 144								
150H	Starting address of Table 145								

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								160H	Starting address of Table 146
								170H	Starting address of Table 147
04H	0EH	18H	22H	2CH	36H	40H	4AH	180H	Starting address of Table 148
								190H	Starting address of Table 149
								1A0H	Starting address of Table 150
								1B0H	Starting address of Table 151
								1C0H	Starting address of Table 152
								1D0H	Starting address of Table 153
								1E0H	Starting address of Table 154
								1F0H	Starting address of Table 155
								200H	Starting address of Table 156
								210H	Starting address of Table 157
								220H	Starting address of Table 158
								230H	Starting address of Table 159
								240H	Starting address of Table 160
								250H	Starting address of Table 161
								260H	Starting address of Table 162
								270H	Starting address of Table 163
								280H	Starting address of Table 164
								290H	Starting address of Table 165
								2A0H	Starting address of Table 166
								2B0H	Starting address of Table 167
								2C0H	Starting address of Table 168
								2D0H	Starting address of Table 169
								2E0H	Starting address of Table 170
								2F0H	Starting address of Table 171
								300H	Starting address of Table 172
								310H	Starting address of Table 173
								320H	Starting address of Table 174
								330H	Starting address of Table 175
								340H	Starting address of Table 176
								350H	Starting address of Table 177
								360H	Starting address of Table 178
								370H	Starting address of Table 179
								380H	Starting address of Table 180
								390H	Starting address of Table 181



## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								3A0H	Starting address of Table 182
								3B0H	Starting address of Table 183
								3C0H	Starting address of Table 184
04H	0EH	18H	22H	2CH	36H	40H	4AH	3D0H	Starting address of Table 185
								3E0H	Starting address of Table 186
								3F0H	Starting address of Table 187
05H	0FH	19H	23H	2DH	37H	41H	4BH	000H	Starting address of Table 188
								010H	Starting address of Table 189
								020H	Starting address of Table 190
								030H	Starting address of Table 191
								040H	Starting address of Table 192
								050H	Starting address of Table 193
								060H	Starting address of Table 194
								070H	Starting address of Table 195
								080H	Starting address of Table 196
								090H	Starting address of Table 197
								0A0H	Starting address of Table 198
								0B0H	Starting address of Table 199
								0C0H	Starting address of Table 200
								0D0H	Starting address of Table 201
								0E0H	Starting address of Table 202
								0F0H	Starting address of Table 203
								100H	Starting address of Table 204
								110H	Starting address of Table 205
								120H	Starting address of Table 206
								130H	Starting address of Table 207
								140H	Starting address of Table 208
								150H	Starting address of Table 209
								160H	Starting address of Table 210
								170H	Starting address of Table 211
								180H	Starting address of Table 212
								190H	Starting address of Table 213
								1A0H	Starting address of Table 214
								1B0H	Starting address of Table 215
								1C0H	Starting address of Table 216
								1D0H	Starting address of Table 217

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								1E0H	Starting address of Table 218
								1F0H	Starting address of Table 219
								200H	Starting address of Table 220
								210H	Starting address of Table 221
05H	0FH	19H	23H	2DH	37H	41H	4BH	220H	Starting address of Table 222
								230H	Starting address of Table 223
								240H	Starting address of Table 224
								250H	Starting address of Table 225
								260H	Starting address of Table 226
								270H	Starting address of Table 227
								280H	Starting address of Table 228
								290H	Starting address of Table 229
								2A0H	Starting address of Table 230
								2B0H	Starting address of Table 231
								2C0H	Starting address of Table 232
								2D0H	Starting address of Table 233
								2E0H	Starting address of Table 234
								2F0H	Starting address of Table 235
								300H	Starting address of Table 236
								310H	Starting address of Table 237
								320H	Starting address of Table 238
								330H	Starting address of Table 239
								340H	Starting address of Table 240
								350H	Starting address of Table 241
								360H	Starting address of Table 242
								370H	Starting address of Table 243
								380H	Starting address of Table 244
								390H	Starting address of Table 245
								3A0H	Starting address of Table 246
								3B0H	Starting address of Table 247
								3C0H	Starting address of Table 248
								3D0H	Starting address of Table 249
								3E0H	Starting address of Table 250
								3F0H	Starting address of Table 251
06H	10H	1AH	24H	2EH	38H	42H	4CH	000H	Starting address of Table 252
								010H	Starting address of Table 253

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								020H	Starting address of Table 254
								030H	Starting address of Table 255
								040H	Starting address of Table 256
								050H	Starting address of Table 257
								060H	Starting address of Table 258
06H	10H	1AH	24H	2EH	38H	42H	4CH	070H	Starting address of Table 259
								080H	Starting address of Table 260
								090H	Starting address of Table 261
								0A0H	Starting address of Table 262
								0B0H	Starting address of Table 263
								0C0H	Starting address of Table 264
								0D0H	Starting address of Table 265
								0E0H	Starting address of Table 266
								0F0H	Starting address of Table 267
								100H	Starting address of Table 268
								110H	Starting address of Table 269
								120H	Starting address of Table 270
								130H	Starting address of Table 271
								140H	Starting address of Table 272
								150H	Starting address of Table 273
								160H	Starting address of Table 274
								170H	Starting address of Table 275
								180H	Starting address of Table 276
								190H	Starting address of Table 277
								1A0H	Starting address of Table 278
								1B0H	Starting address of Table 279
								1C0H	Starting address of Table 280
								1D0H	Starting address of Table 281
								1E0H	Starting address of Table 282
								1F0H	Starting address of Table 283
								200H	Starting address of Table 284
								210H	Starting address of Table 285
								220H	Starting address of Table 286
								230H	Starting address of Table 287
								240H	Starting address of Table 288
								250H	Starting address of Table 289

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								260H	Starting address of Table 290
								270H	Starting address of Table 291
								280H	Starting address of Table 292
								290H	Starting address of Table 293
								2A0H	Starting address of Table 294
								2B0H	Starting address of Table 295
06H	10H	1AH	24H	2EH	38H	42H	4CH	2C0H	Starting address of Table 296
								2D0H	Starting address of Table 297
								2E0H	Starting address of Table 298
								2F0H	Starting address of Table 299
								300H	Starting address of Table 300
								310H	Starting address of Table 301
								320H	Starting address of Table 302
								330H	Starting address of Table 303
								340H	Starting address of Table 304
								350H	Starting address of Table 305
								360H	Starting address of Table 306
								370H	Starting address of Table 307
								380H	Starting address of Table 308
								390H	Starting address of Table 309
								3A0H	Starting address of Table 310
								3B0H	Starting address of Table 311
								3C0H	Starting address of Table 312
								3D0H	Starting address of Table 313
								3E0H	Starting address of Table 314
								3F0H	Starting address of Table 315
07H	11H	1BH	25H	2FH	39H	43H	4DH	000H	Starting address of Table 316
								010H	Starting address of Table 317
								020H	Starting address of Table 318
								030H	Starting address of Table 319
								040H	Starting address of Table 320
								050H	Starting address of Table 321
								060H	Starting address of Table 322
								070H	Starting address of Table 323
								080H	Starting address of Table 324
								090H	Starting address of Table 325

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								0A0H	Starting address of Table 326
								0B0H	Starting address of Table 327
								0C0H	Starting address of Table 328
								0D0H	Starting address of Table 329
								0E0H	Starting address of Table 330
								0F0H	Starting address of Table 331
								100H	Starting address of Table 332
07H	11H	1BH	25H	2FH	39H	43H	4DH	110H	Starting address of Table 333
								120H	Starting address of Table 334
								130H	Starting address of Table 335
								140H	Starting address of Table 336
								150H	Starting address of Table 337
								160H	Starting address of Table 338
								170H	Starting address of Table 339
								180H	Starting address of Table 340
								190H	Starting address of Table 341
								1A0H	Starting address of Table 342
								1B0H	Starting address of Table 343
								1C0H	Starting address of Table 344
								1D0H	Starting address of Table 345
								1E0H	Starting address of Table 346
								1F0H	Starting address of Table 347
								200H	Starting address of Table 348
								210H	Starting address of Table 349
								220H	Starting address of Table 350
								230H	Starting address of Table 351
								240H	Starting address of Table 352
								250H	Starting address of Table 353
								260H	Starting address of Table 354
								270H	Starting address of Table 355
								280H	Starting address of Table 356
								290H	Starting address of Table 357
								2A0H	Starting address of Table 358
								2B0H	Starting address of Table 359
								2C0H	Starting address of Table 360
								2D0H	Starting address of Table 361

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								2E0H	Starting address of Table 362
								2F0H	Starting address of Table 363
								300H	Starting address of Table 364
								310H	Starting address of Table 365
								320H	Starting address of Table 366
								330H	Starting address of Table 367
								340H	Starting address of Table 368
								350H	Starting address of Table 369
07H	11H	1BH	25H	2FH	39H	43H	4DH	360H	Starting address of Table 370
								370H	Starting address of Table 371
								380H	Starting address of Table 372
								390H	Starting address of Table 373
								3A0H	Starting address of Table 374
								3B0H	Starting address of Table 375
								3C0H	Starting address of Table 376
								3D0H	Starting address of Table 377
								3E0H	Starting address of Table 378
								3F0H	Starting address of Table 379
08H	12H	1CH	26H	30H	3AH	44H	4EH	000H	Starting address of Table 380
								010H	Starting address of Table 381
								020H	Starting address of Table 382
								030H	Starting address of Table 383
								040H	Starting address of Table 384
								050H	Starting address of Table 385
								060H	Starting address of Table 386
								070H	Starting address of Table 387
								080H	Starting address of Table 388
								090H	Starting address of Table 389
								0A0H	Starting address of Table 390
								0B0H	Starting address of Table 391
								0C0H	Starting address of Table 392
								0D0H	Starting address of Table 393
								0E0H	Starting address of Table 394
								0F0H	Starting address of Table 395
								100H	Starting address of Table 396
								110H	Starting address of Table 397

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								120H	Starting address of Table 398
								130H	Starting address of Table 399
								140H	Starting address of Table 400
								150H	Starting address of Table 401
								160H	Starting address of Table 402
								170H	Starting address of Table 403
								180H	Starting address of Table 404
								190H	Starting address of Table 405
								1A0H	Starting address of Table 406
08H	12H	1CH	26H	30H	3AH	44H	4EH	1B0H	Starting address of Table 407
								1C0H	Starting address of Table 408
								1D0H	Starting address of Table 409
								1E0H	Starting address of Table 410
								1F0H	Starting address of Table 411
								200H	Starting address of Table 412
								210H	Starting address of Table 413
								220H	Starting address of Table 414
								230H	Starting address of Table 415
								240H	Starting address of Table 416
								250H	Starting address of Table 417
								260H	Starting address of Table 418
								270H	Starting address of Table 419
								280H	Starting address of Table 420
								290H	Starting address of Table 421
								2A0H	Starting address of Table 422
								2B0H	Starting address of Table 423
								2C0H	Starting address of Table 424
								2D0H	Starting address of Table 425
								2E0H	Starting address of Table 426
								2F0H	Starting address of Table 427
								300H	Starting address of Table 428
								310H	Starting address of Table 429
								320H	Starting address of Table 430
								330H	Starting address of Table 431
								340H	Starting address of Table 432
								350H	Starting address of Table 433

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								360H	Starting address of Table 434
								370H	Starting address of Table 435
								380H	Starting address of Table 436
								390H	Starting address of Table 437
								3A0H	Starting address of Table 438
								3B0H	Starting address of Table 439
								3C0H	Starting address of Table 440
								3D0H	Starting address of Table 441
								3E0H	Starting address of Table 442
								3F0H	Starting address of Table 443
09H	13H	1DH	27H	31H	3BH	45H	4FH	000H	Starting address of Table 444
								010H	Starting address of Table 445
								020H	Starting address of Table 446
								030H	Starting address of Table 447
								040H	Starting address of Table 448
								050H	Starting address of Table 449
								060H	Starting address of Table 450
								070H	Starting address of Table 451
								080H	Starting address of Table 452
								090H	Starting address of Table 453
								0A0H	Starting address of Table 454
								0B0H	Starting address of Table 455
								0C0H	Starting address of Table 456
								0D0H	Starting address of Table 457
								0E0H	Starting address of Table 458
								0F0H	Starting address of Table 459
								100H	Starting address of Table 460
								110H	Starting address of Table 461
								120H	Starting address of Table 462
								130H	Starting address of Table 463
								140H	Starting address of Table 464
								150H	Starting address of Table 465
								160H	Starting address of Table 466
								170H	Starting address of Table 467
								180H	Starting address of Table 468
								190H	Starting address of Table 469



## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								1A0H	Starting address of Table 470
								1B0H	Starting address of Table 471
								1C0H	Starting address of Table 472
								1D0H	Starting address of Table 473
								1E0H	Starting address of Table 474
								1F0H	Starting address of Table 475
								200H	Starting address of Table 476
								210H	Starting address of Table 477
								220H	Starting address of Table 478
								230H	Starting address of Table 479
								240H	Starting address of Table 480
09H	13H	1DH	27H	31H	3BH	45H	4FH	250H	Starting address of Table 481
								260H	Starting address of Table 482
								270H	Starting address of Table 483
								280H	Starting address of Table 484
								290H	Starting address of Table 485
								2A0H	Starting address of Table 486
								2B0H	Starting address of Table 487
								2C0H	Starting address of Table 488
								2D0H	Starting address of Table 489
								2E0H	Starting address of Table 490
								2F0H	Starting address of Table 491
								300H	Starting address of Table 492
								310H	Starting address of Table 493
								320H	Starting address of Table 494
								330H	Starting address of Table 495
								340H	Starting address of Table 496
								350H	Starting address of Table 497
								360H	Starting address of Table 498
								370H	Starting address of Table 499
								380H	Starting address of Table 500
								390H	Starting address of Table 501
								3A0H	Starting address of Table 502
								3B0H	Starting address of Table 503
								3C0H	Starting address of Table 504
								3D0H	Starting address of Table 505

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								3E0H	Starting address of Table 506
								3F0H	Starting address of Table 507
0AH	14H	1EH	28H	32H	3CH	46H	50H	000H	Starting address of Table 508
								010H	Starting address of Table 509
								020H	Starting address of Table 510
								030H	Starting address of Table 511
								040H	Starting address of Table 512
								050H	Starting address of Table 513
								060H	Starting address of Table 514
								070H	Starting address of Table 515
								080H	Starting address of Table 516
								090H	Starting address of Table 517
0AH	14H	1EH	28H	32H	3CH	46H	50H	0A0H	Starting address of Table 518
								0B0H	Starting address of Table 519
								0C0H	Starting address of Table 520
								0D0H	Starting address of Table 521
								0E0H	Starting address of Table 522
								0F0H	Starting address of Table 523
								100H	Starting address of Table 524
								110H	Starting address of Table 525
								120H	Starting address of Table 526
								130H	Starting address of Table 527
								140H	Starting address of Table 528
								150H	Starting address of Table 529
								160H	Starting address of Table 530
								170H	Starting address of Table 531
								180H	Starting address of Table 532
								190H	Starting address of Table 533
								1A0H	Starting address of Table 534
								1B0H	Starting address of Table 535
								1C0H	Starting address of Table 536
								1D0H	Starting address of Table 537
								1E0H	Starting address of Table 538
								1F0H	Starting address of Table 539
								200H	Starting address of Table 540
								210H	Starting address of Table 541

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								220H	Starting address of Table 542
								230H	Starting address of Table 543
								240H	Starting address of Table 544
								250H	Starting address of Table 545
								260H	Starting address of Table 546
								270H	Starting address of Table 547
								280H	Starting address of Table 548
								290H	Starting address of Table 549
								2A0H	Starting address of Table 550
								2B0H	Starting address of Table 551
								2C0H	Starting address of Table 552
								2D0H	Starting address of Table 553
								2E0H	Starting address of Table 554
0AH	14H	1EH	28H	32H	3CH	46H	50H	2F0H	Starting address of Table 555
								300H	Starting address of Table 556
								310H	Starting address of Table 557
								320H	Starting address of Table 558
								330H	Starting address of Table 559
								340H	Starting address of Table 560
								350H	Starting address of Table 561
								360H	Starting address of Table 562
								370H	Starting address of Table 563
								380H	Starting address of Table 564
								390H	Starting address of Table 565
								3A0H	Starting address of Table 566
								3B0H	Starting address of Table 567
								3C0H	Starting address of Table 568
								3D0H	Starting address of Table 569
								3E0H	Starting address of Table 570
								3F0H	Starting address of Table 571
0BH	15H	1FH	29H	33H	3DH	47H	51H	000H	Starting address of Table 572
								010H	Starting address of Table 573
								020H	Starting address of Table 574
								030H	Starting address of Table 575
								040H	Starting address of Table 576
								050H	Starting address of Table 577

## 18.7 Details of Each Axis Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								060H	Starting address of Table 578
								070H	Starting address of Table 579
								080H	Starting address of Table 580
								090H	Starting address of Table 581
								0A0H	Starting address of Table 582
								0B0H	Starting address of Table 583
								0C0H	Starting address of Table 584
								0D0H	Starting address of Table 585
								0E0H	Starting address of Table 586
								0F0H	Starting address of Table 587
								100H	Starting address of Table 588
								110H	Starting address of Table 589
								120H	Starting address of Table 590
								130H	Starting address of Table 591
0BH	15H	1FH	29H	33H	3DH	47H	51H	140H	Starting address of Table 592
								150H	Starting address of Table 593
								160H	Starting address of Table 594
								170H	Starting address of Table 595
								180H	Starting address of Table 596
								190H	Starting address of Table 597
								1A0H	Starting address of Table 598
								1B0H	Starting address of Table 599
								1C0H	Starting address of Table 600
								1D0H	-
								1E0H	-
								1F0H	-
								200H	-
								210H	-
								220H	-
								230H	-
								240H	-
								250H	-
								260H	-

## 18.7 Details of Each Axis Setting Area in Shared Memory

### ■ Starting addresses of each positioning table (Extended area: Tables 10001 to 10025)

Tables 10026 to 10089 have different banks and addresses. Refer to "[Starting addresses of each positioning table \(Extended area: Tables 10026 to 10089\)](#)".

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	Axis 8	Address	Description
Bank									
0BH	15H	1FH	29H	33H	3DH	47H	51H	270H	Starting address of Table 10001
								280H	Starting address of Table 10002
								290H	Starting address of Table 10003
								2A0H	Starting address of Table 10004
								2B0H	Starting address of Table 10005
								2C0H	Starting address of Table 10006
								2D0H	Starting address of Table 10007
								2E0H	Starting address of Table 10008
								2F0H	Starting address of Table 10009
								300H	Starting address of Table 10010
								310H	Starting address of Table 10011
								320H	Starting address of Table 10012
								330H	Starting address of Table 10013
								340H	Starting address of Table 10014
								350H	Starting address of Table 10015
								360H	Starting address of Table 10016
								370H	Starting address of Table 10017
								380H	Starting address of Table 10018
								390H	Starting address of Table 10019
								3A0H	Starting address of Table 10020
								3B0H	Starting address of Table 10021
								3C0H	Starting address of Table 10022
								3D0H	Starting address of Table 10023
								3E0H	Starting address of Table 10024
								3F0H	Starting address of Table 10025

## 18.8 Amplifier Parameter Control Area in Shared Memory

### 18.8 Amplifier Parameter Control Area in Shared Memory

#### 18.8.1 Configuration of Amplifier Parameter Control Area

This area is used to read, write, save, and reset parameters and perform other operations on the amplifier.

Whole map of shared memory

00H_000H		96 words	
00H_060H	I/O control area	32 words	
00H_07FH			
00H_080H	Common area		
00H_3CFH		896 words	
01H_000H	Each axis information area		
01H_1FFH		512 words	
02H_000H	Each axis setting area		
51H_3FFH		81,920 words	
52H_000H	Amplifier parameter control area	48 words	52H_000H Amplifier parameter control area 48 words
52H_02FH			
53H_000H	System area		
		5,120 words	
58H_000H	Synchronous control setting area		
58H_37FH		896 words	
59H_000H	System area		
		7,168 words	
5FH_000H	Positioning operation change setting area		
5FH_07FH		128 words	
60H_000H	Cam pattern editing area		
60H_05FH		96 words	
61H_000H	Positioning extension table setting area		
68H_3FFH		8,192 words	

## 18.8 Amplifier Parameter Control Area in Shared Memory

### 18.8.2 Amplifier Parameter Control Area

Bank	Offset address	Name	Default	Description						
52H	000H	AMP ID No.	K1	<p>Specify the axis number (AMP ID No.) for which each processing such as changing parameters is to be performed.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>AMP ID No.</td> <td>K1</td> <td>Setting range: 1 to 8 Any other settings will result in an error.</td> </tr> </tbody> </table>	Name	Default	Description	AMP ID No.	K1	Setting range: 1 to 8 Any other settings will result in an error.
	Name	Default	Description							
	AMP ID No.	K1	Setting range: 1 to 8 Any other settings will result in an error.							
	001H	Control flag	0H	<p>Specify the amplifier parameter processing to be performed. This area is set to 0H when the positioning unit RTEX completes the processing.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control flag</td> <td>0H</td> <td>Setting range: 1 to 6 0H: No request 2H: Read request 4H: Write request 5H: EEPROM request 6H: Amplifier reset request</td> </tr> </tbody> </table>	Name	Default	Description	Control flag	0H	Setting range: 1 to 6 0H: No request 2H: Read request 4H: Write request 5H: EEPROM request 6H: Amplifier reset request
Name	Default	Description								
Control flag	0H	Setting range: 1 to 6 0H: No request 2H: Read request 4H: Write request 5H: EEPROM request 6H: Amplifier reset request								
002H	Status	0H	<p>Stores the processing status of the amplifier parameter.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Status</td> <td>0H</td> <td>Setting range: 0 to 6 0H: No processing 1H: Processing in progress 2H: Normal termination (Read/Write/EEPROM/Reset) 3H: Abnormal termination (Read/Write/EEPROM/Reset) 4H: ID error 5H: Parameter error 6H: Request non-executable state</td> </tr> </tbody> </table>	Name	Default	Description	Status	0H	Setting range: 0 to 6 0H: No processing 1H: Processing in progress 2H: Normal termination (Read/Write/EEPROM/Reset) 3H: Abnormal termination (Read/Write/EEPROM/Reset) 4H: ID error 5H: Parameter error 6H: Request non-executable state	
Name	Default	Description								
Status	0H	Setting range: 0 to 6 0H: No processing 1H: Processing in progress 2H: Normal termination (Read/Write/EEPROM/Reset) 3H: Abnormal termination (Read/Write/EEPROM/Reset) 4H: ID error 5H: Parameter error 6H: Request non-executable state								
003H	A6N/A5N Parameter category	K0	<p>Specify the category code of the parameter whose value is to be read or written when A6N or A5N is used.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>A6N/A5N Parameter category</td> <td>K0</td> <td>Setting range: 0 to 8 Any other settings will result in an error.</td> </tr> </tbody> </table> <p>* There is no need to write to this area when writing to EEPROM or resetting the amplifier.</p>	Name	Default	Description	A6N/A5N Parameter category	K0	Setting range: 0 to 8 Any other settings will result in an error.	
Name	Default	Description								
A6N/A5N Parameter category	K0	Setting range: 0 to 8 Any other settings will result in an error.								

## 18.8 Amplifier Parameter Control Area in Shared Memory

Bank	Offset address	Name	Default	Description						
	004H to 023H	-	-	-						
52H	024H	Individual parameter number	FFFFH	<p>Specify the number of the parameter whose value is to be read or written.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Individual parameter number</td> <td>0H</td> <td>           Setting range: 0000H to 007FH            Specify a parameter number within the category code.            Any other settings will result in an error.         </td> </tr> </tbody> </table> <p>* There is no need to write to this area when writing to EEPROM or resetting the amplifier.</p>	Name	Default	Description	Individual parameter number	0H	Setting range: 0000H to 007FH Specify a parameter number within the category code. Any other settings will result in an error.
	Name	Default	Description							
	Individual parameter number	0H	Setting range: 0000H to 007FH Specify a parameter number within the category code. Any other settings will result in an error.							
	026H	A6N/A5N Parameter data	K0	<p>Stores the data of each parameter when A6N or A5N is used.</p> <p>When reading: Stores the parameter values of the amplifier</p> <p>When writing: Stores the parameter values to be updated</p>						
027H										
028H to 02FH	-	-	-							



## 18.9 Synchronous Control Setting Area in Shared Memory

### 18.9.1 Configuration of Synchronous Control Setting Area

This area is used to set up synchronous control.

Whole map of shared memory

00H_000H		96 words
00H_060H	I/O control area	32 words
00H_07FH		
00H_080H	Common area	
00H_3CFH		896 words
01H_000H	Each axis information area	
01H_1FFH		512 words
02H_000H	Each axis setting area	
51H_3FFH		81,920 words
52H_000H	Amplifier parameter control area	48 words
52H_02FH		
53H_000H	System area	
		5,120 words
58H_000H	Synchronous control setting area	
58H_37FH		896 words
59H_000H	System area	
		7,168 words
5FH_000H	Positioning operation change setting area	
5FH_07FH		128 words
60H_000H	Cam pattern editing area	
60H_05FH		96 words
61H_000H	Positioning extension table setting area	
68H_3FFH		8,192 words

58H_000H	Synchronous control setting area for Axis 1	112 words	58H_000H	Synchronous control common setting area	16 words
58H_070H	Synchronous control setting area for Axis 2	112 words	58H_010H	Electronic gear setting area	16 words
58H_0E0H	Synchronous control setting area for Axis 3	112 words	58H_020H	Clutch setting area	48 words
58H_150H	Synchronous control setting area for Axis 4	112 words	58H_050H	Electronic cam setting area	32 words
58H_1C0H	Synchronous control setting area for Axis 5	112 words			
58H_230H	Synchronous control setting area for Axis 6	112 words			
58H_2A0H	Synchronous control setting area for Axis 7 (virtual)	112 words			
58H_310H	Synchronous control setting area for Axis 8 (virtual)	112 words			

### 18.9.2 Synchronous Control Setting Area

Bank	Offset address	Description	
58H	000H to 00FH	Axis 1 Synchronous control setting area	Synchronous control common setting area
	010H to 01FH		Electronic gear setting area
	020H to 04FH		Clutch setting area
	050H to 06FH		Electronic cam setting area
	070H to 07FH	Axis 2	Synchronous control common setting area

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Description	
	080H to 08FH	Synchronous control setting area	Electronic gear setting area
	090H to 0BFH		Clutch setting area
	0C0H to 0DFH		Electronic cam setting area
	0E0H to 0EFH	Axis 3 Synchronous control setting area	Synchronous control common setting area
	0F0H to 0FFH		Electronic gear setting area
	100H to 12FH		Clutch setting area
	130H to 14FH		Electronic cam setting area
	150H to 15FH	Axis 4 Synchronous control setting area	Synchronous control common setting area
	160H to 16FH		Electronic gear setting area
	170H to 19FH		Clutch setting area
	1A0H to 1BFH		Electronic cam setting area
	1C0H to 1CFH	Axis 5 Synchronous control setting area	Synchronous control common setting area
	1D0H to 1DFH		Electronic gear setting area
	1E0H to 20FH		Clutch setting area
	210H to 22FH		Electronic cam setting area
	230H to 23FH	Axis 6 Synchronous control setting area	Synchronous control common setting area
	240H to 24FH		Electronic gear setting area
	250H to 27FH		Clutch setting area
	280H to 29FH		Electronic cam setting area
	2A0H to 2AFH	Warning clearing for Axis 7 (virtual) Synchronous control setting area	Synchronous control common setting area
	2B0H to 2BFH		Electronic gear setting area
	2C0H to 2EFH		Clutch setting area
	2F0H to 30FH		Electronic cam setting area
	310H to 31FH	Axis 8 (virtual) Synchronous control setting area	Synchronous control common setting area
	320H to 32FH		Electronic gear setting area
	330H to 35FH		Clutch setting area
	360H to 37FH		Electronic cam setting area

### 18.9.3 Details of Synchronous Control Setting Area

#### ■ Synchronous control common setting area for each axis

Bank	Offset address	Name		Default	Description
58H	000H	Axi s 1	synchronous master axis Selection	000H	Set the master axis for each axis.
	070H	Axi s 2			

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description															
	0E0H	Axi s 3		<b>Setting value</b>   <b>Master axis</b>															
	150H	Axi s 4		000H   No synchronous master axis is used or the target axis is used as a master axis															
	1C0H	Axi s 5		001H   Axis 1															
	230H	Axi s 6		002H   Axis 2															
	2A0H	Axi s 7		003H   Axis 3															
				004H   Axis 4															
				005H   Axis 5															
				006H   Axis 6															
				007H   Axis 7															
				008H   8 axes															
	310H	8 axes		010H   Virtual axis 1															
				011H   Virtual axis 2															
				021H   Pulse input 1															
				022H   Pulse input 2															
				023H   Pulse input 3															
Any other settings will result in an error.																			
	001H	Axi s 1		Sets the status of the synchronous operation function set for each axis. <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Electronic gear operation setting</td> <td rowspan="4">0: Do not use 1: Use</td> </tr> <tr> <td>1</td> <td>Clutch operation setting</td> </tr> <tr> <td>2</td> <td>Electronic cam operation setting</td> </tr> <tr> <td>3</td> <td>Advance angle correction synchronization setting</td> </tr> <tr> <td>15 to 4</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	0	Electronic gear operation setting	0: Do not use 1: Use	1	Clutch operation setting	2	Electronic cam operation setting	3	Advance angle correction synchronization setting	15 to 4	-	-
Bit	Name	Description																	
0	Electronic gear operation setting	0: Do not use 1: Use																	
1	Clutch operation setting																		
2	Electronic cam operation setting																		
3	Advance angle correction synchronization setting																		
15 to 4	-	-																	
	071H	Axi s 2																	
	0E1H	Axi s 3																	
	151H	Axi s 4																	
	1C1H	Axi s 5																	
	231H	Axi s 6																	
	2A1H	Axi s 7																	
	311H	8 axes																	
	002H	Axi s 1		Sets the deceleration method to be used when deceleration stop is performed during synchronous operation. <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>-</td> <td>-</td> </tr> <tr> <td>1</td> <td>Deceleration method setting</td> <td>0: Linear deceleration 1: S-shaped deceleration</td> </tr> </tbody> </table>	Bit	Name	Description	0	-	-	1	Deceleration method setting	0: Linear deceleration 1: S-shaped deceleration						
Bit	Name	Description																	
0	-	-																	
1	Deceleration method setting	0: Linear deceleration 1: S-shaped deceleration																	
	072H	Axi s 2																	
	0E2H	Axi s 3																	
	152H	Axi s 4																	

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description						
	1C2H	Axi s 5		<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 2</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 2	-	-
	Bit	Name			Description					
	15 to 2	-			-					
	232H	Axi s 6								
2A2H	Axi s 7									
312H	8 axes									
58H	003H	Axi s 1	K0	<p>Sets the deceleration time to be used when deceleration stop is performed during synchronous operation.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Synchronous slave single deceleration stop deceleration time</td> <td>Set a deceleration time. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Synchronous slave single deceleration stop deceleration time	Set a deceleration time. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.
	Bit	Name			Description					
	15 to 0	Synchronous slave single deceleration stop deceleration time			Set a deceleration time. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.					
	073H	Axi s 2								
	0E3H	Axi s 3								
	153H	Axi s 4								
	1C3H	Axi s 5								
	233H	Axi s 6								
	2A3H	Axi s 7								
	313H	8 axes								
004H	Axi s 1	K5	<p>If the master axis type is set to pulse input, the Busy flag will turn OFF when pulses in the low section of pulse input do not change within the specified judgment time.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Pulse Input BUSY flag OFF judgement time</td> <td>Sets the pulse input BUSY flag OFF judgment time. Setting range: 0 to 1,000 Unit: ms Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Pulse Input BUSY flag OFF judgement time	Sets the pulse input BUSY flag OFF judgment time. Setting range: 0 to 1,000 Unit: ms Any other settings will result in an error.	
Bit	Name			Description						
15 to 0	Pulse Input BUSY flag OFF judgement time			Sets the pulse input BUSY flag OFF judgment time. Setting range: 0 to 1,000 Unit: ms Any other settings will result in an error.						
074H	Axi s 2									
0E4H	Axi s 3									
154H	Axi s 4									
1C4H	Axi s 5									
234H	Axi s 6									
2A4H	Axi s 7									
314H	8 axes									
005H to 00FH	Axi s 1	-	-	-						
075H to 07FH	Axi s 2	-	-	-						

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description
	0E5H to 0EFH	Axi s 3		
	155H to 15FH	Axi s 4		
	1C5H to 1CFH	Axi s 5		
	235H to 23FH	Axi s 6		
	2A5H to 2AFH	Axi s 7		
	315H to 31FH	8 axe s		

### ■ Electronic gear ratio setting area for each axis

Bank	Offset address	Name	Default	Description								
58H	010H	Axi s 1	K1	Set the numerator and denominator separately for the gear ratios of electronic gears. <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td rowspan="2">31 to 0</td> <td>Gear ratio numerator of each axis</td> <td>Setting range: 1 to 2,147,483,647</td> </tr> <tr> <td>Gear ratio denominator of each axis</td> <td>Any other settings will result in an error.</td> </tr> </tbody> </table> <p>The gear ratios of electronic gears are determined by the following formula:                      Output speed of electronic gear = Operating speed of master axis x (Gear ratio numerator)/(Gear ratio denominator)</p>	Bit	Name	Description	31 to 0	Gear ratio numerator of each axis	Setting range: 1 to 2,147,483,647	Gear ratio denominator of each axis	Any other settings will result in an error.
	Bit				Name	Description						
	31 to 0	Gear ratio numerator of each axis			Setting range: 1 to 2,147,483,647							
		Gear ratio denominator of each axis			Any other settings will result in an error.							
	011H											
	080H	Axi s 2										
	081H											
	0F0H	Axi s 3										
	0F1H											
	160H	Axi s 4			Gear ratio change time for each axis							
	161H											
	1D0H	Axi s 5			Gear ratio numerator							
	1D1H											
	240H	Axi s 6										
	241H											
	2B0H	Axi s 7										
	2B1H											
	320H	8 axe s										
321H												
012H	Axi s 1	K1										
013H												
082H	Axi s 2			Gear ratio change time for each axis								
083H												
0F2H	Axi s 3			Gear ratio denominator								
0F3H												
162H	Axi s 4											

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description						
	163H									
	1D2H	Axi s 5								
	1D3H									
	242H	Axi s 6								
	243H									
	2B2H	Axi s 7								
	2B3H									
	322H	8 axe s								
323H										
58H	014H	Axi s 1	K1	Set the time required to change the current gear ratio to a new gear ratio when the gear ratio of the electronic gear is changed during operation. <table border="1" data-bbox="696 857 1211 1078"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Gear ratio change time for each axis</td> <td>Set the time required to change the gear ratio. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Gear ratio change time for each axis	Set the time required to change the gear ratio. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.
	Bit	Name			Description					
	15 to 0	Gear ratio change time for each axis			Set the time required to change the gear ratio. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.					
	084H	Axi s 2								
	0F4H	Axi s 3								
	164H	Axi s 4			Gear ratio change time for each axis					
	1D4H	Axi s 5			Gear ratio change time					
	244H	Axi s 6								
	2B4H	Axi s 7								
	324H	8 axe s								
015H to 01FH	Axi s 1									
085H to 08FH	Axi s 2									
0F5H to 0FFH	Axi s 3									
165H to 16FH	Axi s 4									
1D5H to 1DFH	Axi s 5	-	-							
245H to 24FH	Axi s 6									
2B5H to 2BFH	Axi s 7									
325H to 32FH	8 axe s									

■ Clutch setting area for each axis

Bank	Offset address	Name	Default	Description									
58H	020H	Axi s 1	00H	Set the trigger type that is used to detect that the clutch turns ON. <table border="1" style="width: 100%; margin-top: 10px;"> <thead> <tr style="background-color: #d9e1f2;"> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>7 to 0</td> <td>Clutch ON trigger type</td> <td>00H: I/O clutch ON request Any other settings will result in an error.</td> </tr> <tr> <td>15 to 8</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	7 to 0	Clutch ON trigger type	00H: I/O clutch ON request Any other settings will result in an error.	15 to 8	-	-
	Bit	Name			Description								
	7 to 0	Clutch ON trigger type			00H: I/O clutch ON request Any other settings will result in an error.								
	15 to 8	-			-								
	090H	Axi s 2											
	100H	Axi s 3											
	170H	Axi s 4											
	1E0H	Axi s 5											
	250H	Axi s 6											
	2C0H	Axi s 7											
	330H	8 axe s											
	021H	Axi s 1	0H	Set the valid condition of clutch ON trigger signals. <table border="1" style="width: 100%; margin-top: 10px;"> <thead> <tr style="background-color: #d9e1f2;"> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1 to 0</td> <td>Clutch ON edge selection</td> <td>0H: Level 1H: Rising edge 2H: Falling edge 3H: ————</td> </tr> <tr> <td>15 to 2</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	1 to 0	Clutch ON edge selection	0H: Level 1H: Rising edge 2H: Falling edge 3H: ————	15 to 2	-	-
	Bit	Name			Description								
	1 to 0	Clutch ON edge selection			0H: Level 1H: Rising edge 2H: Falling edge 3H: ————								
	15 to 2	-			-								
091H	Axi s 2												
101H	Axi s 3												
171H	Axi s 4												
1E1H	Axi s 5												
251H	Axi s 6												
2C1H	Axi s 7												
331H	8 axe s												
022H to 027H	Axi s 1	-	-										
092H to 097H	Axi s 2												
102H to 107H	Axi s 3												
172H to 177H	Axi s 4												
1E2H to 1E7H	Axi s 5												

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description	
	252H to 257H	Axi s 6			
	2C2H to 2C7H	Axi s 7			
	332H to 337H	8 axes			
58H	028H	Axi s 1	00H	Set the trigger type that is used to detect that the clutch turns OFF.	
	098H	Axi s 2			
	108H	Axi s 3			
	178H	Axi s 4			
	1E8H	Axi s 5			
	258H	Axi s 6			
	2C8H	Axi s 7			
	338H	8 axes			
	029H	Axi s 1	0H	Set the valid condition of trigger signals.	
	099H	Axi s 2			
	109H	Axi s 3			
	179H	Axi s 4			
	1E9H	Axi s 5			
	259H	Axi s 6			
	2C9H	Axi s 7			
	339H	8 axes			
	02AH	Axi s 1	Clutch OFF edge phase ratio	K0	Sets the ratio for the phase at which the clutch turns OFF when "I/O + Phase after clutch control" is selected for the clutch OFF trigger type.
	09AH	Axi s 2			
10AH	Axi s 3				

Bit	Name	Description
7 to 0	Clutch OFF trigger type	00H: I/O clutch OFF request 11H: I/O + Phase after clutch control Clutch OFF Any other settings will result in an error.
15 to 8	-	-

Bit	Name	Description
1 to 0	Clutch OFF edge selection	0H: Level 1H: Rising edge 2H: Falling edge 3H: -----
15 to 2	-	-

If "0H: Level" is selected for the clutch ON edge selection (offset address 21H), set "0H: Level" in this area (offset address 29H).



## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description												
	17AH	Axi s 4		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #d9e1f2;"> <th style="width: 10%;">Bit</th> <th style="width: 40%;">Name</th> <th style="width: 50%;">Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Clutch OFF edge phase ratio</td> <td>                     Sets the ratio for the phase at which the clutch turns OFF.                      Setting range: 0 to 99                      Unit: %                      Any other settings will result in an error.                 </td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Clutch OFF edge phase ratio	Sets the ratio for the phase at which the clutch turns OFF. Setting range: 0 to 99 Unit: % Any other settings will result in an error.						
	Bit	Name			Description											
	15 to 0	Clutch OFF edge phase ratio			Sets the ratio for the phase at which the clutch turns OFF. Setting range: 0 to 99 Unit: % Any other settings will result in an error.											
	1EAH	Axi s 5														
	25AH	Axi s 6														
2CAH	Axi s 7															
33AH	8 axe s															
58H	02BH to 02FH	Axi s 1	-	-												
	09BH to 09FH	Axi s 2														
	10BH to 10FH	Axi s 3														
	17BH to 17FH	Axi s 4														
	1EBH to 1EFH	Axi s 5														
	25BH to 25FH	Axi s 6														
	2CBH to 2CFH	Axi s 7														
	33BH to 33FH	8 axe s														
	030H	Axi s 1			Clutch ON method	0H	Sets "Direct" or "Slip" as the operation method to be used when clutch ON is detected. <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #d9e1f2;"> <th style="width: 10%;">Bit</th> <th style="width: 40%;">Name</th> <th style="width: 50%;">Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Clutch ON method</td> <td>0: Direct 1: Slip</td> </tr> <tr> <td>15 to 1</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	0	Clutch ON method	0: Direct 1: Slip	15 to 1	-	-
	Bit	Name						Description								
	0	Clutch ON method						0: Direct 1: Slip								
	15 to 1	-						-								
	0A0H	Axi s 2														
	110H	Axi s 3														
	180H	Axi s 4														
1F0H	Axi s 5															
260H	Axi s 6															
2D0H	Axi s 7															
340H	8 axe s															
031H	Axi s 1	-	-	-												

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description									
	0A1H	Axi s 2											
	111H	Axi s 3											
	181H	Axi s 4											
	1F1H	Axi s 5											
	261H	Axi s 6											
	2D1H	Axi s 7											
	341H	8 axes											
	032H	Axi s 1	0H	<p>Sets the slip method to be used when "Slip" is selected for the clutch ON method.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Clutch ON slip method</td> <td>0: Slip time setting 1: -----</td> </tr> <tr> <td>15 to 1</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	0	Clutch ON slip method	0: Slip time setting 1: -----	15 to 1	-	-
	Bit	Name			Description								
	0	Clutch ON slip method			0: Slip time setting 1: -----								
	15 to 1	-			-								
	0A2H	Axi s 2											
	112H	Axi s 3											
	182H	Axi s 4											
	1F2H	Axi s 5											
262H	Axi s 6												
2D2H	Axi s 7												
342H	8 axes												
58H	033H	Axi s 1	K1	<p>Sets the slip time that causes the movement speed of the slave axes to follow the movement speed of the master axis when "Slip" is selected for the clutch ON method.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Clutch ON slip time</td> <td>Set the slip time for turning the clutch ON. Setting range: 1 to 10,000 Unit: ms Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Clutch ON slip time	Set the slip time for turning the clutch ON. Setting range: 1 to 10,000 Unit: ms Any other settings will result in an error.			
	Bit	Name			Description								
	15 to 0	Clutch ON slip time			Set the slip time for turning the clutch ON. Setting range: 1 to 10,000 Unit: ms Any other settings will result in an error.								
	0A3H	Axi s 2											
	113H	Axi s 3											
	183H	Axi s 4											
	1F3H	Axi s 5											
263H	Axi s 6												
2D3H	Axi s 7												

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description									
	343H	8 axes											
	034H to 035H	Axi s 1											
	0A4H to 0A5H	Axi s 2											
	114H to 115H	Axi s 3											
	184H to 185H	Axi s 4											
	1F4H to 1F5H	Axi s 5											
	264H to 265H	Axi s 6											
	2D4H to 2D5H	Axi s 7											
	344H to 345H	8 axes											
	036H	Axi s 1		Sets the acceleration pattern to be used when "Slip" is selected for the clutch ON method. <table border="1" style="width: 100%; margin-top: 10px;"> <thead> <tr style="background-color: #d9e1f2;"> <th style="text-align: center;">Bit</th> <th style="text-align: center;">Name</th> <th style="text-align: center;">Description</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">0</td> <td>Clutch ON slip curve selection</td> <td>0: Linear 1: -----</td> </tr> <tr> <td style="text-align: center;">15 to 1</td> <td style="text-align: center;">-</td> <td style="text-align: center;">-</td> </tr> </tbody> </table>	Bit	Name	Description	0	Clutch ON slip curve selection	0: Linear 1: -----	15 to 1	-	-
Bit	Name	Description											
0	Clutch ON slip curve selection	0: Linear 1: -----											
15 to 1	-	-											
	0A6H	Axi s 2											
	116H	Axi s 3											
	186H	Axi s 4											
	1F6H	Axi s 5	0H										
	266H	Axi s 6											
	2D6H	Axi s 7											
	346H	8 axes											
58H	037H to 03FH	Axi s 1											
	0A7H to 0AFH	Axi s 2											
	117H to 11FH	Axi s 3											
	187H to 18FH	Axi s 4											
	1F7H to 1FFH	Axi s 5											

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description		
	267H to 26FH	Axi s 6				
	2D7H to 2DFH	Axi s 7				
	347H to 34FH	8 axes				
	040H	Axi s 1	0H	Sets "Direct" or "Slip" as the operation method to be used when clutch OFF is detected.		
	0B0H	Axi s 2				
	120H	Axi s 3				
	190H	Axi s 4				
	200H	Axi s 5				
	270H	Axi s 6				
	2E0H	Axi s 7				
	350H	8 axes				
	041H	Axi s 1			-	-
	0B1H	Axi s 2				
	121H	Axi s 3				
	191H	Axi s 4				
	201H	Axi s 5				
	271H	Axi s 6				
	2E1H	Axi s 7				
	351H	8 axes				
	042H	Axi s 1	0H	Sets the slip method to be used when "Slip" is selected for the clutch OFF method.		
	0B2H	Axi s 2				
	122H	Axi s 3				

Bit	Name	Description
0	Clutch OFF method	0: Direct 1: Slip
15 to 1	-	-

Bit	Name	Description
0	Clutch OFF slip method	0: Slip time setting 1: -----

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description						
	192H	Axi s 4		<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 1</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 1	-	-
	Bit	Name			Description					
	15 to 1	-			-					
	202H	Axi s 5								
	272H	Axi s 6								
2E2H	Axi s 7									
352H	8 axes									
58H	043H	Axi s 1	K1	<p>Sets the slip time that causes the movement speed of the slave axes to follow the movement speed of the master axis when "Slip" is selected for the clutch OFF method.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Clutch OFF slip time</td> <td> <p>Sets the slip time for turning the clutch OFF.</p> <p>Setting range: 1 to 10,000</p> <p>Unit: ms</p> <p>Any other settings will result in an error.</p> </td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Clutch OFF slip time	<p>Sets the slip time for turning the clutch OFF.</p> <p>Setting range: 1 to 10,000</p> <p>Unit: ms</p> <p>Any other settings will result in an error.</p>
	Bit	Name			Description					
	15 to 0	Clutch OFF slip time			<p>Sets the slip time for turning the clutch OFF.</p> <p>Setting range: 1 to 10,000</p> <p>Unit: ms</p> <p>Any other settings will result in an error.</p>					
	0B3H	Axi s 2								
	123H	Axi s 3								
	193H	Axi s 4								
	203H	Axi s 5								
	273H	Axi s 6								
	2E3H	Axi s 7								
	353H	8 axes								
044H to 045H	Axi s 1	-	-	-						
0B4H to 0B5H	Axi s 2									
124H to 125H	Axi s 3									
194H to 195H	Axi s 4									
204H to 205H	Axi s 5									
274H to 275H	Axi s 6									
2E4H to 2E5H	Axi s 7									
354H to 355H	8 axes									
046H	Axi s 1				Clutch OFF	0H	Sets the acceleration pattern to be used when "Slip" is selected for the clutch OFF method.			

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description									
	0B6H	Axi s 2		<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Clutch OFF slip curve selection</td> <td>0: Linear 1: -----</td> </tr> <tr> <td>15 to 1</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Description	0	Clutch OFF slip curve selection	0: Linear 1: -----	15 to 1	-	-
	Bit	Name			Description								
	0	Clutch OFF slip curve selection			0: Linear 1: -----								
	15 to 1	-			-								
	126H	Axi s 3											
	196H	Axi s 4											
	206H	Axi s 5											
276H	Axi s 6												
2E6H	Axi s 7												
356H	8 axes	slip curve selection											
58H	047H to 04FH	Axi s 1	-	-									
	0B7H to 0BFH	Axi s 2											
	127H to 12FH	Axi s 3											
	197H to 19FH	Axi s 4											
	207H to 20FH	Axi s 5											
	277H to 27FH	Axi s 6											
	2E7H to 2EFH	Axi s 7											
	357H to 35FH	8 axes											

### ■ Electronic cam setting area for each axis

Bank	Offset address	Name	Default	Description						
58H	050H	Axi s 1	K1	Sets the cam control synchronous master cycle. <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>31 to 0</td> <td>Cam control synchronous master axis cycle</td> <td>Setting range: 1 to 2,147,483,647 Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	31 to 0	Cam control synchronous master axis cycle	Setting range: 1 to 2,147,483,647 Any other settings will result in an error.
	Bit	Name			Description					
	31 to 0	Cam control synchronous master axis cycle			Setting range: 1 to 2,147,483,647 Any other settings will result in an error.					
	051H	Axi s 1								
	0C0H	Axi s 2								
	0C1H	Axi s 2								
	130H	Axi s 3								
131H	Axi s 3									
1A0H	Axi s 4									
1A1H	Axi s 4									

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description						
	210H	Axis 5								
	211H									
	280H	Axis 6								
	281H									
	2F0H	Axis 7								
	2F1H									
	360H	8 axes								
	361H									
	052H	Axis 1								
	0C2H	Axis 2								
	132H	Axis 3								
	1A2H	Axis 4								
	212H	Axis 5								
	282H	Axis 6								
	2F2H	Axis 7								
	362H	8 axes								
	053H	Axis 1	K1	<p>Sets the registered cam pattern number to be used.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Used cam pattern number</td> <td>Setting range: 1 to 16 Any other settings will result in an error.</td> </tr> </tbody> </table> <p>The upper limit of usable cam pattern numbers depends on the resolution.</p>	Bit	Name	Description	15 to 0	Used cam pattern number	Setting range: 1 to 16 Any other settings will result in an error.
	Bit	Name			Description					
	15 to 0	Used cam pattern number			Setting range: 1 to 16 Any other settings will result in an error.					
	0C3H	Axis 2								
	133H	Axis 3								
	1A3H	Axis 4								
	213H	Axis 5								
	283H	Axis 6								
2F3H	Axis 7									
363H	8 axes									
58H	054H	Axis 1	Cam stroke amount	K1	Sets the upper limit of displacement for cam control.					
	055H									

## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description						
	0C4H	Axi s 2	K0	<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>31 to 0</td> <td>Cam stroke amount</td> <td>Setting range: 1 to 2,147,483,647 Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	31 to 0	Cam stroke amount	Setting range: 1 to 2,147,483,647 Any other settings will result in an error.
	Bit				Name	Description				
	31 to 0	Cam stroke amount			Setting range: 1 to 2,147,483,647 Any other settings will result in an error.					
	0C5H	Axi s 3								
	134H									
	135H	Axi s 4								
	1A4H									
	1A5H	Axi s 5								
	214H									
	215H	Axi s 6								
	284H									
	285H	Axi s 7								
	2F4H									
	2F5H	8 axe s								
364H										
365H										
	056H	Axi s 1	K0	<p>Sets the correction reference amount required for the unit to calculate the advance angle correction amount when the advance angle correction function is used.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Advance angle correction reference amount</td> <td>K0</td> <td>Setting range: -2147482624 to +2147482624 Any other settings will result in an error.</td> </tr> </tbody> </table> <p>The unit follows the unit system of the master axis and interpretation changes according to the unit settings as below.</p> <p>Pulses: -2,147,482,624 to 2,147,482,624 pulses  <math>\mu\text{m}</math> (0.1 <math>\mu\text{m}</math>) : -214,748,262.4 to 214,748,262.4 <math>\mu\text{m}</math>  <math>\mu\text{m}</math> (1 <math>\mu\text{m}</math>): -2,147,482,624 to 2,147,482,624 <math>\mu\text{m}</math>  Inches (0.00001 inch): -21,474.82624 to 21,474.82624 inches  inch (0.0001 inch): -214,748.2624 to 214,748.2624 inch  Degrees (0.1 degree): -214,748,262.4 to 214,748,262.4 degrees  Degree (1 degree): -2,147,482,624 to 2,147,482,624 degrees</p>	Name	Default	Description	Advance angle correction reference amount	K0	Setting range: -2147482624 to +2147482624 Any other settings will result in an error.
	Name				Default	Description				
	Advance angle correction reference amount	K0			Setting range: -2147482624 to +2147482624 Any other settings will result in an error.					
	057H	Axi s 2								
	0C6H									
	0C7H	Axi s 3								
	136H									
	137H	Axi s 4								
	1A6H									
	1A7H	Axi s 5								
	216H									
	217H	Axi s 6								
	286H									
	287H	Axi s 7								
2F6H										
2F7H	8 axe s									
366H										
367H										
58H	058H	Axi s 1	K100	<p>Sets the reference speed required for the unit to calculate the advance angle correction amount when the advance angle correction function is used.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>31 to 0</td> <td>Advance angle correction</td> <td>Setting range: 1 to 2,147,482,624</td> </tr> </tbody> </table>	Bit	Name	Description	31 to 0	Advance angle correction	Setting range: 1 to 2,147,482,624
	Bit				Name	Description				
	31 to 0	Advance angle correction			Setting range: 1 to 2,147,482,624					
	059H	Axi s 2								
	0C8H									
0C9H	Axi s 3									
138H										



## 18.9 Synchronous Control Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description						
	139H			<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td></td> <td>reference speed</td> <td>                     Unit: Dependent upon the specified unit                      Any other settings will result in an error.                      The unit follows the unit system of the master axis and the range changes according to the unit settings as below.                      Pulses: 1 to 2,147,482,624 pps                      μm: 1 to 2,147,482,624 μm/s                      Inches: 0.001 to 2,147,482.624 inches/s                      Degrees: 0.001 to 2,147,482.624 rev/s                 </td> </tr> </tbody> </table>	Bit	Name	Description		reference speed	Unit: Dependent upon the specified unit Any other settings will result in an error. The unit follows the unit system of the master axis and the range changes according to the unit settings as below. Pulses: 1 to 2,147,482,624 pps μm: 1 to 2,147,482,624 μm/s Inches: 0.001 to 2,147,482.624 inches/s Degrees: 0.001 to 2,147,482.624 rev/s
Bit	Name	Description								
	reference speed	Unit: Dependent upon the specified unit Any other settings will result in an error. The unit follows the unit system of the master axis and the range changes according to the unit settings as below. Pulses: 1 to 2,147,482,624 pps μm: 1 to 2,147,482,624 μm/s Inches: 0.001 to 2,147,482.624 inches/s Degrees: 0.001 to 2,147,482.624 rev/s								
	1A8H	Axi s 4								
	1A9H	Axi s 4								
	218H	Axi s 5								
	219H	Axi s 5								
	288H	Axi s 6								
	289H	Axi s 6								
	2F8H	Axi s 7								
	2F9H	Axi s 7								
	368H									
	369H	8 axes								
	05AH	Axi s 1	K100	Sets the time required to reflect the changed value when the parameter related to advance angle correction (advance angle correction reference speed or advance angle correction reference amount) is changed during electronic cam operation.						
	0CAH	Axi s 2								
	13AH	Axi s 3								
	1AAH	Axi s 4								
	21AH	Axi s 5								
	28AH	Axi s 6								
	2FAH	Axi s 7								
	36AH	8 axes								
	05BH to 06FH	Axi s 1								
	0CBH to 0DFH	Axi s 2								
	13BH to 14FH	Axi s 3								
	1ABH to 1BFH	Axi s 4								
	21BH to 22FH	Axi s 5								
	28BH to 29FH	Axi s 6								

# 18.9 Synchronous Control Setting Area in Shared Memory

---

Bank	Offset address	Name	Default	Description
	2FBH to 30FH	Axi s 7		
	36BH to 37FH	8 axe s		

## 18.10 Positioning Operation Change Setting Area in Shared Memory

### 18.10 Positioning Operation Change Setting Area in Shared Memory

#### 18.10.1 Configuration of Positioning Operation Change Setting Area

Whole map of shared memory		
00H_000H		96 words
00H_060H	I/O control area	32 words
00H_07FH		
00H_080H	Common area	
00H_3CFH		896 words
01H_000H	Each axis information area	
01H_1FFH		512 words
02H_000H	Each axis setting area	
51H_3FFH		81,920 words
52H_000H	Amplifier parameter control area	48 words
52H_02FH		
53H_000H	System area	
		5,120 words
58H_000H	Synchronous control setting area	
58H_37FH		896 words
59H_000H	System area	
		7,168 words
5FH_000H	Positioning operation change setting area	
5FH_07FH		128 words
60H_000H	Cam pattern editing area	
60H_05FH		96 words
61H_000H	Positioning extension table setting area	
68H_3FFH		8,192 words

5FH_000H	Positioning operation change setting area for axis 1	16 words
5FH_010H	Positioning operation change setting area for axis 2	16 words
5FH_020H	Positioning operation change setting area for axis 3	16 words
5FH_030H	Positioning operation change setting area for axis 4	16 words
5FH_040H	Positioning operation change setting area for axis 5	16 words
5FH_050H	Positioning operation change setting area for axis 6	16 words
5FH_060H	Positioning operation change setting area for axis 7 (virtual)	16 words
5FH_070H	Positioning operation change setting area for axis 8 (virtual)	16 words

# 18.10 Positioning Operation Change Setting Area in Shared Memory

## 18.10.2 Positioning Speed Change Setting Area

Bank	Offset address	Name	Default	Description						
	000H	Axis 1	K100	<p>Area for setting the ratio (override) of change relative to the commanded speed when the positioning speed is changed. No speed change request by I/O is required, and the change becomes valid when a value (ratio) is set.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>positioning Speed change ratio specification</td> <td>K100</td> <td>Setting range: 1 to 300 Unit: % Any other settings will result in an error.</td> </tr> </tbody> </table>	Name	Default	Description	positioning Speed change ratio specification	K100	Setting range: 1 to 300 Unit: % Any other settings will result in an error.
	Name	Default			Description					
	positioning Speed change ratio specification	K100			Setting range: 1 to 300 Unit: % Any other settings will result in an error.					
	010H	Axis 2								
	020H	Axis 3								
	030H	Axis 4								
	040H	Axis 5								
	050H	Axis 6								
060H	Axis 7									
070H	8 axes	Positioning speed change ratio specification (Override)								
5FH	001H	Axis 1	0H	<p>Area for setting the range of positioning speed change.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>positioning Speed change mode selection</td> <td>0000H: Active table only 0001H: Active table to E point table (until operation is complete)</td> </tr> </tbody> </table> <p>In the case of other values, the unit operates assuming that 0000H ("Active table only") is set.</p>	Bit	Name	Description	15 to 0	positioning Speed change mode selection	0000H: Active table only 0001H: Active table to E point table (until operation is complete)
	Bit	Name			Description					
	15 to 0	positioning Speed change mode selection			0000H: Active table only 0001H: Active table to E point table (until operation is complete)					
	011H	Axis 2								
	021H	Axis 3								
	031H	Axis 4								
	041H	Axis 5								
	051H	Axis 6								
061H	Axis 7									
071H	8 axes	positioning Speed change mode selection								
	002H	Axis 1	K100	<p>Area for specifying a new speed when the positioning speed is changed. Unit-converted values are set.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>31 to 0</td> <td>positioning Speed change</td> <td>Setting range: 1 to 2,147,482,624 Unit: Dependent upon the specified unit Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	31 to 0	positioning Speed change	Setting range: 1 to 2,147,482,624 Unit: Dependent upon the specified unit Any other settings will result in an error.
	Bit	Name			Description					
	31 to 0	positioning Speed change			Setting range: 1 to 2,147,482,624 Unit: Dependent upon the specified unit Any other settings will result in an error.					
	003H	Axis 1								
	012H	Axis 2								
	013H	Axis 2								
	022H	Axis 3								
	023H	Axis 3								
032H	Axis 4									
033H	Axis 4									

## 18.10 Positioning Operation Change Setting Area in Shared Memory

Bank	Offset address	Name	Default	Description												
	042H	Axis 5		<table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td>                     The setting range changes according to the unit settings as below.                      Pulses: 1 to 2,147,482,624 pps                      μm: 1 to 2,147,482,624 μm/s                      Inches: 0.001 to 2,147,482.624 inches/s                      Degrees: 0.001 to 2,147,482.624 rev/s                 </td> </tr> </tbody> </table>	Bit	Name	Description			The setting range changes according to the unit settings as below. Pulses: 1 to 2,147,482,624 pps μm: 1 to 2,147,482,624 μm/s Inches: 0.001 to 2,147,482.624 inches/s Degrees: 0.001 to 2,147,482.624 rev/s						
	Bit				Name	Description										
					The setting range changes according to the unit settings as below. Pulses: 1 to 2,147,482,624 pps μm: 1 to 2,147,482,624 μm/s Inches: 0.001 to 2,147,482.624 inches/s Degrees: 0.001 to 2,147,482.624 rev/s											
	043H															
	052H	Axis 6														
	053H															
	062H	Axis 7														
063H																
072H	8 axes															
073H																
5FH	004H	Axis 1	0H	<p>If the target speed is changed during a positioning operation, when this bit changes from 0 to 1, the target speed during the operation is changed to the value specified in "Positioning speed change: Changed speed". After the change processing is completed, the positioning unit RTEK automatically resets the bit to 0.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>positioning speed change request</td> <td>0</td> <td>0: No change 1: Change the positioning movement amount for the target axis.</td> </tr> <tr> <td>15 to 1</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	positioning speed change request	0	0: No change 1: Change the positioning movement amount for the target axis.	15 to 1	-	-	-
	Bit	Name			Default	Description										
	0	positioning speed change request			0	0: No change 1: Change the positioning movement amount for the target axis.										
	15 to 1	-			-	-										
	014H	Axis 2														
	024H	Axis 3														
	034H	Axis 4														
	044H	Axis 5														
054H	Axis 6															
064H	Axis 7															
074H	8 axes															
5FH	005H to 009H	Axis 1	-	-												
	015H to 019H	Axis 2														
	025H to 029H	Axis 3														
	035H to 039H	Axis 4														
	045H to 049H	Axis 5														
	055H to 059H	Axis 6														
	065H to 069H	Axis 7														
	075H to 079H	8 axes														

## 18.10 Positioning Operation Change Setting Area in Shared Memory

### 18.10.3 Positioning Movement Amount Change Setting Area

Bank	Offset address	Name	Default	Description												
5FH	00AH	Axis 1	K0	<p>Area for setting a changed movement amount when the positioning movement amount is changed. Unit-converted values are set.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>positioning movement amount change</td> <td>K0</td> <td>Setting range: -2147482624 to +2147482624 Any other settings will result in an error.</td> </tr> </tbody> </table> <p>Interpretation changes according to the unit settings as below.</p> <p>Pulses: -2,147,482,624 to 2,147,482,624 pulses  <math>\mu\text{m}</math> (0.1 <math>\mu\text{m}</math>) : -214,748,262.4 to 214,748,262.4 <math>\mu\text{m}</math>  <math>\mu\text{m}</math> (1 <math>\mu\text{m}</math>): -2,147,482,624 to 2,147,482,624 <math>\mu\text{m}</math>                      Inches (0.00001 inch): -21,474.82624 to 21,474.82624 inches                      inch (0.0001 inch): -214,748.2624 to 214,748.2624 inch                      Degrees (0.1 degree): -214,748,262.4 to 214,748,262.4 degrees                      Degree (1 degree): -2,147,482,624 to 2,147,482,624 degrees</p>	Name	Default	Description	positioning movement amount change	K0	Setting range: -2147482624 to +2147482624 Any other settings will result in an error.						
	Name				Default	Description										
	positioning movement amount change	K0			Setting range: -2147482624 to +2147482624 Any other settings will result in an error.											
	00BH															
	01AH	Axis 2														
	01BH															
	02AH	Axis 3														
	02BH															
	03AH	Axis 4														
	03BH															
	04AH	Axis 5														
	04BH															
	05AH	Axis 6														
05BH																
06AH	Axis 7															
06BH																
07AH	8 axes															
07BH																
5FH	00CH	Axis 1	OH	<p>If the target movement amount is changed during positioning operation, when this bit changes from 0 to 1, the target movement amount during operation is changed to the value specified in "Changed positioning movement amount". After the change processing is completed, the positioning unit RTEX automatically resets the bit to 0.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>positioning movement amount change request</td> <td>0</td> <td>0: No change 1: Change the positioning movement amount for the target axis.</td> </tr> <tr> <td>15 to 1</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	positioning movement amount change request	0	0: No change 1: Change the positioning movement amount for the target axis.	15 to 1	-	-	-
	Bit				Name	Default	Description									
	0				positioning movement amount change request	0	0: No change 1: Change the positioning movement amount for the target axis.									
	15 to 1				-	-	-									
	01CH				Axis 2											
	02CH				Axis 3											
	03CH				Axis 4											
	04CH				Axis 5											
05CH	Axis 6															
06CH	Axis 7															
07CH	8 axes															
5FH	00DH to 00FH	Axis 1	-	-												
	01DH to 01FH	Axis 2	-	-												

## 18.10 Positioning Operation Change Setting Area in Shared Memory

---

Bank	Offset address	Name	Default	Description
	02DH to 02FH	Axi s 3		
	03DH to 03FH	Axi s 4		
	04DH to 04FH	Axi s 5		
	05DH to 05FH	Axi s 6		
	06DH to 06FH	Axi s 7		
	07DH to 07FH	8 axe s		

## 18.11 Cam Pattern Editing Area in Shared Memory

### 18.11 Cam Pattern Editing Area in Shared Memory

#### 18.11.1 Configuration of Cam Pattern Editing Area

Whole map of shared memory

00H_000H		96 words	
00H_060H	I/O control area	32 words	
00H_07FH			
00H_080H	Common area		
00H_3CFH		896 words	
01H_000H	Each axis information area		
01H_1FFH		512 words	
02H_000H	Each axis setting area		
51H_3FFH		81,920 words	
52H_000H	Amplifier parameter control area	48 words	
52H_02FH			
53H_000H	System area		
		5,120 words	
58H_000H	Synchronous control setting area		
58H_37FH		896 words	
59H_000H	System area		
		7,168 words	
5FH_000H	Positioning operation change setting area		
5FH_07FH		128 words	
60H_000H	Cam pattern editing area		
60H_05FH		96 words	
61H_000H	Positioning extension table setting area		
68H_3FFH		8,192 words	
60H_000H	Cam pattern setting area	88 words	
60H_058H	Cam pattern editing execution confirmation area	8 words	



## 18.11 Cam Pattern Editing Area in Shared Memory

### 18.11.2 Cam Pattern Setting Area

Bank	Offset address	Name	Default	Description								
60H	000H	Cam pattern number	K0	<p>When reading: Sets the cam pattern number that was read.</p> <p>When writing: Sets the cam pattern number to be rewritten.</p> <p>The setting range changes according to the resolution.</p> <table border="1"> <thead> <tr> <th>Pattern resolution</th> <th>Settable range</th> </tr> </thead> <tbody> <tr> <td>1024, 2048, 4096, 8192</td> <td>Setting range: 1 to 16</td> </tr> <tr> <td>16384</td> <td>Setting range: 1 to 8</td> </tr> <tr> <td>32768</td> <td>Setting range: 1 to 4</td> </tr> </tbody> </table> <p>Any other settings will result in an error.</p>	Pattern resolution	Settable range	1024, 2048, 4096, 8192	Setting range: 1 to 16	16384	Setting range: 1 to 8	32768	Setting range: 1 to 4
	Pattern resolution	Settable range										
	1024, 2048, 4096, 8192	Setting range: 1 to 16										
16384	Setting range: 1 to 8											
32768	Setting range: 1 to 4											
001H	-	-	-	-								
002H	Number of set cam pattern sections	K0	<p>When reading: Stores the number of set sections read from the cam pattern table.</p> <p>When writing: Sets the number of set sections to be rewritten in the cam pattern table.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Cam pattern Number of set sections</td> <td>K0</td> <td>Setting range: 1 to 20 Any other settings will result in an error.</td> </tr> </tbody> </table>	Name	Default	Description	Cam pattern Number of set sections	K0	Setting range: 1 to 20 Any other settings will result in an error.			
Name	Default	Description										
Cam pattern Number of set sections	K0	Setting range: 1 to 20 Any other settings will result in an error.										
003H	Shift amount	K0	<p>When reading: Stores the shift amount read from the cam pattern table.</p> <p>When writing: Sets the shift amount to be rewritten in the cam pattern table.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Shift amount</td> <td>K0</td> <td>Setting range: 0 to 10,000 Unit: 0.01% Any other settings will result in an error.</td> </tr> </tbody> </table>	Name	Default	Description	Shift amount	K0	Setting range: 0 to 10,000 Unit: 0.01% Any other settings will result in an error.			
Name	Default	Description										
Shift amount	K0	Setting range: 0 to 10,000 Unit: 0.01% Any other settings will result in an error.										
60H	004H	Start phase of Section 1	K0	<p>When reading: Stores the start phase of Section 1 read from the cam pattern table. The read value is always 0.</p> <p>When writing: Sets the start phase of Section 1 to be rewritten in the cam pattern table. When any value other than 0 is set in Section 1, the value cannot be rewritten correctly.</p> <table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Start phase of Section 1</td> <td>K0</td> <td>Setting range: 0 to 10,000 Unit: 0.01%</td> </tr> </tbody> </table>	Name	Default	Description	Start phase of Section 1	K0	Setting range: 0 to 10,000 Unit: 0.01%		
Name	Default	Description										
Start phase of Section 1	K0	Setting range: 0 to 10,000 Unit: 0.01%										

## 18.11 Cam Pattern Editing Area in Shared Memory

Bank	Offset address	Name	Default	Description																																		
				<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td>Any other settings will result in an error.</td> </tr> </tbody> </table>	Name	Default	Description			Any other settings will result in an error.																												
Name	Default	Description																																				
		Any other settings will result in an error.																																				
				When reading: Stores data after truncating all digits after the third decimal place. When writing: Registers data after the unit calculates all digits after the third decimal place.																																		
60H	005H	Displacement of Section 1	K0	When reading: Stores the displacement of Section 1 read from the cam pattern table. When writing: Sets the displacement of Section 1 to be rewritten in the cam pattern table.																																		
				<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Displacement of Section 1</td> <td>K0</td> <td>Setting range: -10,000 to +10,000 Unit: 0.01% Any other settings will result in an error.</td> </tr> </tbody> </table>	Name	Default	Description	Displacement of Section 1	K0	Setting range: -10,000 to +10,000 Unit: 0.01% Any other settings will result in an error.																												
Name	Default	Description																																				
Displacement of Section 1	K0	Setting range: -10,000 to +10,000 Unit: 0.01% Any other settings will result in an error.																																				
				When reading: Stores data after truncating all digits after the third decimal place When writing: Registers data after padding all digits after the third decimal place with 0.																																		
60H	006H	Cam curve of Section 1	K0	When reading: Stores the cam curve number read from the cam pattern table. When writing: Sets the cam curve number to be rewritten in the cam pattern table.																																		
				<table border="1"> <thead> <tr> <th>Setting value</th> <th>Cam curve name</th> </tr> </thead> <tbody> <tr><td>10</td><td>Constant velocity</td></tr> <tr><td>11</td><td>Constant acceleration</td></tr> <tr><td>12</td><td>Simple harmonic motion</td></tr> <tr><td>22</td><td>Cycloid</td></tr> <tr><td>25</td><td>Modified trapezoid</td></tr> <tr><td>26</td><td>Modified sine</td></tr> <tr><td>27</td><td>Modified constant velocity</td></tr> <tr><td>33</td><td>Asymmetric cycloid</td></tr> <tr><td>34</td><td>Asymmetric modified trapezoid</td></tr> <tr><td>35</td><td>Trapezoid</td></tr> <tr><td>43</td><td>One-dwell cycloid m = 1</td></tr> <tr><td>44</td><td>One-dwell cycloid m = 2/3</td></tr> <tr><td>45</td><td>One-dwell modified trapezoid m = 1</td></tr> <tr><td>46</td><td>One-dwell modified trapezoid (Ferguson)</td></tr> <tr><td>47</td><td>One-dwell modified trapezoid m = 2/3</td></tr> </tbody> </table>	Setting value	Cam curve name	10	Constant velocity	11	Constant acceleration	12	Simple harmonic motion	22	Cycloid	25	Modified trapezoid	26	Modified sine	27	Modified constant velocity	33	Asymmetric cycloid	34	Asymmetric modified trapezoid	35	Trapezoid	43	One-dwell cycloid m = 1	44	One-dwell cycloid m = 2/3	45	One-dwell modified trapezoid m = 1	46	One-dwell modified trapezoid (Ferguson)	47	One-dwell modified trapezoid m = 2/3		
Setting value	Cam curve name																																					
10	Constant velocity																																					
11	Constant acceleration																																					
12	Simple harmonic motion																																					
22	Cycloid																																					
25	Modified trapezoid																																					
26	Modified sine																																					
27	Modified constant velocity																																					
33	Asymmetric cycloid																																					
34	Asymmetric modified trapezoid																																					
35	Trapezoid																																					
43	One-dwell cycloid m = 1																																					
44	One-dwell cycloid m = 2/3																																					
45	One-dwell modified trapezoid m = 1																																					
46	One-dwell modified trapezoid (Ferguson)																																					
47	One-dwell modified trapezoid m = 2/3																																					

## 18.11 Cam Pattern Editing Area in Shared Memory

Bank	Offset address	Name	Default	Description				
				<b>Setting value</b>	<b>Cam curve name</b>			
				48	One-dwell modified sine			
				49	One-dwell trapeclloid			
				50	No-dwell simple harmonic motion			
				51	No-dwell modified trapezoid			
				52	No-dwell modified constant velocity			
				92	NC2 curve			
				Any other settings will result in an error.				
	007H	-	-	-				
	008H to 00BH	Area for Section 2	-	As is the case with the area for Section 1, one word is allocated to each of the start phase, displacement, cam curve, and system area.				
	00CH to 00FH	Area for Section 3	-		<b>Start phase in section</b>	<b>Displacement in section</b>	<b>Cam curve in section</b>	<b>System reserved</b>
	010H to 013H	Area for Section 4	-					
	014H to 017H	Area for Section 5	-					
	018H to 01BH	Area for Section 6	-	Offset address last number	xx0H	xx1H	xx2H	xx3H
					xx4H	xx5H	xx6H	xx7H
					xx8H	xx9H	xxAH	xxBH
					xxCH	xxDH	xxEH	xxFH
60H	01CH to 01FH	Area for Section 7	-	As is the case with the area for Section 1, one word is allocated to each of the start phase, displacement, cam curve, and system area.				
	020H to 023H	Area for Section 8	-					
	024H to 027H	Area for Section 9	-					
	028H to 02BH	Area for Section 10	-					
	02CH to 02FH	Area for Section 11	-					
	030H to 033H	Area for Section 12	-					
	034H to 037H	Area for Section 13	-					
	038H to 03BH	Area for Section 14	-					
	03CH to 03FH	Area for Section 15	-					
	040H to 043H	Area for Section 16	-					
044H to 047H	Area for Section 17	-		<b>Start phase in section</b>	<b>Displacement in section</b>	<b>Cam curve in section</b>	<b>System reserved</b>	
				Offset address last number	xx0H	xx1H	xx2H	xx3H
					xx4H	xx5H	xx6H	xx7H
					xx8H	xx9H	xxAH	xxBH
					xxCH	xxDH	xxEH	xxFH

## 18.11 Cam Pattern Editing Area in Shared Memory

Bank	Offset address	Name	Default	Description												
	048H to 04BH	Area for Section 18	-													
	04CH to 04FH	Area for Section 19	-													
	050H to 053H	Area for Section 20	-													
	054H	Cam table read request	0H	<p>When this bit changes from 0 to 1, the cam table corresponding to the specified cam pattern number is read. After the cam table is read, the positioning unit RTEX automatically resets the bit to 0.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Cam table read request</td> <td>0</td> <td>0: Do not rewrite 1: Issue a cam table read request.</td> </tr> <tr> <td>15 to 1</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Cam table read request	0	0: Do not rewrite 1: Issue a cam table read request.	15 to 1	-	-	-
Bit	Name	Default	Description													
0	Cam table read request	0	0: Do not rewrite 1: Issue a cam table read request.													
15 to 1	-	-	-													
60H	055H	Cam table rewrite request	0H	<p>When this bit changes from 0 to 1, the cam table corresponding to the specified cam pattern number is rewritten. After the cam table is rewritten, the positioning unit RTEX automatically resets the bit to 0.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Cam table rewrite request</td> <td>0</td> <td>0: Do not rewrite 1: Issue a cam table rewrite request.</td> </tr> <tr> <td>15 to 1</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Cam table rewrite request	0	0: Do not rewrite 1: Issue a cam table rewrite request.	15 to 1	-	-	-
	Bit	Name	Default	Description												
	0	Cam table rewrite request	0	0: Do not rewrite 1: Issue a cam table rewrite request.												
15 to 1	-	-	-													
056H to 057H	-	-	-													

### 18.11.3 Cam Pattern Editing Execution Confirmation Area

Bank	Offset address	Name	Default	Description
60H	058H	Cam pattern Read result	0H	Stores the result of read processing (response code). 0000H: Normal termination Other than 0000H: Abnormal termination
	059H	Cam pattern Rewrite result	0H	Stores the result of rewrite processing (response code). 0000H: Normal termination

## 18.11 Cam Pattern Editing Area in Shared Memory

Bank	Offset address	Name	Default	Description
				Other than 0000H: Abnormal termination

(Note 1) In the case of abnormal termination, the codes in the following table are stored.

Code	Name	Description	Processing		Countermeasures
			Read	Write	
FF01H	Cam pattern number setting error	The set cam pattern number is out of range.	○	○	Check the set cam pattern number.
FF02H	Setting cam patterns Section number setting error	The set number of cam pattern sections is out of range.	-	○	Check the set number of sections.
FF03H	Shift amount setting error	The set shift amount is out of range.	-	○	Check the set shift amount.
FF05H	Start phase setting error 1	The set start phase is out of range.	-	○	Check the set start phase of each section.
FF06H	Start phase setting error 2	The set start phase is equal to or smaller than the start phase of the previous section.	-	○	Check if the relation between the start phases of each section is (Start phase of section n-1) < (Start phase of section n).
FF07H	Start phase setting error 3	The set start phase of section 1 is not 0.	-	○	Always set the start phase of section 1 to 0.
FF0AH	Displacement setting error	The set displacement is out of range.	-	○	Check the set phase of each section.
FF0BH	Cam curve number setting error	The set cam curve number is out of range.	-	○	Check the set cam curve number of each section.
FF10H	Cam pattern reading non-executable error 1	There are axes under synchronous control.	○	-	Cancel the synchronous control before reading the cam pattern.
FF11H	Cam pattern reading non-executable error 2	There are active axes.	○	-	Make sure that there are no active axes before reading the cam pattern.
FF20H	Cam pattern rewriting non-executable error 1	There are axes under synchronous control.	-	○	Cancel the synchronous control before rewriting the cam pattern.
FF21H	Cam pattern rewriting non-executable error 2	Operating axes exist.	-	○	Make sure that there are no active axes before rewriting the cam pattern.
FF22H	Cam pattern rewriting non-executable error 3	The read request and rewrite request contacts turned ON simultaneously.	-	○	Check that the read request and rewrite request contacts have not turned ON simultaneously. When the read request and rewrite request contacts turn ON

## 18.11 Cam Pattern Editing Area in Shared Memory

Code	Name	Description	Processing		Countermeasures
			Read	Write	
					simultaneously, the read request is given priority.

Bank	Offset address	Name	Default	Description																																															
60H	05AH	Cam pattern Update flag	FFFFH	<p>Reports valid cam pattern table data.</p> <p>Bits are allocated to cam pattern numbers 1 to 16.</p> <p>When the control unit switches to RUN mode and the configuration data set by the tool software takes effect, bits 0 to 15 are all set to "1". When the user program rewrites a cam pattern, the bit corresponding to the cam pattern number is set to "0".</p> <p>Note 1: Never rewrite this area. If the area is rewritten, the status cannot be reported normally.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Cam pattern No.1 enable status</td> <td>1</td> <td rowspan="14">                     0: Cam pattern table after rewriting by user program is enabled.                      1: Configuration data from tool software is enabled.                 </td> </tr> <tr> <td>1</td> <td>Cam pattern No.2 enable status</td> <td>1</td> </tr> <tr> <td>2</td> <td>Cam pattern No.3 enable status</td> <td>1</td> </tr> <tr> <td>3</td> <td>Cam pattern No.4 enable status</td> <td>1</td> </tr> <tr> <td>4</td> <td>Cam pattern No.5 enable status</td> <td>1</td> </tr> <tr> <td>5</td> <td>Cam pattern No.6 enable status</td> <td>1</td> </tr> <tr> <td>6</td> <td>Cam pattern No.7 enable status</td> <td>1</td> </tr> <tr> <td>7</td> <td>Cam pattern No.8 enable status</td> <td>1</td> </tr> <tr> <td>8</td> <td>Cam pattern No.9 enable status</td> <td>1</td> </tr> <tr> <td>9</td> <td>Cam pattern No.10 enable status</td> <td>1</td> </tr> <tr> <td>10</td> <td>Cam pattern No.11 enable status</td> <td>1</td> </tr> <tr> <td>11</td> <td>Cam pattern No.12 enable status</td> <td>1</td> </tr> <tr> <td>12</td> <td>Cam pattern No.13 enable status</td> <td>1</td> </tr> <tr> <td>13</td> <td>Cam pattern No.14 enable status</td> <td>1</td> </tr> </tbody> </table>	Bit	Name	Default	Description	0	Cam pattern No.1 enable status	1	0: Cam pattern table after rewriting by user program is enabled. 1: Configuration data from tool software is enabled.	1	Cam pattern No.2 enable status	1	2	Cam pattern No.3 enable status	1	3	Cam pattern No.4 enable status	1	4	Cam pattern No.5 enable status	1	5	Cam pattern No.6 enable status	1	6	Cam pattern No.7 enable status	1	7	Cam pattern No.8 enable status	1	8	Cam pattern No.9 enable status	1	9	Cam pattern No.10 enable status	1	10	Cam pattern No.11 enable status	1	11	Cam pattern No.12 enable status	1	12	Cam pattern No.13 enable status	1	13	Cam pattern No.14 enable status	1
Bit	Name	Default	Description																																																
0	Cam pattern No.1 enable status	1	0: Cam pattern table after rewriting by user program is enabled. 1: Configuration data from tool software is enabled.																																																
1	Cam pattern No.2 enable status	1																																																	
2	Cam pattern No.3 enable status	1																																																	
3	Cam pattern No.4 enable status	1																																																	
4	Cam pattern No.5 enable status	1																																																	
5	Cam pattern No.6 enable status	1																																																	
6	Cam pattern No.7 enable status	1																																																	
7	Cam pattern No.8 enable status	1																																																	
8	Cam pattern No.9 enable status	1																																																	
9	Cam pattern No.10 enable status	1																																																	
10	Cam pattern No.11 enable status	1																																																	
11	Cam pattern No.12 enable status	1																																																	
12	Cam pattern No.13 enable status	1																																																	
13	Cam pattern No.14 enable status	1																																																	

## 18.11 Cam Pattern Editing Area in Shared Memory

---

Bank	Offset address	Name	Default	Description			
				Bit	Name	Default	Description
				14	Cam pattern No.15 enable status	1	
				15	Cam pattern No.16 enable status	1	
	05BH to 05FH	-	-	-			

## 18.12 Details of Positioning Extension Table Setting Area in Shared Memory

### 18.12 Details of Positioning Extension Table Setting Area in Shared Memory

#### 18.12.1 Configuration of Positioning Extended Table Setting Area

Positioning data settings for each axis consist of 64 tables (Table 10026 to Table 10089) in the extended area.

Whole map of shared memory

00H_000H		96 words	
00H_060H	I/O control area	32 words	
00H_07FH			
00H_080H	Common area		
00H_3CFH		896 words	
01H_000H	Each axis information area		
01H_1FFH		512 words	
02H_000H	Each axis setting area		
51H_3FFH		81,920 words	
52H_000H	Amplifier parameter control area	48 words	
52H_02FH			
53H_000H	System area		
		5,120 words	
58H_000H	Synchronous control setting area		
58H_37FH		896 words	
59H_000H	System area		
		7,168 words	
5FH_000H	Positioning operation change setting area		
5FH_07FH		128 words	
60H_000H	Cam pattern editing area		
60H_05FH		96 words	
61H_000H	Positioning extension table setting area		
68H_3FFH		8,192 words	
61H_000H	Extended area for axis 1: 64 tables [Tables 10026 to 10089]		1,024 words
62H_000H	Extended area for axis 2: 64 tables [Tables 10026 to 10089]		1,024 words
63H_000H	Extended area for axis 3: 64 tables [Tables 10026 to 10089]		1,024 words
64H_000H	Extended area for axis 4: 64 tables [Tables 10026 to 10089]		1,024 words
65H_000H	Extended area for axis 5: 64 tables [Tables 10026 to 10089]		1,024 words
66H_000H	Extended area for axis 6: 64 tables [Tables 10026 to 10089]		1,024 words
67H_000H	Extended area for axis 7 (virtual): 64 tables [Tables 10026 to 10089]		1,024 words
68H_000H	Extended area for axis 8 (virtual): 64 tables [Tables 10026 to 10089]		1,024 words



## 18.12 Details of Positioning Extension Table Setting Area in Shared Memory

### 18.12.2 Positioning Data Setting Area

Data in the following format is stored in the memory starting from the starting address of the positioning tables for each axis.

Offset address	Name	Default	Description		
000H	Control code	0H	Sets the position command mode and acceleration / deceleration pattern for positioning operations.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			0	Incremental / absolute mode setting	0: Incremental mode 1: Absolute mode
			1	Acceleration / deceleration pattern setting	0: Linear acceleration / deceleration 1: S-shaped acceleration / deceleration
15 to 2	-	-			
001H	Operation pattern	0H	Sets single and interpolation patterns for positioning operations. The interpolation relationship depends on the settings in the axis group setting area in the common area of the shared memory. For interpolation operations, the settings of the axis with the smallest number in an axis group take effect.		
			<b>Bit</b>	<b>Name</b>	<b>Description</b>
			7 to 0	Control pattern	00H: E-point control (End point control) 01H: P-point control (Pass point control) 02H: C-point control (Continuance point control) 03H: J-point control (Speed point control) Any other settings will result in an error.
15 to 8	Interpolation setting	00H: Linear interpolation (Composite speed specification) 01H: Linear interpolation (Long axis speed specification) 10H: Circular interpolation (Center point specification / CW direction) 11H: Circular interpolation (Center point specification / CCW direction) 20H: Circular interpolation (Pass point specification) 50H: Spiral interpolation (Center point specification / CW direction / X-axis feed) 51H: Spiral interpolation			

## 18.12 Details of Positioning Extension Table Setting Area in Shared Memory

Offset address	Name	Default	Description		
			Bit	Name	Description
					(Center point specification / CCW direction / X-axis feed) 52H: Spiral interpolation (Center point specification / CW direction / Y-axis feed) 53H: Spiral interpolation (Center point specification / CCW direction / Y-axis feed) 54H: Spiral interpolation (Center point specification / CW direction / Z-axis feed) 55H: Spiral interpolation (Center point specification / CCW direction / Z-axis feed) 60H: Spiral interpolation (Pass point specification / X-axis feed) 61H: Spiral interpolation (Pass point specification / Y-axis feed) 62H: Spiral interpolation (Pass point specification / Z-axis feed) Any other settings will result in an error.
002H	-	-	-		
003H	-	-	-		
004H	Positioning acceleration time	K100	Sets acceleration and deceleration times for positioning operations.		
			Acceleration time and deceleration time can be set individually. For interpolation operations, the settings of the axis with the smallest number in an axis group take effect.		
005H	Positioning deceleration time	K100			
			15 to 0	Positioning acceleration time Positioning deceleration time	Sets acceleration time or deceleration time. Setting range: 0 to 10,000 Unit: ms Any other settings will result in an error.
006H	Positioning target speed (interpolation speed)	K1,000	For single operations (non-interpolation), the target speed is that of the relevant axis. For interpolation operations, the target speed is that for interpolation. For interpolation operations, the settings of the axis with the smallest number in an axis group take effect.		
007H					
			31 to 0	Positioning target speed	Setting range: 1 to 2,147,482,624

## 18.12 Details of Positioning Extension Table Setting Area in Shared Memory

Offset address	Name	Default	Description				
			Bit	Name	Description		
				(Interpolation speed)	Unit: Dependent upon the specified unit Any other settings will result in an error. The setting range changes according to the unit settings as below. Pulses: 0 to 2,147,482,624 pps $\mu\text{m}$ : 1 to 2,147,482,624 $\mu\text{m/s}$ Inches: 0.001 to 2,147,482.624 inches/s Degrees: 0.001 to 2,147,482.624 rev/s		
008H	Positioning movement amount	K0	Sets the movement amount for positioning operations. Interpretation switches between the incremental movement amount and absolute movement amount according to the control code setting.				
009H			<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Positioning movement amount</td> <td>K0</td> <td>Setting range: -2147482624 to +2147482624 Any other settings will result in an error.</td> </tr> </tbody> </table> <p>Interpretation changes according to the unit settings as below. Pulses: -2,147,482,624 to 2,147,482,624 pulses <math>\mu\text{m}</math> (0.1 <math>\mu\text{m}</math>) : -214,748,262.4 to 214,748,262.4 <math>\mu\text{m}</math> <math>\mu\text{m}</math> (1 <math>\mu\text{m}</math>): -2,147,482,624 to 2,147,482,624 <math>\mu\text{m}</math> Inches (0.00001 inch): -21,474.82624 to 21,474.82624 inches Inches (0.0001 inch): -214,748.2624 to 214,748.2624 inches Degrees (0.1 degree): -214,748,262.4 to 214,748,262.4 degrees Degrees (1 degree): -2,147,482,624 to 2,147,482,624 degrees</p>	Name	Default	Description	Positioning movement amount
Name	Default	Description					
Positioning movement amount	K0	Setting range: -2147482624 to +2147482624 Any other settings will result in an error.					
00AH	Auxiliary point	K0	Sets auxiliary points (center point and pass point coordinates) for circular interpolation or spiral interpolation control.				
00BH			<table border="1"> <thead> <tr> <th>Name</th> <th>Default</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Auxiliary point</td> <td>0</td> <td>Setting range: -2147482624 to +2147482624 Any other settings will result in an error.</td> </tr> </tbody> </table> <p>Interpretation changes according to the unit settings as below. Pulses: -2,147,482,624 to 2,147,482,624 pulses <math>\mu\text{m}</math> (0.1 <math>\mu\text{m}</math>) : -214,748,262.4 to 214,748,262.4 <math>\mu\text{m}</math> <math>\mu\text{m}</math> (1 <math>\mu\text{m}</math>): -2,147,482,624 to 2,147,482,624 <math>\mu\text{m}</math> Inches (0.00001 inch): -21,474.82624 to 21,474.82624 inches Inches (0.0001 inch): -214,748.2624 to 214,748.2624 inches Degrees (0.1 degree): -214,748,262.4 to 214,748,262.4 degrees</p>	Name	Default	Description	Auxiliary point
Name	Default	Description					
Auxiliary point	0	Setting range: -2147482624 to +2147482624 Any other settings will result in an error.					

## 18.12 Details of Positioning Extension Table Setting Area in Shared Memory

Offset address	Name	Default	Description						
			Degrees (1 degree): -2,147,482,624 to 2,147,482,624 degrees						
00CH	Dwell Time	K0	<p>For "C: Continuance point", when the positioning operation of this table is complete, the motor is stopped for the specified dwell time and then the positioning operation of the next table is started. For "P: Pass point", the dwell time setting is ignored. For "E: End point", the motor enters standby mode for the specified dwell time and then the operation done flag turns ON.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Dwell Time</td> <td>Setting range: 0 to 32,767 Unit: ms Any other settings will result in an error.</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Dwell Time	Setting range: 0 to 32,767 Unit: ms Any other settings will result in an error.
Bit	Name	Description							
15 to 0	Dwell Time	Setting range: 0 to 32,767 Unit: ms Any other settings will result in an error.							
00DH	Auxiliary output code	K0	<p>Sets the data to be output to the auxiliary output code in the each axis information &amp; monitor area according to the setting of the auxiliary output mode in the parameter setting area.</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>15 to 0</td> <td>Auxiliary output code</td> <td>Setting range: 0 to 65,535</td> </tr> </tbody> </table>	Bit	Name	Description	15 to 0	Auxiliary output code	Setting range: 0 to 65,535
Bit	Name	Description							
15 to 0	Auxiliary output code	Setting range: 0 to 65,535							
00EH	-	-	-						
00FH	-	-	-						

### ■ Starting addresses of each positioning table (Extended area: Tables 10026 to 10089)

Tables 10001 to 10025 have different banks and addresses. Refer to "Starting addresses of each positioning table (Extended area: Tables 10001 to 10025)".

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
61H	62H	63H	64H	65H	66H	67H	68H	000H	Starting address of Table 10026
								010H	Starting address of Table 10027
								020H	Starting address of Table 10028
								030H	Starting address of Table 10029
								040H	Starting address of Table 10030
								050H	Starting address of Table 10031
								060H	Starting address of Table 10032
								070H	Starting address of Table 10033
								080H	Starting address of Table 10034
								090H	Starting address of Table 10035
								0A0H	Starting address of Table 10036
								0B0H	Starting address of Table 10037
								0C0H	Starting address of Table 10038

## 18.12 Details of Positioning Extension Table Setting Area in Shared Memory


Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								0D0H	Starting address of Table 10039
								0E0H	Starting address of Table 10040
								0F0H	Starting address of Table 10041
								100H	Starting address of Table 10042
								110H	Starting address of Table 10043
								120H	Starting address of Table 10044
								130H	Starting address of Table 10045
								140H	Starting address of Table 10046
								150H	Starting address of Table 10047
								160H	Starting address of Table 10048
								170H	Starting address of Table 10049
								180H	Starting address of Table 10050
								190H	Starting address of Table 10051
								1A0H	Starting address of Table 10052
								1B0H	Starting address of Table 10053
								1C0H	Starting address of Table 10054
								1D0H	Starting address of Table 10055
								1E0H	Starting address of Table 10056
								1F0H	Starting address of Table 10057
								200H	Starting address of Table 10058
								210H	Starting address of Table 10059
								220H	Starting address of Table 10060
61H	62H	63H	64H	65H	66H	67H	68H	230H	Starting address of Table 10061
								240H	Starting address of Table 10062
								250H	Starting address of Table 10063
								260H	Starting address of Table 10064
								270H	Starting address of Table 10065
								280H	Starting address of Table 10066
								290H	Starting address of Table 10067
								2A0H	Starting address of Table 10068
								2B0H	Starting address of Table 10069
								2C0H	Starting address of Table 10070
								2D0H	Starting address of Table 10071
								2E0H	Starting address of Table 10072
								2F0H	Starting address of Table 10073
								300H	Starting address of Table 10074

## 18.12 Details of Positioning Extension Table Setting Area in Shared Memory

Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	8 axes	address	Description
<b>Bank</b>									
								310H	Starting address of Table 10075
								320H	Starting address of Table 10076
								330H	Starting address of Table 10077
								340H	Starting address of Table 10078
								350H	Starting address of Table 10079
								360H	Starting address of Table 10080
								370H	Starting address of Table 10081
								380H	Starting address of Table 10082
								390H	Starting address of Table 10083
								3A0H	Starting address of Table 10084
								3B0H	Starting address of Table 10085
								3C0H	Starting address of Table 10086
								3D0H	Starting address of Table 10087
								3E0H	Starting address of Table 10088
								3F0H	Starting address of Table 10089

18.13 Dimensions

18.13.1 Dimensions

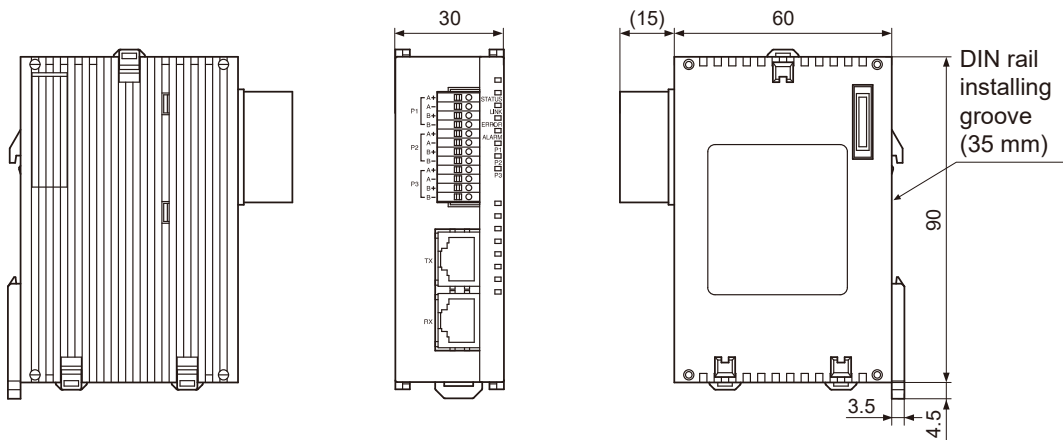

Unit: mm

(MEMO)



# 19 Sample programs

---


19.1 Basic Configuration and Contact Allocations of Sample Programs ..	19-2
19.2 When Already Set in the Standard Area with a Programming Tool ..	19-4
19.3 When Setting in Extended Area on Program .....	19-7
19.4 When Setting the Standard Area on a Program .....	19-9

## 19.1 Basic Configuration and Contact Allocations of Sample Programs

### 19.1 Basic Configuration and Contact Allocations of Sample Programs

In the sample programs, the internal relays are used for the start-up contacts of each operation. Connect them to the input contacts such as switches as needed.

#### ■ Basic configuration

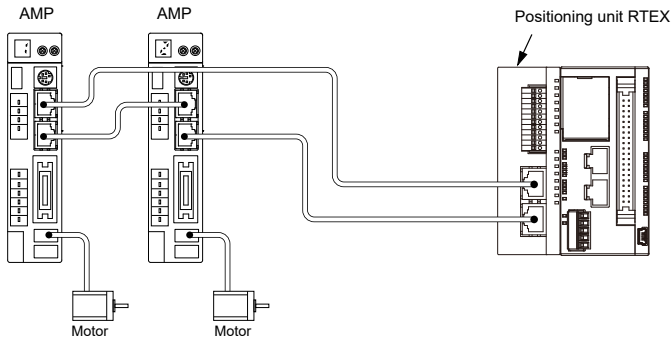

- The positioning unit RTEX is installed in slot number 0.
- The servo motors connected to the positioning unit RTEX are set to axis 1 and axis 2.
- The 2-axis linear interpolation is used as a sample operation.
- The axis parameters are set with **Configurator PM7-RTEX** and saved to the positioning unit RTEX.

#### ■ Used contacts and data registers

Relay	Description
R0	Servo ON
R1	Servo OFF
R2	Request home return
R3	Request positioning start
R4	Request forward JOG for axis 1
R5	Request reverse JOG for axis 1
R6	Request forward JOG for axis 2
R7	Request reverse JOG for axis 2
R10	Error clear
R11	Request setting value change
R50	Recalculation notification
R100	Operation enabled flag for axis 1
R101	Off edge of forward JOG for axis 1
R102	Off edge of reverse JOG for axis 1
R200	Operation enabled flag for axis 2
R201	Off edge of forward JOG for axis 2
R202	Off edge of reverse JOG for axis 2

## 19.1 Basic Configuration and Contact Allocations of Sample Programs

---


Contact	Description
X100	Link establishment notification
X104	Tool operation in progress
X105	All axes error notification
X107	Recalculation completion
X118	Axis 1 BUSY
X119	Axis 2 BUSY
Y105	All axes error clear request
Y107	Recalculation request
Y108	Axis 1 servo ON request
Y109	Axis 2 servo ON request
Y110	Axis 1 servo OFF request
Y111	Axis 2 servo OFF request
Y118	Axis 1 positioning start
Y120	Axis 1 home return start
Y121	Axis 2 home return start
Y130	Axis 1 forward JOG
Y131	Axis 1 reverse JOG
Y132	Axis 2 forward JOG
Y133	Axis 2 reverse JOG

Data register	Description
DT0	Starting table number
DT101 to DT102	Latest error code for axis 1
DT103 to DT104	Latest warning code for axis 1
DT121 to DT122	Latest error code for axis 2
DT123 to DT124	Latest warning code for axis 2
DT10 to DT25	Positioning data (of 1 table) of axis 1
DT30 to DT45	Positioning data (of 1 table) of axis 2


**19.2 When Already Set in the Standard Area with a Programming Tool**

This is a sample program when the positioning data table of table number 1 is already set to the standard area using Configurator PM7-RTEX.

■ **Sample program**

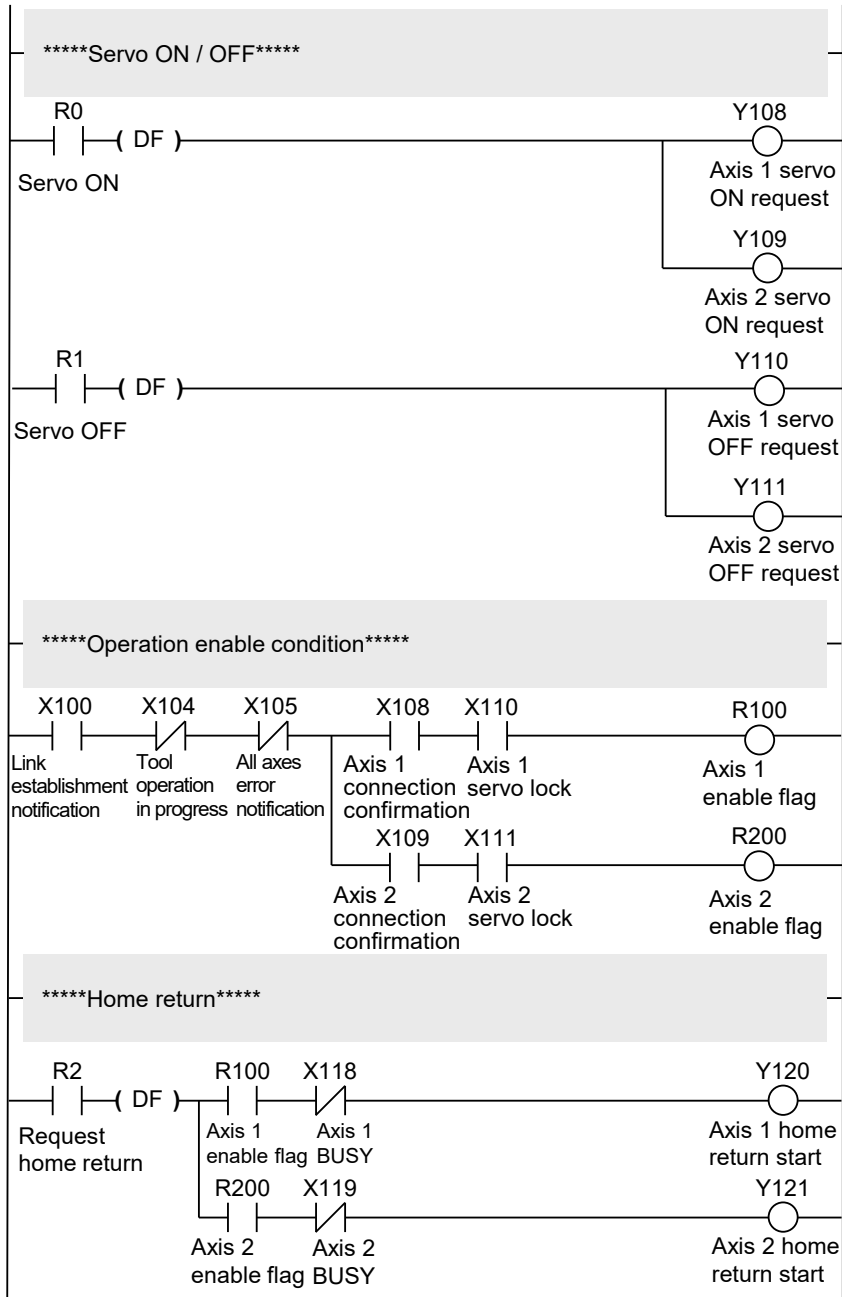


## 19.2 When Already Set in the Standard Area with a Programming Tool

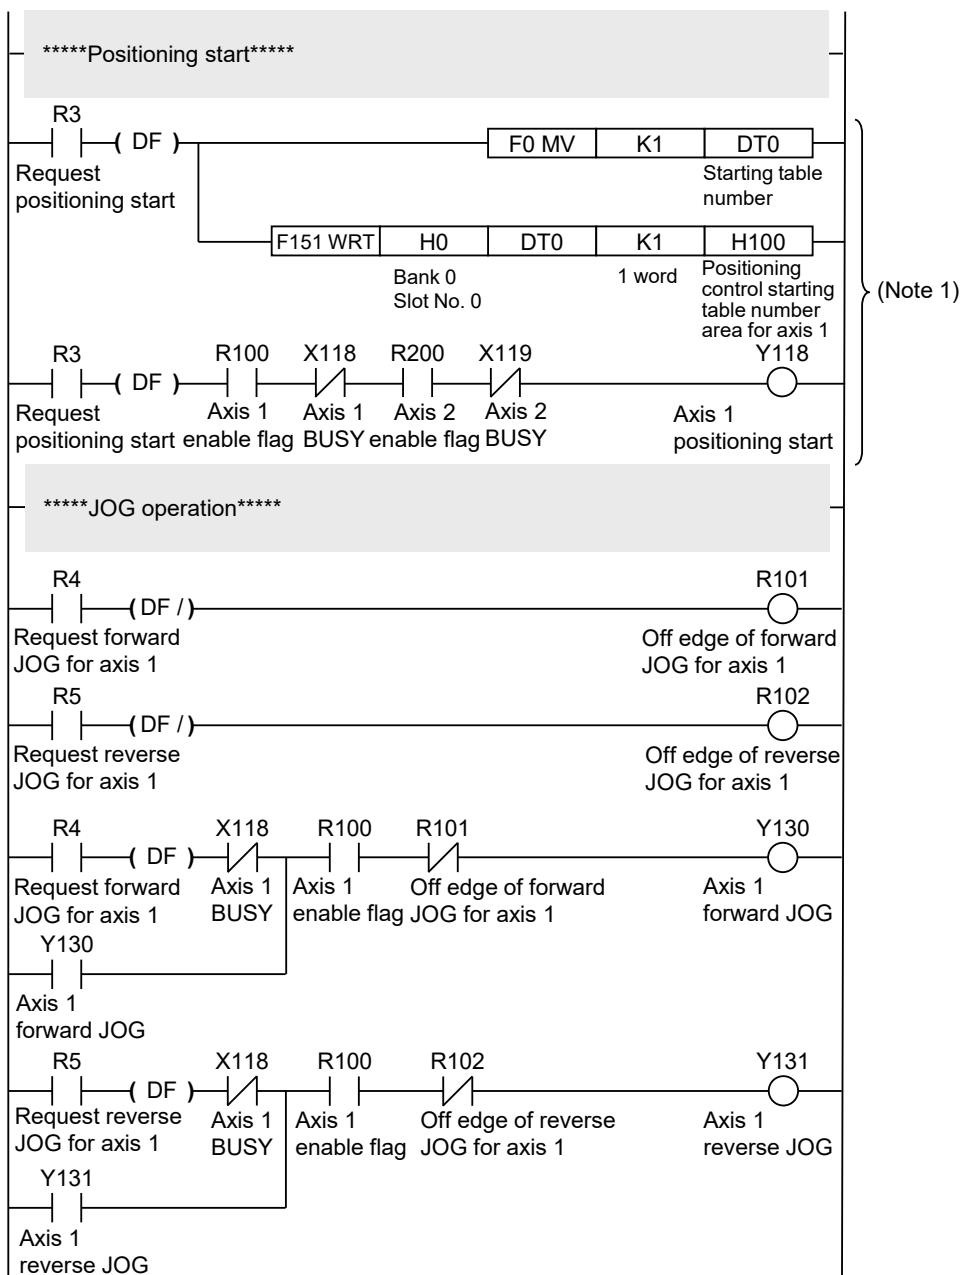

(Note 1) The program in this section differs depending on the setting method of the positioning data table. Replace it depending on the setting method.

## 19.2 When Already Set in the Standard Area with a Programming Tool

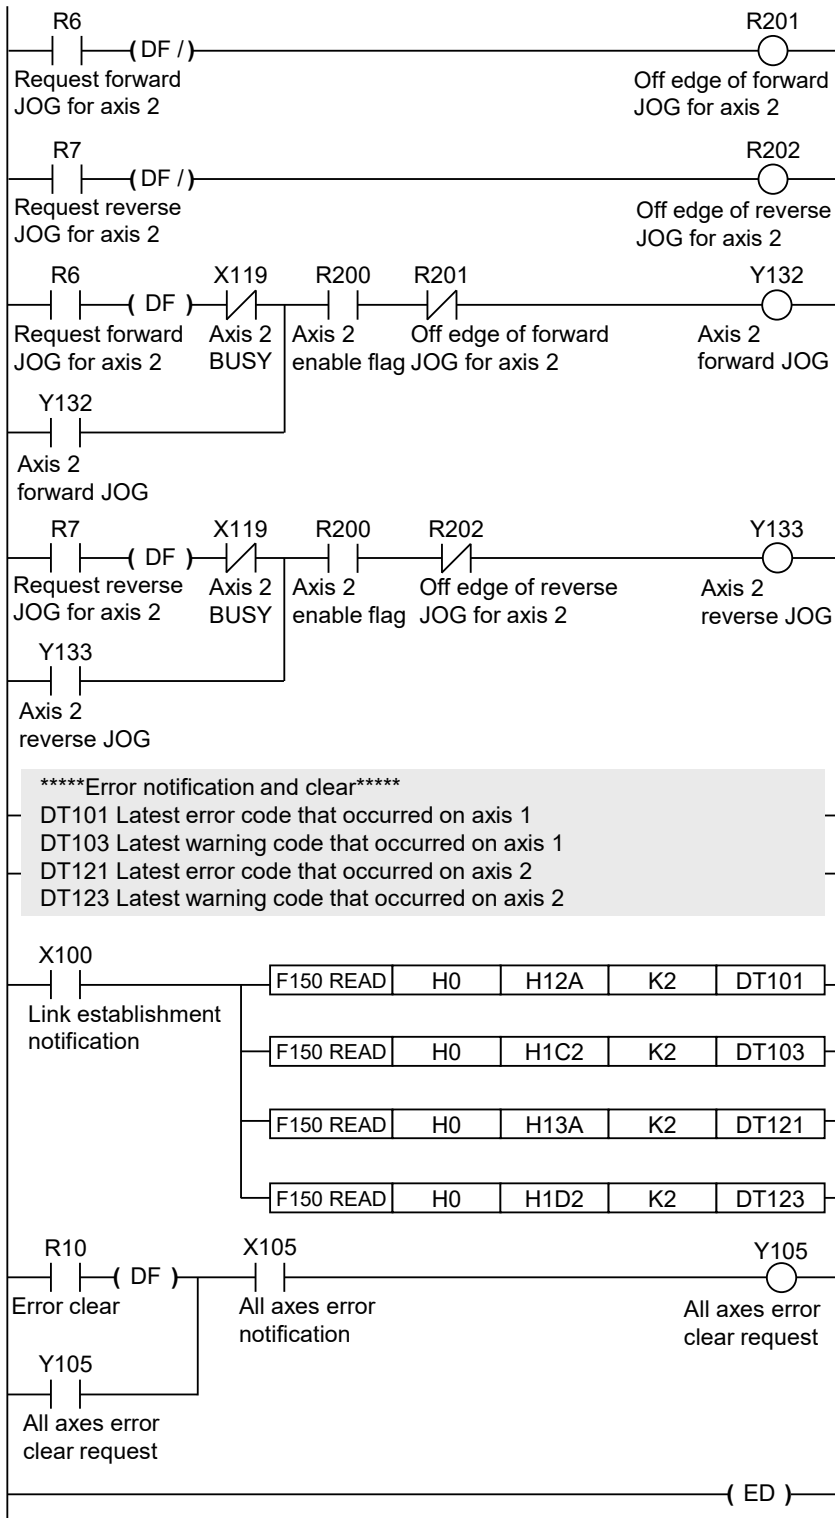


### 19.3 When Setting in Extended Area on Program


This is a sample program when the positioning data table of table number 10001 is set to the extended area using a user program.

- Recalculating the positioning data is not necessary, as the extended area is used.
- Replace the part of the "positioning start" program in the sample program in "19.2 When Already Set in the Standard Area with a Programming Tool".

#### ■ Positioning start program

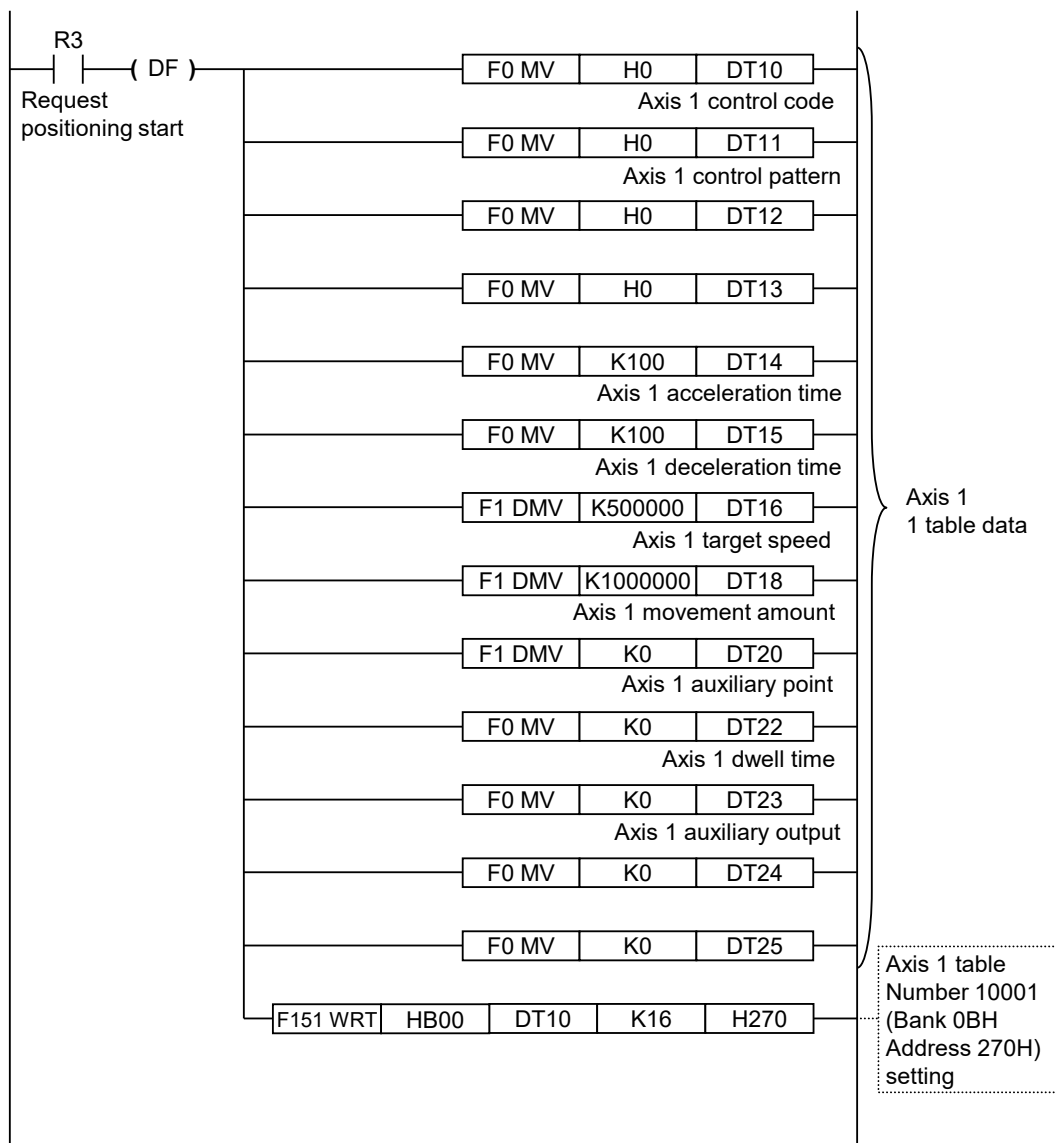

### 19.3 When Setting in Extended Area on Program

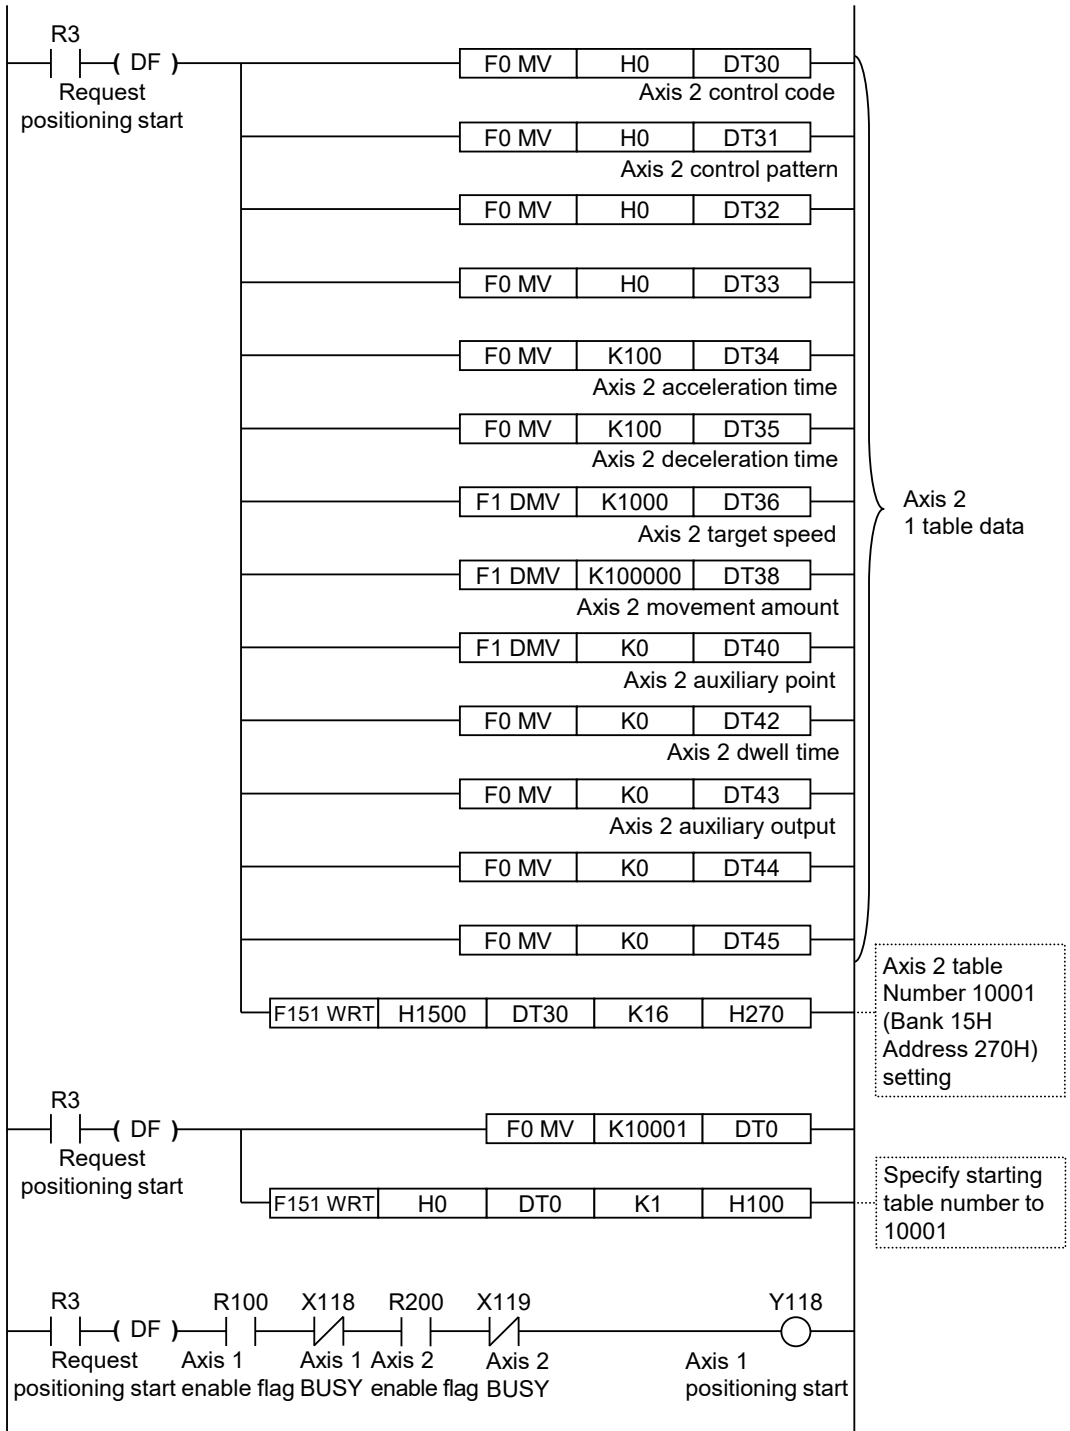




### 19.4 When Setting the Standard Area on a Program


This is a sample program when the positioning data table of table number 1 is set to the standard area using a user program.

- Recalculating the positioning data is necessary after setting the positioning data when writing to the standard area.
- Replace the part of the "positioning start" program in the sample program in "19.2 When Already Set in the Standard Area with a Programming Tool".

■ Positioning start program

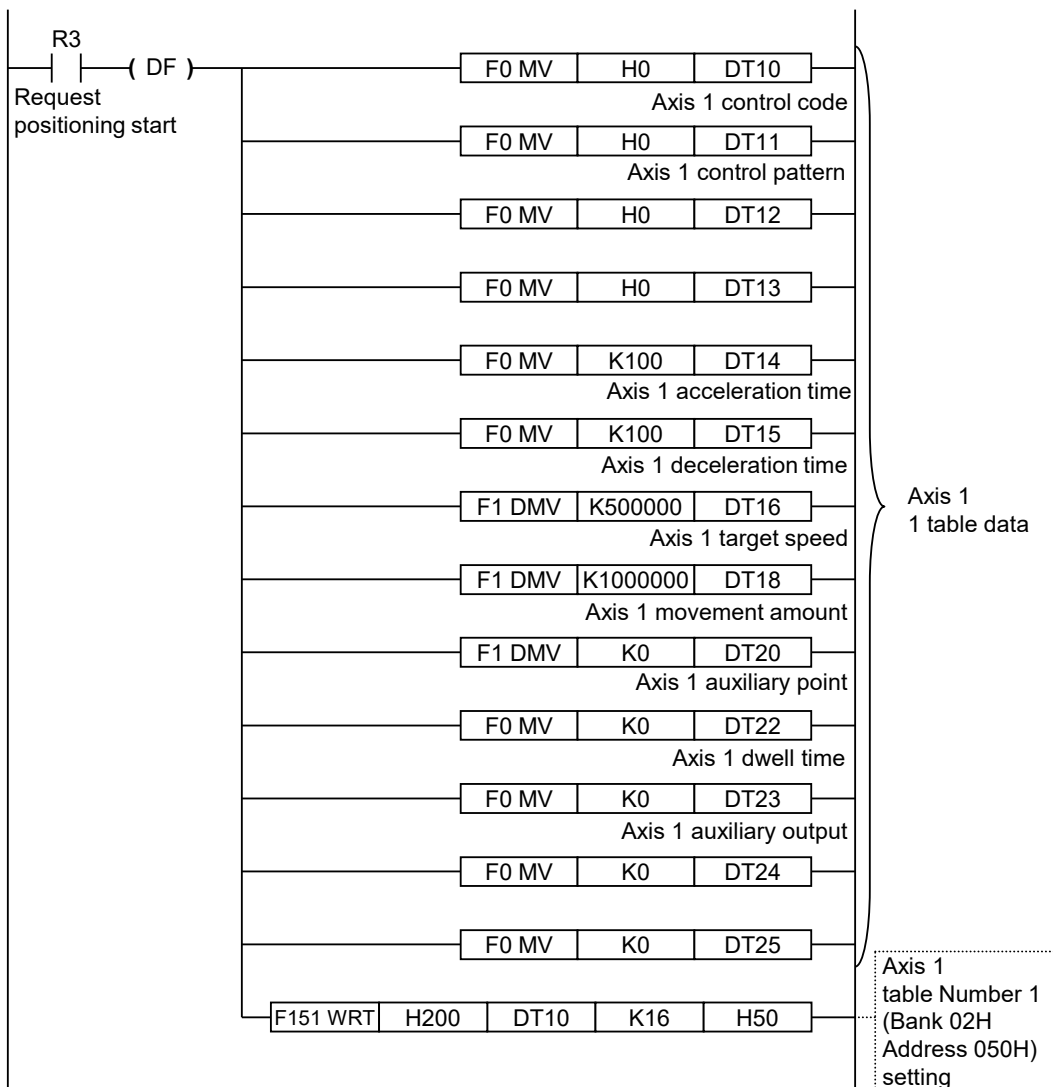

# 19.4 When Setting the Standard Area on a Program

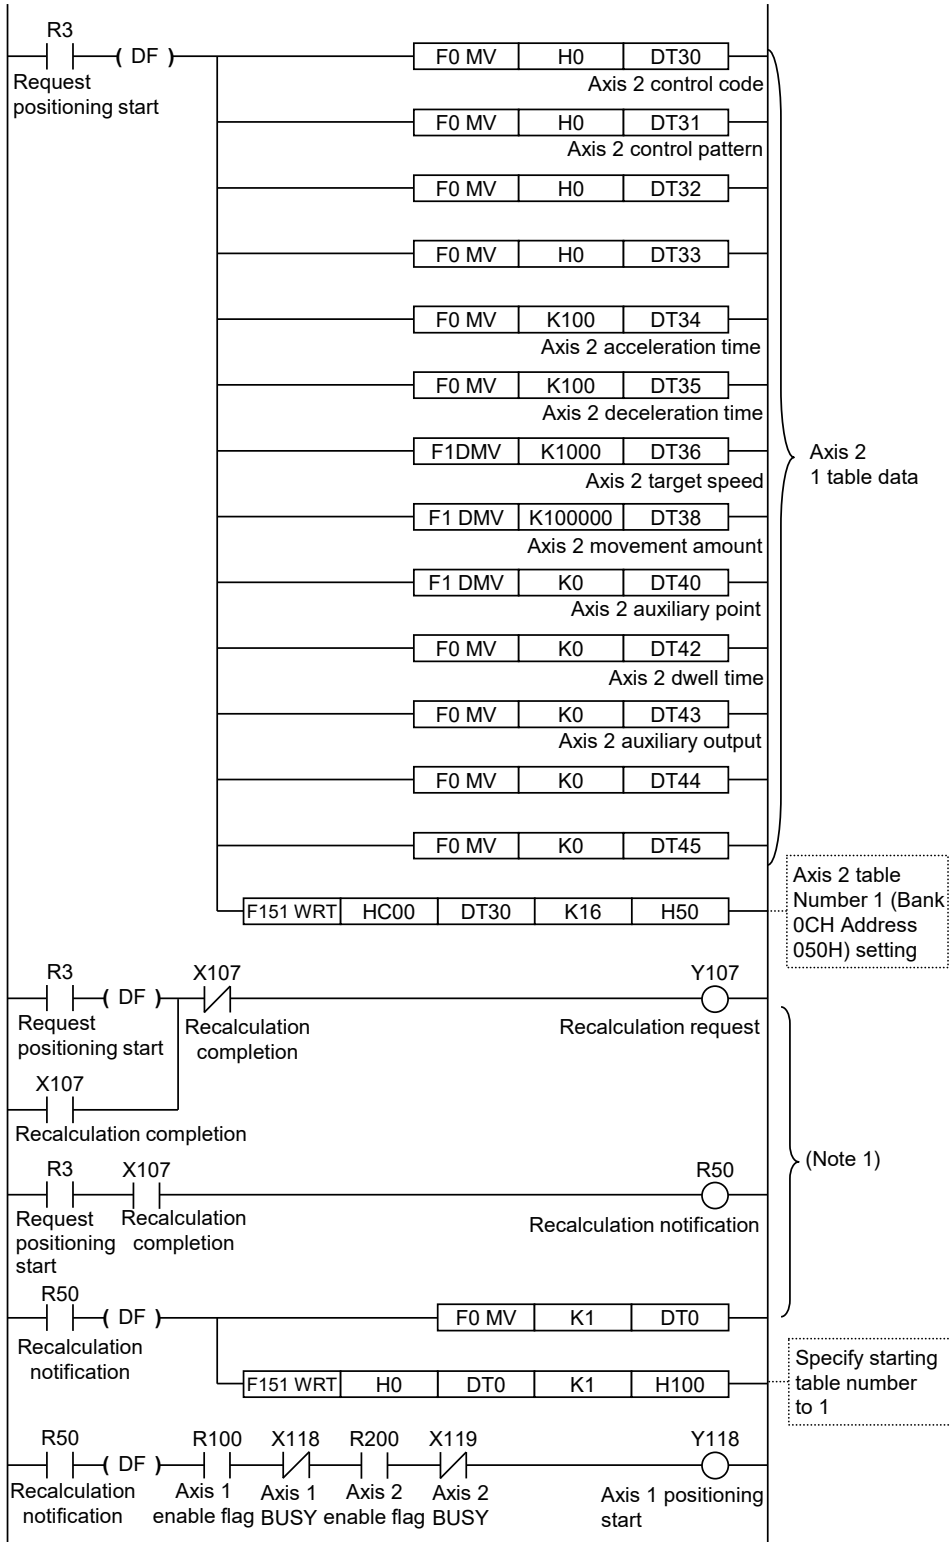

## 19.4 When Setting the Standard Area on a Program

---

(Note 1) Request a recalculation after setting the table data. Start positioning after confirming that recalculation is complete.

(MEMO)

## Record of Changes

The manual number is specified at the bottom of the cover page.

Issue date	Manual number	Description of changes
April 2019	-	-
May 2019	-	-
July 2019	WUME-FP0HRTEXGR7-01	1st Edition (English)
January 2020	-	- Changed the manual style.
March 2021	WUME-FP0HRTEXGR7-02	2nd Edition Version upgrade of the unit firmware (Ver. 1.10)
May 2021	WUME-FP0HRTEXGR7-06	6th Edition Added countermeasure for axis movement errors.
January 2023	WUME-FP0HRTEXGR7-07	7th Edition Added "soft limit" function at pulser operation Corrected errors
March 2023	WUME-FP0HRTEXGR7-08	8th Edition "19 Sample programs"added
April 2024	WUME-FP0HRTEXGR7-09	9th Edition Change in Corporate name

## Order Placement Recommendations and Considerations

The Products and Specifications listed in this document are subject to change (including specifications, manufacturing facility and discontinuing the Products) as occasioned by the improvements of Products. Consequently, when you place orders for these Products, Panasonic Industry Co., Ltd. asks you to contact one of our customer service representatives and check that the details listed in the document are commensurate with the most up-to-date information.

### [Safety precautions]

Panasonic Industry Co., Ltd. is consistently striving to improve quality and reliability. However, the fact remains that electrical components and devices generally cause failures at a given statistical probability. Furthermore, their durability varies with use environments or use conditions. In this respect, check for actual electrical components and devices under actual conditions before use. Continued usage in a state of degraded condition may cause the deteriorated insulation. Thus, it may result in abnormal heat, smoke or fire. Carry out safety design and periodic maintenance including redundancy design, design for fire spread prevention, and design for malfunction prevention so that no accidents resulting in injury or death, fire accidents, or social damage will be caused as a result of failure of the Products or ending life of the Products.

The Products are designed and manufactured for the industrial indoor environment use. Make sure standards, laws and regulations in case the Products are incorporated to machinery, system, apparatus, and so forth. With regard to the mentioned above, confirm the conformity of the Products by yourself.

Do not use the Products for the application which breakdown or malfunction of Products may cause damage to the body or property.

- i) usage intended to protect the body and ensure security of life
- ii) application which the performance degradation or quality problems, such as breakdown, of the Products may directly result in damage to the body or property

It is not allowed the use of Products by incorporating into machinery and systems indicated below because the conformity, performance, and quality of Products are not guaranteed under such usage.

- i) transport machinery (cars, trains, boats and ships, etc.)
- ii) control equipment for transportation
- iii) disaster-prevention equipment / security equipment
- iv) control equipment for electric power generation
- v) nuclear control system
- vi) aircraft equipment, aerospace equipment, and submarine repeater
- vii) burning appliances
- viii) military devices
- ix) medical devices (except for general controls)
- x) machinery and systems which especially require the high level of reliability and safety

### [Acceptance inspection]

In connection with the Products you have purchased from us or with the Products delivered to your premises, please perform an acceptance inspection with all due speed and, in connection with the handling of our Products both before and during the acceptance inspection, please give full consideration to the control and preservation of our Products.

### [Warranty period]

Unless otherwise stipulated by both parties, the warranty period of our Products is three years after the purchase by you or after their delivery to the location specified by you. The consumable items such as battery, relay, filter and other supplemental materials are excluded from the warranty.

### [Scope of warranty]

In the event that Panasonic Industry Co., Ltd. confirms any failures or defects of the Products by reasons solely attributable to Panasonic Industry Co., Ltd. during the warranty period, Panasonic Industry Co., Ltd. shall supply the replacements of the Products, parts or replace and/or repair the defective portion by free of charge at the location where the Products were purchased or delivered to your premises as soon as possible.

However, the following failures and defects are not covered by warranty and we are not responsible for such failures and defects.

- (1) When the failure or defect was caused by a specification, standard, handling method, etc. which was specified by you.
- (2) When the failure or defect was caused after purchase or delivery to your premises by an alteration in construction, performance, specification, etc. which did not involve us.
- (3) When the failure or defect was caused by a phenomenon that could not be predicted by the technology at purchasing or contracted time.
- (4) When the use of our Products deviated from the scope of the conditions and environment set forth in the instruction manual and specifications.
- (5) When, after our Products were incorporated into your products or equipment for use, damage resulted which could have been avoided if your products or equipment had been equipped with the functions, construction, etc. the provision of which is accepted practice in the industry.
- (6) When the failure or defect was caused by a natural disaster or other force majeure.
- (7) When the equipment is damaged due to corrosion caused by corrosive gases etc. in the surroundings.

The above terms and conditions shall not cover any induced damages by the failure or defects of the Products, and not cover your production items which are produced or fabricated by using the Products. In any case, our responsibility for compensation is limited to the amount paid for the Products.

### [Scope of service]

The cost of delivered Products does not include the cost of dispatching an engineer, etc. In case any such service is needed, contact our sales representative.

Panasonic Industry Co., Ltd.

(MEMO)

---

## Panasonic Industry Co., Ltd.

1006, Oaza Kadoma, Kadoma-shi, Osaka 571-8506, Japan  
<https://industry.panasonic.com/>

Please visit our website for inquiries and about our sales network.

© Panasonic Industry Co., Ltd. 2019-2024

April, 2024

WUME-FP0HRTXGR7-09